# DCR-TRV890E/TRV900/TRV900E

RMT-811/812

# **SERVICE MANUAL**



Handucam Vision...

CIII Cassette Memory



( 🚹 ) InfoLITHIUM



MEMORY STICK

C MECHANISM

Ver 1.6 2003. 06

With SUPPLEMENT-1 Photo: DCR-TRV900E RMT-811

US Model Canadian Model DCR-TRV900

> AEP Model UK Model DCR-TRV890E/TRV900E

E Model Hong Kong Model Tourist Model DCR-TRV900/TRV900E

Australian Model Chinese Model

DCR-TRV900E

#### Difference table

Model	DCR-TRV890E	DCR-TRV900	DCR-TRV900E
Color System	PAL	NTSC	PAL
Remote Commander	RMT-812	RMT-811	
Line recording	_	0	
The POWER switch position during playback	PLAYER	VTR	
Base Band Input	ase Band Input — O		)

(9-974-107-82)

(9-974-107-83)

With SUPPLEMENT-2

For MECHANISM ADJUSTMENTS, refer to the "DV MECHANICAL ADJUSTMENT MANUAL  ${\mathbb W}$ C MECHANISM " (9-974-050-11)

# Video camera

### **System**

recorder

Video recording system

Two rotary heads, Helical scanning system

**Audio recording system** 

Rotary heads, PCM system Quantization: 12bits (Fs 32kHz, stereo 1, stereo 2), 16bits (Fs 48kHz, stereo)

Video signal

NTSC color, EIA standards (TRV900) PAL colour, CCIR standards (TRV890E/TRV900E)

Usable cassette

Mini DV cassette with logo printed

Tape speed

SP: Approx. 18.81 mm/s LP: Approx. 12.56 mm/s Recording/playback time

SP mode: 1 hour (DVM60) LP mode: 1.5 hours (DVM60)

Fast-forward/rewind time

Approx. 2 min. 30 s (DVM60)

Image device

3CCD (Charge Coupled Device 1/4")

Viewfinder

Electric viewfinder (colour)

#### Lens

Combined power zoom lens, 48x (Digital), 12x (Optical)

#### Focal distance

f =4.3 to 51.6 mm (3/16 to 2 1/8 in.) (41.3 to 496 mm (1 11/16 to 19 5/8 in.) when converted into a 35 mm still camera)

TTL autofocus system inner focus wide macro system

Colour temperature

Auto, ♣One push, ♣Indoor (3200K), ♣Outdoor (5800K) Minimum illumination

4 lux at F 1.6 Illumination range

4 to 100,000 lux

Recommended illumination More than 100 lux

### LCD screen

3.5 inches measured diagonally 72.4 x 50.4 mm (2 <sup>7</sup>/8 x 2 in.)

On-screen display

TN LCD/TFT active matrix method

Total dot number 184,580 (839 x 220)

#### Input and output connectors

(Input connectors are supplied with DCR-TRV900/TRV900E only)

#### S video input/output

**SPECIFICATIONS** 

Input/output auto switch 4-pin mini DIN

Luminance signal: 1 Vp-p, 75 ohms, unbalanced, sync negative

Chrominance signal 0.286 Vp-p (TRV900),

0.3 Vp-p (TRV890E/TRV900E), 75 ohms, unbalanced

#### Audio/Video input/output

Input/output auto switch AV MINI JACK, 1 Vp-p, 75 ohms, unbalanced, sync negative 327 mV, (at output impedance more than 47 kilohms) Output impedance with less than 2.2 kilohms/Stereo minijack (ø 3.5mm)

Input impedance more than 47 kilohms

### DV input/output

4-pin special connector Headphones

Stereo minijack (ø 3.5 mm) MIC input

Stereo minijack (ø 3.5mm):0.388mV,

Input impedance 6.8 kilohms

### **C**LANC jack

Stereo miniminijack (ø 2.5 mm)

### **LASER LINK**

#### Video/audio

IR space transmission system according to EIAJ (Electric Industries Association of Japan) standards

Audio carrier wave

Lch: 4.3MHz

Rch: 4.8MHz

### General

### **Power requirements**

7.2 V (battery insertion input) 8.4 V (DC IN jack)

#### Average power consumption

4.1 W during camera recording using viewfinder 5.2 W during camera recording

using LCD screen

3.9 W during playback using LASER LINK (when viewfinder is on and LCD is off).

Operating temperature 0°C to 40°C (32°F to 104°F)

# Storage temperature

-20°C to 60°C (-4°F to 140°F)

### **Dimensions**

Approx.  $93 \times 103 \times 193 \text{mm} (w/h/d)$  $\frac{3}{4 \times 4^{1}/8 \times 7^{5}/8}$  in.)

— Continued on next page —



DIGITAL VIDEO CAMERA RECORDER



SONY

#### Mass

Approx. 880 g (1 lb 15 oz) excluding the battery pack and the cassette Approx. 950 g (2 lb 1 oz) including the battery pack NP-F330, lithium battery and cassette DVM60 Approx. 1 kg (2 lb 3 oz) including the battery pack NP-F550, lithium battery and cassette DVM60 Approx. 1.1 kg (2 lb 3 oz) including the battery pack NP-F750, lithium battery and cassette DVM60 Approx. 1.2 kg (2 lb 3 oz) including the battery pack NP-F950, lithium battery and cassette DVM60

#### Microphone

Electret condenser microphone, Stereo type

### Speaker

Dynamic-speaker

Supplied accessories

See page 2.

### **AC** power adaptor

Power requirements 100 to 240 V AC, 50/60 Hz

**Power consumption** 

**Output voltage** 

DC OUT: 8.4 V, 1.5 A in operating mode

Operating temperature

0°C to 40°C (32°F to 104°F)

Storage temperature

−20°C to 60°C (−4°F to 140°F) Dimensions (Approx.)

125 x 39 x 62 mm (w/h/d) (5 x 19/16  $\times 2^{1/2}$  in.)

Mass (Approx.)

280 g (9.8 oz) excluding power code

### Floppy disk adapter

The number of images you can record on a floppy disk

SFN mode: Approx. 7 to 8 FIN mode: Approx. 14 to 16 STD mode: Approx. 23 to 27

Memory 3.5 inch, 2HD floppy disk (1.44 MB)

MS-DOS format

Operating temperature 5°C to 40°C (41°F to 104°F)

**Dimensions** 

floppy disk slot : Approx. 101.5 x  $17.2 \times 147 \text{ mm} (w/h/d) (4 \times 11/16 \times 10)$  $5^{7}/8 \text{ in.}$ 

PC card slot : Approx. 54 x 11 x 120 mm (w/h/d)  $(2^{1}/4 \times ^{7}/16 \times ^{1})$ 4 <sup>3</sup>/4 in.)


Mass

Approx. 380 g (13.4 oz) Power requirements Supplied from the camcorder

Design and specifications are subject to change without notice.

#### • SUPPLIED ACCESSORIES

Check that the following accessories are supplied with your camcorder.

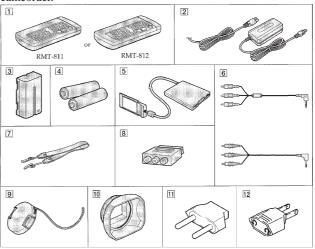

- [1] Wireless Remote Commander (1) RMT-811: DCR-TRV900/TRV900E RMT-812: DCR-TRV890E
- 2 AC-L10A AC power adaptor (1) The shape of the plug varies from region to
- $\fbox{3}$  NP-F330 battery pack (1)
- 4 R6 (size AA) battery for Remote Commander (2)
- 5 Floppy disk adapter (1)
- 6 A/V connecting cable (1)

- 7 Shoulder strap (1)
- 8 21-pin adaptor (1) DCR-TRV890E/TRV900E : AEP, UK
- 9 Lens cap (1)
- 10 Lens hood (1)
- 11 2-pin conversion adaptor (1)
- 12 2-pin conversion adaptor (1)E, Hong Kong

### **SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK A OR DOTTED LINE WITH MARK A ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

#### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE A SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈSES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.

### **SAFETY CHECK-OUT**

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

- Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
- 2 Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
- Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
- Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
- 5. Check the B+ voltage to see it is at the values specified.
- Flexible Circuit Board Repairing
  - Keep the temperature of the soldering iron around 270°C during repairing.
  - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
  - Be careful not to apply force on the conductor when soldering or unsoldering.

### **TABLE OF CONTENTS**

SERVICE NOTE	Deleting images1-35
1. Power Supply During Repairs	Copying the image recorded with the memory card slot to
2. How to Take a Cassette Out When the Main Power Cannot	mini DV tapes (DCR-TRV900E only)1-35
Be Turned On6	Playing back images in a continuous loop - SLIDE SHOW 1-36
	Additional information
SELF-DIAGNOSIS FUNCTION	Usable cassettes and playback modes
1. Self-Diagnosis Function	Charging the vanadium-lithium battery in the camcorder 1-37
2. Self-Diagnosis Display	Resetting the date and time
3. Service Mode Display	Simple setting of clock by time difference
3-1. Display Method	Tips for using the battery pack
3-2. Switching of Backup No	Maintenance information and precautions
3-3. End of Display	Trouble check
4. Self-Diagnosis Code Table 8	Self-diagnosis function
4 CENERAL	Identifying the parts
1. GENERAL	Warning indicators
Before you begin	The state of the s
Using this manual	2. DISASSEMBLY
Getting started	2-1. Cabinet (Upper) Assembly, Front Panel Assembly2-1
Installing and charging the battery pack1-1	2-2. Battery Panel Assembly2-2
Inserting a cassette	2-3. Cabinet (R) Assembly, Cabinet (L) Assembly2-2
Basic operations	2-4. Mechanism Deck, Lens Assembly, VC-208, VI-151,
Camera recording	SE-75 Boards2-3
Hints for better shooting1-5	2-5. JK-163 Board2-3
Checking the recorded picture1-6	2-6. CK-80 Board2-4
Playing back a tape1-6	2-7. LCD Panel Assembly, Hinge Assembly2-4
Searching for the end of the picture1-7	2-8. PD-101 Board2-5
Advanced operations	2-9. BT Terminal Board, DC-IN Connector2-5
Using alternative power sources1-7	2-10. ED-48, VF-121 Boards
Changing the mode settings	2-11. LB-55 Board
Photo recording1-10	2-12. MA-333 Board
Shooting with all the pixels - PROG.SCAN1-11	2-13. Service Position (Mainly for and voltage measurement) 2-7
Using the FADER function	2-14. Circuit Boards Location       2-8         2-15. Flexible Boards Location       2-9
Shooting with backlighting1-12	2-13. Flexible Boards Location2-9
Using the wide mode function	3. BLOCK DIAGRAMS
Enjoying picture effect 1-13	3-1. Overall Block Diagram3-1
Recording with various effects - digital effect	3-1. Overall Block Diagram
Shooting with manual adjustment	3-2. Tower block blagfalli
Focusing manually	4. PRINTED WIRING BOARDS AND
Interval recording	SCHEMATIC DIAGRAMS
Superimposing a title	4-1. Frame Schematic Diagram-14-1
Making a custom title	Frame Schematic Diagram-2 4-5
Labelling a cassette	4-2. Printed Wiring Boards and Schematic Diagrams4-9
Watching on a TV screen1-21	CD-202 (CCD Imager) Schematic Diagram4-11
Viewing the picture with the picture effect1-22	CD-202 (CCD Imager) Printed Wiring Board4-13
Searching the boundaries of recorded tape with date - date	• VC-208 (Sample Hold & AGC, Camera Processor, Base
search	Band Input, Motor Drive, VAP Driver, Card Control,
Searching the boundaries of recorded tape with title - title	PWN Control, Honey, PCMCIA Control)
search	Printed Wiring Board4-17
Searching for a photo - photo search/photo scan 1-24	• VC-208 (Sample Hold & AGC)(1/7)
Returning to a preregistered position1-25	Schematic Diagram4-24
Display recording data - data code function1-25	• VC-208 (Camera Processor)(2/7)
Editing onto another tape1-25	Schematic Diagram4-27
Editing partially on a mini DV tape - DV synchro-editing 1-26	<ul> <li>VC-208 (Base Band Input)(3/7)</li> </ul>
Recording from a VCR or TV (DCR-TRV900E only) 1-26	Schematic Diagram4-32
Replacing recording on a tape - insert editing	• VC-208 (Motor Drive)(4/7)
(DCR-TRV900E only)	Schematic Diagram4-35
Audio dubbing (DCR-TRV900E only)	• SE-75 (YAW/Pitch Sensor)
Memory card slot operations  Using the memory card slot introduction 1.28	Printed Wiring Board
Using the memory card slot - introduction	• VC-208 (VAP Driver)(5/7)
Recording an image from a mini DV tape as a still image 1-31 Copying still images from a mini DV tape - photo save 1-32	Schematic Diagram
Recording still images no PC cards (not supplied) - memory	VC-208 (Card Control, PWM Control)(6/7)     Schematic Diagram4-43
photo recording1-32	• VC-208 (Honey, PCMCIA Control)(7/7)
Viewing a still picture - memory photo playback1-33	Schematic Diagram
Preventing accidental erasure - PROTECT	Schematic Diagram4-47

	• VI-151 (REC/PB AMP)(1/10)	1.	Setting the Switch	
	Schematic Diagram4-51	2.	Order of Adjustments	5-4
	• VI-151 (Timing Generator)(2/10)	3.	Subjects	5-4
	Schematic Diagram4-55	1-2.	Initialization of F, E Page Data	5-5
	• VI-151 (Video Interface)(3/10)	1.	Initializing the F, E Page Data	
	Schematic Diagram4-57	2.	Modification of F, E Page Data	
	• VI-151 (DCT/IDCT)(4/10)	3.	F Page Table	
	Schematic Diagram	4.	E Page Table	
	• VI-151 (IR Transmitter)(5/10)	1-3.	Camera System Adjustments	5-10
	Schematic Diagram4-65	1.	27MHz Origin Oscillation Adjustment	
	• VI-151 (Audio Processor)(6/10)		(VC-208 board)	5-10
	Schematic Diagram4-68	2.	IRIS & ND HALL Auto Adjustment	5-10
	• VI-151 (HI Control)(7/10)	3.	Offset Adjustment	
	Schematic Diagram4-71	4.	Flange Back Adjustment	
	• VI-151 (Mechanism Control)(8/10)	4-1.	Flange Back Adjustment (1)	
	Schematic Diagram4-77	4-2.	Flange Back Adjustment (2)	
	• VI-151 (Drum/Capstan Motor Drive)(9/10)	5.	Flange Back Check	
	Schematic Diagram4-79	6.	Picture Frame Setting	5-13
	• VI-151 (DC/DC Converter)(10/10)	7.	Pre White Balance Data Input	5-14
	Schematic Diagram4-83	8.	Auto White Balance Standard Data Input	
	• FP-594 (Loading Motor, ST Reel Sensor)	9.	MAX GAIN Adjustment	
	Printed Wiring Board4-87	10.	LV Standard Data Input	
	• FK-4880 (User Control) Schematic Diagram	11.	White Balance ND Filter Compensation Adjustment	
	• VI-151 (REC PB AMP, Timing Generator, Video	12.	Auto White Balance Adjustment	
	Interface, DCT/IDCT, IR Transmitter, Audio Processor,	13.	Color Reproduction Adjustment (ND Filter OFF)	
	HI Control, Mechanism Control, Drum/Capstan Motor	14.	Color Reproduction Adjustment (ND Filter ON)	5-17
	Drive, DC/DC Converter)	15.	White Balance Check	5-18
	Printed Wiring Board4-91	16.	PSD Sensor Gain Adjustment	
	• FP-21 (Focus SW) Flexible Board4-96		PSD Sensor Gain Adjustment (1)	5-19
	• FP-22 (MIC Jack) Flexible Board		PSD Sensor Gain Adjustment (2)	
	• MA-333 (Stereo MIC AMP)	17.	Angular Velocity Sensor Sensitivity Adjustment	
	Printed Wiring Board4-97	1-4.	Color Electronic Viewfinder System Adjustment	
	• RI-10 (Sircs Receiver)	1.	VCO Adjustment (VF-121 board)	
	Printed Wiring Board4-98	2.	Bright Adjustment (VF-121 board)	5-23
	• MA-333 (Stereo MIC AMP)	3.	Contrast Adjustment (VF-121 board)	5-23
	Schematic Diagram4-99	4.	Backlight Consumption Current Adjustment	
	• RI-10 (Sircs Receiver)		(VF-121 board)	5-24
	Schematic Diagram4-101	5.	White Balance Adjustment (VF-121 board)	
			LCD SYSTEM ADJUSTMENT	
	• FP-16 (Panel Switch) Flexible Board			
	• FP-18 (User Control) Flexible Board4-103	1.	VCO Adjustment (PD-101 board)	
	• ED-48 (User Control) Schematic Diagram 4-103	2.	D range Adjustment (PD-101 board)	
	• CK-80 (User Control) Schematic Diagram4-104	3.	Bright Adjustment (PD-101 board)	5-26
	• CK-80 (User Control) Printed Wiring Board 4-107	4.	Contrast Adjustment (PD-101 board)	5-27
	• ED-48 (User Control) Printed Wiring Board4-110	5.	V-COM Level Adjustment (PD-101 board)	5-27
	• FP-23 (S Video) Flexible Board4-111	6.	V-COM Adjustment (PD-101 board)	
	• JK-163 (Audio/Video IN/OUT)	7.	White Balance Adjustment (PD-101 board)	
	Printed Wiring Board and	5-2.	Mechanism Section Adjustment	
	Schematic Diagram4-112	2-1.	How to Enter Record Mode without Cassette	
	• PD-101 (RGB Driver)(1/2)	2-2.	How to Enter Playback Mode without Cassette	
	Schematic Diagram4-115	2-3.	Tape Path Adjustment	5-29
	• PD-101 (Timing Generator, Back-Light)(2/2)	1.	Preparations for Adjustment	5-29
	Schematic Diagram4-119	2.	Procedure after Operations	5-29
	• PD-101 (RGB Driver, Timing Generator, Back-Light)	5-3.	Video Section Adjustments	
	Printed Wiring Board4-121	3-1.	Preparations before Adjustments	
	• FP-19 (User Control) Flexible Board		Equipment Required	
	• VF-121 (Color EVF) Printed Wiring Board4-123		Precautions on Adjusting	
	• VF-121 (Color EVF) Schematic Diagram4-125		. Adjusting Connectors	
	• LB-55 (EVF Back-Light)		. Connecting the Equipment	
	Printed Wiring Board and		. Checking the Input Signals	
	Schematic Diagram4-128		. Alignment Tapes	
	5	3-1-7	. Input/Output Level and Impedance	5-33
5.	ADJUSTMENTS		Initialization of B, C, D Page Data	
		1.	Initializing the C Page Data	
5-1.	Camera Section Adjustment			
1-1.	Preparations before Adjustment (Camera Section)5-1	2.	Modification of C Page Data	
	List of Service Tools5-1	3.	C Page Table	
	. Preparations5-2	4.	Initializing the D Page Data	
1-1-3	.Precaution5-4	5.	Modification of D Page Data	5-36

	D.D. (#11	- 26
6.	D Page Table	
7.	Initializing the B Page Data	
8.	Modification of B Page Data	
9.	B Page Table	
3-3.	System Control System Adjustment	5-41
1.	Battery End Adjustment (VI-151 Board)	5-41
3-4.	Servo and RF System Adjustments	5-42
1.	Cap FG Duty Adjustment (VI-151 Board)	
2.	T Reel FG Duty Adjustment (VI-151 Board)	
3.	PLL fo & LPF fo Adjustment (VI-151 Board)	
<i>4</i> .	Switching Position Adjustment (VI-151 Board)	
5.	AGC Center Level Adjustment (VI-151 Board)	
6.	APC & AEQ Adjustment (VI-151 Board)	
7.	PLL fo & LPF fo Final Adjustment (VI-151 Board)	
3-5.	Video System Adjustments	
3-5-1	Base Band Block Adjustments	
1.	Chroma BPF fo Adjustment (VI-151 Board)	
2.	S Video Out Y Level Adjustment (VI-151 Board)	5-45
3.	S Video Out Chroma Level Adjustment	
	(VI-151 Board)	5-46
4.	AV Out Y, Chroma Level Adjustment (VI-151 Board)	
5.	PLL Adjustment (VC-208 Board)	
	BIST Check	
1.	Playback System Check	
1-1.	Preparation for Playback	
1-2.	IC1814 (TRF) BIST (PB) Check	
1-3.	IC1601 (TFD) BIST (PB) Check	
1-4.	IC1800 (SFD) BIST (PB) Check	
1-5.	IC1501 (VFD) BIST (PB) Check	
2.	Recording System Check	5-51
2-1.	Preparations for recording	5-51
2-2.	IC1501 (VFD) BIST (REC) Check	5-51
2-3.	IC1600 (SFD) BIST (REC) Check	
2-4.	IC1601 (TFD) BIST (REC) Check	
2-5.	IC1900 (TRX) BIST (REC) Check	
3-6.	IR Transmitter Adjustments	
		J-JJ
1.	IR Video Carrier Frequency Adjustment	<b>5 5</b> 2
•	(VI-151 board)	
2.	IR Video Deviation Adjustment (VI-151 board)	
3.	IR Audio Deviation Adjustment (VI-151 board)	
3-7.	Audio System Adjustments	
1.	Playback Level Check	
2.	Overall Level Characteristics Check	5-56
3.	Overall Distortion Check	5-56
4.	Overall Noise Level Check	5-56
5.	Overall Separation Check	5-56
5-4.	Service Mode	
4-1.	Adjustment Remote Commander	
1.	Using the adjustment remote commander	
2.	Precautions upon using the	3-37
۷.	adjustment remote commander	7
4.0		
4-2.	Data Process	
4-3.	Service Mode	
1.	Setting the Test Mode	
2.	Emergence Memory Address	
2-1.	EMG Code (Emergency Code)	5-59
2-2.	MSW Code	5-60
3.	Bit value discrimination	5-61
4.	Switch check (1)	
5.	Switch check (2)	
<i>5</i> . 6.	Record of Use check	
٥.	record of Obo eneck	J U2
6.	DEDAID DARTO LICT	
	REPAIR PARTS LIST	<i>(</i> 1
6-1.	Exploded Views	
6-1. 6-1-1	Exploded Views	. 6-1
6-1. 6-1-1. 6-1-2.	Exploded Views	. 6-1 . 6-2

6-1-4. Cabinet (R) Section	6-4
6-1-5. LCD Panel Section	6-5
6-1-6. Battery Panel Section	6-6
6-1-7. Cabinet (Upper) Section	6-7
6-1-8. EVF Section	6-8
6-1-9. Front Panel Section	6-9
6-1-10. Lens Block Section	6-10
6-1-11. Cassette Compartment,	
Drum and Reel Table Assembly	6-11
6-1-12. Tape Guide, Pinch Slider Assembly	
and Brake Slider Assembly	6-12
6-1-13. Each Gears and Loading/Capstan Motor Assembly	6-13
6-2. Electrical Parts List	6-14
* The entired axis frame and color reproduction frame is she	MAN

### **SERVICE NOTE**

### 1. POWER SUPPLY DURING REPAIRS

In this unit, about 10 seconds after power is supplied (8.4V) to the battery terminal using the service power cord (J-6082-223-A), the power is shut off so that the unit cannot operate.

This following two methods are available to prevent this. Take note of which to use during repairs.

### Method 1.

Connect the servicing remote commander RM-95 (J-6082-053-B) to the LANC jack, and set the remote commander switch to the "ADJ" side.

### Method 2.

Press the battery switch of the battery terminal using adhesive tape, etc.

### Method 3.


Use the AC power adaptor.

# 2. HOW TO TAKE A CASSETTE OUT WHEN THE MAIN POWER CANNOT BE TURNED ON

Note: To take a cassette out forcibly as follows when the main power cannot be turned on, remove the cassette lid, cabinet (L) and cabinet (R). Apply +4.5 V power from an external power supply to the loading motor, as shown below. Refer to sections 2-1 and 2-2 for the procedure to remove the cabinet (L) assembly.

### **Procedure:**

- 1) Disconnect the CN2913 of VI-151 board.
- 2) Apply +4.5 V directly to the loading motor as shown to drive the loading motor that ejects a cassette.

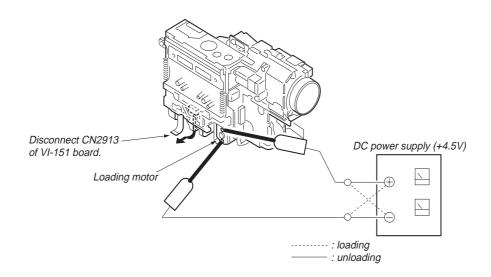

### **SELF-DIAGNOSIS FUNCTION**


### 1. SELF-DIAGNOSIS FUNCTION

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the viewfinder, LCD screen or LCD window what to do. This function consists of two display; self-diagnosis display and service mode display.

Details of the self-diagnosis functions are provided in the Instruction manual

### 2. SELF-DIAGNOSIS DISPLAY

When problems occur while the unit is operating, the counter of the viewfinder, LCD screen or LCD window consists of an alphabet and 4-digit numbers, which blinks at 3.2 Hz. This 5-character display indicates the "repaired by:", "block" in which the problem occurred, and "detailed code" of the problem.

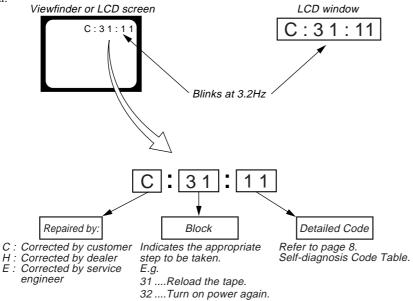


### 3. SERVICE MODE DISPLAY

The service mode display shows up to six self-diagnosis codes shown in the past.

### 3-1. Display Method

While pressing the "STOP" key, set the switch from OFF to "VTR or PLAYER", and continue pressing the "STOP" key for 5 seconds continuously. The service mode will be displayed, and the counter will show the backup No. and the 5-character self-diagnosis codes.

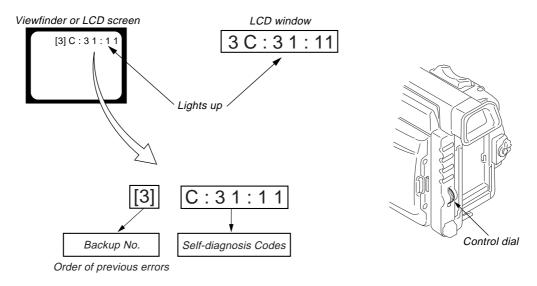

### 3-2. Switching of Backup No.

By rotating the control dial, past self-diagnosis codes will be shown in order. The backup No. in the [] indicates the order in which the problem occurred. (If the number of problems which occurred is less than 6, only the number of problems which occurred will be shown.)

[1]: Occurred first time
[2]: Occurred second time
[3]: Occurred third time
[6]: Occurred the last time

### 3-3. End of Display

Turning OFF the power supply will end the service mode display.

**Note:** The "self-diagnosis display" data will be backed up by the coin-type lithium battery of CK-80 board BT7200. When this coin-type lithium battery is removed, the "self-diagnosis display" data will be lost by initialization.

# 4. SELF-DIAGNOSIS CODE TABLE

S	Self-diagnosis Code		de			
Repaired by:	l	ock ction	Deta Co	ailed de	Symptom/State	Correction
C	2	1	0	0	Condensation.	Remove the cassette, and insert it again after one hour.
С	2	2	0	0	Video head is dirty.	Clean with the optional cleaning cassette.
С	2	3	0	0	Non-standard battery is used.	Use the info LITHIUM battery.
С	3	1	1	0	LOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
С	3	1	1	1	UNLOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
С	3	1	2	0	T reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
С	3	1	2	1	Winding S reel fault when counting the rest of tape.	Load the tape again, and perform operations from the beginning.
С	3	1	2	2	T reel fault.	Load the tape again, and perform operations from the beginning.
С	3	1	2	3	S reel fault.	Load the tape again, and perform operations from the beginning.
С	3	1	2	4	T reel fault.	Load the tape again, and perform operations from the beginning.
С	3	1	3	0	FG fault when starting capstan.	Load the tape again, and perform operations from the beginning.
С	3	1	4	0	FG fault when starting drum.	Load the tape again, and perform operations from the beginning.
С	3	1	4	2	FG fault during normal drum operations.	Load the tape again, and perform operations from the beginning.
С	3	1	1	0	LOAD direction loading motor time- out.	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	1	1	1	UNLOAD direction loading motor time-out.	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	2	2	0	T reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	2	2	1	Winding S reel fault when counting the rest of tape.	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	2	2	2	T reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	2	2	3	S reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	2	2	4	T reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	2	3	0	FG fault when starting capstan.	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	2	4	0	FG fault when starting drum	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3	2	4	2	FG fault during normal drum operations	Remove the battery or power cable, connect, and perform operations from the beginning.
Е	6	1	0	0	Difficult to adjust focus (Cannot initialize focus.)	Inspect the lens block focus reset sensor (Pin 10 of CN500 of VC-208 board) when focusing is performed when the control dial is rotated in the focus manual mode, and the focus motor drive circuit (IC500 of VC-208 board) when the focusing is not performed.
Е	6	1	1	0	Zoom operations fault (Cannot initialize zoom lens.)	Inspect the lens block zoom reset sensor (Pin ② of CN500 of VC-208 board) when zooming is performed when the zoom lens is operated and the zoom motor drive circuit (IC500 of VC-208 board) when zooming is not performed.
Е	6	2	0	0	Steadyshot function does not work well. (With pitch angular velocity sensor output stopped.)	Inspect pitch angular velocity sensor (SE451 of SE-75 board) peripheral circuits.
Е	6	2	0	1	Steadyshot function does not work well. (With yaw angular velocity sensor output stopped.)	Inspect yaw angular velocity sensor (SE450 of SE-75 board) peripheral circuits.

### DCR-TRV890E/TRV900/TRV900E

### **SECTION 1 GENERAL**

This section is extracted from instruction manual. (DCR-TRV890E/TRV900E model)

### Before you begin Using this manual

The instructions in this manual are for the two models listed below. Before you start reading this manual and operating the unit, theek your model number by looking at the bottom of your camcorder. The DCR-TRV900E is the model used for illustration purposes. Otherwise, the model name is indicated in the illustrations. Any differences in operation are clearly indicated in the text, for example, "DCR-TRV900E only." As you read through this manual, buttons and settings on the camcorder are shown in capital letters.

letters. e.g., Set the POWER switch to CAMERA.

Types of antiere	Types of anticioness				
Model number	Line recording	The POWER switch position during playback			
DCR-TRV900E	•	VTR			
DCR-TRV890E		PLAYER			

#### Note on Cassette Memory

This camcorder is based on the DV format. You can only use mini DV cassettes with this camcorder. We recommend you to use a tape with cassette memory CIII.

The functions which depend on whether the tape has the cassette memory or not are:

has the cassette memory or not are:

• End Search (p. 26, 3.1)

• Date Search (p. 91)

• Photo Search (p. 97).

The functions you can operate only with the cassette memory are:

• Title Search (p. 95)

• Superimposing a title (p. 79)

• Making a custom title (p. 82)

• Labelling a cassette (p. 84).

For details, see page 148.

#### Note on TV colour systems

TV colour systems differ from country to country. To view your recordings on a TV, you need a PAL system-based TV.

### Перед началом эксплуатации Использование данного руководства

Инструкции в данном руководстве изпожены для двух инжеперечиоленных модлель. Перед тем, как Вы начнете читать данное руководство и экспуательное урководство учитывайте, что кногих и установич и установич обучать видеокамер показаны прописными буквами. Прим. Установич и установич и видеокамере показаны прописными буквами. Прим. Установич в положение САМЕРА. Инструкции в данном руководстве изложень

Линейная запись	Установка выключателя POWER во время воспроиз- ведения		
•	VTR		
_	PLAYER		
	Линейная запись		

#### Примечание к кассете с памятью

Данная видеокамера базируется на цифровом видеоформате DV. Вы можете использовать на данной видеокамере толь кассеты mini DV. Мы рекомендуем Вам использовать ленты кассет с памятью (I/I).

Следующие функции будут зависеть от того, используется ли лента кассеты с памятью

используется ли лента кассеты с пам или нет:
• Поиск конца (стр. 26, 31)
• Поиск даты (стр. 91)
• Фотопоиск (стр. 97).
Следующими функциями Вы можете управлять только при использовании с памятыс: . с ии кассеты

- управлять только при использовании касс с памятыс:
   Поиск титра (стр. 95)
   Наложение титра (стр. 79)
   Создание собственного титра (стр. 82)
   Обозначение кассеты (стр. 84)
  См. подробности на стр 148.

#### Примечание к системам цветного телевидения

Системы цветного телевидения отличаются в зависимости от страны. Для просмотра Ваших записей по телевизору Вам необходимо использовать телевизор, основанный на системе PAL.

### Using this manual

#### Precaution on copyright

Television programmes, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright

#### Precautions on camcorder care

- The LCD screen and/or the colour viewfinder are manufactured using high-precision technology. However, there may be some tiny black points and/or bright points (red, blue or green in colour) that constantly appear on the LCD screen and/or in the viewfinder. These points are normal in the manufacturing process and do not affect the recorded picture in any way. Over 99.99% are operational for effective use.

  Do not let the camcorder get wet. Keep the camcorder away from rain and sea water. Letting the camcorder get wet may cause thuit to malfunction, and sometimes this malfunction cannot be repaired [a].

  Never leave the camcorder exposed to temperatures above 60°C (140°F), such as in a car parked in the sun or under direct sunlight [b]. • The LCD screen and/or the colour viewfinder

# Использование данного руководства

### Предостережение об авторском

Телевизионные программы, кинофильмы, видеоленты и другие материалы могут быть защищены авторским правом.
Неправомочная запись таких материалов может противоречить условиям закона об авторском праве

#### Предосторожности по уходу за видеокамерой

- Экран ЖКД и/или цветной видоискате выполнены с применением высокопрецизионной технологии.
   Однако, черные точки или яркие точк света (красные, синие или зеленые) могут постоянно появляться на экран ЖКД и/или в цветном видоискателе. ЖКД и/или в цветном видоискателе. Эти точки считаются нормальным явлением в процессе съемки и никак не влияют на записываемое изображение. Свыше 99.99% экрана предназначенно для эффективного использования
- Не позволяйте видеокамере делаться влажной. Предохраннйте видеокамеру от дождя или морской воды. Если Вы намочите видеокамеру, то это может вызвать неисправность аппарата, и в некоторых случаях эта неисправность не подлежит ремонту [а]. • Никогда не оставляйте видеокамеру в месте с температурой свыше 60°C (140°F), как например, в автомобиле, остановленном на солнце или под прямыми солнечными лучами [b]. влажной. Предохраняйте видеокамеру от






#### **Checking supplied** accessories

# Check that the following accessories are supplied with your camcorder.

#### Проверка прилагаемых принадлежностей

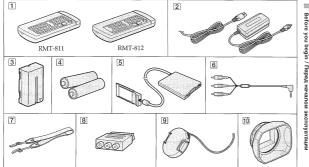

 $\boxed{ 1 \text{ Wireless Remote Commander } (1) \text{ } (p. \ 188) }$ RMT-811: DCR-TRV900E RMT-812: DCR-TRV890E

2 AC-L10A AC power adaptor (1), Mains lead (1) (p. 9, 32) The shape of the plug varies from region to

- $\fbox{3} \ \text{NP-F330 battery pack} \ (1) \ (p.\ 8)$
- 4 R6 (size AA) battery for Remote Commander (2) (p. 189)
- 5 Floppy disk adapter (1) (p. 116)
- **6** A/V connecting cable (1) (p. 86, 103)
- 7 Shoulder strap (1) (p. 190)
- 8 21-pin adaptor (1) (p. 87)
- 9 Lens cap (1) (p. 14)
- 10 Lens hood (1) (p. 17)

Contents of the recording cannot be compensated if recording or playback is not made due to a malfunction of the camcorder video tape, etc.

Проверьте, что следующие принадлежности прилагаются к Вашей видеокамере.



- Сетевой адаптер перем. тока AC-L10A (1) Сетевой провод (1) (стр. 9, 32) Форма вилочного разъема отличается в зависимости от региона использования.
- **3** Батарейный блок NP-F330 (1) (стр. 8)
- 4 Батарейка R6 (размером AA) для пульта дистанционного управления (2) (стр.189)
- 5 Адаптер флоппи-диска (1) (стр. 116)
- (1) (стр. 86, 103)
- **7** Плечевой ремень (1) (стр. 190)
- **8 21-штырьковый адаптер** (1) (стр. 87) 9 Крышка объектива (1) (стр. 14)
- 10 Светозащитная бленда объектива (1)

Содержимое записи не может быть компенсировано, если запись или воспроизведение не выполняется вследствие повреждения видеокамеры видеоленты и т.д.

# Getting started

6

/ Tepe/

### Installing and charging the battery pack

Before using your camcorder, you first need to install and charge the battery pack. To charge the battery pack, use the supplied AC power adaptor.

adaptor. This comcorder operates only with the "InfoLITHIUM" battery back. "InfoLITHIUM" is a trademark of Sony

#### Installing the battery pack

(1) Lift up the viewfinder.
(2) Insert the battery pack in the direction of the ▼ mark on the battery pack. Slide the battery pack down until it is locked.
Attach the battery pack to the camcorder

securely

# Подготовка к эксплуатации


### Установка и зарядка батарейного блока


Перед использованием Вашей видеокамеры Вам нужно сперва установить и зарядить батарейный блок. Для зарядки батарейный блок. Для зарядки батарейного блока используйте прилагаемый сетевой адаптер переменного тока. Данная видеокамера работает только от батарейного блока "InfoLITHIUM".

"InfoLITHIUM" является товарным знаком корпорации Sony

#### Установка батарейного блока

(1) Поднимите видоискатель вверх. (2) Вставьте батарейный блок в направлении знака Т на батарейном блоке. Двигайте батарейный блок вниз до тех пор, пока он не будет зафиксирован. Надежно присоедините батарейный блок к видеокамере.

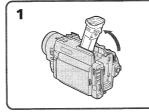

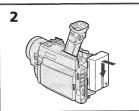

on installing the NP-F730/F750/F930/F950 battery pack
Use the camcorder while stretching out the

Note on the battery pack
Do not carry the camcorder by grasping the battery pack.

оимечание к установке батарей пока NP-F730/F750/F930/F950

Примечание к батарейному блоку Не носите видеокамеру, держа ее з батарейный блок.

#### Installing and charging the battery pack

### Charging the battery pack

Charging the battery pack

Charge the battery pack on a flat surface without vibration. The battery pack is charged a little in the factory.

(1) Open the DC IN jack cover and connect the supplied AC power adaptor to the DC IN jack with the plug's A mark up.

(2) Connect the mains lead to the AC power adaptor.

(3) Connect the mains lead to mains.

(4) Set the POWER switch to OFF. Remaining battery time is indicated by the minutes on the display window. Charging begins.

When the remaining battery indicator becomes — normal charge is completed. For full charge, which allows you to use the battery place statched for about 1 hour after normal charge is completed until FULL appears in the display window.

Before using the camcorder with the battery pack, unplug the AC power adaptor from the DC IN jack of the camcorder. You can also use the battery pack before it is completely charged.

#### Установка и зарядка батарейного блока

#### Зарядка батарейного блока

Заряжайте батарейный блок на плоской Заряжаите оатарейный олок на плоской поверхности, неподверхенной вибращии. Батарейный блок слегка заряжен на заводе (1) Откройте крышку гназда DC IN и подсоедините сетевой адаптер переменного тока к гнезду DC IN со знаком ▲ на разъеме, направленным

знаком & на разъеме, направленным вверх.


(2) Подсоедините сетевой провод к сетевому адаптеру перем. тока.

(3) Подсоедините сетевой провод к электрической сети.

(4) Установите выключатель РОЖЕВ в положение ОFF. Оставшееся время заряда батарейного блока указывается в минутах в окошке дисплея. Зарядка началался. началась

началась. Когда индикатор оставшегося заряда батарейного блока ‱ будет заполнен, нормальная зарядка завершена Для полной зарядки, которая позволяет Вам использовать батарейный блок дольше, чем обычно оставьте батарейный блок подсоединенным приблизительно еще на 1 час после завершения нормальной зарядки до тех пор, лока в окошке дисплен не появится ЕULL

Перед использованием видеокамеры от батарейного блока отсоедините сетев адаптер перем, тока от гнезда DC IN, Вы также можете использовать батарейный блок до того, как он полностью зарядится

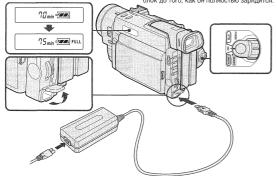

# Installing and charging the battery pack

- Notes

  \*"--- min" appears on the display window until the camcorder calculates remaining battery time.

  \*Remaining battery time indication on the display window roughly indicates the recording time with the viewfinder. Use it as a guide. It may differ from the actual recording time.

Battery pack	Charging time '
NP-F330 (supplied)	150 (90)
NP-F530	210 (150)
NP-F550	210 (150)
NP-F730	300 (240)
NP-F750	300 (240)
NP-F930	390 (330)
NP-F950	390 (330)

The time required for a normal charge is indicated in parentheses.

\* Approximate minutes to charge an empty battery pack using the supplied AC power adaptor. (Lower temperatures require a longer charging time.)

#### Battery life While using with viewfinder

Battery pack	Continuous recording time **	recording time ***	
NP-F330 (supplied)	75 (70)	40 (35)	
NP-F530	120 (110)	60 (55)	
NP-F550	150 (135)	75 (70)	
NP-F730	270 (245)	140 (130)	
NP-F750	315 (275)	165 (145)	
NP-F930	420 (375)	220 (195)	
NID DOEG	405 (440)	DEE (220)	

# Установка и зарядка батарейного блока

- "--- min" появляется в окошке дисплея в то время, когда видеокамера вычисляет оставшееся время заряда батарейного
- Индикация оставшегося времени заряда Индикация оставшегося времени заряда батарейного блока в окошке дисплея приблизительно показывает время записи с использованием видоискателя. Используйте его в качестве руководства. Оно может отличаться от действительного времени записи.

Батарейный блок	Время зарядки*
NP-F330 (прилагается)	150 (90)
NP-F530	210 (150)
NP-F550	210 (150)
NP-F730	300 (240)
NP-F750	300 (240)
NP-F930	390 (330)
NP-F950	390 (330)

Числа в скобках указывают время, требуемуе для нормальной зарядки.

Числа в скобках указывают время, требу для нормальной зарядки.

• Приблизительное время в минутах для зарядки полностью разряженного батарейного блока с использованием прилагаемого сетевого адаптера переменного тока. (При более низких температурах потребуется более длительное время зарядки.)

### Срок службы заряда батарейного

При использовании видоискателя			
Батарейный блок	Время непрерывной записи**	Время типичной записи***	
NP-F330 (прилагается)	75 (70)	40 (35)	
NP-F530	120 (110)	60 (55)	
NP-F550	150 (135)	75 (70)	
NP-F730	270 (245)	140 (130)	
NP-F750	315 (275)	165 (145)	
NP-F930	420 (375)	220 (195)	
NP-F950	485 (440)	255 (230)	

10

9

# Installing and charging the battery pack

Willie using with ECD			
Battery pack	Continuous recording time **	Typical recording time ***	Playing time with LCD
NP-F330 (supplied)	60 (50)	30 (25)	75 (70)
NP-F530	95 (85)	50 (45)	120 (110)
NP-F550	120 (105)	65 (55)	150 (135)
NP-F730	210 (190)	115 (105)	270 (245)
NP-F750	250 (220)	140 (120)	315 (275)
NP-F930	325 (295)	180 (165)	420 (375)
NP-F950	375 (335)	210 (185)	485 (440)

- Numbers in parentheses indicate the time when you use a normally charged battery.

  Battery life will be shorter if you use the camcorder in a cold environment.

  \*\* Approximate continuous recording time indoors.

  \*\*\* Approximate minutes when recording while you repeat recording start/stop, zooming and turning the power on/off. The actual battery life may be shorter.

### Notes on remaining battery time indication

- during recording

   Remaining battery time is displayed on the LCD screen or in the viewfinder. However, the indication may not be displayed properly, depending on using conditions and circumstances.
  • When you close the LCD panel or open it, it
- takes about 1 minute for the correct remaining time to be displayed.

#### Установка и зарядка батарейного блока

Батарейный блок	Время непрерывной записи**	Время типичной записи***	Время воспроиз- ведения на ЖКД
NP-F330 (прилагается)	60 (50)	30 (25)	75 (70)
NP-F530	95 (85)	50 (45)	120 (110)
NP-F550	120 (105)	65 (55)	150 (135)
NP-F730	210 (190)	115 (105)	270 (245)
NP-F750	250 (220)	140 (120)	315 (275)
NP-F930	325 (295)	180 (165)	420 (375)
NP-F950	375 (335)	210 (185)	485 (440)

Числа в скобках указывают время, когда Вы используете нормально заряженный батарейный блок. Срок службы заряда батарейного блока

будет короче, если Вы используете видеокамеру в холодных условиях.

- Приблизительное время непрерывной записи в помещении. Приблизительное время в минутах при
- записи с повторным началом/остановкой записи, наездом видеокамеры и включением/выключением питания. Фактический срок службы заряда батарейного блока может быть короче.

- Примечания к индикации оставшегося времени работы батарейного блока во время записи
  Оставшееся время работы батарейного блока во время записи
  Оставшееся время работы батарейного блока отображается на экране ЖКД или в видоискателе. Однако, индикация может отображаться неправильно в зависимости от условий и обстоятельств использования.
  Когда Вы закрываете панель ЖКД или открываете ее, требуется приблизительно 1 иннута для правильного отображения оставшегося времени.

# Installing and charging the

### To remove the battery pack

Lift up the viewfinder. While pressing BATT RELEASE, slide the battery pack in the direction of the arrow

# Установка и зарядка батарейного блока

Для снятия батарейного блока Поднимите видоискатель вверх. Нажимая В ВАТТ RELEASE, передвиньте батарейный блок в направлении стрелки.



started

Getting

### Inserting a cassette

You can use mini DV cassette with Mini DV logo


- only.
  Make sure that the power source is installed.
  (1) While pressing the small blue button on the
  EJECT switch, slide it in the direction of the arrow. The cassette compartment
- automatically opens.

  (2) Insert a cassette with the window facing out. (3) Close the cassette compartment by pressing the "PUSH" mark on the cassette compartment.
- $^*$  Mini  $\mathbf{N}$  is a trademark

#### Вставка кассеты

- Вы можете использовать только кассету mini DV, со знаком м TV\*.
  Убедитесь, что источник питания установлен. (1) Нажимая маленькую синюю кнопку на выключателе ЕЈЕСТ, сдвиньте его в направлении стрелки. Кассетный отсек открывается автоматически.
  (2) Вставъте кассету в кассетный отсек с окошком, обращенным наружу.
- (3) Закройте кассетный отсек, нажав на знак 'PUSH" на кассетном отсеке

\* мілі $\mathbf{N}$  является товарным знаком.

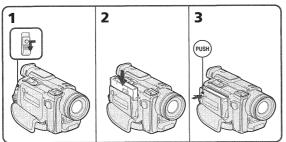

**To eject the cassette**While pressing the small blue button on the EJECT switch, slide it in the direction of the


#### To prevent accidental erasure

Slide and open the tab on the cassette to expose the red mark. If you try to record with the red mark exposed, the B® and a indicators flash on the LCD screen or in the viewfinder, and you cannot record on the tap. To re-record on this tape, slide and close the tab to cover the red mark.



Нажимая маленькую синюю кнопку в выключателе EJECT, сдвиньте его в направлении стрелки.

Для предотвращения случайного стирания
Сдвиньте и откройте лепесток на кассете, чтобы было видно красную метку. Если Вы попытаетесь выполнить запись при видимой красной метке, то индикаторы в № € будут мигать на экране ЖКД или в видоискателе, и Вы не сможете произвести запись на эту ленту. Для выполнения новой записи на такую ленту сдвиньте и закройте лепесток для закрытия красной метки.

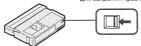

13

#### **Camera recording**

To stop recording momentarily [a] Press START/STOP. The "STBY" indicator appears on the LCD screen or in the viewfinder (Standby mode).

#### To finish recording [b]

Set the POWER switch to OFF. Then, eject the cassette and remove the battery pack.







#### To focus the viewfinder lens

To focus the viewtinder lens
If you cannot see the indicators in the viewfinds
clearly, or after someone else has used the
camcorder, focus the viewfinder lens. Move the
viewfinder lens adjustment lever so that the
indicators in the viewfinder come into sharp
focus.



### Note on Standby mode

Note on Standby mode If you leave the camcorder in Standby mode for 5 minutes while the cassette is inserted, the camcorder turns off automatically. This prevents wearing down the battery and wearing out the tape. To resume Standby mode, while pressing the small green button on the POWER switch, set it to OFF once, and then to CAMERA. To start recording, press START/STOP.

### Note on the progressive mode

If you modify the images on your personal computer or play the images back as still pictures, we recommend you to set PROG. SCAN to ON in the menu system before shooting. The picture quality may improve in this mode, but if you shoot a moving subject, the image may shake when it is played back.

#### Запись с помощью видеокамеры

# Для временной остановки записи [a] Нажмите START/STOP. Индикатор "STBY" появляется на экране ЖКД или в видоискателе (режим готовности).

### Для окончания записи [b]

Установите выключатель POWER в положение OFF. Затем вытолкните кассету и удалите батарейный блок



### Для фокусировки объектива

Для фокусировки объектива видоискателя
Если Вы не можете четко видеть индикаторы в видоискателе или после того, как кто-то другой использовал видеокамеру, выполните фокусировку объектива видоискателя. Передвинъте рычаг регулировки объектив видоискателя так, чтобы индикаторы в видоискателе были четко сфокусированы.



#### Примечание к режиму готовности

Примечание к режиму готовности
Если Вы оставлеете видеокамеру в режиме
готовности на 5 минут при вставленной
кассете, видеокамера выключится
автоматически. Это предотвращает расход
заряда батарейного блока и износ ленты. Для
восстановления режима готовности, нажимая
маленькую зеленую кнопку на выключателе
РОWER, сперва установите его в положение
ОFF, а затем в положение САМЕЯА. Для
начала записи нажмите START/STOP.

Примечание к прогрессивному режиму Если Вы модифицируете изображения на Вашем персональном компьютере или воспроизводите изображения в качестве неподвижных изображений, мы рекомендуем Вам установить PROG.SCAN на ON в системе вам установить PROG. SCAN на ON в систе меню перед началом съемки. Качество изображения может быть улучшено в этом режиме, но если Вы снимаете движущийся объект, изображение может дрожать при воспроизведении.

#### Basic operations

### Camera recording

Make sure that the power source is installed and a cassette is inserted and that the START/STOP MODE selector inside the LCD panel is set to \(\frac{\text{M}}{2}\) Before you record one-time events, you had better make a trial recording to make sure that the camcorder is working correctly. When you use the camcorder for the first time, power on it and reset the date and time to your time before you start recording (p. 151).

(1) Remove the lens cap by pressing both knobs on its sides and pull the lens cap string to fix it.

(2) While pressing the small green button on the POWER switch, set it to CAMERA. The

camcorder is set to Standby mode.

(3) Press START/STOP. The camcorder starts recording, "REC"

appears on the LCD screen or in the viewfinder. The camera recording lamp on the front of the camcorder also lights up. You can also select Recording mode, SP (standard play) mode or LP (long play) mode. Set REC MODE in the menu system according to the length of your planned recording before you start.


#### Основные операции

#### Запись с помощью видеокамеры

Убедитесь, что источник питания установлен, кассета вставлена и переключатель START/STOP MODE внутри панели ЖКД установлен в положение  $\S$ . Перед тем как Вы начнете зались одноразовых событий, Вы можете захотеть сравать пробъмм зались, под полтверм дении предуставлять поставлять по сделать пробную запись для подтверждения, что видеокамера работает правильно. Если Вы используете видеокамеру в первый раз, то включите ее и установите дату и время на Ваше местное время перед началом аписи (стр. 151).

- (1) Снимите крышку объектива, нажав на обе ручки на ее сторонах и потяните за шнурок крышки объектива для ее фиксации.
- (2) Нажимая маленькую зеленую кнопку на выключателе POWER, установите его в положение CAMERA. Видеокамера будет установлена на режим готовности.
- (3) Haxmute START/STOP

(3) Нажмите START/STOP. Видеокамера начинает запись. На экране ЖКД или в видоискателе появляется индикатор "ReC". Лампочка записи камерой, расположенная на передней панели видеокамеры, также будет гореть. Вы также можте выбрать режим записи SP (стандартное воспроизведение). Перед началом записи установите REC MODE в системе меню в соответствии с продолжительностью Вашей планируемой записи.

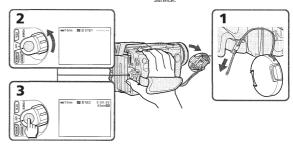

14

### Camera recording

Note on the lock knob When you set the lock knob to the left position the POWER switch will not be set to MEMORY accidentally.

# Запись с помощью видеокамеры

Примечание к фиксирующей ручке Когда Вы установите фиксирующую ручку в левое положение, выключатль POWER не сможет случайно быть установлен в положение MEMORY.



Note on Recording mode
This camcorder records and plays back in SP
(standard play) mode and in LP (long play)
mode. Select SP or LP in the menu system. In Li
mode, you can record 1.5 times as long as in SP
mode.

- Notes on LP mode

  We recommend to use this camcorder to play
  back a tape recorded on this camcorder. If a
  tape recorded on other camcorder is played
  back on this camcorder, or vice versa, mosaicpattern noise may appear.

  When you record in SP and LP modes on one
  tape or you record some scenes in LP mode, the
  playback picture may be distorted or the time
  code may not be written properly between
  scenes.
- code may not be written properly between scenes.

   When you record in LP mode, we recommend you to use a Sony Excellence/Master mini DV cassette so that you can get the most out of your camcorder.

   You cannot make audio dubbing on a tape recorded in LP mode. Use the SP mode for the tape to be audio dubbed.

#### Notes on the time code

- The time code indicates the recording or playback time, "0:00:00" (hours : minutes : seconds) in CAMERA mode and "0:00:00:00" (hours : minutes : seconds : frames) in VTR mode (DCR-TRV900E) or in PLAYER mode
- mode (DCR-TRV900E) or in PLAYER mode (DCR-TRV990E).
  Be sure not to make a blank portion when recording, because the time code will start from "0:00:00:00" again.
  This camcorder uses the drop frame mode.

Note on the beep sound

Note that the beep sound is not recorded on the tape. If you do not want to hear the beep sound, select OFF in the menu system.

Примечание к режиму записи Данная видеокамера может выполнять запись и воспроизведение в режиме SP (стандартного воспроизведения) и в режиме LP (удлиненного воспроизведения). Выберит SP или LP в системе меню. В режиме LP Вы можете выполнить запись продолжительностью в 1,5 раза длинее, чем в режиме SP.

- стью в 1,5 раза длинее, чем в режиме SP.

  Примечания к режиму LP

  Мы рекоментурем использовать данную видеокамеру для воспоизведения лент, записанных на этой же видеокамере. Если лента, записанных на этой же видеокамере. Если лента, записанная на другой видеокамере или наоборот, могут появляться помехи с мозаченой структурой.

   Если Вы выполнеете запись в режимах SP и и LP на одной и той же ленте или записываете некоторые эпизоды в режиме LP, то воспроизводимое изображение может быть искажено или же временной код между сценами может быть запись не некоторые эпизоды в режиме LP, то воспроизводимое изображение может быть искажено или же временной код между сценами может быть искажено или же временной код между сценами может быть искажено или же временной код между сценами может быть искажено от дечу от Вашей видеокамеры. Вы не можете выполнить наложение вымоглить от дечу от Вашей видеокамеры на пенте, воукового спорвеождения на ленте, воукового спорвеождения на ленте, воукового спорвеождения на ленте,

- звукового сопровождения на ленте, записанной в режиме LP. Используйте режим SP для записи ленты, на которую Е хотите наложить звуковое сопровождения

- Примечания к временному коду

   Временной код указывает время записи или
  воспроизведения, "0.00.00" (часы: минуты: секунды) в режиме САМЕЯА и "0.00.00.00" (часы: минуты: секунды: кадры) в режиме
  VTR (ОСЯ-ТЕV900E) или в режиме РLAYER
- ОТН (ЦСК-11КУЗОС) им в режиме РЕАТЕ (ОСК-17КУЗОС).

   Ни в коем случае не оставляйте незаписанных участков во время записи, так как временной код снова будет начинаться с отсчета "00:00:00:00".

   Данная видеокамера использует режим
- пропуска кадра.

Примечание к зуммерному звуковому сигналу Заметьте, что зуммерный звуковой сигнал не записывается на ленту. Если Вы не хотите слушать зуммерный звуковой сигнал, то выберите OFF в системе меню.

16


#### **Camera recording**

#### Note on remaining tape indicator

The indicator may not be displayed accurately depending on the tape. Though the indicator does not appear at the time of recording, it will appear in a few seconds.

#### Attaching the lens hood

To record fine pictures, we recommend you to attach the lens hood, no matter where you shoot You can also attach the lens cap when using the lens hood.

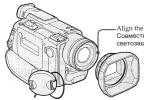

#### If the lens hood is not attached properly ir corners of the screen may be eclipsed by

the lens hood.

### Using the zoom feature

Zooming is a recording technique that lets you change the size of the subject in the scene. For more professional-looking recordings, use the zoom function sparingly.
"T" side: for telephoto (subject appears closer)
"W" side: for wide-angle (subject appears farther appears farther appears for the control of the scene of the scen

away)

#### Запись с помощью видеокамеры

Примечание к индикаци оставшейся ленты Индикация может отображаться неточно в зависимости от ленты. Хотя индикация не отображается в момент включения записи она появится через несколько секунд.

# Прикрепление светозащитной бленды объектива

Для записи четкого изображения, мы рекомендуем Вам прикрепить сетозащитну бленду объектива, не зависимо от того где Вы производите съемку. Вы также можете прикрепить крышку объектива при использовании светозащитной бленды.

Basi


Align the protruding part with the groove on the hood./ Совместите выступающую часть с канавкой на светозащитной бленде.

Если светозащитная бленда объектива не подсоединена надлежащим образом Четыре угла экрана могут быть заслонены светозащитной блендой объектива.

#### Использование функции наезда видеокамеры

Наезд видеокамеры является техни приемом записи, который позволяет Вам изменять размер объекта в кадре. Для более профессионального вида записей умеренно используйте функцию наезда видеокамеры. Сторона "Т": для телефото (объект приближается)

Сторона "**W**": для широкого угла съемки (объект удаляетя)

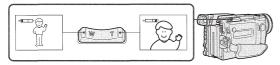

#### Camera recording

# Zooming speed (Variable speed

Press the power zoom lever a little for a relatively slow zoom; press it still more for a high-speed zoom.

### When you shoot a subject using a telephoto

when you snoot a subject using a telephoto zoom

If you cannot get a sharp focus while in extreme telephoto zoom, press the "W" side of the power zoom lever until the focus is sharp. You can shoot a subject that is at least about 80 cm (about 25/8 feet) away from the lens surface in the telephoto position, or about 1 cm (about 1/2 inch) away in the wide-angle position.

#### Zooming of more than 12x - digital zoom

- 200m

   If you set the D ZOOM function to ON in the menu system, you can perform zooming of more than 12x performed digitally. It is set to OFF at the factory.

   You cannot use the digital zoom when you set PROC, SCAN to ON in the menu system.

   The right side [a] of the power zoom indicator shows the digital zooming zone, and the left side [b] shows the optical zooming zone. If you set the D ZOOM function to ON, the [a] zone appears.

# Запись с помощью видеокамеры

#### Скорость наезда видеокамеры (наезд с различной скоростью)

Нажмите переключатель приводного трансфокатора немного для сравнительно медленного наезда видеокамеры; нажмите его еще больше для наезда на высокой

Когда Вы снимаете объект, используя наезд в режиме телефото
Если Вы не можете получить четкой фокусировки во время крайнего наезда в режиме телефото, перемещайте рычаг приводного трансфокатора в сторону "W" до тех пор. пока Вы не получите четкой фокусировки. Вы можете снимать объект, который по меньшей мере на 80 см удален от поверхности объектива в положении телефото, или удален приблизительно на 1 см в положении широкого угла.

### Трансфокация более, чем с 12кратным увеличением — цифровой трансфокатор

- рансфокатор
  Если Вы установите функцию D ZOOM на
  ОN в системе меню, Вы сможете выполнять трансфокацию с более, чем 12-кратным увеличением, используя цифровую трансфокацию. На заводе она установлена
- транофокацию. На заводе она установлена на ОFF.
  Вы не можете использовать цифровой трансфокатор, если Вы установите PROG. SCAN на ОN в системе меню.
  Правая сторона [а] индикатора приводного трансфокатора показывает зону цифровой трансфокации, а левая сторона [b] показывает зону оптической трансфокации, с Если Вы установите функцию D ZOOM на OFF, то зона [а] исчезнет.



18

17

### **Camera recording**

#### Selecting the start/stop mode

Your camcorder has two modes besides normal start/stop mode. These modes enable you to take a series of quick shots resulting in a lively video (1) While pressing OPEN, open the LCD panel. (2) Set START/STOP MODE to the desired mode. 

½: Recording starts when you press START/STOP, and stops when you press it again (factory setting)

- it again (factory setting).

  ★ ANTI GROUND SHOOTING : The camcorder records only while you press down START/STOP so that you can

down START/STOP so that you can avoid recording unnecessary scenes.

5SEC: When you press START/STOP, the camcorder records for 5 seconds and then stops automatically.

(3) Press START/STOP. Recording starts.

If you selected 5SEC, five dots appear on the LCD screen or in the viewfinder. The dots disappear at a rate of one per second as illustrated below. When five seconds elapse and all the dots disappear, the camcorder switches to Standby mode automatically.

# Запись с помощью

#### Выбор режима запуска/остановки

Ваша видеокамера имеет два режима, кроме нормального режима запуска/остановки. Эти режимы позволяют Вам снять серию . коротких кадров, создавая в результате

- коротких кадров, создавая в результате оживленную видеопрограмму.

  (1) Нажимая ОРЕN, откройте панель ЖКД.

  (2) Установите переключатель START/STOP МОДЕ на желаемый режим.

  В запись начинается когда Вы нажимаете START/STOP и заканчивается, когда Вы нажимаете зту кнопку снова (заводская установка)
  - ANTI GROUND SHOOTING Видеокамера производит запись только тогда, когда Вы держите START/STOP в нажатом состояни, так, что Вы можете избежать записи
  - ненужных сцен. **5SEC**: Когда Вы нажимаете START/STOP,

55E: Когда Вы нажимаете START/STOP, видеокамера производит запись в течение 5 секунд, а затем останавливается автоматически. (3) Нажмите START/STOP, Запись начинается. Если Вы выбрали SSEC, гить точек появляется на экране ЖКД или в видоискателе. Точки исчезают со скоростью по одной за секунду, как показано на рисунке. Когда пять секунд истекут и все точки исчезнут, видеокамера переключится на режим готовности автоматически.

# 2 P T T ANTI GROUND SHO THE CHIEF $\rightarrow$

# To extend the recording time in 5SEC

To extend the recording time in 55 mode

Press START/STOP again before all the dots disappear. Recording continues for about 5 seconds from the moment you press START/STOP.

# Для продления времени записи в режиме 5SEC Нажмите START/STOP снова до того, как все

\_\_\_\_\_\_ снова до того, как все точки исчезнут. Запись продолжается еще в течение 5 секунд с момента нажатия START/

### **Camera recording**

- Notes on 5SEC recording
   If you have turned off the indicators on the LCD screen, the dots do not appear.
   When selecting " <u>k</u> ANTI GROUND
  SHOOTING" or "SSEC," the fader function does not work
- When selecting "5SEC," the time code is not displayed.

#### Shooting with the LCD screen

You can also record the picture while looking at the LCD screen.

When using the LCD screen, the viewfinder turns

off automatically except in mirror mode. You cannot monitor the sound from the speaker

cannot monitor the sound from the speaked during recording.

(1) While pressing OPEN, open the LCD panel.

(2) Adjust angle of the LCD panel.

The LCD panel moves about 90 degrees to this side and about 180 degrees to the

To adjust the brightness of the LCD screen.

press LCD BRIGHT + or -.
The battery life is longer when the LCD panel is closed. Use the viewfinder instead of the LCD screen to save the battery power.

# Запись с помощью видеокамеры

### Примечания к записи 5SEC

- Если Вы выключили индикаторы на экране ЖКД, точки появляться не будут. Если Вы выбираете " ≟ ANTI GROUND SHOOTING" или "5SEC", Вы не сможете
- использовать функцию введения/ выведения изображения. Если Вы выбираете "5SEC", временной код
- отображаться не будет


# Съемка с использованием экрана ЖКД

Вы можете также производить запись изображения, глядя на экран ЖКД. При использовании экрана ЖКД экран видоискателя выключается автоматически за исключеним зеркального режима. Вы не можете слышать звук от громкоговорителя во время записи. (1) Нажимая OPEN, откройте панель ЖКД.

(2) Отрегулируйте угол панели ЖКД. Панель ЖКД перемещается приблизительно на 90 градусов в эту приблизительно на 30 градусов в транусов в другую сторону.


Для регулировки яркости экрана ЖКД нажмите LCD BRIGHT + или -.

нажмите LCD BRIGH1 + или -. Срок службы заряда батарейного блока будет длинее, когда панель ЖКД закрыта. Используйте видоискатель вместо экрана ЖКД для экономии заряда батарейного блока.

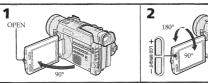

#### **Backlighting the LCD screen**

If the LCD screen is insufficiently illuminated even after adjusting LCD BRIGHT, select LCD B. L. in the menu system and set to BRIGHT. You can select LCD B. L. only while using the battery pack as a power source

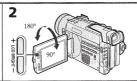

#### Подсветка экрана ЖКД

Если экран ЖКД освещен недостаточно даже после регулировки LCD BRIGHT, выберите LCD B. L. в меню системы и установите на BRIGHT, Вы можете выбрать LCD В. L. только в случае использования батарейного блока в качестве источника питания.

1-4

### **Camera recording**

#### Notes on the LCD panel

- Notes on the LUD panel.


  When closing the LCD panel, turn it vertically until it clicks [a].

  When turning the LCD panel, turn it always vertically; otherwise, the camcorder body may be damaged or the LCD panel may not close properly IR.
- properly [b].

   Close the LCD panel completely when not in
- use.

  Do not push nor touch the LCD panel while operating the camcorder.

  You may find it difficult to view the LCD screen due to glare when using the camcorder outdoors.

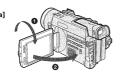

## Letting the subject monitor the

You can turn the LCD panel over so that it faces the other way and you can let the subject monitor the shot while shooting with the

Turn the LCD panel up vertically. When you turn the LCD panel 180 degrees, the o indicator appears on the LCD screen **(mirror mode)** and the time code and remaining tape indicators disappear

You can also use the Remote Commander







# Запись с помощью видеокамеры

#### Примечания к панели ЖКД

- При закрывании панели ЖКД поворачивайте ее вертикально до тех пор, пока она не защелкнется [а].
- При вращении панели ЖКД двигайте ее всегда в вертикальном положении; или в всегда в вертикальном положении; или в противном случае корпус видеокамеры может быть поврежден или панель ЖКД может быть закрыта неправильно [b]. Полностью закройте панель ЖКД, когда она не используется.

  Не нажимайте и не трогайте ЖКД во время эксплуатации видеокамеры.

  Вы можете столкнуться с трудностями при просмотре на экране ЖКД из-за отблеска при использовании видеокамеры на улице.



#### Возможность для снимаемого человека наблюдать съемку

Вы можете перевернуть панель ЖКД так, что она будет обращена в другую сторону и Вы можете дать возможность снимаемому человеку наблюдать съемку, контролируя запись в видоискателе.

Поворачивайте панель ЖКД, держа ее вертикально. Когда Вы перевернете панель ЖКД на 180 градусов ндикатор ⊚ появится на экране ЖКД (зеркальный режим) и индикаторы кода данных и оставшейся ленты исчезнут.

Вы также можете использовать пульт дистанционного управления.



21

#### Camera recording

### Self-timer recording

You can make a recording with the self-timer. This mode is useful when you want to record nurself

ourself.

(1) Press O (self-timer) to display O (self-timer) on the LCD screen or in the viewfinder while the camcorder is in Standby mode.

(2) Press TART/STOP.

Self-timer starts counting down to 10 with a beep sound. In the last two seconds of the countdown, the beep sound gets faster, then recording starts automatically at the time you set


# Запись с помощью видеокамеры

### Запись по таймеру самозапуска

Вы можете выполнить запись с помощью таймера самозапуска. Этот режим будет очень полезным, если Вы хотите записать ioro ceñs

очень полезным, если Вы хотите записать самого себя. (таймер самозапуска) для отображения индикатора № (таймера самозапуска) на экране ЖКД или в видоискателе, когда видеокамера находится в режиме готовности.

(2) Нажмите START/STOP.
Таймер самозапуска начинает обратный оточет с 10 секунд в сопровождении зуммерного звукового синала. В последние две секунды обратного оточета зуммерные звуковые сигналы становятся быстрее, а затем запись начинается автоматически. автоматически

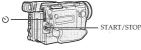

**To stop self-timer recording** Press START/STOP. Use the Remote Commander for conv

### To record still pictures using the self-

timer Press PHOTO in step 2.

**To cancel self-timer recording** Press ♥ so that the ♥ indicator disapp the LCD or viewfinder screen while the camcorder is in Standby mode. pears from

### Self-timer recording mode is cancelled when

 Self-timer recording is finished.
 The POWER switch is set to OFF or VTR (DCR-TRV900E)/PLAYER (DCR-TRV890E)

The display may become darker right after pressing the  $\overset{\circ}{O}$  button. This is not a malfunction

Для остановки записи Нажмите START/STOP. Используйте для удобства пульт дистанционного управления.

# Для записи неподвижных изображений с использованием

таймера самозапуска Нажмите кнопку РНОТО в пункте 2.

### Для отмены записи по таймеру

для отмены записи по таимеру самозапуска
Нажмите О так, чтобы индикатор О исчез с экрана ЖКД или из видоискателя, когда видеокамера будет находится в режиме готовности.

- Запись по таймеру самозапуска отменяется, когда Запись по таймеру самозапуска заканчивается. Выключатель РОWER будет установлен в положение ОFF или VTR (DCR-TRV900E)/ PLAYER (DCR-TRV890E).

Дисплей может стать темнее сразу после нажатия кнопки  $\circ$ . Это не является вностью.

### Camera recording To cancel mirror mode

irn the LCD panel down toward the camcorder

#### Notes on mirror mode

- Notes on mirror mode

   When you turn the LCD panel about 135 degrees to 180 degrees, the camcorder enters mirror mode.

   Using the mirror mode, you can record yourself while watching yourself on the LCD screen.

   The picture on the LCD screen looks like a mirror-image while recording in mirror mode. The STBY indicator appears as III of and REC as O. Other indicators appear as mirror-image. Some indicators appear as mirror mode.

   While recording in mirror mode, you cannot operate the following functions: MENU, TITLE, and ZERO SET MEMORY on the Remote Commander.

# Запись с помощью видеокамеры

#### Для отмены зеркального режима Поверните панель ЖКД вниз в направлении корпуса видеокамеры

- корпуса видеокамеры.

  Примечания к зеркальному режиму

  Когда Вы поворачиваете панель ЖКД на
  135 180 градусов, видеокамера входит в
  зеркальный режим.

  Используя зеркальный режим, Вы можете
  записать самого себя, наблюдая себя на на
  зкране ЖКД.

  Изображение на экране ЖКД появляется в
  зеркальном отображении во время записи в
  зеркальном режиме. Индикатор STBY
  появляется в виде 110, а REC в виде Ф.
  Другие индикаторы отображения. Некоторые
  индикаторы могут не появляться в
  зеркальном режиме.
  Во время записи в зеркальном режиме, Вы
  не можете использовать следующие
  функции: МЕЛИ, ТПТLЕ и ZERO SET
  MEMORY на пульте дистанционного
  управления.



22

### **Hints for better** shooting

For hand-held shots, you will get better results by holding the camcorder according to the following

suggestions:

• Hold the camcorder firmly and secure it with

### Советы для лучшей съемки

the grip strap so that you can easily manipulate the controls with your thumb. [a]

Для кадров при удержании видеокамеры в руках Вы получите лучшие результаты, если будете держать видеокамеру в соответствии со следующими рекомендациями


со следующими рекомендациями:

"Держите видеокамеру крепко и закрепите

ее с помощью ременного захвата так, чтобы
Вы легко могли манипулировать

регуляторами с помощью большого пальца.

[a]

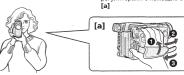

- Place your elbows against your side.
  Place your left hand under the camcorder to support it.
  Place your eye against the viewfinder eyecup.
  Be sure not to touch the built-in microphone.
  Use the LCD panel frame or the viewfinder frame as a guide to determine the horizontal
- Plane.
   You can also record in a low position to get an
- You can also record in a low position to get an interesting angle. Lift the viewfinder up for record from a low position. [b]
   You can also record in a low position or even in a high position using the LCD panel. [c]
   When you use the LCD screen outdoors in direct sunlight, the LCD screen may be difficult to see. If this happens, we recommend that you use the viewfinder.

- Расположите Ваши локти по бокам от себя.
   Расположите Вашу левую руку под видеокамирой для е поддержки.
   Прижмите Ваш глаз к окуляру видоискателя.
   Ни в коем случае не трогайте встроенный микиолюфо.
- Ни в коем случае не трогаите встроенным микрофон.
   Используйте визирную рамку панели ЖКД или видоискателя в качестве руководства для определения горизонтального плана.
   Вы также можете записывать из низкого
- положения для получения интересного угла записи. Поднимите видоискатель вверх для записи из низкого положения. **[b]**• Вы также можете записывать из низкого
- положения или даже из высокго положения с использованием панели ЖКД. [с]
- с использованием панели ЖКД. [с] Когда Вы используете экран ЖКД на улице под прямым солнечным светом, то изображение на экране ЖКД может быть трудным для просмотра. Если это случится, то мы рекомендуем Вам использовать видоискатель.









24

#### Hints for better shooting

### Place the camcorder on a flat surface or use a

Place the calmost activities of the camcorder on a table top or any other flat surface of suitable height. If you have a tripod for a still camera, you can also use it with the camcorder. When attaching a non-Sony tripod, make sure that the length of the tripod screw is less than 6.5 mm (9.72 inch). Otherwise, you cannot attach the tripod securely and the screw may damage the camcorder.

### Cautions on the LCD panel and on the

- Cautions on the LLD panel and on the viewfinder

   Do not pick up the camcorder by the viewfinder or the LCD panel. [d]

   Do not place the camcorder so as to point the viewfinder or the LCD panel toward the sun. The inside of the viewfinder or the LCD panel may be damaged. Be careful when placing the camcorder under sunlight or by a window. [e]



### Советы для лучшей съемки

### Располагайте видеокамеру на плоской

Располагайте видеокамеру на плоской поверхности или используйте треногу Постарайтесь расположить видеокамеру сверху на столе или любой другой плоской поверхности подходящей высоты. Если у Вас есть тренога для фотоаппарата, Вы также можете использовать ее и для видеокамеры. При прикреплении треноги не фирмы Sony убедитесь, что длина винта треноги менее 6,5 мм. В противном случае Вы не сможет прикрепить треногу надежно, а винт может повредить видеокамеру.

- Предосторожности к панели ЖКД и видоискателю

   Не поднимайте видеокамеру за видоискатель или панель ЖКД. [d]

   Не распологайте видеокамеру так, чтобы объектив или зкран ЖКД, были направлены в сторону солнца. Внутренние части видоискателя или панели ЖКД могут быть повреждены. Будьте осторожны при расположении видеокажамеры под солнцем расположении видеокамеры под солнцем или возле окна. [е]



Checking the recorded picture

Using the EDITSEARCH, you can review the last

Using the EDITSEARCH, you can review the last recorded scene or check the recorded picture on the LCD screen or in the viewfinder.

(1)While pressing the small green button on the POWER switch, set it to CAMERA.

(2)Press the - 🕾 side of EDITSEARCH momentarily: the last few seconds of the recorded portion plays back (Rec Review). Hold down the - side of EDITSEARCH until the camcorder goes back to the scene you want. The last recorded portion is played back. To go forward, hold down the + side (Edit Search).


#### Проверка записанного изображения

Используя EDITSEARCH, Вы можете

Используя ЕDITSEARCH, Вы можете пересмотреть последнюю записанную сцену или проверить записанное изображение на экране ЖКД или в видоискателе.

(1) Нажимая маленькую зеленую кнопку на выключателе РОWER, установите его в положение САМЕЯА.

(2) На мгновение нажимте сторону − ⊚ кнопки EDITSEARCH; последние несколько секунд записаной части будут воспроизведены (пересмотр записи). Вотумта на мачатой стором − кнопки воспроизведены (пересмотр записи). Держите нажатой сторону – кнопки EDITSEARCH до тех пор, пока видеокамера вернется к желаемой сцене. Последняя записанная часть будет воспроизведена. Для продвижения вперед держите нажатой сторону + (монтажный помер).

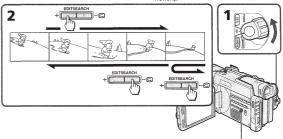

END SEARCH

To stop playback Release EDITSEARCH.

To go back to the last recorded point (END SEARCH)
Press END SEARCH. The last recorded point is played back for about 5 seconds and stops. Note that when you use a tape without cassette memory, this function does not work once you cleat the secret forter recording. eject the cassette after recording.

To begin re-recording
Press START/STOP. Re-recording begins from
the point you released EDITSEARCH. Provided
you do not eject the tape, the transition between
the last scene you recorded and the next scene
you record will be smooth.

Для остановки воспроизведения Отпустите EDITSEARCH.

# Для возвращения к после

Для возвращения к последней записанной точке (END SEARCH) Нажмите END SEARCH. Воспроизведение последнего записанного места будет выполнено приблизительно в течение 5 секунд и остановлено. Заметьте, что когда Вы используете пенту касоеты без памяти, данная функция не работает, если Вы вытолкнете кассету после выполнения записи. записи

#### Снова для начала записи

Снова для начала записи нажмите START/STOP. Запись начинается от точки, где Вы отпустили EDITSEARCH. При условии, что Вы не вытолкнете ленту, переход между последней сценой, которую Вы записали, и следующей сценой, которую Вы записываете, будет плавным.

# 25

### Playing back a tape

- You can monitor the playback picture on the LCD screen or in the viewfinder.

  (1) Insert the recorded tape with the window
- (1) Insert the recorded tape with the window facing out.
  (2) While pressing DOFEN, open the LCD panel.
  (3) While pressing the small green button on the POWER switch, set it to VTR (DCR-TRV900E) or PLAYER (DCR-TRV990E).
  (4) Press ← to rewind the tape.
  (5) Press ▷ to start playback.
  Adjust the volume using VOLUME +/- and the brightness of the LCD screen using LCD BDICHT ← and

BRIGHT +/-.
u can also monitor the picture on a TV screen, after connecting the camcorder to a TV or VCR

# Воспроизведение

- Вы можете просматривать изображение на экране ЖКД или в видоискателе.

  (1) Вставьте записанную ленту окошком, обращенным наружу.

  (2) Нажимая ОРЕЛ, откройте панель ЖКД.

  (3) Нажимая маленькую зеленую кнопку на выключателе РОWER, установите его в положение VTR (DCR-TR/9800E) или РLAYER (DCR-TR/980E).

  (4) Нажимте 


  (4) Нажимте 

  Для ускоренной перемотки ленты назад.

  (5) Нажимте 

  Отрегулируйе громкость с использованием VOLUME +/- и яркость экрана ЖКД с использованием LCD

BRIGHT +/-.
Вы можете также просмотреть изображение на экране телевизора после подсоединения видеокамеры к телевизору или КВМ.

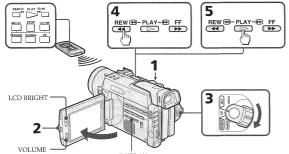


To stop playback, press To rewind the tape, press ◀◀.
To fast-forward the tape rapidly, press ▶▶.

#### Using the Remote Commander

You can control playback using the supplied Remote Commander. Before using the Remote Commander, insert the R6 (size AA) batteries.

# ленты

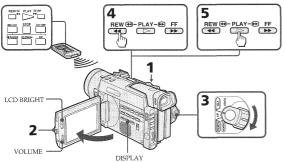

#### Для остановки воспроизведения нажмите

Для ускоренной перемотки ленты назад ажмите ◄◄.

Для ускоренной перемотки ленты вперед нажмите ▶►.

### Использование пульта

ИСПОЛЬЗОВАНИЕ ПУЛЬТА
ДИСТАНЦИОННОГО УПРАВЛЕНИЯ
ВЫ МОЖЕТЕ УПРАВЛЯТЬ ВОСПРОИЗВЕДЕНИЯ С
ПОМОЩЬЮ ПРИЛЯГАЕМОГО ЛУГЬТА
ДИСТАНЦИОННОГО УПРАВЛЕНИЯ. ПЕРЕД
ИСПОЛЬЗОВАНИЕМ ПУЛЬТА ДИСТАНЦИОННОГО
УПРАВЛЕНИЯ ВСТВЬТЕ В НЕГО БАТАРЕЙКИ R6
(размером AA).

#### Playing back a tape

### To display the LCD screen/viewfinder screen

Press DISPLAY

26

To erase the indicators, press again

#### Notes on screen indicators

- The screen indicator disappears when the title is displayed.
- When you play back a tape using a "InfoLITHIUM" battery, = indicates the remaining battery capacity. The remaining battery time in minutes is not displayed.

#### Using headphones

Connect headphones (not supplied) to the \(\Omega\) jack. You can adjust the volume of the headphones sing VOLUME +/-

# To view the playback picture in the viewfinder Close the LCD panel. The viewfinder turns on

Close the LCD panel. The viewInnder turns on automatically.
When using the viewfinder, you can monitor the sound only by using headphones. To view on the LCD screen again, open the LCD panel. The viewfinder turns off automatically.

When you cannot see the LCD screen clearly Pull out the stand at the bottom to adjust the

### Воспроизведение ленты

# Для отображения экранных индикаторов на экане ЖКД/в видоискателе Нажмите DISPLAY. Для стирания индикаторов нажмите еще раз.

Примечания к экранным индикаторам
• Экранные индикаторы исчезают, когда
отогражается тигр,
• Когда Вы воспроизводите ленту с
использованием батарейного блока
"InfoLITHIUM", ««« будет указывать
оставшийся заряд батарейного блока
Сотавшееся время батарейного заряда в
минутах отображаться не будет.

### Использование головных телефонов

Подсоедините головные телефоны (не прилагаются) к гнезду ∩. Вы можете регулировать громкость головных телефонов с помощью VOLUME +/-.

#### Для воспроизведения изображения в видоискателе

Закройте панель ЖКД. Видоискатель включится автоматически. При использовании видоискателя Вы можете

гтри использовании видопскатели в люже слушать звук только с помощью головных телефонов. Для просмотра на экране ЖКД снова откройте панель ЖКД. Видоискатель выключится автоматически.

### Когда Вы не можете четко просматривать

когда Вы не можете четко просматрива экран ЖКД Вытащите подставку, расположенную на нижней стороне камеры, для регулировки угла.



### Various playback modes

# To view a still picture (playback

pause)
Press II during playback. To resume playback,
press II or ▷.

#### Различные режимы воспроизведения

### Для просмотра неподвижного изображения (пауза воспроизведения)

Нажмите **II** во время воспроизведения. Для восстановления воспроизведения нажмите **II** 

#### Playing back a tape

To locate a scene (picture search) Keep pressing ◀◀ or ▶▶ during playback. To resume normal playback, release the button.

# To monitor the high-speed picture while advancing the tape or rewinding (skip scan) Keep pressing ◀◀ while rewinding or ▶▶ while advancing the tape. To resume normal rewinding or fast-forward, release the button.

## To view the picture at 1/3 speed

(slow playback)
Press ▶ on the Remote Commander during
playback. For slow playback in reverse direction,
press ≤, then press ▶. To resume normal
playback, press ▷.

#### To view the picture at double speed

To view the picture at double speed For double speed playback in the reverse direction, press <, then press ×2 on the Remote Commander during playback. For double speed playback in the forward direction, press >, then press ×2 during playback. To resume normal playback, press >>.

To view the picture frame-by-frame Press ◀II or II▶ on the Remote Commander in playback pause mode. If you keep pressing the button, you can view the picture at 1/25 speed. To resume normal playback, press ▷.

### To change the playback direction

Press < on the Remote Commander for revers direction or > on the Remote Commander for forward direction during playback. To resume normal playback, press > .

#### Воспроизведение ленты

### Для обнаружения эпизода (поиск

изображения) Держите нажатой кнопку ◀◀ или ▶▶ во время воспроизведения. Для восстановления нормального воспроизведения отпустите

#### Для контроля изображения на высокой скорости во время ускоренной перемотки ленты вперед

или назад (поиск методом прогона) Держите нажатой кнопку ◀◀ во время перемотки ленты назад или кнопку ▶▶ во время перемотки ленты вперед. Для восстановления нормальной перемотки назад или вперед отпустите кнопку.

#### Для просмотра изображения на 1/3 скорости (замедленное

воспроизведение)
Нажмите № на пульте дистанционного
управления во время воспроизведения. Для
замедленного воспроизведения в обратном
направлении нажмите <, а затем нажмите
№ Для восстановления нормального
воспроизведения нажмите
развительного
воспроизведения нажмите

Для просмотра изооражения с удвоенной скоростью Для удвоения с корости в братном направлении нажмите <, а затем нажмите х² на пульте дистанционного управления во время воспроизведения. Па удвоения скорости воспроизведения в направлении вперед нажмите >, а затем нажмите х² во время воспроизведения. Для восстановления нормального восстановления нормального воспроизведения нажмите ▷.

Для покадрового просмотра изображения Нажмите ◀II или III▶ на пульте дистанционного управления в режиме паузы воспроизведения. Если Вы будете держать кнопку нажатой, то Вы можете просматривать изображение на 1/25 скорости. Для восстановления нормального воспроизведения нажмите ▷.

#### Для изменения направления воспроизведения

воспроизведения
Нажмите < на пульте дистанционного
управления для выбора обратного
направления или > на пульте
дистанционного управления для выбора
направления вперед во время
воспроизведения. Для восстановления
нормального воспроизведения нажмите >> 29

### Playing back a tape

#### Notes on playback

- ound is muted in the various playback
- The sound is mutted in the various playback modes.
   During playback other than normal playback, the previous recording may appear in mosaic image. This is not malfunction.
   When playback pause mode lasts for 5 minutes, the camcorder automatically enters stop mode. To resume playback, press ▷.

Note on slow playback
The slow playback can be performed smoothly on this camcorder; however, this function does not work for an output signal from the \$10V IN/OUT (DCR-TRV900E) or \$10V OUT (DCR-TRV890E) jack.

#### Воспроизведение ленты

#### Примечания к воспроизведению

- Эвук будет приглушен в различных режимах воспроизведения.
- воспроизведения.

  Во время воспроизведения в режиме, отличном от нормального воспроизведения, изображения ранее записанных кадров могут иметь мозаичный вид. Это не является неисправностью.

  Если режим паузы воспроизведения продолжается в течение 5 минут, видеокамера автоматически войдет в режим остановки. Для возобновления воспроизведения нажмите 

  ...

### Примечание к замедленном

Примечание к замедленному воспроизведению Замедленное воспроизведению Замедленное воспроизведение может быть плавно выполнено на данной видеокамере; однако, данная функция не будет работать при поступлении выходных сигналов от гнезд в 1, DV IN/OUT (DCR-TRV900E) или 1 DV OUT (DCR-TRV909E)

30

### Searching for the end of the picture

You can go to the end of the recorded portion after you record and play back the tape. The tape starts rewinding or fast-forwarding and the last about 5 seconds of the recorded portion plays back. Then the tape stops at the end of the recorded picture (End Search).


Open the LCD panel and press END SEARCH

during recording standby.
This function works when the POWER switch is set to CAMERA, VTR (DCR-TRV900E)/PLAYER (DCR-TRV890E).

#### Поиск конца изображения

Вы можете перейти к концу записанной части после записи и воспроизведения ленты. Лента начинает перематываться назад или вперед, и последние 5 секунд записанной части будут воспроизведены Затем лента остановится в конце записанного изображения (поиск конца).

Откройте панель ЖКД и нажмите END SEARCH в режиме готовности записи Данная функция работает, когда выключатель POWER установлен положение CAMERA, VTR (DCR-TRV900E)/ PLAYER (DCR-TRV890E)

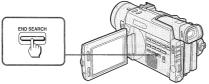

- Notes on End Search

  When you use a tape without cassette memory, the End Search function does not work once you eject the cassette after recording.

  When you use a tape with cassette memory, the End Search function works once you eject the cassette. When you play back a tape which has a blank portion in the beginning or between the recorded portions, the End Search function will not work correctly.

### ния к поиску конца изобрах

- Когда Вы используете ленту кассеты без памяти, функция поиска конца не будет работать, если Вы вытолкнете кассету после выполнения записи. • Когда Вы используете ленту кассеты с
- памятью, функция поиска конца будет работать, даже если Вы вытолкнете кассету. Когда Вы воспроизводите ленту, которая имеет незаписанную часть в начале или между записанными частями, функция поиска конца будет работать

### Advanced operations **Using alternative** power sources

You can choose any of the following power sources for your camcorder: battery pack, mains, and 12/24 V car battery. Choose the appropriate power source depending on where you want to use your camcorder.

Place	Power source	Accessory to be used
Indoors	Mains	Supplied AC power adaptor
Outdoors	Battery pack	Battery pack NP-F330 (supplied), NP-F530, NP-F550, NP-F730, NP-F750, NP-F930, NP-F950
In the car	12 V or 24 V car battery	Sony DC adaptor/charger DC-V700

### Note on power sources

**Note on power sources**Disconnecting the power source or removing the battery pack during recording or playback may damage the inserted tape. If this happens, restore the power supply again immediately.

#### Using the mains

To use the supplied AC power adaptor:

(1) Open the DC IN jack cover, and connect the AC power adaptor to the DC IN jack on the camcorder.

(2) Connect the mains lead to the AC power

(3) Connect the mains lead to the mains

#### Усовершенствованные операции Использование альтернативных источников питания

Вы можете выбрать любой из следующих источников питания для Вашей видеокамеры: батарейный блок, электрическую сеть и 12/24 В автомобильный аккумулятор. Выберите подходящий источник питания в зависимости от того, гле Вы хотите использовать Вашу

Место	Источник питания	Используемые принадлежности
В поме- щении	Электри- ческая сеть	Прилагаемый сетевой адаптер перем. тока
На улице	Бата- рейный блок	Батарейный блок NP-F330 (прилагается), NP-F530, NP-F550, NP-F730, NP-F750, NP-F930, NP-F950
В авто- мобиле	12 В или 24 В авто- мобильный аккумулятор	Адаптер/зарядный выпрямитель пост. тока DC-V700 фирмы Sony

Отсоединение источника питания или снятие батарейного блока во время записи или воспроизведения может повредить вставленную ленту. Если это случится, восстановите источник питания немедленно

#### Использование электрической сети

Для использования сетевого адаптера


- переменного тока: (1) Откройте крышку гнезда DC IN и подсоедините сетевой адаптер переменного тока к гнезду DC IN на видеокамере.
- видеокамере.


  (2) Подсоедините сетевой провод к сетевому адаптеру перем. тока.

  (3) Подсоедините сетевой провод к электрической сети.

# Using alternative power

Использование альтернативных источников питания

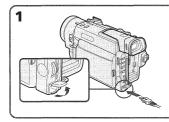

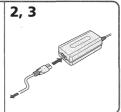

#### WARNING

The mains lead must be changed only at a qualified service shop

#### PRECAUTION

The set is not disconnected from the AC power source (mains) as long as it is connected to the mains lead, even if the set itself has been turned

**Note**Keep the AC power adaptor away from the camcorder if the picture is disturbed.

### Using a car battery

Use a DC adaptor/charger such as Sony DC-Ose a De. daughor/clarger such as 50hy DE-V700 (not supplied). Connect the car battery cord to the cigarette lighter socket of a car (12 V or 24 V). Connect the DC adaptor/charger and the camcorder using the DK-415 (supplied with DC-V700) connecting cord.



This mark indicates that this product is a genuine accessory for Sony video product. When purchasing Sony video products, Sony recommends that you purchase accessories with this "GENUINE VIDEO ACCESSORIES" mark

#### ПРЕДУПРЕЖДЕНИЕ

Сетевой провод должен быть заменен только в мастерской квалифицированного обслуживания.

#### ПРЕДОСТЕРЕЖЕНИЕ

ПРЕДОСТЕРЕЖЕНИЕ
Аппарат не отключается от источника
питания перем. тока (электрической сети) до
тех пор, пока он подключен к сетевому
проводу, даже если сам аппарат выключен.

Примечание Держите сетевой адаптер перем подальше от видеокамеры если, изображение будет искажено.

#### Использование автомобильного аккумулятора

Используйте адаптер/зарядный выпрямитель постоянного тока, как например, DC-V700 фирмы Sony (не прилагается). Подсоедините шнур автомобильного аккумулятора к гнезду сигаретного прикуривателя автомобиля (12 В или 24 В). Соедините адаттер/зарядный выпрямитель постоянного тока и милехамительный стерительный стерительных стерительн видеокамеру, используя соединительн шнур DK-415 (прилагается к DC-V700).



Настоящий знак ука что данная продукция является подлинной принадлежностью видеопродукции Sony. Если Вы покупаете видеопродукцию Sony, то мы рекомендуем, чтобы Вы покупали принадлежности помеченные знаком "GENUINE VIDEO ACCESSORIES".

### 33

### Changing the mode settings

You can change some of the mode settings programmed at the factory to further enjoy the features and functions of the camcorder. Just turn the control dial to select the menu items displayed on the LCD screen. You can make selections in the following order: the menu display → icons → items → mode settings.

(1) Press MENU to display the menu.

(2) Turn the control dial to select the desired icon on the left side of the menu, then press the dial.

dial.

(3) Turn the control dial to select the desired item, then press the dial.


(4) Turn the control dial to select the desired

mode, then press the dial. If you want to change the other modes, repeat steps 3 and 4. If you want to change the other items, select RETURN and press the dial, then repeat steps 2 to 4.

(5) Press MENU to erase the menu display

### Изменение установок режимов

Вы можете изменять некоторые из установок режимов, запрлограммированных на заводеизготовителе, для большего наслаждения 
пособенностями и функциями видеокамеры. 
Просто поверните регулировочный диск для 
выбора установок меню, отображаемых 
последовательности: дислогы и выбора установки 
19 нажите выбирать в следующей 
19 нажите регулировочный диск для выбора 
желаемой пиктограммых с левой строгором 
желаемой пиктограммых с левой строгором 
желаемой пиктограммых с левой строгором 
желаемой функции, а затем нажимите диск. 
40 Поверните регулировочный диск для выбора 
желаемой функции, а затем нажимите диск. 
41 Поверните регулировочный диск для выбора 
желаемой сункции, а затем нажимите диск. 
42 Поверните регулировочный диск для выбора 
желаемого режима, а затем нажимите диск. 
€сли Вы хотите изменить другие функции, выберите 
закенить другие функции, выберите 
ВЕСТИН, и и другие функции выберите 
ВЕСТИН, и и другие 
ВЕСТИН, и и другие выберите 
ВЕСТ

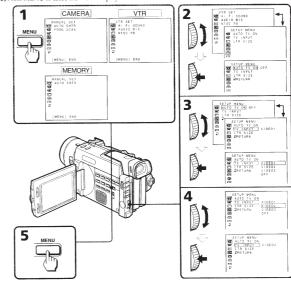

#### Changing the mode settings

Notes on changing the mode settings
• Menu items differ depending on the setting of the POWER switch to VTR (DCR-TRV900E)/PLAYER (DCR-TRV890E), CAMERA or

PLAYER (DCR-TRV890E), CAMERA or MEMORY.

• While recording in mirror mode, you cannot operate the menu system.

# Selecting the mode setting of each item

Menu items that can be modified differ depending on the setting of the POWER switch. The LCD screen shows only the items that you can operate at the moment. The menu items are categorized into nine groups signified by the nine icons described below.

Items for the MANUAL SET menu AUTO SHTR < ON/OFF>
• Select ON and the electronic shutter functions automatically when shooting in bright

conditions.

•Select OFF and the electronic shutter does not function even in bright conditions.

Select OFF not to record still/moving pictures

with all the pixels • Select ON to record still/moving pictures with all the pixels.

### Items for the 🗺 CAMERA SET menu

D ZOOM <OFF/ON>
• Select OFF not to use the digital zoom. The camcorder goes back to 12x optical zoom.
• Select ON to activate digital zooming.

#### 16:9WIDE <OFF/ON>

Select this item to record a 16:9 wide picture. See page 51 for details.

#### Изменение установок режимов

### Примечания к изменению установок

Примечания к изменению устальных режимов

• Функции мено изменяются в зависимости от установки выключателя РОWER в положение VTR (DCR-TRY900E)/PLAYER (DCR-TRY909E)/PLAYER В В о время записи в зеркальном режиме Вы не можете управлять системой меню.

# Выбор установки режима каждой функции

Функции меню, которые могут быть изменены, отличаются в зависимости от установки выключателя РОWER. Экран ЖКД показывает только те функции, которыми Вы можете управлять на данный момент. Функции меню подразделяются по категориям на девять групп и указываются девятью нижеописанными пиктограммами.

Функции для меню 
MANUAL SET AUTO SHTR <ON/OFF>

Выберите ON и электронный затвор будет функционировать автоматически во время

съемки в ярких условиях.
• Выберите ОFF и электронный затвор не будет функционировать автоматически даже в ярких условиях.

#### PROG. SCAN\* <OFF/ON>

Выберите ОFF чтобы функция записи неподвижных/движущихся изображений со всеми элементами изображения не

 Выберите ОN для записи неподвижн движущихся изображений со всеми элементами изображения.

#### Функции для меню 🖾 CAMERA SET D ZOOM <OFF/ON>

Выберите ОFF при неиспользовании цифровой трансфокации. Видеокамера возвращается к оптической 12-кратной

Выберите ON для активизации цифровой

16:9WIDE <OFF/ON>
Выберите эту функцию для записи широкоформатного изображения 16:9. См подробности на стр. 51.

#### Changing the mode settings

### STEADYSHOT <ON/OFF>

Normally select ON.
Select OFF when you do not have to worry about camera-shake.

#### AE SHIFT

Adjust the setting level of AE (Automatic Exposure). See page 68 for details.

#### GAIN SHIFT <0dB/-3dB>

• Set the gain value to 0dB. • Set the gain value to –3dB.

### FRAME REC <OFF/ON>

Normally select OFF.
Select ON for cut recording.
When you remove the power source, the setting When you ren becomes OFF.

INT.REC <ON/OFF/SET> <WAIT TIME/REC
TIME>
• Normally select OFF. Select ON to make an interval recording.
• Select WAIT TIME to set or change the waiting time for interval recording.
• Select REC TIME to set or change the recording time for interval recording.
When you remove the power source, the setting becomes OFF, but the waiting time and recording time are retained. time are retained

### Items for the W VTR SET (DCR-TRV900E) or PLAYER SET (DCR-TRV890E) menu HiFi SOUND\* <STEREO/1/2>

Select STEREO to play back stereo sound or main and sub sound (for dual sound).
 Select 1 to play back the left sound (for stereo

sound) or main sound (for dual sound)

Select 2 to play back the right sound (for stereo sound) or sub sound (for dual sound).

#### Изменение установок режимов

STEADYSHOT <ON/OFF>
• Обычно выбирайте ON.
• Выбрирайте ОFF, когда Вы не беспокоетесь о дрожании камеры.

**AE SHIFT**Отрегулируйте уровень установки AE (автоматической экспозиции). См. подробности на стр. 68.

### GAIN SHIFT <0dB/-3dB>

Установите значение усиления на 0 дБ.
Установите значение усиления на –3 дБ.

### FRAME REC <OFF/ON> • Обычно выбирайте OFF. • Выберите ON для прекращения записи.

Когда Вы удалите источник питания установка возвращается на OFF.

### INT.REC <ON/OFF/SET> <WAIT TIME/REC

ПИЕ> • Обычно выбирайте OFF. Выберите ON для выполнения записи с интервалами.

• Выберите WAIT TIME для установки или

изменения времени ожидания для записи с

выберите REC TIME для установки или изменения времени записи для записи с

изменения времени записи для записи с интервалами.
Когда Вы удалите источник питания, установка возвращается на ОFF, но время ожидания и время записи сохраняются.

# Функции для меню Ѿ VTR SET (DCR-TRV900E) или PLAYER SET (DCR-

TRV890E) HiFi SOUND\* <STEREO/1/2>

 Выберите STEREO для воспроизведения стереофонического звучания или основного и вспомогательного звучания (для двойного

Выберите 1 для воспроизведения звука

Выберите 1 для воспроизведения звука певого канала (при стереофоническом звучании) или главного основного звука (при двойном звучании).
 Выберите 2 для воспроизведения звука правого канала (при стереофоническом звучании) или вспомогательного звука (при двойном звучании).

### Changing the mode settings

# Изменение установок

Select this item to adjust the balance between the stereo 1 and stereo 2 by turning the control dial

#### NTSC PB <ON PAL TV/NTSC 4.43>

Normally select ON PAL TV.
Select NTSC 4.43 when playing back a tape recorded in the NTSC colour system. When you play back on a Multi System TV, select the best mode while watching the picture on the TV

### Items for the 🖃 LCD/VF SET menu

LCD B.L. <BRT NORMAL/BRIGHT>

• Normally select BRT NORMAL.

• Select BRIGHT when the LCD screen is dark. The battery consumption increases by 10 to

Even if you adjust the LCD B.L., the recorded picture is not affected

Select this item and change the level of the indicator by turning the control dial up (+) or down (-) to adjust the colour intensity of the picture.

#### VE BRIGHT

VF BRIGHT
Close the LCD panel.
Select this item to adjust the brightness of the viewfinder. The viewfinder becomes brighter when you turn the control dial up (+), and darker when you turn it down (-).

- ZEBRA <OFF/ON>
  Normally select OFF.
  Select ON to shoot with the zebra pattern displayed on the LCD screen or in the

Выберите данную функцию и отрегулируйте баланс между стерео 1 и стерео 2 с использованием регулировочного диска.

#### NTSC PB <ON PAL TV/NTSC 4.43:

- Обычно вибирайте ON PAL TV.
   Выберите NTSC4.43, если Вы воспроизводите ленту, записанную в системе цветного телевидения NTSC. Если Вы воспроизводите на мультисистемном телевизоре, то выберите наилучший режим во время просмотра изображения на экране

### Функции для меню 🖾 LCD/VF SET

- Функции для меню : В LCDVF SET LCD В. L «ВТЯ NORMAL/BRIGHT» 
   Обычно выбирайте ВВТ NORMAL 
   Выберите ВRIGHT, если экран ЖКД будет 
  темной. Потребление заряда батарейного 
  блока увеличивается на 10 − 20%. 
  Даже если Вы регулируете LCD В. L., это не 
  влияет на записываемое изображение.

#### LCD COLOUR

Выберите данную функцию и измените уровень индикатора путем поворачивания регулировочного диска вверх (+) или вниз (-) для регулировки яркости цвета изображения.

акройте панель ЖКД.

Выберите данную функцию для регулироввки яркости видоискателя. Видоискатель делается ярче, когда Вы поворачиваете регулировочный диск вверх (+) и делается темнее, когда Вы поворачиваете его вниз (-).

#### ZEBRA <OFF/ON>

- Обычно устанавливайте на OFF.
  Выберите ON для съемки с зебротаблицей, отображаемой на экране ЖКД или в видоискателе.

### Changing the mode settings

#### Items for the 🖾 MEMORY SET menu CONTINUOUS <OFF/ON/MULTI SCRN

- Select OFF not to record continuou
   Select ON to record 2 to 4 pictures
- Select ON to record 2 to 4 pictures continuously.
   Select MULTI SCRN to record nine pictures

#### OUALITY <STANDARD/FINE/SUPER FINE>

- JUALITY -STANDARD/FINE/SUPER FINE>
  Select STANDARD to record still pictures in the
  standard image quality mode, using the
  memory card slot.
  Select FINE to record still pictures in the fine
  image quality mode, using the memory card
  of the standard standard
- slot.

  Select SUPER FINE to record still pictures in the superfine image quality mode, using the memory card slot.

- PROTECT <OFF/ON>
  Normally select OFF not to protect still pictures.
  Select ON to protect selected still pictures against accidental erasure. See page 139 for

#### SLIDE SHOW

Select this item to play back images in a continuous loop. See page 146 for details.

#### DELETE ALL

Select this item to delete all the images. See page 141 for details.

#### FORMAT

Select this item to format floppy disks or PC cards. See page 124 for details.

#### PHOTO SAVE

n to duplicate still pictures. See Select this item to d page 129 for details

# **Изменение установок** режимов

- Функции для меню I MEMORY SET CONTINUOUS < OFF/ON/MULTI SCRN>
   Выберите OFF, чтобы последовательная
- запись не выполнялась.
   Выберите ON для последовательной записи
- 2 4 изображений. Выберите MULTI SCRN для
- последвательной записи девяти изображений.

#### QUALITY <STANDARD/FINE/SUPER FINE>

- Выберите STANDARD для записи неподвижных изображений в режиме стандартного качества изображения с использованием гнезда для платы
- использованием гнезда для платы расширения памяти.

   Выберите FINE для записи неподвижных изображений в режиме высокто качества изображении с использованием гнезда для платы расширения памяти.

   Выберите SUPER FINE для записи неподвижных изображений в режиме высокто качества изображения с использованием гнезда для платы расширения памяти.

- PROTECT < OFF/ON>

  Обычно выбирайте OFF, чтобы не было защиты неподвижных изображений.
  Выберите ОN для защиты выбраиных неподвижных изображений от случайного стирания. См. подробности на стр. 139.

#### SLIDE SHOW

Выберите данную функцию для воспроизведения изображений в непрерывном замкнутом цикле. См. подробности на стр. 146.

### DELETE ALL

Выберите данную функцию для удаления всех изображений. См. подробности на стр. 141.

#### FORMAT

Выберите данную функцию для форматирования флоппи-диска или платы персонального компьютера. См. подробности персональн на стр. 124.

### PHOTO SAVE

Выберите данную функцию для дублирования неподвижных изображений. См. подробности на стр. 129.

# 37

#### Changing the mode settings

### Items for the @ CM SET menu

CM SEARCH < ON/OFF>
• Select ON to search using cassette memory.
• Select OFF to search without using cassette memory

#### TITLEERASE

Erase the title you have superimposed

#### TITLE DSPL <ON/OFF>

- Select ON to display the title you have superimposed.
   Select OFF not to display the title.

#### TAPE TITLE Select this item to label the cassette tape

ERASE ALL em to erase all the data in cassette

Items for the 🖾 TAPE SET menu

### REC MODE <SP/LP>

- Select SP when recording in SP (standard play) mode
- · Select LP when recording in LP (long play)

### AUDIO MODE <12BIT/16BIT>

- Normally select 12BIT to record two stereo ounds.
- Select 16BIT to record the one stereo sound with

### MIC LEVEL\* <AUTO/MANUAL>

- Select AUTO to adjust the recording level automatically.
   Select MANUAL to adjust the recording level manually.

# Изменение установок режимов

### Функции для меню 💷 CM SET

- использования памяти кассеты

### TITLEERASE

Для стирания титра, который Вы наложили.

#### TITLE DSPL <ON/OFF>

- Выберите ON для отображения
   наложенного Вами титра.
   Выберите OFF, чтобы титр не отображался.

#### TAPE TITLE

Выберите данную функцию для обозначе кассетной ленты.

#### ERASE ALL

#### Функции для меню 🖾 TAPE SET REC MODE <SP/LP>

- Выберите SP при записи в режиме SP (стандартного воспроизведения).

   Выберите LP при записи в режиме LP (удлиненного воспроизведения).

# AUDIO MODE <12BIT/16BIT> • Обычно выбывае

- миов <128IT/16BIT> Обычно выбирайте 12BIТ для записи двух стереофонических звуков. Выберите 16BIТ для записи одного стереофонического звука высокого качества.

- MIC LEVEL\* <AUTO/MANUAL>
   Выберите AUTO для автоматической регулировки уровня записи.
   Выберите MANUAL для регулировки уровня

### Changing the mode settings

### □REMAIN <AUTO/ON>

- Select AUTO to display the remaining time of the tape in the following cases:

   With the power on or a tape inside, for eight seconds after the remaining time of the tape
- becomes certain. -For eight seconds after the ▷ or DISPLAY
- button is pressed.

   During rewinding, fast-forwarding, and
- searching the picture.
   Select ON to always display the remaining time

### DATA CODE < DATE/CAM or DATE>

- Select DATE/CAM to display date and recording data during playback.
   Select DATE to display date during playback.

### Items for the 🛅 SETUP menu

Select this item to reset the date or time

#### AUTO TV ON <OFF/ON> se this feature only with Sony TVs.

You can use this feature only with Sony TV:
• Select OFF not to turn on the TV.
• Select ON to turn on the TV automatically when using the LASER LINK function.

#### TV INPLIT < VIDEO1/VIDEO2/VIDEO3/OFF>

IV INPUI <VIDEO1/VIDEO2/VIDEO3/OFF> Select 1, 2 or 3 of the video input on the TV which the AV cordless IR receiver (not suppli is connected to when using the LASER LINK function.

- LTR SIZE <NORMAL/2X>
   Normally select NORMAL.
   Select 2X to display the selected menu item by twice size of the normal.

- DEMO MODE <ON/OFF>
   Select ON to glance over the function of
- camcorder.
   Select OFF not to display demonstration.

# Изменение установок

- ™REMAIN <AUTO/ON>
   Выберите AUTO для отображения оставшегося времени ленты в следующих
- случаях: При включении питания или вставке кассеты на восемь секунд после того, как будет определено оставшееся время
- Во рвемя ускоренной перемотки ленты назад, вперед и во время поиска
- изображени. Выберите ОN, чтобы индикатор оставшейся ленты отображался всегда

# DATA CODE <DATE/CAM или DATE> • Выберите DATE/CAM для отображения даты и данных записи во время

воспроизведения. Выберите DATE для отображения даты во

### Функции для меню 📾 SETUP Выберите эту функцию для переустановки даты и времени.

# АUTO TV ON <OFF/ON> Вы можете использовать данную функцию только с телевизорами фирмы Sony. Выберите ОГБ, чтобы телевизор не включался автоматически. Выберите ОК для автоматического включения телевизора во время использования функции LASER LINK.

TV INPUT <VIDEO1/VIDEO2/VIDEO3/OFF> Выберите 1 или 2 или 3 видеовход на тепевизоре, к которому подсоединен беспроводный ИК аудиовидеоприемник (не прилагается) при использовании функции LASER LINK.

#### LTR SIZE <NORMAL/2X>

- Обычно выбирайте NORMAL.
- Выберите 2х для отображения выбранной функции меню в двойном размере по функции меню в двойном сравнению с нормальным.

### DEMO MODE < ON/OFF>

- Выберит ОN для беглого обзора функций видеокамеры.
   Выберите ОFF, чтобы деменстрация не отображалась.

38

39

#### Changing the mode settings

- DEMO MODE is set to STBY (Standby) at the factory. The demonstration starts about 10 minutes after you set the POWER switch to CAMERA without inserting a cassette You can cancel the demonstration by inserting a cassette, setting the POWER switch to a cassette, setting the POWER switch to a position other than CAMERA, or select OFF in the menu system. To select STBY again, set the POWER switch to OFF when DEMO MODE is set to ON, and set the POWER switch back to CAMERA.
- You cannot select DEMO MODE when a
- You cannot select DEMO MODE when a cassette is inserted in the camcorder.
   If you insert a cassette during the demonstration, the demonstration stops. You can start recording as usual. DEMO MODE automatically returns to STBY.
   To look at the demonstration at once, eject the cassette, if inserted. Then select ON of DEMO MODE and erase the menu display. The demonstration will begin.

#### Items for the 🚾 OTHERS menu WORLD TIME

Select this item to set the clock by a time difference. See page 154 for detail

#### BEEP <MELODY/NORMAL/OFF

- Normally select MELODY so that a melody sounds when you start/stop recording, etc. Select NORMAL so that beeps sound when you
- start/stop recording, etc.
   Select OFF when you do not want to hear the beep sound.

#### COMMANDER\* < ON/OFF>

- Select OFF when not using the supplied Remote Commander for the camcorder.

  Select OFF when not using the Remote Commander.

#### Изменение установок режимов

- Примечания к DEMO MODE

   DEMO MODE устанавливается на заводе на STBY (готовность). Демонстрация начинается приблизительно через 10 минут после установки выключателя POWER в положение CAMERA без вставки кассеты. Вы можете отменить демонстрацию путем вставки кассеты, установки выключателя POWER в полжение, отличное от CAMERA, или выберите OFF в системе меню. Снова для выбора STBY установите выключатель РОWER а положение ОFF, когда функция DEMO MODE установлена на ON, а затем установите выключатель POWER назад в , положение CAMERA
- Вы не можете выбрать DEMO MODE, если
- Вы не можете выбрать DEMO MODE, если кассета вставлена в видеокамеру.
   Если Вы вставите кассету во время демонстрации, то демонстрации прекращается. Вы можете начать запись, как обычно. DEMO MODE автоматически
- как обычно. DEMO MODE автоматически возращается к STBY.

   Для безоглагательного просмотра демонстрации вытолкните кассету, если она вставлена. Выберите ОN для функции DEMO MODE и сотрите дисплей меню. Начинается демонстрация.

# Функции для меню 🔯 OTHERS WORLD TIME

Выберите данную функцию для установки часов с помощью разницы во вре Подробности см. на стр. 154.

#### BEEP <MELODY/NORMAL/OFF>

- Обычно выбирайте MELODY, чтобы
- Ообыно выбираите МІЕДОУ, чтооы
  мелодия звучала, когда Вы начинаете/
  останавливаете запись и т.д.
   Выберите NORIMAL, чтобы зуммерные
  синталы звучали, когда Вы начинаете/
  останавливаете запись и т.д.
   Выберите ОFF, если Вы не хотите слышать
- зуммерный звуковой сигнал.

#### COMMANDER\* < ON/OFF>

- Выберите ON при использовании прилагаемого к видеокамере пульта
- дистанционного управления
   Выберите ОFF, если пульт дистанционного управления не используется.

#### Changing the mode settings

#### DISPLAY <LCD or V-OUT/LCD >

- Normally select LCD.
   Select V-OUT/LCD to display indicators both on the LCD screen and TV screen.

### REC LAMP < ON/OFF>

Normally select ON.
 Select OFF when you do not want the camera recording lamp on the front of the unit to light

- COLOUR BAR <OFF/ON>
   Normally select OFF not to display the colour
- bar.
   Select ON to display the colour bar

Select this item when editing a tape on another equipment connected with the i.LINK cable (DV connecting cable). See page 106 for details.

\* These settings return to the default 5 minutes of These settings return to the default 5 minutes or more after the power source is disconnected or battery is removed. As far as the other items without an asterisk are concerned, their settings are retained even when the power source is disconnected or battery is removed, as long as the vanadium-lithium battery is charged.

When recording a close subject
When REC LAMP is set to ON, the red camera
recording lamp on the front of the camcorder
may reflect on the subject if it is close. In this
case, we recommend you set REC LAMP to OFF.

42

- Notes
  When playing back a tape recorded in the 16-bit mode, you cannot adjust the balance in AUDIO MIX.

  AUDIO MODE, you
- If you select 16BIT in AUDIO MODE, you
- cannot add an audio sound.

  If you select BRIGHT in LCD B.L., the battery life while recording decreases 10 to 20%. When you use a power source other than the battery, the menu item LCD B.L. is set to BRIGHT automatically and the item does not appear on the screen

#### Изменение установок режимов

#### DISPLAY <LCD или V-OUT/LCD >

- Обычно выбирайте LCD.
   Выберите V-OUT/LCD для отображения индикаторов и на экране ЖКД и на экране

### REC LAMP < ON/OFF>

- Обычно выбирайте ОN.
   Выберите ОFF, если Вы не хотите, чтобы загоралась лампочка записи камерой на передней панели аппарата.
- COLOUR BAR < OFF/ON>
   Oбычно выбирайте OFF, чтобы цветная полоса не отображалась.
   Bыберите ON для отображения цветной

- DV EDITING
  Выберите данную функцию при монтаже
  ленты на другой видеоаппаратуре,
  подсоединенной с помощью кабеля i.LINK
  (цифрового осединительного видеокабеля
  Подробности см. на стр. 106.
- Эти установки возвращаются к исходным Эти установки возвращаются к исходным через 5 минут или более после отсоединения источника питания или снятия батарейного блока. Что касается устновок без звездочки, то они сохраняются даже при отсоединении источника питания или снятии батарейного блока до тех пор, пока заряжена ванадиево-литиевая батарейка.

## При записи объекта с близкого расстояния Если функция REC LAMP установлена на ON, то красная лампочка записи камерой спереди видеокамеры может отражаться на объекте, когда он находится очень близко. В таком случае мы рекомендуем Вам установите REC LAMP на OFF.

- Примечания
   Когда Вы воспроизводите ленту, записанную в 16-битовом режиме, Вы не можете регулировать баланс в установки AUDIO MIX.
- Если Вы выберете 16ВІТ в AUDIO MODE, Вы не сможете наложить звуковое сопровождение.
- Если Вы выберете BRIGHT в меню LCD B.L. Если изы выворете вийсит в инегистивления Сио В. .. сорок службы заряда батарейного блока во время записи уменьшается на 10 - 20%. Когда Вы используете отличные от батарейного блока источники питания, функция меню LCD В.L. переключается на BRIGHT автоматически и данная функция не появляется на экране.

#### 41

You can record a still picture like a photograph for about seven seconds. This photo recording is useful when you want to enjoy a picture such as a photograph or when you print a picture using a video printer (not supplied). You can record about 510 pictures on a 60-minute tape in SP mode. mode.

**Photo recording** 

Besides the operation described here, this camcorder can record a still picture on a PC card (not supplied), using the memory card slot (see page 131). You can also record still/moving pictures on a

mini DV tape with all the pixels in the progressive mode. See page 46 for details.

(1) While pressing the small green button on the POWER switch, set it to CAMERA.

(1) While pressing the small green button on the POWER switch, set it to CAMERA.

(2) Keep pressing PHOTO lightly until a still picture and "CAPTURE" appears on the LCD screen or in the viewfinder.

Recording does not start yet. To change the still picture, release PHOTO, select still picture again, and keep pressing PHOTO lightly again.

If you press PHOTO on the Remote Commander when a still picture appears on the LCD screen or in the viewfinder, the camcorder will record that still picture. However, you cannot select other still pictures by using this button.

(3) Press PHOTO deeper.


The still picture on the LCD screen or in the viewfinder is recorded for about seven seconds. The sound during those seven seconds. The sound during those seven seconds is also recorded.

To record a still picture while normal recording, press PHOTO deeper. Then the still picture is recorded for about seven seconds and the camcorder returns to Standby mode.

# Запись фотографий

Вы можете записывать неподвижное изображение, как фотографию приблизительно в течение семи секунд. Эт режим является очень полезным, когда Вы изображение, как фотографию приблизителью в течение семи секунд. Этот режим является очень полезным, когда Вы котите наслаждаться изображением похожим на фотографию, или когда Вы делаете распечатер (не прилагается). Вы можете записать приблизительно 510 изображений на бо-минутной ленте в режиме SP. Кустающей и прилагается (не прилагается). Вы можете записать приблизительно 510 изображений на бо-минутной ленте в режиме SP. Кустающей (данная кустающей у прилагается). Вы можете записать придрачений данная кустающей у прилагается (данная и придрачений у престам и придрачений у придрачен

Звук в течение этих семи секунд также будет записываться. Для записи неподвижного изображения во время нормальной записи нажмите РНОТО глубже. Неподвижное изображение будет записываться приблизительно в течение семи секунд, а затем видеокамера возаратите к режиму готовности.

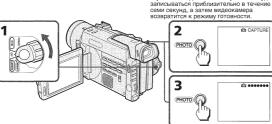

### **Photo recording**

When shooting in the dark
Install the HVL-FDH2 video flash light (not
supplied) to the accessory shoe. If the exposure is
in manual exposure mode, set it to automatic
exposure mode.

exposure mode. When 4 appears next to the "CAPTURE" indicator on the LCD screen or in the viewfinder, the video flash is ready to be used.

#### Note on the still picture

When the still picture recorded on this camcorder is played back on another VCR, the picture may be blurred. This is not a malfunction.

### When you press PHOTO while recording a

photo
The picture on the LCD screen or in the viewfinder whenever you press PHOTO will be recorded. You cannot check the recorded picture by pressing PHOTO lightly.
After the moving picture is recorded as a still picture for about seven seconds, the camcorder will go back to Standby mode.

#### Запись фотографий

При съемке в темных условиях Установите видеолампу-вспышку HVL-FDH2 (не прилагается) на башмак для вспомогательного оборудования. Еспи экспозиция находится в ручном режиме экспозиции, установите ее на атоматический режим экспозиции.

Когда \$ появляется вслед за индикатором "CAPTURE" на экране ЖКД или в видоискателе, видеолампа-вспышка будет готова к работе

#### Примечание к неподвижному . изображению

Когда неподвижное изображение записанное на данной видеокамере воспроизводится на другом КВМ, изображение может быть размытым. Это не гся неисправностью

### Если Вы нажимаете кнопку РНОТО во


Если Вы нажимаете кнопку РНОТО во время записи фотографии Изображение на экране ЖКД или в видоискателе всегда будет записываться, когда Вы нажимаете РНОТО. Вы не можете проверить записываемое изображение путем легкого нажатия РНОТО. После записи движущегося изображения, как неподвижного изображения приблизительно в течение семи секунд, видеокамера возвращается в режим готовности.

#### **Photo recording**

#### Запись фотографий

#### Printing the still picture

You can print a still picture by using the video printer (not supplied). Connect the video printer using the 5 video connecting cable (not supplied). Refer to the operating instruction of the video printer as well.

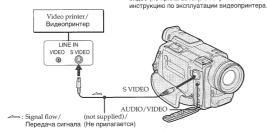

# If the video printer is not equipped with S VIDEO input

Use the supplied A/V connecting cable. Connect it to the AUDIO/VIDEO jack and connect the yellow plug of the cable to the VIDEO input of the video printer.

#### Распечатка неподвижного изображения

Вы можете напечатать неподвижное изображение с использованием видеопринтера (не прилагается). Подсоедините видеопринтер с использованием соединительного кабеля S-видео (не прилагается). Смотрите также

# Если видеопринтер не оснащен входо VIDEO

Используйте прилагаемый соединительный кабель аудио/видео. Подсоедините его к гнезду AUDIO/VIDEO и подсоедините желтый разъем кабеля к входу VIDEO на видеопринтере

# Shooting with all the pixels – PROG. SCAN

Съемка со всеми элементами изображения - PROG. SCAN

When modifying the digital images on your personal computer, set PROG. SCAN to ON before shooting. You can record the images on a mini DV tape frame by frame with higher resolution.

mmi Dv tape insure, — resolution.
Since the image taken in progressive mode does not go out of focus even in a pause, it is especially useful when you analyze high-speed actions such as sport scenes.

При модификации цифровых изображений на При модификации цифровых изображений в Вашем персональном компьютере, установите функцию PROG. SCAN на ON перед началом съемки. Вы можете записывать изображения на ленту mini DV кадр за кадром с более высокой разрешающей способностью. Так как изображение, снимаемое в прогрессивном режиме, не выходит из фокуса даже во время паузы, это будет особенно полезно, когда Вы хотите проанализировать высокоскоростные действия, как например, спортивные игры.




- (1) Press MENU to display the menu in Standby
- the dial.
- (3) Turn the control dial to select PROG. SCAN,
- then press the dial.

  (4) Turn the control dial to select ON, then press the dial.
- (5) Press MENU to erase the menu display. The PROG. SCAN indicator lights up
- (1) Нажмите MENU для отображения меню в
- режиме готовности.

  (2) Поверните регулировочный диск для выбора 📆 , а затем нажмите диск.

  (3) Поверните регулировочный диск для выбора PROG. SCAN, а затем нажмите
- (4) Поверните регулировочный диск для
- выбора ОN, а затем нажмите диск.

  (5) Нажмите MENU для стирания дисплея меню. Индикатор PROG. SCAN будет

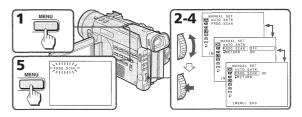

#### To return to normal mode

Select OFF in step 4, then press the control dial.

Для возврата к нормальному режиму Выберите ОFF в пункте 4, а затем нажмите регулировочный диск.

Использование

функции FADER

Вы можете плавно вводить и выводить

45

#### 46

# Shooting with all the pixels – PROG. SCAN

Note on the progressive mode The normal TV broadcast divides the screen into The normal 1v oroaccast civides the screen more two finer fields and displays them in turns every 1/50 of a second. Thus, the actual image displayed in an instant covers only half of the displayed in an instant covers only half of the apparent image area. Displaying the whole image simultaneously on a full screen is called displaying with all the pixels. In this mode, the resolution of the still picture is twice as high as in the normal mode. This camcorder takes in an image every 1/25 of a second, which may cause the image of a moving object to go out of focus.

The setting at the factory
This camcorder is originally programmed to record still/moving pictures on a mini DV ta in the normal TV format (Interlace format).

When shooting under fluorescent light
When shooting in the progressive mode under fluorescent light or light bulb, a rare phenomenon may happen in which the screen lights up brightly (Flicker phenomenon). This is not a malfunction. If you want to stop this phenomenon, set PROG. SCAN to OFF in the menu system.

# Съемка со всеми элементам изображения – PROG. SCAN

#### Примечание к прогрессивному режиму Нормальная телевизионная передача разделяет экран на два поля и отображает их по очереди каждое на 1/50 секунды. Таким

образом, действительное изображение отображаемое на мгновение, охватывае только половину видимой зоны изображения только половину видимой зоны изображения. Отображение всего изображения одновременно по всему экрану называется отображением со всеми элементами изображения. В таком режиме разрешающая способность неподвижного изображения будет в два раза выше по сравнению с нормальным режимом. Данная видеокамера снимает изображение каждые 1/25 секунды, что может привести к тому, что изображение движущегося объекта окажется не в фокусе.

Заводская установка
Данная видеокамера изначально
запрограммирована производить запись
неподвижных/движущихся изображжений на
ленту mini DV в нормальном телевизионном
формате (чересстрочном формате).

#### При съемке под люминесцентным светом

При съемке в прогрессивном режиме под люминесцентным светом или осветительной лампой может случиться необычное явление, при котором экран будет освщен очень ярко (явление мерцания). Это не является неисправностью. Если Вы хотите прекратить данное явление, установите функцию PROG. SCAN на OFF в системе меню.

#### **Using the FADER** function

You can fade in or out to give your recording a


rou can rade in or out to give your recording a professional appearance. When fading in, the picture gradually fades in while the sound increases. When fading out, the picture gradually fades out while the sound decreases.

изображение, придавая Вашей записи профессиональный вид. При введении изображение постепенно

#### вводится с одновременным повышением звука. При выведении изображение постепенно выводится с одновременным

### [a] STEY



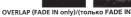









#### STBY [b]

When fading in, the picture gradually changes from black and white to colour. When fading out, the picture gradually changes from colour to black and white.

MONOTONE

- When fading in [a]
  (1) While the camcorder is in Standby mode, press FADER until the desired indicator flashes.
  (2) Press START/STOP to start recording. The fade indicator stops flashing.

### When fading out [b]

- (1) During recording, press FADER until the desired indicator flashes.

  (2) Press START/STOP to stop recording. The
- fade indicator stops flashing, and the recording stops.

#### MONOTONE

понижением звука

При введении изображение постепенно изменяется от черно-белого до цветного. При выведении изображение постепенно еняется от цветного до черно-белого.

#### Для введения изображения [а]

- Для введения изооражения [а]


  (1) Когда видеокамера находится в режиме готовности нажимайте FADER до тех пор, пока желаемый индикатор не будет мигать.

  (2) Нажмите START/STOP для начала записи. Индикатор введения/выведения перестает мигать.

- Для выведения изображения [b]
  (1) Во время записи нажимайте FADER до тех пор, пока желаемый индикатор не будет
- минать. (2) Нажмите START/STOP для остановки записи. Индикатор введения/выведения перестает мигать и запись останавливается.

### **Using the FADER function**

# Использование функции FADER

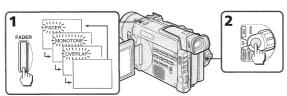

### To cancel the fader function

Before pressing START/STOP, press FADER until the fade indicator disappears.

### You cannot use the fader function in the

- ollowing situations

   The START/STOP MODE selector is set to 

  ANTI GROUND SHOOTING or 5SEC.
- The camcorder is in the photo recording.

  A title is displayed on the LCD screen or in the viewfinder. If the title is not necessary, erase it before using the fader function.

During fading, you cannot operate the DIGITAL EFFECT button.

### The fader function is effective in the following

- ine tader function is effective in the following situations
   A big change of scene (FADE IN, FADE OUT)
   The beginning of a story (FADE IN)
   The end of a day (FADE OUT)
   Change the scene while leaving the trace of the previous scene

If you use the fader function repeatedly
The situation the subject is in cannot be seen
clearly, thus making the picture difficult to enjoy

#### When the OVERLAP indicator appears

The camcorder automatically memorizes the image recorded on a tape. As the image is being memorized, the OVERLAP indicator flashes fast, and the playback picture is displayed. At this stage, the picture may not be recorded clearly, depending on the tape condition.

Для отмены функции введения/ выведения изображения Перед нажатием START/STOP нажимайте FADER до тех пор, пока индикатор введен

# Вы не сможете использовать функци введения/выведения изображения в

- Вы печения в введения/Ізыведения изображения в следующих ситуациях Переключатель START/STOP MODE установлен в положение ... АNTI GROUND SHOOTING лип SSEC.

  Видеокамера находится в режиме записи фотографий.

   Титр отображается на экране ЖКД или в видоискателе. Если титр не требуется, то сотрите его перед использованием функции введения/выведения изображения.

Во время введения/выведения изображения Вы не можете использовать кнопку DIGITAL EFFECT.

- Функция введения/выведения изображения будет эффективной в следующих ситуациях.

   Сильное изменение сцены (FADE IN, FADE OUT)

   Начало истории (FADE IN)

   Конец дня (FADE OUT)

   Изменение сцены при оставлении следа от предыдущей сцены.

Если Вы используете функцию введения выведения изображения повторно В такой ситуации объект не может быть четко увиден, так, что это делает трудным получение удовольствия от просмотра.

Когда появляется индикатор OVERLAP Видеокамера автоматически запоминает изображение, записанное на ленте. Когда изображение будет запомнено, индикатор OVERLAP начинает быстро мигать, и воспроизводимое изображение будет отображено. В таком состоянии изображе может не записываться четко в зависимос от состояния ленты. от состояния ленты

### **Shooting with** backlighting


When you shoot a subject with the light source behind the subject or a subject with a light background, use the BACK LIGHT function

Press BACK LIGHT. The 🛭 indicator appears on wfinder

#### Съемка с задней подсветкой

Когда Вы снимаете объект с источником света позади объекта или объект на освещенном фоне, используйте функцию ВАСК LIGHT.

Нажмите BACK LIGHT. Индикатор 3 появляется на экране ЖКД или в видоискателе.

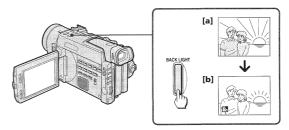

[a] Subject is too dark because of backlight [b] Subject becomes bright with backlight compensation.

After shooting
Be sure to release this adjustment condition by pressing BACK LIGHT again. The ு indicated disappears. Otherwise, the picture will be too bright under normal lighting condition.

- This function is also effective under the following conditions:

  A subject with a light source nearby or a mirror reflecting light.

  A white subject against a white background. Especially when you shoot a person wearing shiny clothes made of silk or synthetic fiber, his or her face tends to become dark if you do not use this function use this function

#### Note on the BACK LIGHT function

When you press EXPOSURE or SHUTTER SPEED, the BACK LIGHT function is cancelled.

[а] Объект является слишком темным из-за

задней подсветки. [b] Объект становится ярким с помощью компенсации задней подсветки

#### После съемки

Не забудьте отключить состояние этой регулировки путем нажатия ВАСК LIGHT снова. Индикатор № исчезнет. В противном случае изображение будет слишком ярким в условиях нормального освещения

- Данная функция является эффективной в следующих условиях:

  «Для объекта, расположенного рядом с источником света или зеркалом отражающим свет.

  Велый объект на белом фоне. Особенно, когда Вы снимаете человека в блестящей одежде из шелка или синтетического волокна, его или ее лицо может стать темным, если Вы не будете использовать данную функцию. данную функцию.

Примечание к функции BACKLIGHT Когда Вы нажимаете EXPOSURE или SHUTTER SPEED, функция BACK LIGHT

50


#### Using the wide mode function

You can record a 16:9 wide picture to watch on the 16:9 wide-screen TV (16:9WIDE). The picture with black bands at the top and the bottom on the LCD screen or in the viewfinder [a] is normal. The picture on a normal TV [b] is horizontally compressed. You can watch the picture of normal images on a wide-screen TV [c].

#### Использование функции широкоформатного режима

Вы можете записывать широкоформатное изображение 16:9 для просмотра на широкоэкранном телевизоре 16:9 (16:9WIDE). Изображение с черными полосами вверх внизу экрана ЖКД или видоискателя [а] является нормальным.

налне тся нормальным. Изображение на на обычном телевизоре будет сжато по горизонтали [b]. Вы можете просмотреть нормальное изображение на широкоэкранном телевизоре [c].

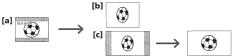

(1) Set the POWER switch to CAMERA.

(2) Press MENU to display the menu.
(3) Turn the control dial to select , then press

(4) Turn the control dial to select 16:9WIDE, then press the dial.

(5) Turn the control dial to select ON, then press

(6) Press MENU to erase the menu display.

(6) Нажмите MENU для стирания дисплея

# Using the wide mode function

### To cancel wide mode

Select OFF in step 5, then press the control dial.

### To watch the tape recorded in wide

To watch the tape recorded in 16-9WIDE mode, set it to full mode. For details, refer to the operating instruction of your TV.

Note that the picture recorded in 16-9WIDE mode looks compressed on a normal TV.

- Notes on wide mode

   In wide mode, you cannot select the old movie function with DIGITAL EFFECT.

   You cannot select or cancel the wide mode during recording.

   You cannot use the wide mode function when you set PROG. SCAN to ON.

# Использование функции широкоформатного режима

#### Для отмены широкоформатного


Выберите OFF в пункте 5, а затем нажмите регулировочный диск.

#### Для просмотра ленты, записанной в

Для просмотра ленты, записанной в широкоформатном режиме
Для просмотра ленты, записанной в режиме
16:9WIDE, установите полноокранный режим.
Подробности смотрите в инструкции по эксплуатации Вашего телевизора.
Заметьте, что изображение, записанное в режиме 16:9WIDE, выплядит сжатым на обычном телевизоре.

- Примечание к широкоформатному режиму
   В широкоформатном режиме Вы не
  оможете выбрать функцию старинного
  фильма с помощью DIGITAL EFFECT.
   Вы не можете выбрать или отменить
- широкоформатный режим во время записи.
   Вы не можете использовать функцию широкоформатного режима, если Вы установите PROG. SCAN на ON.

(1) Установите выключатель POWER в положение CAMERA.
(2) Нажмите MENU для отображения ме (2) Пажмите місти для отокраження менно. 3) Поверните регулирово-кный диск для выбора (50, а затем нажмите диск. (4) Поверните регулирово-чный диск для выбора 16:9WIDE, а затем нажмите диск. (5) Поверните регулирово-чный диск для выбора ОN, а затем нажмите диск.

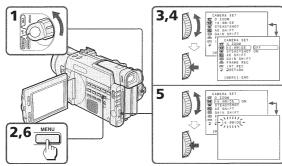

# **Enjoying picture**

### Наслаждение эффектами изображений

#### Selecting picture effect

You can make pictures like those of television with the Picture Effect function.









#### NEG. ART [a]

The colour of the picture is reversed

#### SEPIA

The picture is sepia.

#### B&W

The picture is monochrome (black and white).

#### SOLARIZE [b]

The light intensity is clearer, and the picture looks like an illustration.

### SLIM [c]

The picture expands vertically

#### STRETCH [d]

The picture expands horizontally

#### Выбор эффекта изображения

Вы можете сделать изображения похожим на те, что передают по телевидению с помощью функции эффектов изображения.

### NEG. ART [a]

ия будет негативным

#### SEPIA

Изображение будет в цвете сепия.

#### B&W

Изображение будет монохромным (черно-белым).

#### SOLARIZE [b]

Яркость света будет более четкой, и изображение будет выглядеть, как иллюстрация.

STRETCH [d]

ие расширяется по вертикали

е расширяется по горизонтали

### To return to normal mode

Using picture effect function

(1) While in Standby mode, press PICTURE

EFFECT.

(2) Turn the control dial to select the desired


picture effect mode

# Наслаждение эффектами изображений

# **Enjoying picture effect**

#### Использование функции эффектов изображения

- (1) В режиме готовности нажмите PICTURE EFFECT.
- (2) Поверните регулировочный диск для выбора желаемого режима эффекта изображения.

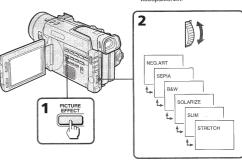

Press PICTURE EFFECT so that the indicator disappears.

- Notes on the picture effect

  When you turn the power off, the camcorder returns automatically to normal mode.
  You cannot select SLIM and STRETCH when you set PROG. SCAN to ON.

  While using the picture effect function, you cannot select the old movie function with DIGITAL EFFECT.

# Возвращение к нормальному режиму Нажмите PICTURE EFFECT так, чтобы

#### Примечания к эффектам изображений Когда Вы выключаете питание

- Когда Вы выключаете питание, видеокамера автоматически возвращается к нормальному режиму.
   Вы не можете выбрать SLIM и STRETCH, если Вы установили PROG. SCAN на ON.
   Во время использования функции эффектов изображений Вы не можете выбрать функцию старинного фильма с помощью DIGITAL EFFECT.

54

53

# Recording with various effects – digital effect

With the following functions of Digital Effect, you can add various visual effects to the pictu. The sound is recorded normally.

**STILL**You can record a still picture to be superimpo on a moving picture.



### FLASH

You can record still pictures successively at constant intervals

You can replace a brighter portion of a still picture with a moving picture









#### TRAII

You can record the picture which leaves an incidental image, such as a trail.

You can record the picture such as an old movie. The camcorder automatically sets the wide mode to 16:9WIDE, picture effect to SEPIA, and the appropriate shutter speed.

### Запись с различными эффектами – цифровые эффекты

С помощью следующих функций цифровых эффектов Вы можете добавить различные визуальные эффекты к изображению. Звук будет записываться обычно.

**ЭТІТЬ.**Вы можете записать неподвижное изображение для наложения на движущееся изображение.

### **\*** FLASH

#### Вы можете выполнить последовательную запись неподвижных изображений с одинаковыми интервалами

Вы можете замещать более яркую часть неподвижного изображения движущимся изображением

OLD MOVIE
Вы можете записать изображение, которое будет выглядеть как старинный фильм.
Видеокамера автоматически устанавливает широкоформатный режим на 16:9WIDE, эффект изображения на SEPIA и надлежающую скорость затвора.

Вы можете записать изображение, которое

# Recording with various effects – digital effect

- (1) While in Standby mode or Recording mode, press DIGITAL EFFECT.
  The digital effect indicator flashes.
  (2) Turn the control dial to select the desired
- digital effect mode.
  (3) Press the control dial. The digital effect
- bardoes not appear in the OLD MOVIE mode. The still picture is stored in memory in the STILL or LUMI. mode.
- (4) Turn the control dial to adjust effects.

  The longer the bar is, the greater the effects

are.

STILL: The proportion of still picture to moving picture.

FLASH: The length of the intervals.

LUMI.: The brightness of the area where you paste the moving picture.

TRAIL: The length of time the incidental image remains.

image remains. **OLD MOVIE**: No adjustment necessary.

Запись с различными эффектами – цифровые эффекты

- (1) Когда видеокамера находится в режиме готовности или записи нажмите DIGITAL EFFECT. Индикатор цифрового эффекта будет
- мигать. мигать.
  (2) Поверните регулировочный диск для выбора режима желаемого эффекта.
- (3) Нажмите регулировочный диск.
  Индикатор цифрового эффекта будет гореть и появляются полосы шкалы. Шкала не появляется в режиме OLD MOVIE. Неподвижное изображение будет сохранено в памяти в режиме STILL или
- LUMI. (4) Поверните регулировочный диск для регулировки эффектов. Более длинная шкала соответствует увеличению эффектов следующим

образом.


STILL: Пропорция неподвижного изображения по отношению к движущемуся изображению.

FLASH: Длигельность интервалов.

LUMI.: Яркость зоны, где Вы на кладываете движущееся изображение.

TRAIL: Длигельность времени оставления побочного изображения.

OLD MOVIE: Регулировка не требуется.

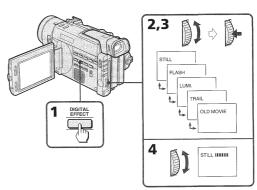

# Recording with various effects – digital effect

#### To cancel digital effects

Press DIGITAL EFFECT so that the indicator

- Notes on digital effect

   You cannot use the following functions while using the digital effect.

   Functions using the FADER button

   Functions using the PHOTO button

   When you set the POWER switch to OFF, the digital effect will be cancelled automatically.

Notes on the OLD MOVIE mode
You cannot use the following functions in the
OLD MOVIE mode.
- Functions using the PROGRAM AE button
- 16:99VIDE mode
- Functions using the PICTURE EFFECT button

### Запись с различными эффектами – цифровые эффекты

Для отмены цифровых эффектов Нжамите DIGITAL EFFECT так, чтобы

- Примечания к цифровым эффектам

  Вы не можете использовать следующие функции во время использования цифровых эффектов.

   Функции с использованием кнопки FADER Функции с использованием кнопки PHOTO 

  Когда Вы установите выключатель POWER в положение ОFF цифовоей эффект будет отменен автоматически.

# Примечания к режиму OLD MOVIE

- Вы не можете использовать следующие функции в режиме OLD MOVIE.

   Функции с использованием кнопки Функции с использова PROGRAM AE Режим 16:9WIDE
- Функции с использо PICTURE EFFECT

### **Shooting with** manual adjustment

Under normal conditions, this unit automatically makes various adjustments as it shoots. However, you can adjust manually the following functions to your preference.

# Functions you can adjust by setting the AUTO LOCK selector to the centre (auto lock release)

position
Brightness (exposure), shutter speed, white balance, and program AE

Functions you can adjust by setting MENU Zebra pattern, recording level, deactivating the Steady Shot, gain shift, and AE shift

#### Functions you can adjust by using other buttons/switches ND filter, focus

The following describes how to adjust all the functions mentioned above except program AE (see page 71) and focus (see page 74).

### AUTO LOCK selector

. own below to maintain or Set the selector as shown below to release the settings of the functions

### Съемка с ручной регулировкой

В нормальных условиях данный аппарат автоматически выполняет различные регулировки во время съемки. Однако, Вы можете вручную отрегулировать следующие функции по собственному


# Функции, которые Вы можете отрегулировать путем установки селектора АUTO LOCK в центральное положение (отключение автоматического режима) Пркость (экспозиция), скорость затвора, баланс белого и программа АЕ (автоматичской экспозиции)

# Функции, которые Вы можете отрегулировать путем установки MENU Зебротаблицу, уровень записи, отключение устойчивой съемки, смещение усиления, и смещение АЕ (автоматической экспозиции)

# Функции, которые Вы можете отрегулировать путем использи других кнопок/переключателей Фильтр ND, фокусировка

Следующее объясняет как регулировать все вышеупомянутые функции, за исключением программы АЕ (см. стр. 71) и фокусировки (см. стр. 74).

Селектор AUTO LOCK
Установите селектор, как показано ниже для сохранения или освобождения установок функций.

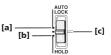

#### AUTO LOCK [a]

Select this position to let the unit adjusts all the functions automatically.

#### fdl d IOH

ect this position after setting the functions nually to maintain the settings.

Manual position [c] Select this position to adjust manually the functions listed above.

### 58

57

дото соск [а] Выберите данное положение для того, чтобы аппарат регулировал все функции автоматически.

HOLD [b]
Выберите данное положение после
установки функций вручную для сохранения
установок.

Ручное положение [c] Выберите данное положение для регули-ровки вышеперечисленных функций вручную.

# Shooting with manual adjustment

#### Adjusting exposure

Adjust the exposure manually under the following cases.



The background is too bright (back lighting)
Insufficient light: most of the picture is dark

- Bright subject and dark background
   To record the darkness faithfully
- (1)Set AUTO LOCK selector to the centre (auto (1)set AUTO LOCK selector to the centre (autu-lock release) position while the camcorder in in Standby mode. (2)Press ENFOSURE. The exposure indicator appears on the LCD screen or in the viewfinder. (3)Turn the control dial to adjust the exposure.

# Съемка с ручной регулировкой


#### Регулировка экспозиции

Отрегулируйте экспозицию вручную в следующих случачх



- [а]
   Фон является слишком ярким (задняя подсветка)
   Недостаточное освещение: большая часть изображения темная

- [**b]** Яркий предмет на темном фоне
   Для правдивой записи темных условий
- (1)Установите селектор AUTO LOCK в (1)УСТановите объектор до 12 СССТА
  центральное положение (отключение
  автоматического режима), когда видеокамера находится в режиме готовности.
  (2)Нажмите ЕХРОЅИВЕ. Индикатор
  экспозиции появляется на экране ЖКД
- или в видоискателе.
- (3) Поверните регулировочный диск для регулировки экспозиции.

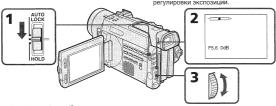

### To return to automatic exposure

Set AUTO LOCK selector to AUTO LOCK or press EXPOSURE to turn off the exposure indicator.

- Notes

  The control dial does not have a stop position.

  If you press PROGRAM AE, the exposure comes back to automatic adjustment again.

  When you adjust the exposure manually, you cannot use the BACK LIGHT function.

# Для возврата к режиму автоматической экспозиции Установите селектор АUTO LOCK в поло-жение AUTO LOCK или нажмите EXPOSURE для выключения индикатора экспозиции.

- Примечания
   Регуловочный диск не имеет положения
- / Регуловочный диск не имеет положения остановки.

  Если Вы нажмете PROGRAM АЕ, экспозиция снова возвращается к автоматической регулировке.

   Когда Вы регулируете экспозицию вручную, Вы не можете использовать функцию ВАСК LIGHT.

# Shooting with manual adjustment


#### Adjusting the shutter speed

- (1)Set AUTO LOCK selector to the centre (auto lock release) position while the camcorder is in Standby mode.
  (2)Press SHUTTER SPEED. The shutter speed indicator appears on the LCD screen or in the viewfinder.
  (3)Turn the control dial to select the desired speed. The available shutter speed ranges from 1/4 to 1/10000.

# Съемка с ручной регулировкой

Регулировка скорости затвора

(1) Установите селектор AUTO LOCK в центральное положение (отключение автоматического режима), когда видеокамера находится в режиме готовности.
(2) Нажимте SHUTTER SPEED. Индикатор скорости затвора появится на экране ЖКД или в видоискателе.
(3) Поверните регулировочный диок для выбора желаемой скорости. Скорость можно выбирать в диапазоне от 1/4 до 1/10000.

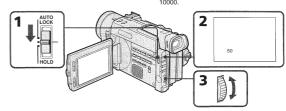

### To return to automatic shutter speed

mode
Set AUTO LOCK selector to AUTO LOCK or press SHUTTER SPEED to turn off the shutter

When shooting at slow shutter speed At slow shutter speed, automatic focus may be lost. Adjust focus manually using a tripod.

Для возврата к режиму автоматической скорости затвора Установите АUTO LOCK в положение AUTO LOCK или нажимте SHUTTER SPEED для выключения индикатора скорости затвора.

При съемке на низкой скорости затвора На низкой скорости затвора автоматическая фокусировка может быть неправильная. Отрегулируйте фокусировку вручную с использованием треноги.

# Shooting with manual adjustment

# Съемка с ручной регулировкой

#### Adjusting the white balance

White balance adjustment makes white subjects look white and allows more natural colour balance for camera recording. Normally white balance is automatically adjusted. You can obtain better results by adjusting the white balance manually when lighting conditions change which you have recording outdoors e.g. penn quickly or when recording outdoors: e.g., neon

- (1)Set AUTO LOCK selector to the centre (auto
- (1)Set AUTO LOCA. selector to the centre (auto lock release) position while the camcorder is in Standby mode. (2)Press WHT BAL. The white balance indicator appears on the LCD screen or in the viewfinder.
- viewfinder.


  (3)Turn the control dial to select the appropriate white balance mode under the following conditions. As you turn the dial, the display changes as follows:

  ♣ (One-push white balance) ←→ ★ (Outdoor) ←→ ♣ (Indoor).

### Регулировка баланса белого

Регулировка баланса белого делает так, что Регупировка баланса белого делает так, что белые объекты выглядят белыми и позволяет получить запись с более естественным цветовым балансом при съемке видеокамерой. Обычно баланс белого регулируется автоматически. Но Вы можетв получить лучшие результаты путем регулировки баланса белого вручную, когда условия освещения быстро изменяются или в условия совещения быстро изменяются или в условия сведиания быстро изменяются или в условия сведкламы, фейерверки.

- неоновые рекламы, фейерверки. (1) Установите селектор AUTO LOCK в центральное положение (отключе автоматического режима), когда видеокамера находится в режиме
- готовности.
  (2)Нажмите WHT BAL. Индикатор баланса белого появится на экране ЖКД или в видоискателе.
- видоискателе. (3)Поверните регулировочный диск для выбора надлежащего режима баланса белого в зависимости от следующих условий. При поворачивании диска дисплей будет изменяться следующим
  - Баланс белого одним нажатием) ↔ ☀
     (На улице) ↔ ☆ (В помещении).

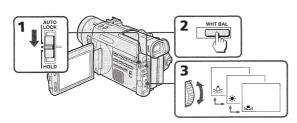

# Shooting with manual adjustment

...

=0= (Indoor)

### Shooting conditions Adjusting the white balance according to the light source. This operation is not available during recording. Follow the steps described below to adjust the settings again. ettings again. Recording a sunset/sunrise just after sunset, just before ☀ (Outdoor)

- just after sunset, just berog sunrise, neon signs, or fireworks Under a colour matching fluorescent lamp

- Lighting condition changes quickly
   Too bright place such as photography studios
   Under sodium lamps or mercury lamps

#### If you have selected 🔩 in step 3

If you have selected so in step 3
When you set the white balance to one-push white balance mode, the setting is locked and maintained even if lighting conditions change. You can achieve recording with natural colours without being affected by ambient light. (With the so indicator on the screen)
(1) Shoot a white object such as paper fully on the LCD screen or in the viewfinder.
(2) Press the control dial.
The so indicator flashes quickly. When the white balance has been adjusted and stored in the memory, the indicator stops flashing. The setting will be maintained for about one hour after the battery is detached.

battery is detached

To return to automatic adjustments Set AUTO LOCK selector to AUTO LOCK or press WHT BAL to turn off the white balance

# Съемка с ручной регулировкой

Дисплей

<b></b>	<ul> <li>Регулировка баланса белого в соответствии с источником света. Данная операция невозможна во время записи. Следуйте пунктам, описанным ниже, для регулировки установок еще раз.</li> </ul>
☀ (На улице)	• Запись захода/восхода солнца, сразу после захода, немного перед восходом солнца, при неоновых рекламах или фейерверках • При освещении, соответсвующем лампам дневного света

Де (В помещении) • Условия освещения быстро изменяются

изменнотсн

Слишком яркие места, как например, фотостудия

При свете натриевых или ртутных ламп

Условия съемки

Если Вы выбрали ы в пункте 3
Когда Вы установите баланс белого на режим баланса белого одним нажатием, установка будет зафискорована и сохранена, даже если условия освещения изменяются. Вы можете получить запись в естественных цветах без влияния от коружающего освещения. (Индикатор ы отбражается на экране) (1)-симайте белый объект, как например, бумагу, полностью заполнившую экран ЖКД или видоискатель.

(2) Нажмите регулировочный диск. Индикатор ы будет быстро мигать. Когда баланс белого будет отрегулирован и

баланс белого будет отрегулирован и сохранен в памяти, индикатор перестает мигать. Установка будет сохраняться приблизительно в течение одного часа после отсоединения батарейного блока.

#### Для возврата к режиму

для возврата к режишу автоматической регулировки Установите AUTO LOCK в положение AUTO LOCK или нажмите WHT BAL для выключения индикатора баланса белого.

61

62

# Shooting with manual adjustment

#### Notes on the sindicator on the screen

- Notes on the sa indicator on the screen
  'The state of the indicator shows as follows:
  Slow flashing: white balance is not adjusted.
  Fast flashing: white balance is being adjusted.
  Lights up: white balance has been adjusted.

  When the sa indicator remains flashing even if you press the control dial, shoot in automatic white balance mode.

- Notes on white balance

   When you shoot with studio lighting or video lighting, use the sk (indoor) mode.

   When you shoot with fluorescent lighting, use automatic white balance mode. If you use the sk (indoor) mode, white balance may not be adjusted a waspensistely. adjusted appropriately.

### Shooting when lighting conditions change

- When lighting conditions have changed, readjust the white balance with the control dial while the camcorder is in Standby mode.

  When you adjust the exposure and shutter speed manually, and move from indoors to outdoors, or vice versa, adjust the white
- balance again.
  When you move from indoors to outdoors, or
- When you move from indoors to outdoors, or vice versa, or detach the battery for replacement while shooting in automatic white balance mode or set the POWER switch to CAMERA, point the camcorder at a white subject for about 10 seconds before you start recording.

# Съемка с ручной регулировкой

#### Примечания к индикатору 🗫 на экра

Состояние индикатора показывает Вам следующее: Мелленное мигание: баланс белого не отрегулирован

Быстрое мигание: баланс белого находится процессе регулировки. Высвечивание: бланс белого был

Высвечивание: бланс белого был отрегулирован.
• Если индикатор № продолжает мигать, даже когда Вы нажали регулировочный диск, выполняйте съемку в автоматичек режиме баланса белого.

- Примечания к балансу белого
   Когда Вы производите съемку при студийном освещении или использовани видеолампы, используйте режим с (в
- видеоламів, изпользунте режині жі (в помещении).

   Когда Вы производите съемку при поминесцентном освещении, используйте автоматический режим баланса белого. Если Вы будете использовать режим & (в помещении), баланс белого может быть не отрегулирован надлежащим образом.

#### Съемка, когда условия осве изменяются

- Если условия освещения изменяются перерегулируйте баланс белого с помощью регулировочного диска, когда видеокамера будет находится в режиме готовности.
- рулипросольно дилка, когда видеокамира будет накодится в режиме готовисит и Если Вы отрегулируете экспозицию и скорость затвора вручную и выйдете из помещения на улицу или наоборот, отрегулируйте бапанс белого снова. Когда Вы выходите из помещения на улицу или наоборот, или отсоединаете батарейный блок для его замены во время съемки в автоматическом режиме баланса белого, или устанавливаете выключатель РОWER в положение САМЕЯА, наведите видеокамеру на белый объект приблизительно на 10 секунд перед началом съемки.

# Shooting with manual adjustment

#### **Adjusting recording level**

You can adjust the recording sound level. Use

- headphones or accommadiust.

  (1) Set the POWER switch to CAMERA.

  (2) Press MENU to display the menu.

  (3) Turn the control dial to select , then press the dial.
- then press the dial.

  (5) Turn the control dial to select MANUAL, then press the dial.

  (6) Turn the control dial to select LEVEL SET, then press the dial.

  (7) Turn the control dial to adjust the microphone
- level, so that the peak indicator in the lower-right corner does not light up. It is recommended to use headphones (not supplied) to monitor the sound when making
- (8) Press MENU to erase the menu display

# Съемка с ручной регулировкой

#### Регулировка уровня записи

- Регулировка уровня записи
  Вы можете отрегулировать уровень записи
  звука. Используйте голоеные телефоны для
  контроля звука во время регулировки.

  (1) Установите выключатель РОЖЕВ в
  положение САМЕВА.

  (2) Нажмите МЕΝИ для отображения меню.


  (3) Поверните регулировочный диск для
  выбора № затем нажмите диск.

  (4) Поверните регулировочный диск для
  выбора МС LEVEL, а затем нажмите диск.

  (5) Поверните регулировочный диск для
  выбора МАПИА, а затем нажмите диск.

  (6) Поверните регулировочный диск для
  выбора МАПИА, а затем нажмите диск.

  (7) Поверните регулировочный диск для
  регулировите регулировочный диск для
  регулировичной диск для
  регулировичной диск для
  регулировичной диск для
  регулирович уровня микрофона так, чтобы
  индикатор пика в правом нижнем утлу не индикатор пика в правом нижнем углу не высвечивался. Рекомендуется использовать головные телефоны (не прилагаются) для контроля звука во
- время выполнения регулировки. (8) Нажмите MENU для стирания дисплея

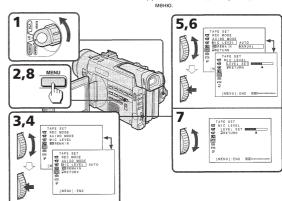

# Shooting with manual adjustment

### To adjust the microphone level

automatically
Select AUTO in step 5, then press the control dial.

- Notes on the adjustment

   The sound level setting is retained as long as the power is on and for about five minutes after removing the battery.

   Sound level indicator appears at the lower right on the LCD screen or in the viewfinder.

### The sound input through the AUDIO/VIDEO jack (DCR-TRV900E only)

You cannot adjust the recording level of the sound.

#### Using the ND filter

Using the ND filter (corresponds to 16% of the quantity of light), you can record a picture clearly, preventing the picture from going out of focus under bright conditions.

### When ND ON flashes on the LCD

The ND ON Indicator appears.

The ND filter is necessary. Press ND FILTER so that the ND ON indicator appears.

The ND filter is now activated.

### When ND OFF flashes on the LCD

screen or in the viewfinder
The ND filter is not necessary. Press ND FILTER
so that the ND OFF indicator stops flashing.
The ND filter is now deactivated.

#### Съемка с ручной регулировкой

Для регулировки уровня микрофона автоматически Выберите AUTO в пункте 5, а затем нажмите регулировочный диск.

- Іримечания к регулировке Установка уровня звука сохраняется до тех пор, пока питание включено и приблизительно в течение пяти минут после нятия батарейного блока.
- Индикатор уровня звука появляется снизу справа на экране ЖКД или в видоискателе

# Когда звук поступает через гнездо AUDIO/ VIDEO (только DCR-TRV900E)

Вы не можете отрегулировать уровнеь записи

#### Использование фильтра ND


Используя фильтр ND (соответствует 16% количеству света), Вы можете записать четкое изображение, предотвращая выход изображения из фокуса из-за ярких услови

## Когда ND ON мигает на экране ЖКД

**или в видоискателе** Требуется фильтр ND. Нажмите ND FILTER так, чтобы появился индикатор ND ON. Фильтр ND будет активизирован

### Когда ND OFF мигает на экране ЖКД

или в видоискателе
Фильтр ND является ненужным. Нажмите ND
FILTER так, чтобы индикатор ND OFF
перестал мигать. Фильтр ND будет октлючен.

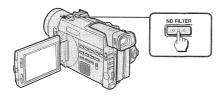

# Shooting with manual adjustment

# Shooting with the zebra

You can set the camcorder to display a zebra pattern (diagonal stripes) in the portion of the picture on the LCD screen or in the viewfinder with a subject whose brightness exceeds a certain level. The portion of the picture where zebra pattern appears is an area of high brightness and overexposure. You can check the picture level of a subject by displaying the zebra pattern. Use the zebra pattern as a guide for adjusting the exposure and shutter speed so that you can get the desired picture.

(1) Set the POWER switch to CAMERA.

(2) Press MENU to display the menu.

(3) Turn the control dial to select , then press the dial. You can set the camcorder to display a zebra

- the dial.

  (4) Turn the control dial to select ZEBRA, then
- press the dial.

  (5) Turn the control dial to select ON, then press
- the dial.


  (6) Press MENU to erase the menu display.

# Съемка с ручной регулировкой

#### Съемка с зебротаблицей

Вы можете установить видеокамеру на отображение зебротаблицы (диатональные полосы) в части изобравжения на экране ЖКД или видрискателе с объектом, якрость которого превышает определенный уровень. Часть изображения, где появится зебротаблица, является зоной высокой яркости и за пределами экспозиции. Вы можете проверить уровень изображения объекта путем отображения зебротаблицы. Используйте зебротаблицу в качества. Используйте зебротаблицу в качестве руководства для регулировки экспозиции и скорости затвора так, чтобы Вы получили желаемое изображение.

- желаемое изображение.
  (1) Установите выключатель POWER в положение CAMERA.
  (2) Нажмите MENU для отображения меню.
- (2) Нажмите МЕМИ для отображения менкл 3) Поверинте регулировочный диск для выбора , а затем нажмите диск. (4) Поверните регулировочный диск для выбора ZEBRA, а затем нажмите диск. (5) Поверните регулировочный диск для выбора ОN, а затем нажмите диск. (6) Нажмите МЕМИ для стирания дисплея меню.

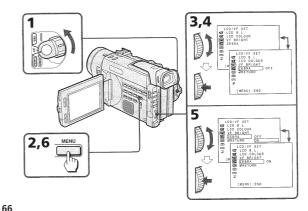

65

# Shooting with manual adjustment

### To erase the zebra pattern

Select OFF in step 5, then press the control dial

### Notes on shooting with the zebra patte

 A zebra pattern appears at more than 100 IRE.
 Even though you see the zebra pattern on the LCD screen or in the viewfinder, the zebra pattern is not recorded.

#### **Releasing the Steady Shot** function

When the Steady Shot function is working, the camcorder compensates for camera-shak

You can release the Steady Shot function when you do not need to use it. The ﷺ indicator appears on the LCD screen or in the viewfinder. Do not use the Steady Shot function when shooting a stationary object with a tripod.

(1) Set the POWER switch to CAMERA.

- (2) Press MENU to display the menu.
  (3) Turn the control dial to select , then press
- (4) Turn the control dial to select STEADYSHOT. then press the dial.
- (5) Turn the control dial to select OFF, then press

(6) Press MENU to erase the menu display

# Съемка с ручной регулировкой

Для стирания зебротаблицы Выберите ОFF в пункте 5, а затем нажмите регулировочный диск.

- Примечания к съемке с зебротаблицей Зебротаблица появляется при более, че
- Зефотаблица
   Даже если Вы видите зебротаблицу на экране ЖКД или в видоискателе, зебротаблица не записывается.

# Отключение функции устойчивой съемки

Когда функция устойчивой съемки работает, видеокамера компенсирует дрожание камеры.

Вы можете отключить функцию устойчивой съемки, когда Вы в ней не нуждаетесь. Индикатор № появляется на экране ЖКД или в видомскателе Не используйте бункцию устойчивой съемки при съемке неподвижных объектов с помощью треноги.

(1) Установите выключатель РОWER в положение САМЕТА.

(2) Нажмите МЕNU для отображения меню.

(3) Поверните регулировочный диск для выбора СП, а затем нажмите диск. (4) Поверните регулировочный диск для выбора STEADVSHOT, а затем нажмите диск.

(5) Поверните регулировочный диск для выбора СП, а затем нажмите диск. (6) Поверните регулировочный диск для выбора СГЕ, а затем нажмите диск.

3,4 GAIN SHIF FRAME REC INT.REC PRETURN 16:9WIDE STEADYSHOT ON AE SHIFT OFF GAIN SHIFT FRAME REC 2,6 D ZOOM 16:9WIDE STEADYSHOT OFF AE SHIFT

# Shooting with manual adjustment

### To activate the Steady Shot function

Select ON in step 5, then press the control dial.

#### Notes on the Steady Shot function

- Notes on the Steady Shot function

  'The Steady Shot function will not correct
  excessive camera-shake.

  'If you use a tele conversion lens (not supplied)
  or a wide conversion lens (not supplied), the
  Steady Shot function may not work.

#### Adjusting AE shift

- (1) Set the POWER switch to CAMERA.
  (2) Press MENU to display the menu.
  (3) Turn the control dial to select , then press
- the dial. (4) Turn the control dial to select AE SHIFT, then
- press the dial.

  (5) Turn the control dial to adjust brightness, then
- press the dial.

  Darker picture ←→ Brighter picture

  (6) Press MENU to erase the menu display

# Съемка с ручной регулировкой

# Для активизации функции устойчивой съемки снова Выберите ON в пункте 5, а затем нажмите регулировочный диск.


### Примечания к функции устойчивой съемки

- Функция устойчивой съемки не откорректирует чрезмерного дрожания видеокамеры.
- видеокамеры.

  всли Вы используете телескопическую насадку (не прилагается) или широкоугольную насадку (не прилагается), функция устойчивой съемки может не

### Регулировка смещения АЕ

- (1) Установите выключатель POWER в положение САМЕРА. (2) Нажмите MENU для отображения меню. (3) Поверните регулировочный диск для выбора Тв. а затем нажмите диск. (4) Поверните регулировочный диск для выбора КЕ SHIFT, а затем нажмите диск. (5) Поверните регулировочный диск для регулировки яркоти, а затем нажмите лиск
- диск. Более темное изображение ← Более
- яркое изображение (6) Нажмите MENU для стирания дисплея

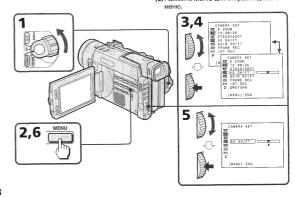

68

# Shooting with manual adjustment

#### To deactivate AE shift

Set the bar indicator at the centre in step 5, then press the control dial.

#### When you adjust AE shift

2,6

The \$\mathbb{S}\$ 4 to \$\mathbb{S}\$ +4 indicator is displayed on the LCD screen or in the viewfinder. The number varies corresponding to the AE shift level.

#### Adjusting gain shift

- (1) Set the POWER switch to CAMERA.
  (2) Press MENU to display the menu.
  (3) Turn the control dial to select , then press
- (a) Turn the control dial to select GAIN SHIFT, then press the dial.

  (5) Turn the control dial to select –3dB, then press the dial.

  (6) Press MENU to erase the menu display.

# Съемка с ручной регулировкой

#### Для отключения смещения АЕ

становите индикатор на центр в пункте 5, а затем нажмите регулировочный диск

# Когда Вы регулируете смещение АЕ Иникатор от 🖫 -4 до 🖫 +4 будет

отображаться на экране ЖКД или в видоискателе. Номер изменяется в зависимости от уровня смещеиня АЕ

#### Регулировка смещения усиления

- (1) Установите выключатель POWER в положение CAMERA. (2) Нажмите MENU для отображения меню. (3) Поверните регулировочный диск для выбора (5) а затем нажмите диск. (4) Поверните регулировочный диск для выбора GAIN SHIFT, а затем нажмите диск.
- диск.
  (5) Поверните регулировочный диск для выбора -3dB, а затем нажмите диск.
  (6) Нажмите MENU для стирания дисплея

3,4

5

#### Shooting with manual adiustment

#### To deactivate gain shift ss the control dial.

What is gain shift
When shooting in bright conditions, the gain
shiff function automatically adjusts the automatic
exposure control's gain value to –3dB as much as
possible. This helps you shoot pictures with less
noises in a bright condition. In dark conditions,
the unit operates as usual.

When you adjust gain shift The  ${\mathbb B}$  indicator is displayed on the LCD screen or in the viewfinder.

# Съемка с ручной регулировкой

Для отключения смещения усиления Выберите 0dB в пункте 5, а затем нажмите регулировочный диск

Что такое смещение усиления
Когда съемка производится в ярких
условиях, функция смещения усиления
автоматически регулирует значение усиления
автоматической эфкспозиции до —3 дБ.
максимально как возможно. Это помогает
Вам производить съемку изображений с
меньшими помехами в ярких условиях. В
темных условиях аппарат работает как
обычно.

### Если Вы отрегулируете смец

усиления Индикатор 🚳 появится на экране ЖКД или в

69

70

### Using the PROGRAM **AE function**

You can select from five PROGRAM AE (Auto sure) modes to suit your shooting situation referring to the following

#### Selecting the best mode

Select a proper PROGRAM AE mode referring to the following description.













### A: Aperture priority mode

Selecting the aperture to determine the desired depth of field. Gain and the shutter speed are automatically set in combination with the aperture value to maintain appropriate exposure

### **I** S: Shutter speed priority mode

Selecting the shutter speed manually. The exposure value changes in accordance with the selected shutter speed.

### ∜: Sports lesson mode

Capturing high-speed action in sports such as golf or tennis

● : Sunset & Moon mode
Recording sunset, night views, fireworks or neon signs

**Q: Low lux mode**For recording a subject in insufficient light. Subject becomes bright.

- Notes on focus setting

  In the Sports lesson mode, you cannot take
  close-ups because the camcorder is set to focus
  only on subjects in the middle to far distance.

  In the Sunset & Moon mode, the camcorder is
  set to focus only on distant subjects.

### Использование функции PROGRAM AE

AE SHIFT GAIN SHIFT 048 FRAME REC -348

CAMERA SET

CAMERA SET

O 200M

O 13 9W IDE

OF TEADYSHOT

O AE SHIFT

D FRAME REC

TO TO THE COMERA

TO THE CO [MENU]: END

Вы можете выбрать один из пяти режимов PROGRAM AE (автоматической экспозиции). который подходит для съемки в Вашей ситуации, ссылаясь на следующ

#### Выбор наилучшего режима

Выберите надлежащий режим PROGRAM AE,

# А: Режим приоритета апертуры

#### Выбор апертуры для определен глубины поля. Усиление и скорость затвора автоматически устанавливаются в комбинации со значением апертуры для сохранения надлежащей экспозиции

Выбор скорости затвора вручную. Значени экспозиции будет изменятьсяя в соответствии с выбранной скоростью

\( \hat{\mathscr{K}}\): Режим спортивных занятий

Для съемки высокоскоростных действий в

спортивных играх, как например, гольф или
теннис

тенни

# €: Режим захода солнца и луны Для записи захода солнца, ночных пейзажев, фейерверков или неоновых реклам

### Режим низкого освещ Для записи объекта при недостаточном освещении. Объект делается ярким.

- Примечания к установке фокусировки
  В режиме спортивных занятий Вы не можете снимать крупным планом, так как видеокамера фокусируется только на объекты среднего и дальнего плана.
- В режиме захода солнца и лунь видеокамера фокусируется только на удаленные объекты

# Using the PROGRAM AE function

#### Using the PROGRAM AE function

- (1)Set AUTO LOCK selector to the centre (auto lock release) position while the camcorder is in Standby or Recording mode.

  (2) Press PROGRAM AE.

  (3) Turn the control dial so that the symbol of the desired PROGRAM AE mode matches the indicator on the LCD screen or in the viewfinder.

  When you select the aperture priority mode or the shutter speed priority mode, press the control dial.
  - control dial.
- control dial.

  (4) In aperture priority mode (AB A) or shutter speed priority mode (AB S), turn the control dial to select the desired aperture value (F

speed pinnly mote (28 a), that the chand dial to select the desired aperture value (F value) or shutter speed.

Aperture priority mode:

Turn the control dial to select the desired aperture value. As you turn the dial, the F value changes between F1.6 and F11.

For a smaller aperture, select a higher value. Gain and the shutter speed change in accordance with the selected aperture value. Shutter speed priority mode:

Turn the control dial to select the desired shutter speed. As you turn the dial, shutter speed changes between 1750 and 1710000. For a faster shutter speed, select a smaller value indicator on the LCD screen or in the viewfinder. The gain and aperture values change in accordance with the selected shutter speed.


# Использование функции PROGRAM AE

# Использование функции

- (1) Установите селектор AUTO LOCK в центральное положение (отключени автоматического режима), когда видеокамера находится в режиме готовности или записи. (2) Нажмите PROGRAM AE.
- (2) Нажмите РROGRAM АЕ.

  (3) Поверите регулировочный диск так, чтобы символ желаемого режима РROGRAM АЕ. соответствовал индикатору на экране ЖКД или в видоискателе. Когда Вы выбираете режим приоритета апертуры (аш или режим приоритета скорости затвора, нажмите регулировочный диск. (4) В режиме приоритета скорости затвора (аш S) поверните регулировочный диск для выбора желаемого значения апертуры (значение F) или скорости затвора. Режим приоритета апертуры (значение F) или скорости затвора. Режим приоритета апертуры:
- (значение F) или окорости затвора. Режим приоритета апертуры: Поверните регулировочный диск для выбора желаемого значения апертуры. Когда Вы поворачиваете диск, значение F изменяется между F1.6 и F11. Для меньшей апертуры выбирайте более высокое значение. Усипение и скорость затвора изменнотся в соответствии с выбранным значением апертуры. Режим приоритета скорости затвора: Поверните регулировочный диск для выбора желаемой кокрости затвора. Когда Вы поворачиваете диск скорость затвора изменяется между 1750 и 1710000. Для более высокой скоросты затвора

более высокой скорости затвора оолее высокои скорости затвора выбирайте индикатор меньшего значения на экране ЖКД или в видоискателе. Значения усиления и апертуры изменяются в соответствии с выбранной скоростью затвора.

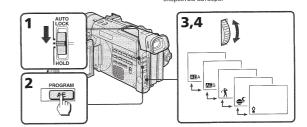

# Using the PROGRAM AE

### To return to automatic adjustment

TO RETURN to automatic adjustment mode

Set AUTO LOCK selector to AUTO LOCK or press PROGRAM AE so that the indicator disappears.

When you focus in telephoto You cannot choose F1.6, F2 and F2.4

About the depth of field
The depth of field is the in-focus range, measured from the distance behind a subject to the distance in front. The depth of field can vary with the iris in front. The depth of field can vary with the ins (F value) and the focal length. Lowering the F value (large iris) reduces the depth of field. Raising the F value (small iris) provides a larger depth of field. Zooming in telephoto position offers a smaller depth of field while the depth of field in wide-angle position is greater

The depth of field	Shallow	Deep
Iris	Open (Low F value)	Close (High F value)
Zoom	Telephoto (T)	Wide (W)

# Использование функции PROGRAM AE

Для возврата к режиму автоматической регулировки Установите селектор АUTO LOCK в положение AUTO LOCK или нажмите PROGRAM AE так, чтобы индикатор исчез.

Когда Вы выполняете фокусировку в режиме телефото
Вы не можете выбирать F1.6, F2 и F2.4.

Относительно глубины поля

Глубина поля является диапазоном фокусировки, измеренном от расстояния за объектом до расстояния перед объектом. Глубина поля может варьироваться с помощью ирисовой диафрагмы (значение F) и фокусного растояния. Понижение значения F (большая ирисоавая диафрагма) уменьшает глубину поля. Увеличение значе (меньшая ирисовая диафрагма) обеспечивает большую глубину поля. Трансфокация в положении телефото предоставляет

меньшую глубину поля, в то время как глубина поля в положении широкого угла

будет больше.

Глубина Мелко Глубоко Ирисовая Открыть (низкое Закрыть (высокое диафрагма значение F) Трансфо- Телефото (T) Широкий угол

### **Focusing manually**

When to use manual focus In the following cases you should obtain better results by adjusting the focus manually.



(b)

Too much brightness behind the subject [c]
Horizontal stripes [d]
Subjects through frosted glass
Subjects beyond nets, etc.
Bright subject or subject reflecting light
Shooting a stationary subject when using a tripod



walls, sky, etc



фокусировку



Ручная фокусировка

Когда использовать ручную

В следующих случаях Вы можете получить

- и т.д. [b]
  Слишком яркий фон за объектом [c]
  Горизонтальные полосы [d]
  Съемка объектов через матовое стекло
  Объекты за сеткой и т.д.
  Яркий объект или объект отражающий свет
  Съемка неподвижного объекта с
  использованием треноги

### 73

#### **Focusing manually**

### Adjusting focus manually


When focusing manually, first focus in telephoto before recording, and then reset the shot length.

(1) Slide FOCUS down to MANUAL. The 
indicator appears on the LCD screen or in the 
viewfinder.

(2) Turn the focus ring to focus on the subject.

#### Ручная фокусировка

#### Регулировка фокусировки вручную

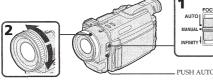

To focus in infinity
Slide FOCUS to INFINITY. ▲ indicator appears
on the LCD screen or in the viewfinder. This
for self-or its play in the property in the control of the self-or in the property in the prop function is useful when the nearer subject is focused automatically, and you want to focus on a faraway subject.

### To shoot with auto focusing

momentarily
Press PUSH AUTO.
The auto focus functions while you are pressing PUSH AUTO.

Use this button to focus on one subject and then another with smooth focusing. another with smooth focusing. When you release PUSH AUTO, manual focusing resumes.

### To return to the autofocus mode Slide FOCUS up to AUTO to turn off ♠ or ▲▲ indicator.

To shoot in relatively dark places or to shoot the subject moving quickly outside Shoot at wide-angle after focusing in the telephoto position

If ≜ lights up Subject is too close

При ручной фокусировке сперва выполняйте фокусировку в режиме телефото перед записью, а затем установите расстояние

записью, а затем установите расстояние съемки. (1) Передвинъте FOCUS вниз в положение МАNUAL. Индикатор с№ появится на экране ЖКД или в видоискателе. (2) Поверчите кольцо фокусировки для фокусировки на объект.

# PUSH AUTO

Для фокусировки на бесконечность Передвиньте FOCUS в положение INFINITY Индикатор Аф появится на экране ЖКД или в видоискателе. Данная функция является полезной, когда более биляхю расположенный объект фокусируется автоматически, но Вы хотите выполнить фокусировку также и на удаленный объект.

### Для временной съемки с автоматической фокусировкой Нажмите PUSH AUTO.

пажилте PUSH AUTO. Автоматическая фокусировка функци-онирует, пока Вы нажимаете PUSH AUTO. Используйте эту кнопку для фокусировки на один объект, а эатем на другой для плавной фокусировки. Когда Вы отпустите PUSH AUTO, ручная фокусировка будет восстановлена.

# Для возврата к режиму автоматической фокусировки Передвиньте РОСИЅ вверх в положение АUTО для выключения индикатора № или ▲.

Для съемки в отностительно темных для съемки в отностительно темных местах или для съемки быстро удаляющегося объекта Производите съемку в положении широкого угла после выполнения фокусировки в положении телефото.

Если загорается индикатор ≜ Объект находится слишком бли

74

### Interval recording

You can make a time-lapse recording by setting the camcorder to automatically record and standby sequentially. You can achieve an excellent recording for flowering, emergence,

- etc., with this function.

  (1) Set the POWER switch to CAMERA.

  (2) Press MENU to display the menu.

  (3) Turn the control dial to select , then press
- the dial.
- (4) Turn the control dial to select INT.REC, then ess the dial
- press the coat.

  (5) Turn the control dial to select SET, then press
- the dial. (6) Set WAIT TIME and REC TIME.
- (Set WAIT TIME and REC TIME.

  (1) Turn the control dial to select WAIT TIME, then press the dial.

  (2) Turn the control dial to select the desired waiting time, then press the dial.

  The time: 30SEC → 1MIN → 5MIN → 10MIN.

  (3) Turn the control dial to select REC TIME, then press the dial.

  (4) Turn the control dial to select the desired recording time, then press the dial.

  The time: 0.5SEC → 1SEC ↔ 1.5SEC ↔ 2.5SEC.

- 2SEC.

  ③ Turn the control dial to select ⊋ RETURN, then press the dial.

  (7) Turn the control dial to select ON, then press

- (7) Ium the control dual to select UN, then press the dial.
  (8) Press MENU to erase the menu display. The interval recording indicator flashes.
  (9) Press START/STOP to start interval recording. The interval recording indicator lights up.

### Запись с интервалами

Вы можете выполнить запись с пропуском времени путем установки видеокамеры на автоматическую последовательность записи и перехода в режим готовности. Вы можете получить удивительную запись цветения, появления плодов и т.д. с помощью данной фумалии.

- появления плодов и т.д. с помощью данной функции.
  (1) Установите выключатель РОWER в положение САМЕRА.
  (2) Нажмите MENU для отображения меню.
  (3) Поверните регулировочный диск для выбора ® а затем нажмите диск.
  (4) Поверните регулировочный диск для выбора INT.REC, а затем нажмите диск.
  (5) Поверните регулировочный диск для выбора INT.REC, а тем нажмите диск.
  (5) Поверните регулировочный диск для сыбражение WAIT TIME и REC TIME.
  (6) Установите WAIT TIME и REC TIME.
  (7) Поверните регулировочный диск для
- Поверните регулировочный диск для выбора WAIT TIME, а затем нажмите
- диск. ② Поверните регулировочный диск для выбора желаемого времени ожидания а затем нажмите диск. Время: 30SEC ↔ 1MIN ↔ 5MIN ↔ IOMINI
- 10МIN.

  § Поверните регулировочный диск для выбора REC TIME, а затем нажмите диск.

  ⑤ Поверните регулировочный диск для выбора желаемого времени записи, а затем нажмите диск.

  Время: 0.5SEC ←> 1SEC ←> 1.5SEC ←> 2SEC.
- 2SEC.

  ⑤ Поверните регулировочный диск для выбора ⊋ RETURN, а затем нажмите
- диск.
  (7) Поверните регулировочный диск для
- выбора ON, а затем нажмите диск.
  (8) Нажмите MENU для стирания дисплея меню. Идикатор записи с интервалами
- будет мигать. (9) Нажмите START/STOP для начала записи с интервалами. Индикатор записи с интервалами будет гореть.

76

2.8

3.4

5

#### To cancel the interval recording

 Set INT.REC to OFF in the menu system.
 Set the POWER switch to OFF, VTR (DCR-TRV900E) /PLAYER (DCR-TRV890E) o MEMORY

# To stop the interval recording momentarily and perform normal

momentarily and perform normal recording
Press START/STOP. You can perform the normal recording only once. To cancel the normal recording, press START/STOP again.

# Для отмены записи с интервалами • Установите INT.REC на OFF в системе

меню.
• Установите выключатель POWER в положение OFF, VTR(DCR-TRV900E)/ PLAYER (DCR-TRV890E) или MEMORY.

#### Для временной остановки записи с интервалами и выполнения

интервалами и выполнения нормальной записи Нажмите START/STOP. Вы можете выполнять нормальную запись только один-раз. Для отмены нормальной записи нажми START/STOP снова.

#### Interval recording

During the interval recording mode The INTERVAL indicator ap

- Notes on interval recording
   You cannot do interval recording with photo
- You cannot do interval recording with photo recording.
  You cannot perform interval recording in the MEMORY mode.
  There may be a discrepancy in recording time of up to +/-6 frames from the selected time.

#### Запись с интервалами

В режиме записи с интервалами Появляется индикатор INTERVAL

#### Примечания к записи с интервалами

- Вы не можете выполнить запись с интервалами вместе с записью фотографий.
   Вы не можете выполнить запись с
- ын в можете выполнить запись интервалами в режиме МЕМОRY.
   Может наблюдаться расхождение во времени записи до +/- 6 кадров от выбранного времени.

77

78

If you use a tape with cassette memory, you can superimpose the titles while recording or after superimpose the titles while recording of area recording. When you play back the tape, the title is displayed for five seconds from the point where you superimposed it.

Superimposing a title

You can select from eight preset titles and two original (CUSTOM TITLE) to superimpose over the picture.

#### Superimposing titles

- (1) Press TITLE to display the title menu.
  (2) Turn the control dial to select □, then press the dial.
- the dial.

  (3) Turn the control dial to select the desired title, then press the dial. The titles are displayed.

  (4) Turn the control dial to select the colour, size, or position, then press the dial.

  (5) Turn the control dial to select the desired
- item, then press the dial.

  (6) Repeat steps 4 and 5 until the title is arranged
- as desired.

  (7) Press the control dial again to complete the
- setting.
- (8) When you want to stop recording the title, press TITLE.

Если Вы используете ленту кассеты с памятью. Вы можете выполнять наложение титров во время записи или после выполнения записи. Когда Вы воспроизводите ленту, титр отображается в течение пяти секунд от точки его наложения Вы можете выбирать из восьми предварительно установленных титров и двух собственных титров (CUSTOM TITLE) для наложения на изображение.

Наложение титра

### Наложение титров

- (1) Нажмите ТІТЬЕ для отображения меню
- (1)Нажмите ППLЕ для отображения меню титров.
  (2)Поверните регулировочный диск для выбора Сл. а затем нажмите диск.
  (3)Поверните регулировочный диск для выбора титра, а затем нажмите диск. Титры будут отображены
  (4)Поверните регулировочный диск для выбора цвета, размера или положения, а затем нажмите диск.
  (5)Поверните регулировочный диск для выбора желаемой функции, а затем нажмите диск.
  (6)Повторяйте пункты 4 и 5 до тех пор, пока не отрегулируете титр по своему

- не отрегулируете титр по своему
- желанию.
  (7) Нажмите регулировочный диск снова для завершения установки.
  (8) Если Вы захотите прекратить запись титра, нажмите ТІТLE.

### 1.8 2 PRESET TITLE MELLOT HAPPY BIRTHDAY HAPPY HOLIDAYS CONGRATULATIONS WEET BABY 3 THE END 4-6 STYF HARGE -THE END-THE END 7 THE END 1

### Superimposing a title

#### To superimpose the title from beginning

After step 7, press START/STOP to start recording.

To superimpose the title while you are recording
After pressing START/STOP to start recording, start from step 1. In this case, beep or melody is not heard.

#### To use the custom title

When you want to use the custom title, select  $\Box$  in step 2.

#### Notes on superimposing a title

- Notes on superimposing a title

  If you have not given any custom title,

  "---..." appears on the display.

  The FADER function works while the title is
  displayed, however, the title does not fade.

  If you display the menu or title menu while
  superimposing a title, the title is not recorded
  while the menu or title menu is being displayed.

# Title colour changes as follows: WHITE $\longleftrightarrow$ YELLOW $\longleftrightarrow$ VIOLET $\longleftrightarrow$ RED $\longleftrightarrow$ CYAN $\longleftrightarrow$ GREEN $\longleftrightarrow$ BLUE

Title size changes as follows: SMALL ← LARGE

Title position changes as follows: When you select the title size "SMALL," you can choose 9 positions. When you select the title size "LARGE" you can choose 8 positions.

- Notes on the title
   Depending on size or position of the title, both of date and time or either of them is not
- displayed.

  If you input 13 characters or more for a LARGE title, the title is automatically reduced into a SMALL size after the position is set.

  When the title is displayed, LCD BRIGHT and microphone level indicators do not appear. displayed.

#### Наложение титра

Для наложения титра от начала После пункта 7 нажмите START/SROP для начала записи.

# Для наложения титра в процессе

После нажатия START/SROP для начала записи начните с пункта 1. В этом случае зуммерный сигнал или мелодия подаваться не будет.

### Для использования собственного

для использования сооственного титра Если Вы хотите использовать собственный титр, выберите ⊞ в пункте 2.

# Примечания к наложению титра • Если Вы не создадите никакого собственного титра , то на дисплее

- появляется появляется "----...". Функция FADER работает во время
- мункция н-кисн равотает во время отображения тигра, однако тигр плавно не вводится и не выводится.
   Если Вы отобразите дисллей меню или меню титров во время наложения тигра, то титр не будет записываться во время отображения дисплея меню или меню титров.

# Цвета титров изменяются следующим образом: WHITE $\longleftrightarrow$ YELLOW $\longleftrightarrow$ VIOLET $\longleftrightarrow$ RED $\longleftrightarrow$ CYAN $\longleftrightarrow$ GREEN $\longleftrightarrow$ BLUE

Размер титров изменяется следующим

### образом: SMALL ↔ LARGE

# жение титра изменяется следующим

образом:
Если Вы выбираете размер титра "SMALL",
то Вы можете выбирать одно из 9
положений. Когда Вы выбираете размер
титра "LARGE", Вы может выбирать из 8
положений.

- Примечания к титрам
  В зависимости от размера и положения титра, и дата и врем или только что-то одно из них не отображается.
  Если Вы ввели 13 знаков или более для размера титра LARGE, титр автоматически уменьшается до размера SMALL после установки положения.
  Когда титр будет стображен, индикаторы LCD ВЯ[ВНТ и уровня микрофона появляться не будут.

80

#### Superimposing a title

### Наложение титра

#### Erasing a title

- (1) Press MENU to display the menu.
  (2) Turn the control dial to select ., then press the dial.
- (3) Turn the control dial to select TITLEERASE,
- then press the dial.

  (4) Turn the control dial to select the title you
- want to erase, then press the dial.


  (5) Make sure the title is the one you want to erase, then press the control dial again.

  (6) Press MENU to erase the menu display.

1,6

# Стирание титра

- (1) Нажмите MENU для отображения меню. (2) Поверните регулировочный диск для выбора № д. а затем нажмите диск. (3) Поверните регулировочный риск для выбора ТПТ. ЕЕRASE. а затем нажмите диск. (4) Поверните регулировочный диск для выбора титра, который Вы хотите стереть, а затем нажмите диск. (5) Убедитесь, что это именно тот титр, который Вы хотите стереть, а затем снова нажмите регулировочный диск. (6) Нажмите метрилупоросиный диск. (6) Нажмите МЕNU для стирания дисплея меню.

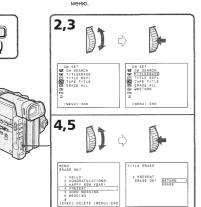

If you use a cassette tape set to prevent accidental erasure, you cannot erase the title. Slide the protect tab so that the red portion is not visible.

Примечание Если Вы используете кассетную ленту с установкой для предотвращения стирания Вы не сможете ствреть титр. Передвиньте предохранительный лепесток так, чтобы н было видно красной части.

### Making a custom title

If you use a tape with cassette memory, you can make up to two titles and store them in the camcorder. We recommend you to set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E) or eject the cassette

- FOWER SWIGHT ON TREELEN IN YOUR DISTRIBUTION OF THE PLAYER (DCR-TRY 900E) or eject the cassette before you begin.

  Your title can have up to 20 characters.

  (1) Press TITLE to display the title menu.

  (2) Turn the control dial to select \( \Psi\_t\) then press the dial.

  (3) Turn the control dial to select the first line (CUSTOM1) or second line (CUSTOM2), then press the dial.

  (4) Turn the control dial to select the column of the desired character, then press the dial.

  (5) Turn the control dial to select the desired character, then press the dial.

  (6) Repeat steps 4 and 5 until you finish the title.

  (7) To finish the titling work, turn the control dial to select [SET], then press the dial.


#### Создание собственного титра

Если Вы используете ленту кассеты с памятью, Вы можете создать два титра и сохранить их в видеокамере. Мы рекомендуем установить выключатель РОWER в положение VTR (CCR-TRV900E) или PLAYER (CCR-TRV90E) или вытолкнуть частелу перел цваналим

- или РLAYER (DCR-TRV890E) или вытолкну кассоту перед началом. Ваш титр может иметь до 20 энаков. (1) Нажмите ТПТЕ для отображения меню титр (2) Поверните регулировочный диск для выбора терем (2) на точеный диск для выбора первой строки (CUSTOM1) или второй строки (CUSTOM2), а затем нажмите диск. (3) Поверните регулировочный диск для выбора колонки с желаемым знаком, а затем нажмите диск. (5) Поверните регулировочный диск для выбора желаемого знака, а затем нажмите диск. (6) Поверните регулировочный диск для выбора желаемого знака, а затем нажмите диск. (6) Повторяйте пункты 4 и 5 до тех пор. по

- нажмите диск.
   Повторяйте пункты 4 и 5 до тех пор, пока не закончите титр.

   Тупа окончания работы по созданию титра поверчите регулировочный диск для выбора [SET], а затем нажмите диск.

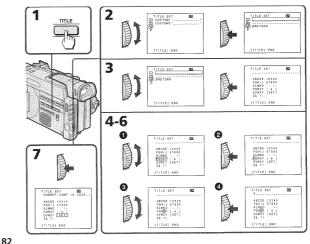

81

### Making a custom title

### To edit a title you have stored

In step 3, select CUSTOM1 or CUSTOM2, depending on which title you want to edit, then change the title.

If you take 5 minutes or longer to enter characters while a cassette is in the camcorder The power goes off automatically. Characters you have entered remain. Set the POWER switch to OFF once, then to CAMERA, then proceed from step 1.

To erase a character
In step 4, turn the control dial to select [ ← ] then
press the dial. The last character is erased. Repeat
this step until all characters are deleted.

#### Создание собственного титра

### Для редактирования запомненнного

В пункте 3 выберите CUSTOM1 или CUSTOM2 в зависимости от того, какой титр Вы хотите отредактировать, а затем измените титр.

Если проходит 5 минут или более при вводе знаков в то время, когда кассета находится в видеокамере Питание выключится а втоматически. Знаки, которые Вы ввели остаются в памяти. Установите выключатель POWER в положение О

### Для стирания знака

Дли стирализ элака
В пункте 4 поверните регулировочный диск
для выбора [ е ], а затем нажмите диск.
Последний знак будет стерт. Повторяйте
этот пункт до тех пор, пока все знаки не будут отменены.

### Labelling a cassette

# label a cassette. The label can consist of up to 10 inden a cassette. The label call rosts to dip to other characters and is stored in cassette memory. When you insert the labeled cassette and turn the power on, the label is displayed on the LCD screen, in the viewfinder, or on the TV screen. (1) Insert the cassette you want to label. (2) Set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV90E). (3) Press MENU to display the menu. (4) Turn the control dial to select (1), then press the dial. (5) Turn the control dial to select TAPE TITLE, then press the dial. (6) Turn the control dial to select the column of the desired character, then press the dial. (7) Turn the control dial to select the desired character, then press the dial. (8) Repeat steps 6 and 7 until you finish the label. (9) Turn the control dial to select [SET], then press the dial. characters and is stored in cassette memory. When you insert the labeled cassette and turn the

- press the dial.


# Обозначение кассеты

Если Вы использует ленту кассеты с памятью, Вы можете обозначить кассету. Обозначение может содержать до 10 знаков и быть сохраненным в памяти кассеты. Когда Вы вствите обозначенную кассету и включите питание, обозначение будет отображено на экране ЖКД, в видоискателе или на экране телевизора.

- экране жКц, в видоискателе или на экране телевизора.

  (1) Ставновите закосту, которую Вы хотите обозначить. 
  От выпожение VTR (ОСР. ТКУ900Е) или РLAYER (ОСР. ТКУ900Е) или РLAYER (ОСР. ТКУ900Е) или РLAYER (ОСР. ТКУ900Е) или РLAYER (ОСР. ТКУ90Е) или риск до на выбора об выбора и в выбора об вы об вы об выбора об выбора об выбора об вы об выбора об вы об выбора об вы об выбор

- колонки с желаемым знаком, а затем нажмите диск. (7) Поверните регулировочный диск для выбора желаемого знака, а затем нажмите диск. (8) Повторийте пункты 6 и 7 д отех пор, пока не закончите обозначеный диск для выбора [SET], а затем нажмите диск.

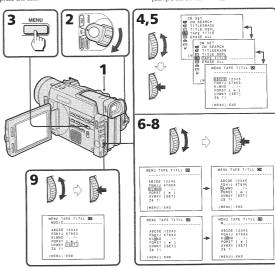

84

#### Labelling a cassette

### To erase a character

tep 6 turn the control dial to select [ ← ], then ss the dial. The last character is erased.

# To change the label you have made Insert the cassette to change the label, and operate in the same way to make a new label.

#### If the ੴ mark appears in step 5

The cassette memory is full. If you erase the title in the cassette, you can label it.

If you have superimposed titles in the cassette When the label is displayed, up to 4 titles also appear.

#### " indicator displayed on the LCD screen or in the viewfinder

The "----" indicates the number of characters you can select for the label. When the "----" indicator has fewer than 10 spaces, the cassette memory is full.

#### Note on the cassettes

If you use a cassette tape set to prevent accidental erasure, you cannot label it. Slide the protect tab so that the red portion is not visible

#### Обозначение кассеты

#### Для стирания знака

### Вы сделали

Вставьте кассету, обозначение которой Вы хотите изменить, и выполните такую же операцию, как и для создания нового

#### Если в пункте 5 появляется знак 🕅 Память кассеты заполнена. Если Вы сотрете

титр из памяти кассеты. Вы сможете обозначить ее.

#### Если Вы наложили титры на кассете При отображении обоз также 4 титра.

Примечание к индикатору "----", отображаемому на экране ЖКД или в видоискателе "---" указывает количество знаков, которые Вы можете выбрать для обозначения кассеты. Если индикатор "----" имеет менее 10 пустых мест, память кассеты заполнена.

Примечание к кассетам
Если Вы используете кассетную ленту с
установкой для предотвращения стирания,
Вы не сможете обозначить ее. Передвиньте
предохранительный лепесток так, чтобы не
было видно красной части.

#### Watching on a TV screen

Connect the camcorder to your TV or VCR to watch the playback picture on the TV screen. When monitoring the playback picture by connecting the camcorder to your TV, we recommend you to use mains for the power

# Connecting directly to a TV or VCR with Audio/Video input

Open the jack cover and connect the camcorder to the inputs on the TV by using the supplied A/V connecting cable. Set the TV/VCR selector on the TV to VCR.

Turn down the volume of the camcorder.

TV to VCK.

Turn down the volume of the camcorder.

To get higher quality pictures in DV format, connect the camcorder to your TV using the S video connecting cable (not supplied).

If you are going to connect the camcorder using the S video connecting cable (not supplied) [a], you do not need to connect the yellow (video) plug of the A/V connecting cable [b].


### Просмотр на экране телевизора

Подсоедините видеокамеру к Вашему КВМ или телевизору для просмотра воспроизводимого изображения на экране телевизора. При просмотре воспроизводимого изображения путем подсоединения видеокамеры к Вашему телевизору мы рекомендуем Вам использовать электрическую сеть в качестве истольника питания источника питания

### Подсоединение прямо к телевизору или КВМ с входными гнездами аудио/видео

Откройте крышку гнезда и подсоедините Откроите крышку гнезда и подсоедините видеокамеру к входам на телевизоре с использованием прилагаемого соединительного кабеля аудио/видео. Установите селектор TV/VCR на телевизоре в положение VCR.

положение VCR.
Почизьте громкость на видеокамере.
Для получения лучшего качества
изображений в цифовом видеоформате DV,
подсоедините видеокамеру к телевизору с
использованием соединительного кабеля Sвидео (не прилагается).
Если Вы подсоединнате видеокамеру с
использование кабеля Sвидео (не прилагается).
Если Вы подсоединате видеокамеру с
использование кабеля Sвидео (не
прилагается) [а]. Вам не нужно подсоединять
желтый (видео) разъем соединительного
кабеля аудио/видео [b].

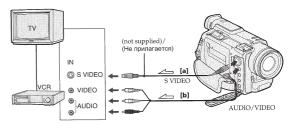

⇒: Signal flow/Передача сигнала

### 85

86

#### Watching on a TV screen

#### If your VCR or TV is a monaural type Connect only the white plug for audio on both the camcorder and the VCR or the TV. If you connect the white plug, the sound is L (left) signal. If you connect the red plug, the sound is R (right) signal.

### When you adjust the TV screen Set COLOUR BAR to ON in the menu system.

The colour bar is displayed on the TV screen

#### If your TV/VCR has a 21-pin adaptor (EUROCONNECTOR)

Use the supplied 21-pin adaptor

# Просмотр на экране телевизора

### Если Ваш КВМ или телевизор

ваш кый или телевизор
Подсоедините только белый разъем для
Подсоедините только белый разъем для
аудиосигналое и к видеокамере и к КВМ или
телевизору. Если Вы подсоедините белый
разъем, то звук будет передаваться сигналом
канала L (левого). Если Вы подсоедините
красный разъем, то звук будет передаваться
сигналом канала R (правого).

экране телевизора
Установите COLOUR BAR на ON в системе меню. Цветная полоса будет отображена на

# Если Ваш телевизор/КВМ имеет 21-штырьковый соединитель (EUROCONNECTOR) Используйте 21-штырьковый адаптер.

#### Using the AV cordless IR receiver — LASER LINK

Once you connect the AV cordless IR receiver (not supplied) having the **L**ASER LINK mark to your TV or VCR, you can easily view the picture on your TV. For details, refer to the operating instruction of the AV cordless IR receiver.

receiver.

LASER LINK is a system which transmits and receives a picture and sound between video equipment having the 
mark by using infrared rays.

- rays.

  To play back on a TV
  (1) Set the POWER switch on the camcorder to VTR (DCR-TRV900E) or PLAYER (DCR-TRV900E).

  (2) After connecting your TV and AV cordless IR receiver, set the POWER switch on the AV cordless IR receiver to ON.


  (3) Turn the TV on and set the TV/VCR selector on the TV to VCR.

  (4) Press LASER LINK. The lamp of the LASER LINK button lights up.

  (5) Press I→ on the camcorder to start playback.

  (6) Adjust the angle and direction of both the camcorder and AV cordless IR receiver.

### Когда Вы выполняете регулировку на

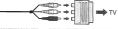

# Использование беспроводного ИК аудиовидеоприемника — LASER LINK

Если Вы подсоедините беспроводной ИК аудиовидеогриемник (не прилагается), имеющий знак & LASER LINK, к Вашему тепевизору или КВМ, то Вы сможете легко просматривать изображение на экране Вашего телевизора. Смотрите подробности в руководстве по эксплуатации беспроводного ИК аудиовидеоприемника.

LASER LINK является системой приема и передачи изображения и звука между видеоаппаратурой, имеющей знак & , с помощью инфракрасых лучей.

- помощью инфракрасных лучей.

  Для воспроизведения на телевизоре
  (1) Установите выключатель РОЖЕН на
  видеокамере в положение VTR (DCRTRY900E) или PLAYER (DCR-TRV890E).
  (2) После соединения Вашего телевизора и
  беспроводного ИК аудиовидеоприемника,
  установите выключатель РОЖЕН на
  беспроводном ИК аудиовидеоприемнике в
  положение ОN.
  3 Включите телевизор и установите
  селектор ТУИСН на телевизоре в
  положение VCR.
  (4) Нажмите LASER LINK. Лампочка кнопки
  LASER LINK будет мигать.
  (5) Нажмите I— на видеокамере для начала
  воспроизведения.
  (6) Огрегулируйте угол и направление
  видеокамеры и беспроводного ИК
  аудиовидеоприемника.

#### Watching on a TV screen

#### To cancel the LASER LINK function ss LASER LINK

- If you use a Sony TV

   You can turn on the TV automatically when you press LASER LINK or I→. To do so, set AUTO TV ON to ON in the menu system and turn the TV's main switch on, then do either of the following:

   Point the LASER LINK emitter towards the TV's remote sensor and press LASER LINK.

   Turn on the LASER LINK button and press I→.
- You can switch the video input of the TV automatically to the one which the AV cordless IR receiver is connected. To do so, set AUTO TV ON to ON and TV INPUT to the same video input (1, 2, 3) in the menu system. With some models, however, the picture and sound may be disconnected momentarily when the video input is switched.

   The above features may not work with some TV models.

#### Notes on LASER LINK

- When LASER LINK is activated (the LASER LINK button is lit), the camcorder consumes power. Press and turn off the LASER LINK outton when it is not needed.
- When the conversion lens (not supplied) is installed, the transmission of infrared rays may be blocked.

### You can use LASER LINK in the following

- The POWER switch is set to VTR (DCR-
- TRV900E) or PLAYER (DCR-TRV890E).

  The POWER switch is set to CAMERA without a cassette inside (For demonstration at stores).

# Просмотр на экране телевизора

### Для отмены функции LASER LINK Нажмите LASER LINK.

- Если Вы используете телевизор Sony

  Вы можете включать телевизор
  автоматически при нажатии кнопки LASER
  LINK или D. Для выполнения этого
  установите АUTO TV ON на ОN в системе
  меню и включите главный выключатель
  телевизора, а затем сделайте одно из двух:

  Нацельте передатчик LASER LINK на
  дистанционный датчик телевизора и
  нажмите LASER LINK.

  Включите кнопку LASER LINK и нажмите

  ...
- Вы можете переключать видеоеход телевизора автоматически на тот, к которому подсоединен беспроводный ИК аудиовидеоприемник. Для выполнения этотого установите АUTО ТV ОЛ на ОЛ и ТV INPUT на тот же самый видеовход (1, 2, 3) в системе меню. Однако, для некоторых моделей изображжение и звук могут. моделей изображжение и звук могут отключаться на мгновение, когда
- переключается видеовход.
   Вышеописанная функция может не работать с некоторыми моделями телевизоров.

### Примечания к LASER LINK

- Примечания к LASER LINK
  Когда функция LASER LINK активизирована
  (лампочка кнопки LASER LINK горит),
  видеокамера потребляет питание. Нажмите
  и выключите кнопку LASER LINK, если
  данная функция не требуется.
  Если на объктив установлена
  преобразующая насадка (не прилагается),
  прохождение инфракрасных лучей может
  быть перекрыто.

### Вы можете использовать LASER LINK в

- Вы можете использовать LASER LINK в слеюующих ситуациях:

   Выключатель РОWER установлен в положение VTR (DCR-TRV900E) или PLAYER (DCR-TRV900E).

   Выключател РОWER в положение CAMERA без вставки кассеты (для демонстрации при сохранении).

1-21

#### Viewing the picture with the picture effect


You can play back recorded images with the picture effect. The available picture effects NEG. ART, SEPIA, B&W and SOLARIZE.

During playback, press PICTURE EFFECT. See page 53 for details on the picture effect.

#### Просмотр изображения с эффектами изображений

Вы можете воспроизвести записанные изображения с эффектами изображений. Имеются в наличии следующие эффекты изображения: NEG.ART, SEPIA, B&W и SOLARIZE.

во время воспроизведения налмите PICTURE EFFECT. См. стр. 53 для получения подробностей относительно эффектов изображений.

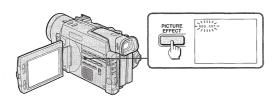

**To return to normal mode**Press PICTURE EFFECT so that the indicator disappears.

If you turn the power off or stop playing back. The picture effect is automatically cancelled.

The picture you apply picture effects to The picture with the picture effect is not output through the 1 DV IN/OUT jack (DCR-TRV900E) or 1 DV OUT (DCR-TRV890E) jack. Для возврата к нормальному режиму Нажмите PICTURE EFFECT так, чтобы индикатор исчез

Если Вы выключите питание или

сти ры выключите питание или остановите воспроизведение Эффект изображения будет автоматически отменен.

Изображение которое Вы воспроизводите с эффектом изображения Изображения не изображения не поступает на выход через гнездо і DV IN/OUT (DCR-TRV900E) или гнездо і DV OUT (DCR-TRV890E).

### Viewing the picture with the digital effect

You can play back the recorded images with the

- You can play back the reconsect among digital effect.
  The available digital effects are STILL, FLASH, LUMI. and TRAIL.

  (1) During playback, press DIGITAL EFFECT.

  (2) Turn the control dial to select the desired digital effect mode.


  (3) Press the control dial. The digital effect indicator lights up and the bars appear. The still picture is stored in memory in the STILL or LUMI. mode.

  (4) Turn the control dial to adjust the effects. See page 55 for details on the digital effect.

#### Просмотр изображения с цифровыми эффектами

Вы можете воспроизводить записанные изображения с цифровыми эффектами. Имеются в наличии следующие цифровые эффекты: STILL, FLASH, LUMI, и TRAIL. (1) Во время воспроизведения нажмите DIGITAL EFFECT.

- (2) Поверните регулировчный диск для выбора желаемого режима цифрового
- эффекта. (3) Нажмите регулировочный диск. Индикатор цифрового эффекта будет гореть и появляется шкала полос. Неподвижно изображение будет запомнено в памяти в режиме STILL или LUMI.
- (4) Поверните регулировочный диск для регулировки эффектов.
  См. стр. 55 для получения подробностей относительно цифровых эффектов.

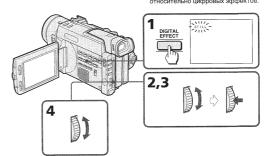

To return to normal mode
Press DIGITAL EFFECT so that the indicator

If you turn the power off or stop playing back The digital effect is automatically cancelled

The picture you apply digital effects to
The picture with the digital effect is not output
through the 1 DV IN/OUT jack (DCR-TRV900E)
or 1 DV OUT (DCR-TRV890E) jack.

Для возврата к нормальному режиму Нажмите DIGITAL EFFECT так, чтобы индикатор исчез.

Если Вы выключите питание или остановите воспроизведение Цифровой эффект будет автоматически отменен.

Изображение которое Вы воспроизводите с цифровым эффектом Изображение с цифровым эффектом не поступает на выход через гнездо і, DV IN/OUT (DCR-TRV900E) или гнездо і, DV OUT (DCR-TRV980E).

# Searching the boundaries of recorded tape with date - date search

You can search for the boundaries of recorded tape with date – Date Search function. To search the beginning of the specific date and play back from the point, there are two ways:

• Using cassette memory, you can select the date displayed on the LCD screen.

• Without using cassette memory.

You can only operate with the Remote Commander.

#### Searching for the date by using cassette memory

You can use this function only when playing back a tape with cassette memory (p. 148).

#### Поиск границ на записанной ленте с помощью даты – поиск даты

Вы можете выполнять поиск границ на записанной ленте с помощью даты - Функция поиска даты. Для поиска начала определенной даты и воспроизведения от того места существуют два способа: Используя кассету с памятью, Вы можете выбрать дату, отображаемую на экране ЖКД или в видоискателе. • Без использования памяти кассеты.

Вы можете выполнить операцию только с помощью пульта дистанционного управления

#### Поиск даты с использованием памяти кассеты

Вы можете использовать данную функцию только при воспроизведении ленты кассеты с памятью (стр. 148).

# Searching the boundaries of recorded tape with date – date search

(1) Set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E).
(2) Press MENU to display the menu.
(3) Turn the control dial to select CM SEARCH in (3) then press the dial.
(4) Turn the control dial to select ON, then press the dial.
(5) Press SEARCH MODE on the Remote Commander repeatedly, until the date search indicator ampears.

indicator appears.

(6) Press ◄ or ▶ to select the date for playback.

Playback starts from the beginning of the selected date automatically


# Поиск границ на записанной ленте с помощью даты – поиск даты

(1) Установите выключатель POWER на видеокамере в положение VTR (DCR-TRV900E) или PLAYER (DCR-TRV890E). (2) Нажмите MENU для отображения меню

(3) Поверните регулировочный диск для выбора СМ SEARCH в (11), а затем нажмите диск.

(4) Поверните регулировочный диск для выбора ОN, а затем нажмите диск.
(5) Повторно нажимайте SEARCH MODE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска

(6) Нажмите І◄◄ или ▶►І для выбора даты, желаемой для воспроизведения. Воспроизведение начинается от начала выбранной даты автоматически.

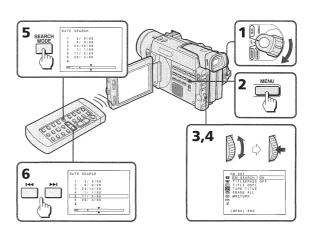

89

90

# Searching the boundaries of recorded tape with date – date search

Поиск границ на записанной ленте с помощью даты – поиск даты

To stop searching Press ■.

- The interval of the boundaries between the The interval of the boundaries between the
  dates needs to be more than two minutes. The
  camcorder may not search if the beginning of
  the recorded date is too close to the next one.
   The black cursor on the screen indicates the
  date that was selected previously.
   If a tape has a blank portion in the beginning or
  between recorded portions, the date search
  function will not work correctly.
   Up to six date data can be stored in a cassette
  memory.

# Searching for the date without using cassette memory

If you use a tape without cassette memory, skip

Для остановки поиска Нажмите **■**.

#### Примечания

- Интервал между границами дат должен быть больше двух минут. Видеокамера может не найти начало записанной даты, если оно слишком близко к следующей записанной дате.
- записаннои дате. 

  "Черный куросор на экране указывает дату, 
  выбранную в прошлый раз. 
  Если лента имеет незаписанный участок в 
  начале или между записанным участками, 
  поиск даты может работать неправильно. 
  До шести данных о датах может быть 
  сохранено в памяти кассеты.

#### Поиск даты без использования памяти кассеты

Если Вы используете ленту кассеты без ти, пропустите пункты 3 и 4

# Searching the boundaries of recorded tape with date – date search

ленте с помощью даты – поиск даты

- (1) Set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E).
  (2) Press MENU to display the menu.
  (3) Turn the control dial to select CM SEARCH in [M], then press the dial.
  (4) Turn the control dial to select OFF, then press the dial.
- the dial.
  (5) Press SEARCH MODE on the Remote
- Commander repeatedly, until the date search indicator appears.


  (6) When the current position is [b], press ◄ to
- , .... the cancerd position is [D], press ◄ to search towards [c]. Each time you press ► or the previous or next date.
- Playback starts automatically when date changed.

Поиск границ на записанной

- (1) Установите выключатель РОЖЕЯ на видеокамере в положение VTR (DCR-TRV990E). ИЛИ РЕЛУЕМ (DCR-TRV990E) или РЕЛУЕМ (DCR-TRV990E). В Нажимте МЕНО Для отображения меню. (3) Поверните регулировочный диск для выбора СМ SEARCH в [30], а затем нажмите диск. (4) Поверните регулировочный диск для выбора ОFF, а затем нажмите диск. (5) Повторно нажимайте SEARCH МОDE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска даты.
- пор, пока не полевится индикатор поиска даты.

  (6) Если текущим положением является [b], то нажмите І ◄ для поиска в направлении [а] или нажмите ▶ для поиска в направлении [а] или нажмите Г. Каждый раз при нажатии І ◄ или ▶ видеокамера осуществляет поиск предыдущей или следующей даты.

  Когда дата изменяется, воспроизведение начинается автоматически.

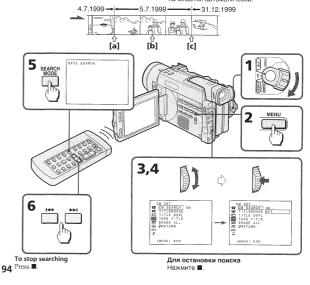

# Searching the boundaries of recorded tape with title – title search

You can search for the boundaries of recorded tape with title – Title Search function. If you use a tape with cassette memory, you can select the title displayed on the LCD screen.

You can only operate with the Remote

#### Searching for the title by using cassette memory

You can use this function only when playing back a tape with cassette memory (p. 148)

### Поиск границ на записанной ленте с помощью титра - поиск титра

Вы можете выполнять поиск границ на вы можете выполнять тойск границ на записанной ленте с помощью титра - Функция поиска титра. Если Вы используете ленту кассеты с памятью, Вы можете выбрать титр, отображаемый на экране ЖКД.

Вы можете выполнить операцию только с помощью пульта дистанционного управле

# Поиск титра с использованием памяти кассеты

Вы можете использовать данную функцию только при воспроизведении ленты кассеты с памятью (стр. 148).

# Searching the boundaries of recorded tape with title – title search

Commander repeatedly, until the title search

indicator appears.

(6) Press ◄ or ▶ to select the title for

### Поиск границ на записанной ленте с помощью титра – поиск титра

(1) Set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E).
(2) Press MENU to display the menu.
(3) Turn the control dial to select CM SEARCH in [m], then press the dial.
(4) Turn the control dial to select ON, then press the dial.

the dial.

(5) Press SEARCH MODE on the Remote

playback.
Playback starts from the scene of the selected title automatically.


(1) Установите выключатель POWER на видеокамере в положение VTR (DCR-TRV900E) или PLAYER (DCR-TRV890E). (2) Нажмите МЕNU для отображения меню.

(3) Поверните регулировочный диск для выбора CM SEARCH в (2), а затем

нажмите диск. (4) Поверните регулировочный диск для

выбора ON, а затем нажмите диск. (5) Повторно нажимайте SEARCH MODE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска

(о)пажмите Нем или и для высора титр фрагмента, желаемого для воспроизведения. Воспроизведение начнется с фрагмента с выбранным титром автоматически.

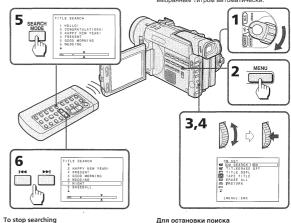

To stop searching

 You cannot superimpose or search a title, if you use a cassette tape without cassette memory.
 The camcorder may not search, if a tape has a blank portion in the between of the recorded portions. 96

- Примечании
  Вы не можете наложить или найти титр,
  если Вы используете ленту кассеты без
  памяти.
  Видеокамера может не выполнить поиск,
  если лента имеет незаписанный участок
  между записанными участками.

93

# Searching for a photo – photo search/photo

You can search for the recorded still picture – Photo Search function. There are two modes in Photo Search:

• Using casseste memory, you can select the recorded date which is displayed on the LCD

- screen.
   Without using cassette memory

You can also search for still pictures one after another and display each picture for five seconds automatically – Photo Scan function. Even if your tape has no cassette memory, you can use the Photo Scan function.

You can only operate with the Remote Commander.

### Поиск фотографий – фотопоиск*і* фотосканирование

- Вы можете выполнить поиск записанного неподвижного изображения Функция фотопоиска. Существует два режима выполнения фотопоиска: Используя кассету с памятыю, Вы можете выбрать записанную дату, которая отображается на экране ЖКД или в видоискателе. Без использования памяти кассеты.

Вы также можете выполнять последовательный поиск неподвижных изображений одного за другим и отображать каждое изображение в течение пяти секунд автоматически - Функция фотосканирования. Даже если Ваша кассета не имеет памяти, Вы можета метопизарать, фикции, Вы можете использовать функцию фотосканирования. Вы можете управлять только с помощью

пульта дистанционного управления.

Searching for a photo
- photo search/photo scan

# Поиск фотографий – фотопоиск/ фотосканирование

#### Searching for a photo by using cassette memory – photo search

You can use this function only when playing Tou can use this function only when playing back a tape with cassette memory (p. 148).

(1) Set the POWER switch to VTR (DCR-TRV890E) or PLAYER (DCR-TRV890E).

(2) Press MENU to display the menu.

(3) Turn the control dial to select CM SEARCH in (many control dial to select CM). The control dial to select ON, then press the dial.

- the dial (5) Press SEARCH MODE on the Remo-
- Commander repeatedly, until the photo search indicator appears.

  (6) Press

playback.
Playback starts from the photo of the selected date automatically.

Поиск фотографий с

использованием памяти кассеты - фотопоиск

- Вы можете использовать данную функцию только при воспроизведении ленты кассеты с памятью (стр. 148).

  (1) Установите выключатель РОМЕЯ на видеокамере в положение VTR (DCR-ТНУ900Е) или РLАYER (DCR-TRV890E).


  (2) Нажимте МЕNU для отображения меню.

  (3) Поверните регулировочный диск для выбора СМ SEARCH в СМ, за атем нажимте диск.

  (4) Поверните регулировочный диск для выбора СМ, а за этем нажимте диск.

  Выбора ОМ, а за этем нажимте диск.

  Пульте дистанционного управления до тех пор. пока не появится индикатор фотопоиска.
- желаемой для воспроизведения. Воспроизведения выбранной даты автоматически.

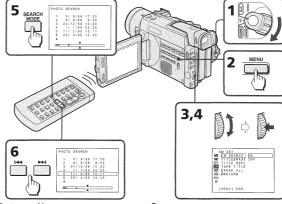

To stop searching

When you play back a tape which has a blank portion in the between of the recorded portions, the photo search function may not work correctly.

Для остано Нажмите **■**. овки поиска

Примечание Если Вы воспроизводите ленту, которая имеет незаписанный участок в начале или между записанными частями, функция фотопоиска может работать неправильно.

# Searching for a photo – photo search/photo scan

### Searching for a photo without using cassette memory - photo

If you use a tape without cassette memory, skip

- steps 3 and 4.

  (1) Set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV90E).
- (2) Press MENU to display the menu.
  (3) Turn the control dial to select CM SEARCH in
- (4) Turn the control dial to select OFF, then press
- the dial (5) Press SEARCH MODE on the Remote
- (5) Press SEARCH MUDE on the kemote Commander repeatedly, until the photo search indicator appears.
  (6) Press | 4€ or ▶1 to select the photo for playback. Each time you press | 4€ or ▶1, the camcorder searches for the previous or next seem.
  Playback starts from the photo automatically.


Поиск фотографий – фотопоиск/ фотосканирование

#### Поиск фотографий без использования памяти кассеты фотопоиск

- Если Вы молользуете ленту кассеты без памяти, пропустите пункты 3 и 4. ПУ станомете выключатель РОМЕR на видеокамере в положение VTR (DCR ТКЧ900Б) или РLAУЕ (DCR ТКЧ900Б) или РLAУЕ (DCR ТКЧ900Б) или РLAУЕ (DCR ТКЧ900Б) или РLAУЕ (DCR ТКЧ90Б) или РСАР (DCR ТКЧ

- (3) повериите регулировочный диск для выбора СМ SEARCH в [32], а затем нажмите диск.

  (4) Поверичте регулировочный диск для выбора ОРЕ, а затем нажмите диск.
  (5) Повторно нажммайте SEARCH МОDE на пульте дистанционного управления до тех пор, пока не появится индикатор фотографии, желаемой для выбора фотографии, желаемой для воспроизведения. Каждый раз при нажатии Н4— или ►>1 видеокамера осуществляет поиск предыдущей или следующей сцены. Воспроизведение начинается с выбранной фотографии автоматически.

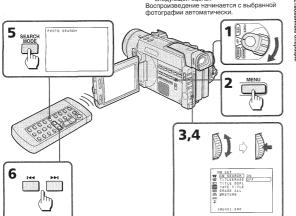

Для остановки поиска Нажмите ■.

97

Searching for a photo
- photo search/photo scan

#### Scanning photo - photo scan

- You can use this function whether the tape has cassette memory or not.

  (1) Set the POWER switch to VTR (DCR-TRY900E) or PLAYER (DCR-TRY900E).

  (2) Press SEARCH MODE on the Remote Commander repeatedly until the photo scan indicator displayed on the LCD screen.

  (3) Press I◄ or ▶1.

  Each photo is displayed for about 5 seconds automatically.

# Сканирование фотографий - фотосканирование


Поиск фотографий – фотопоиск/ фотосканирование

# Вы можете использовать данную функцию независимо от того, имеет ли кассета память

- или нет.

  (1) Установите выключатель РОWER на видеокамере в положение VTR (DCR-TRV900E) или PLAYER (DCR-TRV900E) или PLAYER (DCR-TRV990E).

  (2) Повторно нажимайте SEARCH МОDE на пульте дистанционного управления до тех пор, пока индикатор фотосканирования не поредите и а загламе ЖКП
- появится на экране ЖКД. (3) Нажмите І ч или ► . Каждая фотография будет отображаться приблизительно в течение 5 секунд автоматически.

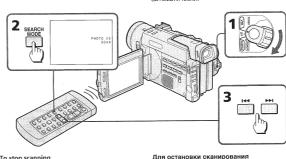

To stop scanning

Нажмите ■.

100

#### Returning to a preregistered position

Using the Remote Commander, you can easily go back to the desired point on a tape after

- playback.
  (1) During playback, press ZERO SET MEMORY at the point you later want to locate. The counter shows "0:00:00" and "ZERO SET MEMORY" appears on the LCD screen or in the viewfinder.
- the viewfinder.

  (2) Press when you want to stop playback.

  (3) Press when you want to stop playback.

  (3) Press to rewind or press ▶ to fast-forward the tape to the counter's zero point. The tape stops automatically when the counter reaches approximately zero. "ZERO SET MEMORY" disappears and the time code appears.


appears.
(4) Press ▷

#### Возврат к предварительно зарегистрированной позиции

Используя пульт дистанционного управления Вы можете легко вернуться к желаемой точке ленты после воспроизведения.

- (1) Во время воспроизведения нажмите ZERO SET MEMORY в месте, которое Вы хотите потом обнаружить. Счетчик будет показывать "0:00:00" и "ZERO SET MEMORY" появится на экране ЖКД или в видоискателе.
- (2) Нажмите когда Вы захотите остановить
- воспроизведение. З Нажмите ◀ для ускоренной перемотки ленты назад или ▶ для ускоренной перемотки ленты вперед до нулевой точки счетчика. Лента остановится счетчика. лента остановится автоматически, когда счетчик дойде приблизительно до нуля. "ZERO SET MEMORY" исчезнет и появится времи

код. **(4)** Нажмите ⊳

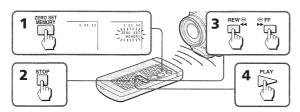

#### Note on the tape counter

ay be a discrepancy of several seconds from the time code.

#### Notes on ZERO SET MEMORY

- Press ZERO SET MEMORY again before step 3
- Press ZERO SEL MEMORY to cancel the memory.
   ZERO SET MEMORY may not function when there is a blank portion between pictures on a
- tape.

   ZERO SET MEMORY functions in Standby

#### Примечание к счетчику ленты

Может быть расхожде секунд с временным кодом.

#### Примечания к ZERO SET MEMORY

- Снова нажмите ZERO SET MEMORY перед пунктом 3 для стирания памяти.
   Функция ZERO SET MEMORY может не
- работать, если на ленте именезаписанные части между и
- пезаписанные части между изображень
   Функция ZERO SET MEMORY работает также и в режиме готовности

#### Displaying recording data – data code function

You can display recording data (date/tin various settings when recorded) on the LCD screen or in the viewfinder during playback (Data Code). The Data Code is also displayed on the TV.

Press DATA CODE during playback.



телевизора.

To select the items to be displayed Set DATA CODE in the menu system, and select the following items:
When DATE/CAM is selected: date → various settings (SteadyShot, PROGRAM AE, shutter speed, white balance, aperture value, gain) → no indicator:

indicator. When DATE is selected: date → no indicator

# When you record a picture with adjusting the exposure to the darkest manually

"CLOSE" appears at the position of the iris indicator on the LCD screen or in the viewfinder.

#### When bars (-- -- ) appear

- A blank portion of the tape is being played back.
- The tape was recorded by a camcorder without having date and time set
- The tape is unreadable due to tape damage or

102

The pictures taken with the memory card slot is not recorded with the camera data.

Отображение данных

Вы можете отобразить данные записи (датаул

время или различные установки при записи) на экране ЖКД или в видоискателе во время

воспроизведения (код данных). Код данных

также может быть отображен на экране

записи - Функция

кода данных

Для выбора элементов отображения Установите DATA CODE в системе меню и выберите спедующие установки: При выборе DATE/CAM: дата → различные установки (устойчивая союма, PROGRAM AE, скорость затвора. балань белого, значение апертуры, усиление) -- нет

индикации. При выборе DATE: дата → нет индикации.

### Когда Вы записываете изображение с отрегулированной экспозицией вручную для самых темных условий "CLOSE" появится в положении индикатора

ирисовой диафрагмы на экране ЖКД или в

### Если появлются черточки (-- -- --) • Воспроизводится незаписанная часть

- Лента была записана на видеокамере без
- летта оълга записана на видеокамере без установки даты и времени.
   Лента не может быть воспроизведена из-за повреждения ленты или помех.

примечание Изображения, снятые с помощью гнезда для платы расширения памяти, не записываются с данными видеокамеры.

101

### **Editing onto another** tape

You can create your own video programme by editing with any other **DY** DV, \*\*\*DV mini DV, B 8 mm, **HiB** HiB, **MIS** VHS, **SMIS** S-VHS, **MIS** VHSC, **SMIS** S-VHSC or B Betamax VCR that has audio/video inputs. You can edit with little detections of the state of the sta deterioration of picture and sound quality when using the i.LINK cable (DV connecting cable).

### Before editing

Connect the camcorder to the VCR using the supplied A/V connecting cable or the VMC-IL4415/IL4435/2DV/4DV i. LINK cable (DV connecting cable) (not supplied).

# Using the A/V connecting cable [a] or S video connecting cable (not supplied) [b]

Signal flow/Передача сигнала

Set the input selector on the VCR to LINE.

#### Монтаж на другую ленту

Вы можете создать Вашу собственную видеопрограмму путем монтажа с помо другого КВМ цифрового видеоформата IX

DV, ™IX mini DV, II 8 мм, HII HI8, WS VHS,


SWES S-VHS, WSSE VHSC, SWISE S-VHSC или

IB Веtатах, который имеет входы аудио/ видео. Вы можете смонтировать новую ленту о небольшим ухудшением качества изображения и звучания при использовани кабеля i.LINK (соединительного цифрового

#### Перед монтажем

Подсоедините видеокамеру к КВМ, используя прилагаемый соденительный кабель аудио/видео или кабель WMC-IL4415/ IL4435/20/4DV I.INK (соединительный цифровой видеокабель) (не прилагается).

### Использование соединительного кабеля аудио/видео [а] или соединительного кабеля S-видео (не прилагается) [b] Установите селектор входных сигналов на КВМ в положение LINE.

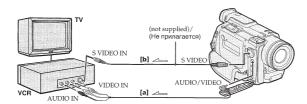

# **Editing onto another tape**

### Notes on editing when using the A/V

- connecting cable
   Press DATA CODE, SEARCH MODE on the
- Press DATA CODE, SEARCH MODE on the Remote Commander, or DISPLAY to turn off the display indicators. Otherwise, the indicators will be recorded on the tape.

  If your TV or VCR is a monaural type, connect the yellow plug of the A/V connecting cable for video to the TV or VCR. Connect only the white or red plug for audio to the TV or VCR. If you connect the white plug, the sound is I, (left) signal. If you connect the red plug, the sound is R (right) signal.

  You can edit precisely by connecting a LANC cable to this camcorder and other video equipment having fine synchro-editing function, using this camcorder as a player.

### Using the i.LINK cable (DV connecting

cable)
Simply connect the VMC-IL4415/IL4435/2DV/
4DV i.LINK cable (DV connecting cable) (not supplied) to \$\text{L}\$ DV IN/OUT (DCR-TRY900E) or \$\text{L}\$ DV OUT (DCR-TRY900E) or \$\text{L}\$ DV OUT (DCR-TRY90B) and to DV IN of the DV products. With digital-to-digital connection, video and audio signals are transmitted in digital form for high-quality editing.

# Монтаж на другую ленту

### Примечания к монтажу при использовании


- соединительного кабеля аудио/видео
   Нажмите DATA CODE, SEARCH MODE на пульте дистанционного управления или DISPLAY для выключения индикаторов
- пульте дистанционного управления или DISPLAY для выключения индикаторов дисплея. В противном случае индикаторы будут записаны на ленту.

   Если Ваш телевизор или КВМ монофонического типа Подсоедините желтый разъем соединительного кабеля аудио/видео для видеоситналов к телевизору или КВМ. Подсоедините только белый или красный разъем для аудиоситналов к телевизору или КВМ. Если Вы подсоедините белый разъем, то звук будет передаваться сигналом канала L (певого). Если Вы подсоедините красный разъем, то звук будет предаваться сигналом канала R (правого).

   Вы можете выполнить точный монтаж путем подсоединения кабеля LANC к данной видеокамере и к другой видеоаппаратуре, имеющей функцию точного синкронного монтажа, используя данную видеокамеру в качестве видеоплейера.

#### Использование кабеля i.LINK (соединительного цифрового видеокабеля)

видеокабеля)
Просто подключите кабель VMC-IL.4415/
IL.4435/2DV/4DV i.LINK (соединительный цифровой видеокабель) (не припагается) к гнезду § DV iNOUT (DCR-TRV980E) или к гнезду § DV OUT (DCR-TRV980E) и к гнезду DV IN цифровой видеокапаратуры. При цифровом-к-цифровому соединении видеоситнылы и аудиоситналы передаются в цифровой форме для обеспечения высококачественного монтажа.

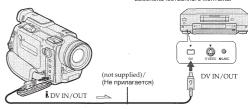

: Signal flow/Передача сигнала

104

#### **Editing onto another tape**

- Notes on editing when using the i.LINK cable (DV connecting cable)

   You can record picture, sound and system data at the same time on the DV products by using the ii.LINK cable (DV connecting cable) only.

   You cannot edit the titles, display indicator or the contents of cassette memory.

   If you record playback pause picture with the DV IN/OUT (DCR-TRV900E) or ii. DV OUT (DCR-TRV900E) back, the recorded picture becomes rough. And when you play back the picture using the other video equipment, the picture using the other video equipment, the picture may jitler.

   You can also use the camcorder as a recorder with this connection. In this case "DV IN" indicator appears on the screen. (DCR-TRV900E only)

  When you use the camcorder as a recorder, the colour balance may be incorrect on the monitor screen. But this is not recorded on the tape.

To perform a more precise editing Use DV synchro-editing function. (see page 106)

#### Starting editing

- (1) Insert a blank tape (or a tape you want to record over) into the VCR, and insert your recorded tape into the camcorder.

  (2) Play back the recorded tape on the camcorder until you locate the point where you want to start editing, then press II to set the camcorder in playback pause mode.

  (3) On the VCR, locate the recording start point and set the VCR in recording pause mode.

  (4) Press II on the camcorder and VCR simultaneously to start editing.

#### To edit more scenes

Repeat steps 2 to 4

To stop editing
Press 
on both the camcorder and the VCR.

### Монтаж на другую ленту

#### Примечания к монтажу при испольлзовании кабеля i.LINK ительного цифрового видеокабеля)

- видеокабеля)

   Вы можете подсоединить только один КВМ.
   Вы можете записывать изображение, звук и системные данные одновременно на цифровую видеоаппаратуру только при использовании кабеля i.LINK (соединительного цифрового видеокабеля).
   Вы не можете выполнить монтаж титров, индикаторов дисплея или содержимого памяти кассеты.
- памяти кассеты с Если Вы записываете изображение в режиме паузы воспроизведения через гнездо. В DV NUOUT (DCR-TRY900E) или гнездо. В DV OUT (DCR-TRY90E) или гнездо. В DV OUT (DCR-TRY990E) или записанное изображение будет нечетким. А если Вы воспроизводите изображение с использованием другой видеоаппаратуры, изображение может дрожать. Вы также можете использовать видеокамеру в качестве видеомагнитофона с помощью данного соединения. В таком случае индикатор "DV IN" появится на экране. (Только DCR-TRY900E) «Когда Вы используете видеокамеру качестве видеомагнитофона, цветовой баланс может быть неправильным на экране монитора. Но это не записывается на ленту. • Если Вы записываете изображение в
- на ленту.

Для выполнения более точного монтажа Используйте функцию цифрового синхронного видеомонтажа (см. стр. 106).

#### Начните монтаж

- (1) Вставьте чистую ленту (или ленту, которую Вы хотите перезаписать) в КВМ и вставьте Вашу записанную ленту в видеокамеру. (2) Воспроизводите записанную ленту в идеокамере до тех пор, пока Вы не обнаружите точку, откуда Вы хотите начать монтаж, а затем нажимте И для установки видеокамеры на режим паузы воспроизведения воспроизведения. (3) Найдите на КВМ точку начала записи и
- (3) паидите на КВМ на режим паузы записи установите КВМ на режим паузы записи (4) Одновременно нажмите **II** на видеока-мере и на КВМ для начала монтажа.

### Для монтажа других сцен Повторите пункты со 2 по 4.

Для остановки монтажа Нажмите □ и на видеокамер

ne и на KRM

105

# Editing partially on a mini DV tape – DV synchro-editing

By simply selecting the scenes to edit, you can duplicate the desired portion on a tape, using other equipment connected with an i.I.INK cable (DV connecting cable). The scenes can be selected by frame. Since the camcorder exchanges digital signals, you can edit with little audio and video deteriorstice.

You cannot duplicate titles, display indicators, or

- You cannot duplicate titles, display indicato the contents of cassette memory. The connection is the same as on page 104. (19)Insert a recorded tape into the cancorder insert a blank tape into the DV product. (2)Set the POWER switch of the cancorder VTR.OCR-TR.V900E) or PLAYER (DCR-TR.V900E) or PLAYER (DCR-TR.V900E).
- TRV890E).
- TRV890E).

  (3) Set the input selector to DV input on the DV product. If the DV product is another DV camcorder, set its POWER switch to VTR.

  (4) Press MENU to display the menu.

  (5) Turn the control dial to select , then press the dial
- the dial.
- (6) Turn the control dial to select DV EDITING.
- (6)Turn the control dial to select DV EDITING, then press the dial.
  (7)Using the tape transport buttons, locate the point where you want to start editing, then press II to set the camcorder in playback pause mode.
  (8)Press the control dial or MARK (DCR-TRY900E only) on the Remote Commander to set DV EDITING IN.
  (9)Using the tape transport buttons, locate the point where you want to end editing, then
- point where you want to end editing, then press II to set the camcorder in playback pause mode.

  [10]Press the control dial or MARK (DCR-TDY/000F colv.) or the Percent Computed to the part of the Percent Computed to the P
- TRV900E only) on the Remote Commander to set DV EDITING OUT. The editing process starts. When the process ends, the camcorder and the DV product automatically set to pause mode

# Частичный монтаж на ле-нту mini DV – синхронный цифровой видеомонтаж

Простым выбором сцен для монтажа Вы можете сдублировать желаемую часть ленты с использованием другой аппаратуры, подсоединенной с помощью кабеля i.LINK (соединительного цифрового видеокабеля). Сцены могут быть выбраны по кадрым Поскольку видеокамера воспроизводит цифровые сигналы, Вы можете выполнить монтаж с небольшим ухудшением аумисокиталыя в можето выполнить монтаж с небольшим ухудшением аудиосигналов и видеосигналов. Вы не можете дублировать титры отображаемые индикаторы или содержимое амяти кассеты оединения будут такими же, как и на стр. 104.


- намит и касые вы Соединения будут такими же, как и на стр. 104. (1)Вставьте записанную ленту в видеокамеру и вставьте чистую ленту в цифровоую видеоаппаратуру. (2)Установите выключатель РОWЕR на видеокамере в положение VTR (DCR- ТРКУ90Б) или РLAVER (DCR- TRV890E). (3) Установите селектор на входной цифровой видеоситнал на цифровой видеоаппаратура является другой цифровой видеокамерой, установите выісключатель РОWER в положение VTR. (4) Нажимте МЕNU для отображения меню. (5) Поверните регулировочный диск для выбора ЕПЕ, а затем нажимте диск. (6) Поверните регулировочный диск для выбора DV EDITING, а затем нажмите диск.

- диск.
  (7)Используя кнопки перемещения ленты, найдите точку, где Вы хотите начать монтаж, а затем нажмите !! для установки видеокамеры на режим паузы воспроизведения.
- (8) Нажмите регулировочный диск или MARK (только DCR-TRV900E) на пульте дистанционного управления для установки DV EDITING IN.
- (9) Используя кнопки перемещения ленты найдите точку, где Вы хотите закончить монтаж, а затем нажмите **II** для установки видеокамеры на режим паузы воспроизведения.
- (10)Нажмите регулировочный диск или MARK (только DCR-TRV900E) на пульте дистанционного управления для установки DV EDITING OUT. Начинается процесс монтажа. Когда процесс монтажа закончится, видеокамера и цифровая видеоаппаратура автоматически будут установлены на режим паузы.

106

# Editing partially on a mini DV tape – DV synchro-editing

Частичный монтаж на ленту mini DV – синхронный цифровой видеомонтаж

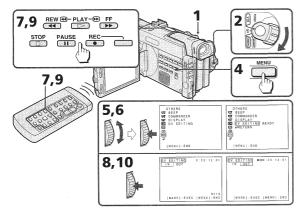

- If you use other than Sony DV equipment, the synchronization may become less precise or the unit may not function properly. You cannot set DV EDITING IN or OUT on a
- blank portion of the tape

#### Errors in duplicating

If you connect this camcorder to Sony equipment with DV jack, the range of errors is within +/-5frames. The range may become wider in the following conditions.

• The interval between DV EDITING IN and

- OUT is less than five seconds.

   DV EDITING IN is set at the beginning of the
- DV synchro-editing is performed repeatedly

If you do not make connections with i.LINK cable (DV connecting cable)
The screen shows NOT READY, and you cannot select DV EDITING.

- Примечания

  Если Вы не используете цифровую

  видеоаппаратуру Sony, синхронизация

  может стать менее точной или аппарат

  может не работать надлежащим образом.

  Вы не можете установить DV EDITING IN

  или OUT для чистого участка ленты.

Ошибки при дублировании
Если Вы подсоедините данную видеокаме к видеоаппаратуре Sony с гнездом DV, диапазон ошибок будет в пределах +/- 5 кадров. Диапазон может быть больше при

- следующих условиях.
   Интервал между DV EDITING IN и OUT
- будет меньше пяти секунд.
   Точка DV EDITING IN установлена в начале
- Цифровой синхронный выдиомонтаж выполняется повторно

#### Если Вы не выполняете соедине использованием кабеля i.LINK (соединительного цифрового идеокабеля)

на экране будет показано NOT READY и Вы не сможете выбрать DV EDITING.

# Recording from a VCR or TV (DCR-TRV900E only)

You can record a tape from another VCR or a TV programme from a TV that has audio/video outputs. Connect the camcorder to the VCR or TV

(1) Set the POWER switch to VTR and set DISPLAY to LCD in the menu system.

(2) Press ● REC and the button on the right together at the point where you want to start recording.

In recording and the recording pause mode, S VIDEO and AUDIO/VIDEO jacks automatically

work as input jacks.


If your VCR or TV has an S video jack, connect using the S video cable (not supplied) [a] to obtain a high quality picture.

## Запись с КВМ или телевизора (только DCR-TRV900<u>E)</u>

Вы можете записать ленту с другого КВМ или одиниство негу с другого кол телевизионную программу с телевизора, который имеет выходы аудио/видео. Подсоедините видеокамеру к КВМ или телевизору. (1) Установите выключатель POWER в

ПУстановите выключатель РОWER в положение VTR и функцию DISPLAY на LCD в системе меню.

(2) Вместе нажмите кнопку ● REC и кнопку справа от нее в точке, где Вы хотите начать запись. В режиме записи и паузы записи гнезда S-VIDEO и VIDEO/AUDIO автоматически работают в качестве входных гнезд. Если Ваш КВМ или телевизор имеют гнездо S-видео, выполните соединение с использованием кабеля S-видео (не прилагается) [а] для получения изображения высокого качества.

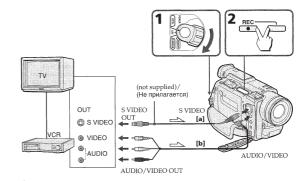

# Recording from a VCR or TV (DCR-TRV900E only)

If your TV or VCR is a monaural type, connect the yellow plug of the A/V connecting cable for video to the TV or VCR. Connect only the white or red plug for audio to the TV or VCR. If you connect the white plug, the sound is L (left) signal. If you connect the red plug, the sound is R (right) signal.

If you are going to connect the camcorder using the S video cable (not supplied) [a], you do not need to connect the yellow (video) plug of the A/V connecting cable [b].

- Notes If the S video plug is not provided on your TV or VCR, do not connect the S video cable (not supplied) to the camcorder. Pictures will not
- appear.

  The dual sound cannot be recorded in this
- camcorder.

   If you fast-forward or slow-playback on the other equipment, the image being recorded may turn black and white. When recording from other equipment, be sure to play back the original tape at normal speed.

#### To stop recording

# Запись с KBM или телевизора (только DCR-TRV900E)

Если Ваш телевизор или КВМ Если Ваш телевизор или КВМ монофонического типа Подсоедините желтый разъем соединительного кабеля аудио/видео для видеоситналов к телевизору или КВМ. Подсоедините только белый или красный разъем для аудиоситналов к телевизору или КВМ. Если Вы подсоедините белый разъем, то звук будет передаваться сигналом канала (певого). Если Вы подсоедините красный разъем, то звук будет передаваться сигналом канала R (правого).

Если Вы подосединяете видеокамеру с использованием кабеля S-видео (не прилагается) [а]. Вам не нужно подключать желтый (видео) разъем соединительного кабеля аудио/видео [b].

- Примечания
   Если разъем S-видео не предусмотрен на Вашем телевизоре или КВМ, не подсоединяйте кабель S-видео (не прилагается) к видеокамере. Изображение появляться не будет
- Двойное звучание не может быть записано на данной видеокамере.
- Если Вы выполняете ускоренную перемотку или замедленное воспроизведение на другой аппаратуре, записанное изображение может стать черно-белым. изооражение может стать терло-челым. При записи с другой аппаратуры обязательно выполняйте воспроизведение исходной ленты на нормальной скорости.

Для остановки записи

# Replacing recording on a tape – insert editing (DCR-TRV900E only)

You can insert a new scene from a VCR onto You can insert a new scene from a VCR onto your originally recorded tape by specifying starting and ending points. After inserting, the previous picture and sound will be erased. Connection is the same as on page 103 or 104. In recording and recording pause mode £ DV IN/OUT jack automatically works as input jack. You can only operate with the Remote Commander.

- You can only operate with the Kemote Commander.

  (1)Set the POWER switch to VTR.

  (2)On the VCR, locate the start point to be inserted and set it to playback pause mode.

  (3)On the camcorder, press ▶ to set it to playback mode, and then locate the point where the insert should end by pressing ◀ or ▶. Then press II to set it to playback pause mode.

  (4)Press ZERO SET MEMORY on the Remote Commander. The ZERO SET MEMORY indicator flashes and the end point of the insert is stored in memory.

  (5)On the camcorder, locate the point where the insert should begin by pressing ◀ ◀, then
- insert should begin by pressing ◀◀, then press REC to set it to recording pause
- mode. (6)Press on the camcorder and the VCR simultaneously to start insert editing. The insert editing stops automatically near the counter's zero point. Press  $\square$  to set the camcorder to stop mode.

## Замещение записи на ленте - монтаж в режиме вставки (только DCR-TRV900E)

Вы можете вставить новую сцену с КВМ на Вашу ранее записанную ленту путем указания начальной и конечной точек. После выполнения монтажа в режиме вставки ранее выполнения монтажа в режиме вставки ранее записанные изображение и звук будут стерты. Соединение выполняется так же, как и на стр. 103 или 104. В режиме записи и паузы записи гнездо. В ТОУ ПУОИТ автоматически работает в качестве входного гнезда. Вы можете управлять только с помощью пульта дистанциюнного управления. (1)Установите выключатель РОЖЕВ положение УТГЯ. (2)Найдите на КВМ начальную точку для вставки и установите его на режим паузы воспроизведения. (3)Нажимте ⊏ на видеокамере для установки ее на режим воспроизведения, установки ее на режим воспроизведения, установки ее на режим воспроизведения,

- установки ее на режим воспроизведения, а затем найдите точку, где вставка а затем найдите точку, где вставка должна быть закончена путем нажатия 

  ◄ или ▶ Затем нажмите II для 
  установки ее на режим паузы 
  воспроизводения.

  (4) Нажмите ZERO SET MEMORY на пульте 
  дистанционного управления. Индикатор 
  ZERO SET MEMORY будет мигать и конечная точке вставки запоминается в памяти.

  (5) Найдите на видеокамере точку, где 
  вставка должна начаться путем нажатия 

  ◄ а затем нажмите € REC для 
  установки ее на режум паузы записи.

- ¬а затем нажмите В Не Для установки ее на режим паузы записи.

  (в) Одновременно нажмите 

  на КВМ для начала монтажа в режиме вставки. Монтаж в режиме вставки останавливается автоматически возле нулевой точки счетчика. Нажмите 

  □ для установки видеокамеры на режим остановки видеокамеры на режим остановки.

  В записати на прежим остановки.

  на записати на видеокамера 

  на видеокамеры на режим остановки.

  на записати 

  на видеокамеры на режим остановки.

  на записати 


  на видеокамеры на режим остановки.

  на записати 

  на видеокамеры 

  на записати 

  на записати

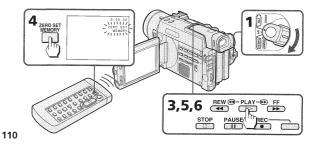

109

# Replacing recording on a tape – insert editing (DCR-TRV900E only)

#### To change the end point

Commander so that the ZERO SET MEMORY indicator disappears and begin from step 3

### Note on the inserted picture

The picture may be distorted at the end of the inserted portion when it is played back.

# Замещение записи на ленте – монтаж в режиме вставки (только DCR-TRV900E)

### Для изменения конечной точки Нажмите ZERO SET MEMORY на пульте

дистанционного управления так, чтобы индикатор ZERO SET MEMORY исчез и

Примечание к вставленному изображению Изображение может быть искажено в конце вставленной части во время

### **Audio dubbing (DCR-**TRV900E only)

You can record an audio sound to add to the You can record an audio sound to add to the original sound on a tape by connecting audio equipment or a microphone. If you connect the audio equipment, you can add sound to your recorded tape by specifying starting and ending points. The original sound will not be erased. You can only operate with the Remote Commander.

# Connecting the microphone with the MIC jack

#### Наложение звукового сопровождения (только DCR-TRV900E)

Вы можете записывать звуковое сопровождение для добавления к исходному звуку на ленте путем подсоединения аудиоаппаратуры или микрофона. Если Вы аудиоаппаратуры или информатуру, Вы можете наложить звук на Вашу записанную ленту путем указания начальной и конечной точки Исходный звук не будет стерт. Вы можете выполнить операцию только с помощью пульта дистанционного управления

#### Подсоединение микрофона с помощью гнезда MIC




: Signal flow/Передача сигнала

# Connecting the microphone with the intelligent accessory

ne (not supplied)/ Микрофон (не прилагается)

# Примечание Вы можете проверить записанные изображение и звук, соединив гнездо AUDIO/ VIDEO с телевизором. Записываемый звук не не воспроизводится через громкоговоритель. Контролируйте звук путем использования телевизора или головных телефонов.

ние микрофона с помощью башмака для подсоединения ого оборудования

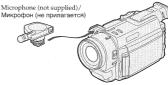

You can check the recorded picture and sound by connecting the AUDIO/VIDEO jack to a TV. The recorded sound is not output from a speaker. Check the sound by using the TV or headphones.


112

# ıdio dubbing (DCR-TRV900E

### Наложение звукового сопровождения (только DCR-TRV900E)

### **Dubbing with the AUDIO/VIDEO**

#### Перезапись с использованием гнезда AUDIO/VIDEO

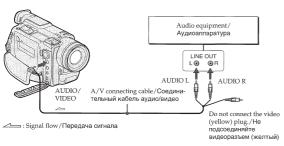

#### Note

The picture is not output from the AUDIO/ VIDBO jack. Check the recorded picture on the LCD screen or in the viewfinder, as well as check the recorded sound by using a speaker or

#### Dubbing with the built-in microphones

No connection is necessary

#### Примечание

Изображение не поступает на выход через гнездо AUDIO/VIDEO. Контролируйте записанное изображение на экране ЖКД или в видоискателе и контролируйте записанный звук с использованием громкоговорителя или головных телефонов

#### Перезапись с использованием встроенного микрофона

Никакие соединения не требуются

### Audio dubbing (DCR-TRV900E

# Adding an audio sound on a recorded tape

(1) Insert your recorded tape into the camcorder. (2) Set the POWER switch to VTR.

- (2) Set the POWER switch to VIR.

  (3) On the camcorder, locate the point where the recording should begin by pressing ◀ or

  ▶. Then press Ⅱ to set it to playback pause
- (4) Press AUDIO DUB on the Remote
- Commander . (5) Press on the Remote Commander and at the same time start playing back the audio you want to record.
- (6) Press on the Remote Commander at the point where you want to stop recording

### To play back the new recorded sound

Adjust the balance between the original sou (ST1) and the new sound (ST2) by selecting AUDIO MIX in the menu system.

### Наложение звукового сопровождения (только DCR-TRV900E)

### вождения на записанную ленту

- (1) Вставьте Вашу записанную ленту в
- (1) оставлено дашу записалную лент у в видеокамеру.

  (2) Установите выключатель РОWER в положение VTR.

  (3) Найдите на видеокамере точку, где запись должна начаться путем нажатия ◀ чили ▶ъ. Затем нажмите Ⅱ для установки видеокамеры на режим паузы
- воспроизведения. (4) Нажмите AUDIO DUB на пульте
- дистанционного управления.
  (5) Нажмите II на пульте дистанционного управления и одновременно начните воспроизводить аудиоисточник, который, Вы хотите записать.
- (6) Нажмите 
  на пульте дистанционного управления в точке, где Вы захоите остановить запись.

### Для воспроизведения нового

записанного звука
Отрегулируйте баланс между исходным
звуком (ST1) и новым звуком (ST2), выбрав
установку AUDIO MIX в системе меню.



Five minutes after when you disconnect the power source or remove the battery pack, the setting of AUDIO MIX returns to the original sound (ST1) only. The factory setting is original sound only

To end audio more precisely First, press ZERO SET MEMORY on the Remote Commander at the point where you want to stop recording. Then start recording from step 3, and the recording stops automatically near the counter's zero point.

Через пять минут после отсоединения источника питания или снятия батарейного блока, установка AUDIO MIX возвращается к исходному звучанию (ST1). Заводская установка является только исходным звучанием.

#### Для более точного окончания наложения аудиосигнала

Сперва нажмите ZERO SET MEMORY на пульте дистанционного управления в точке, где Вы хотите закончить запись. Затем начните запись с пункта 3, и запись остановится автоматически вблизи нулевой

### 113

# Audio dubbing (DCR-TRV900E

If you make all the connections
The audio input to be recorded will take precedence over others in the following o
• MIC (PLUG IN POWER) jack
• Intelligent accessory shoe
• AUDIO/VIDEO jack
• Built-in microphone

If an i.LINK cable (DV connecting cable) is connected to this unit
You cannot add a sound to a recorded tape.

If you disconnect or connect a cable to the camcorder during recording The recording may stop.

- Notes on audio dubbing

   A new sound cannot be recorded on a tape already recorded in the 16-bit mode (32 kHz, 44.1 kHz or 48 kHz)

   When an external microphone is not connected, the recording will be made through the built-in microphone of the camcorder.

   A new sound cannot be recorded on a tape already recorded in the LP mode.

   If you add a new sound on a tape recorded with another camcorder (including DCR-IRV900E), the sound quality may become worse.
- You cannot add audio with the BDV IN/OUT

### Наложение звукового сопровождения (только DCR-TRV900E)

#### Если Вы выполнили все соединения

Если Вы выполнили все соединения Записываемый входной аудиоситнал будет иметь приоритет над другими в следующей последовательности. - Гнеаро Міс (РЦUG IN POWER) - Башмак для подсоединения вспомотательного оборудования - Гнеаро AUDIO/VIDEO - Встроенный микрофон

# Если кабель i.LINK (соединительный цифровой видеокабель) подсоединен к данному аппарату Вы не сможете наложить звук на записанную

Если Вы отсоедините или подсоедините кабель к видеокамере во время записи Запись может остановиться

### Примечания к наложению звукового

- Новый звук не может быть записан на ленту, предварительно записанную в 16-битовом режиме (32 кГц, 44.1 кГц или 48

- битовом режиме (32 кГц, 44.1 кГц или 48 кГц).

   Когда внешний микрофон не подключен, загись будет выполняться через встроенный микрофон видеокамеры.

   Новый звук не может быть записан на ленте, предварительно записанной в режиме LP.

   Если Вы наложите звук на ленту, записанную на другой видеокамере (включая видеокамеру DCR-TRV900E), то качество звука может ухудшиться.

  Вы не можете наложить заумоситнал чере:
- Вы не можете наложить аудиосигнал через гнездо , DV IN/OUT.

# Memory card slot operations Using the memory card slot-introduction

This camcorder is equipped with a memory card slot that conforms to ATA specification of PC Card standard.

Card standard.
You can record still images to floppy disks using You can record still images to noppy dissis using the supplied floppy disk adapter, memory sticks (not supplied) or PC cards (not supplied). You can exchange image data with other equipment such as personal computers etc., using floppy disks, memory sticks or PC cards.

#### CAUTION!

Do not carry around this camcorder with the floppy disk adapter connected.

114

Image
Record the still image on floppy disk with the
floppy disk adapter. Play back the picture with
your PC.

### Операции с использованием гнезда для Использование гнезда для платы

расширения памяти - введение

Данная видеокамера оснащена гнездом для платы расширения памяти, которое соответствует спецификации по ассоциации АТА стандарта для плат персонального компьютера (РС сагd). Вы можете записывать неподвижные изображения на флоппи-диски с исполызованием прилагаемого адаттера флоппи-диски, в соков памяти (не прилагается) или плат персонального компьютера (не прилагается). Вы можете обмениваться данными с другой аппаратурой, как например, персональные компьютеры и т.д., с использованием флоппи-дисков, блоков памяти или плат персонального компьютера.

#### ПРЕДОСТЕРЕЖЕНИЕ!

Не носите данную видеокамеру с подсоединенным адаптером флоппи-диска

#### Изображение

Записывайте неподвижное изображение на флоппи-диск с помощью адаптера флоппи-диска. Воспроизводите изображение с использованием Вашего персонального



#### Instruction of functions

instruction are that of the floppy disk adapter unless specified otherwise.

Sony recommends memory sticks
Sony recommends using the MSAKIT-PC4A
memory stick/PC card kit (not supplied). The
memory stick is a brand new type of recording
medium that records images and sounds as
digital data and operates just like a PC card. For
detailed instructions, refer to the operating
instruction supplied with memory stick/PC card
kit.



объяснения, относятся к адаптеру флоппи диска, если ничего другого не указано.

# Рекомендуемые фирмой Sony блоки памяти

Рекомендуемые фирмом Sony блоки памы sony рекомендует использовать набор бло-ко памяти/плат персонального компьютера MSAKIT-PC4 (не прилагается). Блок памяти (петору stick) является новейшим типом носителя записывают изображение и звук в качестве цифровых данных и функционнурт го-но тах же, как и плата персонального компьютера. Зб киструкция по эксплуатации, прилагаемой набору блоков памяти/плат персонального компьютера.

PC card adapter / Адаптер платы персонального компьютера

Memory stick/Блок памяти

# Using the memory card slot – introduction

### The types of PC cards you can use

Use TYPE II PC cards that conform to ATA specification of PC card standard. Format the PC card with this camcorder before use. Once you format the PC card, you can store data of up to 64 MB in it

### Compatible PC cards HITACHI

36008A3. HB286015A3, HB286030A3, HB286045A3, HB286060A3 HB286045A3, HB286060A3
SANDISK
SDP3B-2-101-00, SDP3B-4-101-00,
SDP3B-6-101-00, SDP3B-8-101-00,
SDP3B-10-101-00, SDP3B-20-101-00,
SDP3B-40-101-00
SDP3B-40-101-00
Be sure to refer to the instruction manual supplied with the PC card.

### Notes on the supplied floppy disk adapter

The floppy disk adapter is designed for use only with this camcorder. The adapter is not warranted to function properly if used with other

# Floppy disks you can use with this unit • Size: 3.5 inch

- Size: 3.5 inch
   Type: 2HD
   Capacity: 1.44 MB
   Format: M5-DOS format (512 bytes x 18 sector)
  When using a 3.5 inch, 2HD floppy disk other than that described above, format it using the camcorder or a personal computer.

On file format (JPEG)
This unit compresses image data in JPEG format (extension .jpg) and simultaneously records thumbnail data (extension .411) for the index screen. The index screen data is varies only on this unit.

Data file names of image MVC00001.jpg: if saved on a PC card MVC-0001.jpg: if saved on a floppy disk

Использование гнезда для платы расширения памяти – введение

Типы плат персонального компьютера, которые Вы можете использовать Используйте платы персонального компьютера ТҮРЕ II, которые соответствуют спецификации по ассоциации АТА стандарта для плат персонального компьютера. Отформатируйте плату персонального компьютера использованием. Когда Вы отформатируете плату персонального компьютера, Вы можете сохранять 64 Мбайт данных на ней.

## Совместимые платы персонального **компьютера** НІТАСНІ

НІТАСН
НВ286008А3, НВ286015А3, НВ286030А3,
НВ286048А3, НВ286060А3
SANDISK
SDP3B-2-101-00, SDP3B-4-101-00, SDP3B-6-101-00, SDP3B-8-101-101, SDP3B-8-101-101, SDP3B-8-101-101, SDP3B-8-101-101, SDP3B-8-101-101, SDP3B-8-101

### Примечание к прилагаемому адаптеру флоппи-диска

Адаптер флоппи-диска предназначен для использования только с данной видеокамерой. Надлежащее функциониро вание адаптера не гарантируется, если он используется с другой аппаратурой.

# Флоппи-диски, которые Вы можете использовать с данным аппаратом • Размер: 3,5 дюйма • Тип: 2HD • Емкость: 1,44 Мбайт

- Формат: Формат MS-DOS (512 байт x 18 секторов)

лов) пользовании 3.5-дюймвого флоппи диска 2HD, отличного от вышеописанного, отформатируйте его с использованием видео-камеры или персонального компьютера.

Относительно формата файла (JPEG) Данный аппарат сжимает данные в формат JPEG (расширение jpg) и одновоременно записывает кратике данные (расширение .411) для индексного экрана. Данные индексного экрана варьируются только на данном аппарате.

Имена файлов данных изображ MVC00001.jpg: при сохранении на плате персонального компьютера персонального компьюте MVC-0001.jpg:при сохран ении на флоппи-диск

# Using the memory card slot - introduction

# Be sure to place the adapter on a stable

surface
Placing the floppy disk adapter on an unstable o slanting surface or holding the adapter by hand during operation may result not only in malfunction of the unit but also in injury.

### Do not shake or jar the adapte

Malfunctions, inability to record images or inability to use floppy disks may occur. There may be also image and memory data breakdown, age or loss

### Do not get the adapter wet

Do not get the adapter wet The floppy disk adapter does not function when it is wet. Be careful not to get the adapter wet. When moving the adapter from one atmospheric condition to another, moisture condensation may occur inside or outside the unit. If this occurs, follow the instructions on page 161 and remove any condensation before use.

# Notes on the floppy disk

- Notes on the Tioppy disk
  To protect data recorded on the floppy disks,
  note the following:

   Avoid storing floppy disks near magnets or
  magnetic fields such as those of speakers and
  televisions, permanent erasure of disk data may
- Avoid storing floppy disks in areas subject to direct sunlight or sources of high temperature, such as heating devices. Floppy disk warping or damage may result, making the disk surface by opening the disk surface becomes blemished, data may be unreadable.

- becomes blemished, data may be unreadable.

  Keep liquids away from the floppy disk.

  Be sure to use a floppy disk case to ensure protection of important data.

  Use only a 2HD type disk head cleaner when cleaning the disk drive.

  Even when you use a 3.5 inch 2HD floppy disk, image data may not be recorded and/or displayed depending on the using environment. In this case, use another brand of disk.

### Использование гнезда для платы расширения памяти – введение

Обязательно расположите адаптер на устойчивой поверхности Расположение адаптера флоппи-диска на неустойчивой или наклонной поверхности или удерживание адаптера в руках во время работы может привести не только к неисп-равности аппарата, но также и к получению травмы.

# Не трясите и не допускайте дрожан

адаптера
Может произойти неисправность,
невозможность записи изображений или
невозможность использования флоппидиска. Также может случится выход из
строя, повреждение или утеря данных
изображения и памяти.

# Не допускайте, чтобы адаптер стал мокрым

Не допускайте, чтобы адаптер стал мокрым Адаптер фолопи-диска не будет функционировать, если он станет мокрым. Будьте согорожны, чтобы не намочить адаптер. При перемещении адаптера из одних атмосферных условий в другие внутри или снаружи аппарата может произойти конденсация влаги. Если это случится следуйте инструкциям на стр. 161 и устраните всю конденсацию перед использованием.

# 

- примечания к филоти-диску Для защиты данных, записанных на флоппи-дисках, примите во внимание следующее: Избегайте хранения флоппи-дисков возле магнитов или магнитных полей, как
- магнитов или магнитных полей, как например, воэле акустических систем или тепевизора, так как в результате может произойти полное стирание данных диска. Избегайт хранения флоппи-дисков в местах, подверженных воздействию прямого солнечного света или источников высокой температуры, как например, обогревающие устройства. В результате этого может произойти искумаление или повреждение флоппи-диска, делая диск непригодным к использованию.
- использованию. Избегайте соприкосновения с поверхностью Избегайте соприкосновения с поверхностью диска путем открывания затворной пластины диска. Если поверхность диска станет запятнаной данные могут быть несчитываемыми.

- наной данные могут быть несчитываемыми. Арежите жиркости подалыше от фролпитулска. Обявательно используйте футляр флоппи-диска для обеспечения защитыважных данных. Используйте только очиститель головок диска типа 2НО при очистке дисковода. Даже когда Вы используете 3,5-доймовый флоппи-диск 2НО, данные изображения могут не записываться и/или не отображаться в зависимости от условий использования. В таком случае используйте другую марку диска.

Использование гнезда для

платы расширения памяти – введение

флоппи-диска или платы персонального компьютера

С верхней стороной соединителя

118

# Using the memory card slot - introduction

# About the power source

When you use the memory card slot, getting the power from a mains is recommended, using the AC power adaptor.

# About the remaining battery indicato

About the remaining battery indicator This camcorder displays remaining recording/ playback time on the LCD screen or in the viewfinder. This function may not work properly in certain operating conditions. Especially when using the memory card slot, the correct remaining time may not be indicated due to increased power consumption. This is not a malfunction.

Power supply
When using a video light (not supplied) or
similar equipment connected to the intelligent
accessory shoe of the camcorder, recording an
image to a floppy disk or PC card may result in a
temporary power shortage in the accessory shoe,
causing the video light to go out. This does not
affect other functions.

# When using a battery case

when using a battery case (not supplied) such as the EBP-L7, you cannot perform operations that require the floppy disk adapter. The screen displays "FOR "InfoLITHIUM" BATTERY ONLY."

## Note on playback compatibility

This comcorder is not guaranteed to properly play back images shot with other equipment. images shot with this camcorder are not guaranteed to be played back properly other equipment.

Do not insert your finger or an object into the memory card slot.

# Использование гнезда для платы расширения памяти – введение

# Относительно источника питания

Когда Вы используете гнездо для платы расширения памяти, рекомендуется подавать питание от электрической сети с использованием сетевого адаптера переменного тока

Относительно индикатора оставшегося заряда батарейного блока Видеокамера отображает оставшееся время записи/воспроизведения на экране ЖКД или в видоискателе. Данная функция может не работать надлежащим образом при определенных условиях эксплуатации. Особенно при использовании гнезда для паты дасцитемия ражети правильное платы расширения памяти правильное оставшееся время может не указываться вследствие увеличения потребляемой мощности. Это не является неисправностью.

## Электропитание

При использовании видеолампы (не прилагается) или подобного оборудования, подосединенного к башмаку для подсоединенного к башмаку для подсоединения вспомогательного обордуювания видеокамеры, запись изображения на флоппи-диск или плату персонального компьютера может вызвать временную некватку электропитания, подаваемого на башмак для воспомогталенього оборудования, что приведет к выключению видеолампы. Это не влияет на другие функции. При использовании видеопампы (не

# При использовании батарейного футляра При использовании батарейного футляра (не прилагается), как например, EBP-L7, Вы не можете выполнять операции, для которых

мужете вапитер флоппи-диска. На экра будет отображено "FOR "InfoLITHIUM" ВАТТЕРУ ONLY".

### Примечание к возможности воспроизведения

воспроизведения Данная видеокамера не гарантирует надлежащее воспроизведение изображений, снятых на другой аппаратуре. Надлежащее воспроизведение снятых данной видеокамерой изображений не гарантируется с использованием другой аппаратуры.

# ПРЕДОСТЕРЕЖЕНИЕ

Не вставляйте Ваш палец или другой предмет в гнездо для платы расширения

# Using the memory card slot – introduction

Connecting the floppy disk adapter or PC card

With the upper side of the connector facing the LCD panel, insert the connector until it clicks.



# To eject the floppy disk adapter or PC card Slide the MEMORY RELEASE lever in the

direction of the arrow as illustrated below

# Для выталкивания адаптера флоппи-диска или платы персонального компьютера

Передвиньте рычаг MEMORY RELEASE в направлении стрелки, как указано на рисунке ниже.



When the access lamp is flashing
Never shake or strike the unit. Do not turn the
power off , eject a PC card/floppy disk adapter
or remove the battery pack. Otherwise, the image
data breakdown may occur.

Когда мигает лампочка доступа Никогда не трясите и не ударяйте аппарат. Не выключайте питание, не вытапливайте плату персонального компьютера/адаптер флоппи-диска и не снимайте батарейный блок. В противном случае может произойти сбой данных.

119

# Using the memory card slot – introduction

# Использование гнезда для платы расширения памяти – введение

Вставляйте флоппи-диск до тех пор. пока он

не защелкнется. Перед вставкой проверьте, что лепесток предохранения записи установлен в позволяющее запись положение для записи

Для выталкивания флоппи-диска

Нажмите кнопку выталкивания флоппи

Вставка флоппи-диска

подвижного изображения

## Inserting a floppy disk

Insert a floppy disk until it clicks.
Before inserting, check that the write protect tab
is set to the recordable position for recording a
still picture.



To eject the floppy disk Press the floppy dis



Floppy disk eject button/ Кнопка выталкивания флоппи-диска

(6)

# About the PC card and memory slot connector of the floppy disk adapter To protect the recorded data, follow the instructions below.

- Do not repair, make alterations, or dismantle

When the PC card does not come out Remove the battery before ejecting the PC card.


The front edge of the memory slot connector Do not touch the front edge of the memory slo connector with your hand.

### Оносительно платы персонального компьютера и соединителя гнезда для платы расширения памяти адаптера и-диска

Для защиты записанных данных, следуйте

- данных данных, следуите нижеприведенным инструкциям.
   Не ремонтируйте, не делайте изменения и не разбирайте их.
- Избегайте использования их под прямым Избегайте использования их под прямым солнечным светом, в чрезвычайно жарких или холодных условиях, во влажных или пыльных местах.
   Не пролейте жидкость на них.
   Не сгибайте и не ударяйте их.

Если плата персонального компьютера не выталкивается
Удалите батарейный блок перед выталкиванием платы персонального компьютера.

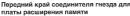

Передний край соединителя гнезда для платы расширения памяти
Не трогайте передний край соединителя гнезда для платы расширения памяти Вашими руками.

Front edge of the memory slot connector/Передний край соединителя гнезда для платы расширения память

# Using the memory card slot – introduction

Unless you press any memory operating buttons after inserting another foppy disk, the [7] indicator may not disappear from the screen

# Selecting image quality mode

You can select one of three image quality modes in still picture recording. If you do not make any selection, the unit automatically records in SUPER FINE mode.

(1) Set the POWER switch to MEMORY. Make sure that the lock knob is set to the right (unlock) position.

(2) Press MENU to display the menu.

(3) Turn the control dial to select □, then press the dial.

(4) Turn the control dial to select QUALITY, then press the dial.

(5) Turn the control dial to select desired image quality, then press the dial.

# Использование гнезда для платы расширения памяти – введение

Примечание
До тех пор, пока Вы не нажимаете кнопок управления пажатью после вставки другого флоппи-диска, индикатор № может не исчезать с экрана.

# Выбор режима качества изображения

Вы можете выбрать один из трех режимов качества изображения для записи неподвижного изображения. Если Вы не делаете никакого выбора, то аппарат автоматически производит запись в режиме од DDD Fine.

- датоматически производит запись в режиме SUPER FINE.

  (1) Установите выключатель POWER в положение МЕМОRY. Убедитесь, что фиксирующая рукна установлена в правое положение (отблокировано).


  (2) Нажмите МЕМU для отображения меню.

  (3) Поверните регулировочный диск для выбора Ш. а затем нажмите диск.

  (4) Поверните регулировочный диск для выбора СИАLITY, а затем нажмите диск.

  (5) Поверните регулировочный диск для выбора желаемого качества изображения, а затем нажмите диск.

- а затем нажмите диск. (6) Нажмите MENU для стирания дисплея

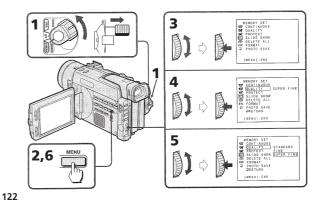

121

### Using the memory card slot introduction

# Setting image quality

Setting	Meaning
SUPER FINE (SFN)	This is the highest image quality in this camcorder. The number of still images you can record is less than FINE. The image is compressed to about 1/4.
FINE (FIN)	Use this mode when you want to record high quality images. The image is compressed to about 1/6.
STANDARD (STD)	This is the standard image quality. The image is compressed to about 1/10.

The difference in image quality mode
A recorded image is compressed in JPEG format
before stored into memory. The memory capacity
allotted to each image varies depending on the
selected quality mode. Details are shown in the
table below. (The number of pixel is 640 × 480,
regardless of image quality mode. Data volume
before compression is about 600 KB.)

Image quality mode	Memory capacity
SUPER FINE	About 150 KB
FINE	About 100 KB
STANDARD	About 60 KB

## Approximate numbers of images you can record on a floppy disk The number of images yo

record on a floppy disk
The number of images you can record is different
depending on which image quality mode you
select and the complexity of the subject.
SUPER FINE (SFN) about 7 to 8 images
FINE (FIN) about 14 to 16 images
STANDARD (STD) about 23 to 27 images

Note
In some cases, changing image quality mode may
not affect the image quality, depending on the
types of images you are shooting.

Использование гнезда для платы расширения памяти – введение

# Установка качества изображения

Установка	значение
SUPER FINE (SFN)	Это наивысшее качество изображения для данной изображения для данной изображений, которое Вы можете записать будет меньше, чем в режиме FINE. Изображение сжимается приблимтельно до 1/4.
FINE (FIN)	Используйте данный режим, когда Вы хотите записать изображения высокого качества. Изображение сжимается приблизительно до 1/6.
STANDARD (STD)	Это стандартное качество изображения. Изображение сжимается приблизительно до 1/10.

# Разница в режиме качества изображения Записанное изображение сжимается в формате ЈРЕС перед тем, как сохраняется в памяти. Объем памяти, отводимый для каждого изображения изменяется в зависимости от выбранного режима качества. Подробности показаны в таблице качества. Подрооности показаны в таклице снизу. (Количество элементов изображения будет равным 640 х 480 независимо от режима качества изображения. Объем данных перед сжатием составляет примерно 600 Кбайт.)

Режим качества Объем памяти SUPER FINE Около 150 Кбайт FINE Около 100 Кбайт STANDARD Около 60 Кбайт

# Приблизительное количество изображений, которое Вы можете записать на флоппи-диск Приблизительное количество изображений, которое Вы можете записать различается в зависимости от отго, какой режим качества изображения Вы выбираете и от сложности объекта.

объекта. SUPER FIN (SFN) Приблизительно 7 – 8 изображений FINE(FIN) Приблизительно 14 – 16 изображений STANDARD (STD) Приблизительно 23 – 27 изображений

## Примечание

Примечание
В некоторых случаях изменение режима
качества изображения может не влиять на
качество изображения в зависимости от
типов изображений, которые Вы снимаете.
123

card or a floppy disk

(a) Press MENU to display the menu.

(4) Turn the control dial to select , then press

(5) Turn the control dial to select FORMAT, then press the dial.

(6) Turn the control dial again to select OK, then press the dial. The display shows "EXECUTE," then press the dial again.

(7) The display shows "FORMATTING," and formatting procedure begins. When formatting is finished, the display shows "COMPLETE."

# платы расширения памяти – введение

# Formatting (initializing) a PC

(1) When you format a floppy disk, insert a disk into the floppy disk adapter. When you format a PC card, insert the card into the memory card slot.

(2) Set the POWER switch to MEMORY. Make

Using the memory card slot – introduction

# Форматирование (инициализация)

# платы персонального компьютера или флоппи-диска

- (1) При форматировании флоппи-лиска при форма пировании флоппи-диска. При форматировании платы персонального компьютера, вставьте плату в гнездо для платы расширения памяти.
- плату в гнездо для платы расширения памяти.

  (2) Установите выключатель РОМЕЯ в положение МЕМОЯТ, Убедитесь, что фиксирующая ручка установлена в правое положение (отблокировано).

  (3) Нажмите МЕНО для отображения меню.

  (4) Поверните регулировочный диск для выбора 🗇, а затем нажмите диск.


  (5) Поверните регулировочный диск для выбора ОК, а затем нажмите диск. На дисллее покажето «ЕХЕСОИТЕ", после чего нажмите диск снова.

  (7) На дисллее будет показано "FORMAT, а забражения поцедура форматирования. Когда форматирование будет завершено, на дисллее обудет завершено, на дисллее обудет завершено, на дисллее обудет обудет завершено, на дисллее обудет обудет завершено, на дисллее обудет обуд

- будет завершено, на дисплее будет показано "COMPLETE".

# Using the memory card slot – introduction

Использование гнезда для платы расширения памяти

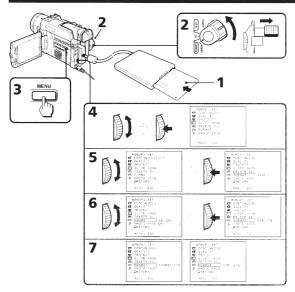

- Notes on formatting

   Formatting erases all information on the floppy disk or PC card, including the protected image data. Check the contents of the disk or card before formatting.

   Be sure that the battery is fully charged when formatting a floppy disk or PC card.

  Formatting takes about three minutes maximum.
- maximum.

   Do not turn the POWER switch or press any button while the display shows "FORMATTING."

- Примечания к форматированию

   форматирование стирает всю информацию на флопти-диске или на плага персонального компьютера, включая защищенные данные изображений. Проверьте содержимое диска или платы перод форматированием. Убедитесь, что батарейный блок полностью заряжен перед началом форматирования флопти-диска или платы персонального компьютеры. Форматирование занимает максимально три минуты.
- три минуты.
   Не переключайте выключатель POWER и не нажимайте никаких кнопок, когда на дисплее показано "FORMATTING".

125

# Recording an image from a mini DV tape as a still image

This camcorder can read moving picture data recorded on a mini DV tape and record it as a still image on a floppy disk or a PC card. The unit can also take in moving picture data through the input connector and record it as a still image on a floppy disk or a PC card.

### Before operation

- Insert a recorded mini DV tape.
   Connect the floppy disk adapter (with a disk inside) or a PC card into the unit.

- (1) Set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV900E).
  (2) Press >- The picture recorded on the mini DV tape is played back.
  (3) Keep pressing PHOTO lightly until a picture from the mini DV tape freezes. "CAPTURE" appears on the LCD screen or in the viewfinder. Recording does not start yet.
  (4) Press PHOTO deeper. The image displayed on the screen will be recorded on a floppy disk or a PC card. The recording is complete when the bar scroll indicator disappears.


# Запись изображения с ленты mini DV в качестве неподвижного изображения

Видеокамера может считывать данные Бидеокамера может считывать данные движущихся изображений, записанные на ленте mini DV, и записывать их как неподвижные изображения на флоппи-диск или плату персонального компьютера. Аппарат также может воспринимать данные о движущихся изображениях через соединитель входных сигналов и записывать их как неподвижные изображения на флоппи-диск или паляти пенсонального флоппи-диск или палату пенсонального компьютера.

### Перед началом операции

- Подсоедините адаптер флоппи-диска (с установленным диском) или плату персонального компьютера к аппарату.
- (1) Установите выключатель POWER в положение VTR (DCR-TRV900E) или PLAYER (DCR-TRV900E) или PLAYER (DCR-TRV900E). (2) Нажимте Ъ-, Изображение, записанное на ленте mini DV, будет воспроизводиться. (3) Держите слегка нажатой кнопку PHOTO до тех пор, пока изображение, записанное на ленте mini DV, не будет заморожено. "CAPTURE" появится на экране ЖКД или в видоскателе. Запись пока еще не началась.
- в ВИДОСКАТ вити, заитив тима очить началась.

  (А) Нажинте РНОТО глубже. Изображение, отображенное на экране, будет записано на флоппи-диск или плату персонального компьютера. Запись будет завершена, когда индикатор шкалы исчезнет.

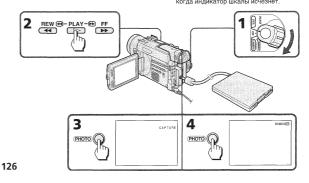

# Recording an image from a mini DV tape as a still image

## When the access lamp is flashing

Never shake or strike the unit. As well do not turn the power off, eject a PC card/floppy disk adapter or remove the battery pack. Otherwise, the image data breakdown may occur.

# If "MEMORY FULL" appears on the LCD screen

The memory of the PC card or floppy disk is full.

# If "CHECK MEMORY" appears on the LCD screen or in the viewfinder An incompatible PC card or floppy disk is inserted. Be sure not to use proper card or disk.

# Recording a still image from a mini DV tape right after turning on the power Saving the data may take a little more time than usual. This is not a malfunction.

# Sound recorded on a mini DV tape

You cannot record the audio from a mini DV tape.

About titles recorded on the mini DV tape You cannot record titles. The title is not displayed during recording.

# Recording a still image from other equipment (DCR-TRV900E only)

When recording the image through the i DV IN/OUT jack

# Запись изображения с ленты mini DV в качестве неподвижного изображения

## Когда мигает лампочка доступа

Когда мигает лампочка доступа Никогда не трясите и не ударяйте аппарат. Не выключайте питание, не выталкивайте плату персонального компьютера/адаптер флоппи-диска и не снимайте батарейный блок. В противном случае может произойти сбъй арацьия.

Если "MEMORY FULL" появляется на экране ЖКД или в видоискателе Память платы персонального компьютера или флоппи-диска заполнена.

# Если "CHECK MEMORY" по

Если "СНЕСК МЕМОRY" появляется на экране ЖКД или в видоискателе Установлена несовместимая плата персонального компьютера или несовместимый флоппи-диск. Обязательно используйте надлежащиую плату или диск.

# Запись неподвижного изображения с ленты mini DV сразу после включения


питания Сохранение данных может занять немного более времени, чем обычно. Это не являтеся неисправностью.

Звук, записанный на ленте mini DV Вы не можете записывать аудиосигнал с ленты mini DV.

### Относительно титров, записанных на ленте mini DV

Вы не можете записывать титры. Титр не отображается во время записи

# Запись неподвижного изображения с другого оборудования (только DCR-TRV900E)

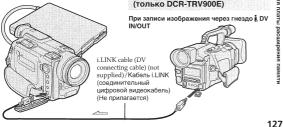

Recording an image from a mini DV tape as a still image

Запись изображения с ленты mini DV в качестве неподвижного изображения

When recording the image through the AUDIO/VIDEO jack

При записи изображения через гнездо AUDIO/VIDEO S video connecting cable (not supplied)/ Соединительный кабель S-видео (Не прилагается) OUT S VIDEO **←** 2300 VIDEO A/V connecting cable/Соединительный кабель аудио/видео

(1) Turn the POWER switch to VTR and set DISPLAY to LCD in the menu system. (2) Play back the recorded tape, or turn the TV on to see the desired programme. (3) Follow the steps 3 and 4 on page 126.

- (1) Установите выбключатле POWER в положение VTR и DISPLAY на LCD в системе меню.
  (2) Воспроизведите записанную ленту или включите телевизор для просмотра желаемой программы.
  (3) Следуйте пунктам 3 и 4 на стр. 126.

128

1-31

### Copying still images from a mini DV tape photo save

Using the search function, you can automatically take in only the still images from mini DV tapes and record them on a floppy disk or a PC card in sequence.

- Before operation
   Insert a recorded mini DV tape and rewind the
- tape.
   Connect the floppy disk adapter (with a disk inside) or insert a PC card into the unit.

- (1) Set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E).
  (2) Press MENU to display the menu.
  (3) Turn the control dial to select , then press
- (4) Turn the control dial to select PHOTO SAVE, then press the dial. "PHOTO BUTTON" appears on the LCD screen or in the
- viewfinder.
  (5) Press PHOTO deeper. The still image from the mini DV tape is recorded on a floppy disk or PC card. The number of still images copied is displayed. "END" is displayed when copying is completed.


# Копирование неподвижных изображений с ленты mini DV – сохранение фотографий

Используя функцию поиска, Вы можете автоматически получать неподвижные изображения с лент mini DV последовательно записывать их на флоппи диск или плату персонального компьютера.

- Перед началом операции
   Вставьте ленту mini DV и перемотайте ленту назад.
- назад.
   Подсоедините адаптер флоппи-диска (с установленным диском) или вставьте плату персонального компьютера в аппарат.

- персонального компьютера в аппарат.

  (1) Установите выключатель РОWER в положение VTR (ICR-T:RV900E) или PLAYER (ICR-T:RV990E) или PLAYER (ICR-T:RV изображения будет отображен. Когда копирование будет завершено, отображается "END".

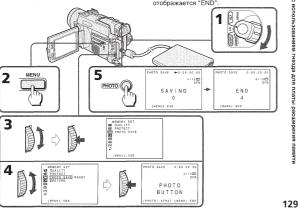

Copying still images from a mini DV tape – photo save

To cancel copying

When the memory of the floppy disk or PC card is full
"MEMORY FULL" appears on the LCD screen, and the copying stops. Insert another floppy disk or PC card and repeat the procedure from step 1.

# When the access lamp is flashing Never shake or strike the unit. As well do not

turn the power off, eject a PC card/floppy disk adapter or remove the battery pack. Otherwise, the image data breakdown may occur.

# To record all the images recorded on the mini

Rewind the tape all the way and start copying.

# When you change floppy disks in the middle of copying The unit resumes copying from the last image recorded on the previous disk.

Копирование неподвижных изображений с ленты mini DV – сохранение фотографий

**Для отмены копирования** Нажмите MENU для остановки копирования.

# Когда память флоппи-диска или платы персонального компьютера

будет заполнена "MEMORY FULL" появится на экране ЖКД и копирование остановится. Вставьте другой флоппи-диск или плату персонального компьютера и повторите процедуру с пункта

Когда мигает лампочка доступа
Никогда не трясите и не ударяйте аппарат.
Не выключайте питание, не выталкивайте
плату персонального компьютера/далтер
флоппи-диска и не снимайте батарейный
блюк. В противном случае может произойти
сбой ланных

# Для записи всех изображений, записанных на ленте mini DV Перемотайте ленту полностью назад и начните копирование.

Когда Вы заменяете флоппи-диск посередине копирования
Аппарат возобновляет копирование, начиная с последнего изображения, записанного на предыдущем диске

130

# Recording still images on PC cards (not supplied) - memory photo recording

You can record still images with all the pixels (progressive) on an optional PC card.

Before operation Insert a PC card into the unit.


- (1) Set the POWER switch to MEMORY. Make sure that the lock knob is set to the right
- sure that the lock knob is set to the right (unlock) position. (Keep pressing PHOTO lightly. A picture freezes and "CAPTURE" appears on the LCD screen or in the viewfinder. Recording does
- not start yet.

  (3) Press PHOTO deeper. The image displayed on the screen will be recorded on a PC card. The recording is complete when the bar scroll indicator disappears.

Запись неподвижных изображений на платы персонального компьютера (не прилагаются) – запись фотографий в память

Вы можете записывать неподвижн вы можете записывать неподвижные изображения со всеми элементами изображения (прогрессивный режим) на отдельно приобретенную плату персонального компьютера.

- (1) Установите выключатель POWER в положение МЕМОRY. Убедитесь, что фиксирующая ручка установлена в правое положение (отблокировано). (2) Держите слегка нажатой кнопку PHOTO. "САРТИЕЕ" появится на экране ЖКД или в видоскателе. Запись пока еще не
- началась.
  (3) Нажмите РНОТО глубже. Изображение,
- отображенное на экране, будет записано на плату персонального компьютера. Запись будет завершена, когда индикатор шкалы исчезнет.

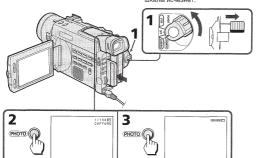

When the POWER switch is set to MEMORY The following functions do not work: digital zoom (more than 12x), wide TV mode, digital effect, picture effect, title.

Когда выключатель POWER установля положение MEMORY
Следующие функции не будут работать: цифровал трансфокация (более, чем 12-кратная), режим широкоформтаного телевизора, цифровоые эффекты, эффекты изображения и титры.

# Recording still images on PC cards (not supplied) – memory photo recording

When you are recording a still image You can neither turn off the power nor press PHOTO.

# When you press the PHOTO button on the Remote Commander The camcorder immediately records the image that is on the screen when you press the button.

# When using a video light (not supplied) or similar equipment mounted on the intelligent accessory shoe Recording an image on a PC card may result in a

temporary power shortage in the accessory shoe, causing the video light to go out. This is not a malfunction.

## Recording images continuously

You can shoot continuously by selecting one of two modes described below

# Continuous mode [a]

2 to 4 pictures continuously

**Multi screen mode [b]** You can record 9 still pictures continuously on a single page.

### Когда Вы записываете неподвижное изображение

Вы не можете ни выключить питание, ни

## нажать кнопку РНОТО.

Когда Вы нажимаете кнопку РНОТО на

ког да вы нажимаете кнопку РГОТО н пульте дистанционного управления Видеокамера сразу же запишет изображение, которое отображалось на экране во время нажатия кнопки.

Когда вы используете видеолампу (не прилагается) или подобное оборудование, установленное на башмак для установки вспомогательного оборудования загись изображения на плату персонального компьютера может вызвать временную нехватку электропитания, подаваемого на башмак для вспомогательного оборудования, что приведет к выключению видеолампы. Это не является неисправностью.

# Непрерывная запись изображений

Вы можете выполнять непрерывную съемку путем выбора одного из двух нижеописанных режимов

# Непрерывный режим [а] Вы можете выполнить неп от 2 до 4 изображений.

Мультиэкранный режим [b] Вы можете записать 9 последовательных неподвижных изображений на одну страницу.



ľbì



132

# Recording still images on PC cards (not supplied) – memory photo recording

- (1) Set the POWER switch to MEMORY. Make sure that the lock knob is set to the right
- (unlock) position.


  (2) Press MENU to display the menu.

  (3) Turn the control dial to select , then press the dial.
- (4) Turn the control dial to select CONTINUOUS, then press the dial.

  (5) Turn the control dial to select the desired
- setting, then press the dial.

  (6) Press MENU to erase the menu display

- Установите выключатель POWER в положение MEMORY. Убедитесь, что фиксирующая ручка установлена в правое положение (отблокировано).
- (2) Нажмите MENU для отображения меню (3) Поверните регулировочный диск для выбора , а затем нажмите диск.
- (4) Поверните регулировочный диск для выбора CONTINUOUS, а затем нажмите
- выбора СОГИ ПИОООЭ, а затем польши диск. Диск. (5) Поверните регулировочный диск для выбора желаемой установки, а затем нажмите диск. (6) Нажмите МЕNU для стирания дисплея

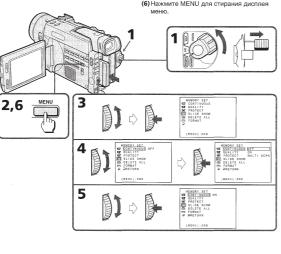

# Recording still images on PC cards (not supplied) – memory photo recording

Settings of continuous shooting

Setting	Meaning (indicator on the screen)
OFF	The unit shoots one image at a time. (no indicator)
ON	The unit shoots 2 to 4 still images at about 0.8 sec intervals. (🖼 )
MULTI SCRN	The unit shoots 9 still images at about 0.3 sec intervals and displays the images on a single page divided into 9 boxes. ( )

# The number of images in continuous shooting The number of images you can shoot continuously varies depending on the image

quality mode.

SUPER FINE: 2 images

FINE: 3 images

STANDARD: 4 images

Note on using the video flash light (not supplied)
The video flash light does not work in the continuous or multi screen mode if you install it to the accessory shoe.

лагаются) – запись фотографий в память

Установка	Значение (индикатор на экране)
OFF	Аппарат производит съемку одного изображения за один раз. (нет индикатора)
ON	Аппарат производит съемку от 2 до 4 неподвижных изображений приблизительно с 0,8-секундными интервалами. (ﷺ)
MULTI SCRN	Аппарат производит съемку 9 неподвижных изображений приблизительно с 0,3- секундными интервалами и отображает изображения на одной странице, разбитой на 9 foroka (FPR)

# Количество изображений при

количество изогражении при последовательной съемки для непрервыной съемки Количество изображений для непрервыной съемки варымуруств в зависимости от режима качества изображения.

SUPER FINE: 2 изображения FINE: 3 изображения STANDARD: 4 изображения

### Примечание к видеолампе-вспышке (не прилагается)

Видеолампа-вспышка не работает в непрерывном или мультиэкранном режиме, если Вы установите ее на башмак для установки вспомогательного оборудования

133

1022223

134

# Viewing a still picture – memory photo playback

You can play back still images recorded on a floppy disk or PC card. You can also play back 6 images at a time by selecting the index screen.

## Before operation

Connect the floppy disk adapter (with a disk inside) or insert a PC card into the unit.

(1) Set the POWER switch to MEMORY. Make

sure that the lock knob is set to the right (unlock) position.

(2) While pressing OPEN, open the LCD panel.

(3) Press MEMORY PLAY. The last recorded

Press MEMORY PLAY. The last recorded image is displayed.
Press MEMORY +/- to select the desired still image. To see the previous image, press MEMORY -. To see the next image, press MEMORY +.

# Просмотр неподвижного изображения – воспроизве-дение фотографий из памяти


можете воспроизводить неподвижные изображения, записанные на флоппи-диск или плату персонального компьютера. Вы можете также воспроизвести 6 изображений за один раз путем выбора индексного экрана

## Перед началом операции

Подсоедините адаптер флоппи-диска (с установленным диском) или вставьте плату персонального компьютера в аппарат

(1) Установите выключатель POWER в

(1) Установите выключатель РОWER в положение МЕМОРY. Убедитесь, что фиксирующая ручка установлена в прав положение (отблокировано). С2) Нажимая ОРЕN, откройте панель: ЖКД. (3) Нажмите МЕМОРУ РLAY. Последнее записанное изображение будет отображени. (4) Нажмите МЕМОРY -/- для выбора желаемого неподвижного изображения. Для просмотра предыдующего изображения нажать МЕМОРY -. Для просмотра пердыдующего изображения нажать МЕМОРY -. Для просмотра следующего изображения нажать МЕМОРY -. Для просмотра следующего изображения просмотра следующего изображения нажать MEMORY +.

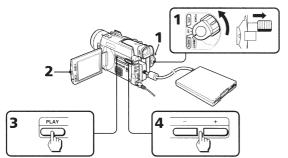

# To stop memory photo playback image through the lens will not appear on the

фотографий из памяти Снова нажмите MEMORY PLAY. В противном

случае изображение, получа объектив, не будет появляться на экране

# Viewing a still picture – memory photo playback

# To play back recorded images on a TV screen

- To play back recorded images on a TV screen

  Connect this camcorder to the TV with the supplied A/V connecting cable before the operation. You cannot play back images using the LASER LINK function.

  When operating memory photo playback on a TV or the LCD screen, the image quality may appear to have deteriorated. This is not a malfunction. The image data is as good as ever. Turn the audio volume of the TV down before operation, or there may be noise (howling) coming from the TV speakers.


# Screen indicators during still image playback

# Просмотр неподвижного изображения – воспроизведение фотографий из памяти

## Для воспроизведения записанных

- Для воспроизведения записанных изображений на окране телевизора Подсоедините видеокамеру к телевизору с помощью прилагаемног осединительного кабеля аудмо/видео перед началом операции. Вы не можете воспроизводить изображения с использованием функции LASER LINK. Во время воспроизведения фотографий из памяти на экрене телевизора или ЖКД, качество изображения может показаться хуже. Это не является неисправностью. Данные изображения будут такими же хорошими, как восегда.
- дапные изогражений оуду ттакими же хорошими, как всегда.
   Понизьте громкость звука телевизора перед началом операции, или помехи (акустическая обратная связь) могут исходить от

### Экранные индикаторы во время воспроизведения неподвижного изображения

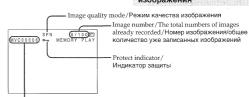

### Data file name/Имя файла данных Playing back 6 recorded images at a time (index screen)

You can play back 6 recorded images at a time. This function is especially useful when searching for a particular image.

### Воспроизведение 6 записанных изображений за один раз (индексный экран)

Вы можете воспроизвести 6 записанных изображений за один раз. Данная функция будет особенно удобной, когда Вы выполняете поиск определенного изображения



Press MEMORY INDEX A red ► mark appears above the image that is displayed before changing to index screen mo ПОВЕЛ.


Красная метка ► появляется над изображением, которое отображается перед изменением на режим индексного экрана.

136

1-33

# Viewing a still picture – memory photo playback

Просмотр неподвижного

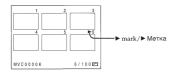

- To display the following 6 images, keep pressing MEMORY +.
   To display the previous 6 images, keep pressing MEMORY -.

To return to the normal playback screen (single screen)
Press MEMORY +/- to move the ▶ mark to the image you want to display on full screen, then press MEMORY PLAY.

When displaying the index screen, the number appears above each image. This indicates the recording order on the floppy disk or PC card. These numbers are different from the data file

Files modified with personal computers
Those files cannot be displayed on the index
screen. Image files shot with other equipment
cannot be displayed on the index screen either

The image quality mode indicator
The indicator may show a different mode in
which you recorded. This is not a malfunction.
The indicator shows the volume of the data file.
For instance, if the volume of SFN image is sma
enough, it may be displayed as FIN or STD.

- Для отображения 6 следующих изображений держите нажатой кнопку MEMORY +.
- Для отображения 6 предыдущих изображений держите нажатой кнопку MEMORY -.

Для возврата к нормальному экрану воспроизведения (одинарному экрану) Нажмите MEMORY +/- для перемещения метки ▶ на изображение, которое Вы хотите отобразить на полном экране, а затем нажмите MEMORY PLAY.

Во время отображения индексного экрана номер появляется над каждым изображением. Он указывает последовательность записи на флоппи-диске или плате персонального компьютера. Эти номера отличаются от имен данных файлов.

# Файлы, преобразованные с помощьк

чаилы, преооразованные с помощью персональных компьютеров
Эти файлы не могут быть отображены на индексном экране. Файлы изображений, снятые с помощью другой аппаратуры, также не могут быть отображены на индексном

Индикатор режима качества изображения Индикатор может показывать отличный режим от того, в котором Вы выполнили запись. Это не является неисправностью. Индикатор показывает объем файла данных. Например, если объем изображения SFN достаточно мал, то он может быть отображенкак FIN или STD.

### Viewing a still picture - memory photo playback

### Viewing the recorded images using a personal computer

The image data recorded with this camcorder is compressed in the JPEG format. If your personal computer has an application software that allows you to see JPEG images, you can see images recorded on a floppy disk or PC card on a computer screen. For detailed instructions on operation, refer to the operating instruction supplied with the application software.

Example: Operation on a computer that has Windows 95 installed (1) Start the Windows 95, and insert the floppy disk into the disk drive of your computer. (2) Open "My Computer", and double-click on "3.5 inch FD."

(3) Double-click on the file of the desired image.

### Examples of recommended OS/application software

- os Windows 3.1
- Windows 95
  Windows NT3.51 or newer versions, etc.
- Application
   Microsoft Internet Explorer, etc.

- For Macintosh, you can use the floppy disk recorded with this camcorder using the PC
- For Macintosh, you can use the floppy disk recorded with this camcorder using the PC Exchange with Mac OS system 7.5 or higher. A viewing application for Macintosh is also necessary for viewing images.
  When you see images recorded with the camcorder on a personal computer, the display may show lines on the edge of the screen, depending on the status of video input signals at the moment. This is not a malfunction.

# Просмотр неподвижного изображения – воспроизве-дение фотографий из памяти

### Просмотр изображений с использованием персонального компьютера

Данные изображений, записанные с помощью данной видеокамеры, сжимаются в формате JPEG. Если Ваш персональный компьютер имеет прикладное программное обеспечение имеет прикладное программное обеспечение которое позволяет Вам просматривать изображения ЈРЕG, Вы можете просмотреть изображения, записанные на флоппи-диске или плате персонального компьютера, на экране компьютера, Подробные инструкции относительно операции см. в инструкции по эксплуатации, прилагаемой к прикладному программному обеспечению.

Пример: Работа с компьютером, на котором установлена операционная система Windows

- 95 (1) Запустите операционную систему Windows 95 и вставьте флоппи-диск в дисковод Вашего компьютера. (2) Откройте "My computer" и дважды щелкните поверх "3,5 inch FD". (3) Дважды щелкните поверх файла желаемого изображения.

# Примеры рекомендуемой ОС/прикладного программного обеспечения программног ОС • Windows 3.1

- Windows 95
- Windows NT3.51 или более новая версия и
- Прикладная программа
   Microsoft Internet Explorer и т.д.

- Для Macintosh Вы можете использовать флоппи-диск, записанный с помощью данной видеокамеры, используя персональный компьютер с операционной системой Mac OS 7,5 или более поздней. Прикладная программа для просмотра данных Macintosh также будет необходима
- данных Macintosh также будет необходи для просмотра изображений.
   Когда Вы просматриваете изображения, записанные с использованием видеокамеры, на персональном компьютере, дисплей может показывать линии по крамя экране в зависимости от состояния входных видеоситналов на момент просмотра. Это не является неисправностью.

138

137

# Preventing accidental erasure - PROTECT

To prevent accidental erasure of important images, you can protect selected images

## Before operation

Connect the floppy disk adapter (with a disk inside) or insert a PC card into the unit.

(1) Display the image you want to protect (2) Press MENU to display the menu.
(3) Turn the control dial to select , then press the dial.

- (4) Turn the control dial to select PROTECT, then
- press the dial.

  (5) Turn the control dial to select ON, then press the dial
- (6) Press MENU to erase the menu display. The "o--" mark is displayed beside the data file name of the protected image.

## Предотвращение случайного стирания PROTECT

Для предотвращения случайного стирания важных изображений Вы можете защитить выбранные изображения

Перед началом операции Подсоедините адаптер флоппи-диска (с установленным диском) или вставьте плату персонального компьютера в аппарат.

- (1) Отобразите изображение, которое Вы

- (1) Отобразите изображение, которое Вы хотите защитить.

  (2) Нажмите МЕNU для отображения меню.


  (3) Поверните регулировочный диск для выбора № д. а затем нажмите диск.

  (4) Поверните регулировочный диск для выбора РЯОТЕСТ, а затем нажмите диск.

  (5) Поверните регулировочный диск для выбора РЯОТЕСТ, а затем нажмите диск.

  (5) Поверните регулировочный диск для выбора ОN, а затем нажмите диск.

  (6) Нажмите МЕNU для стирания дисплея меню. Знак "⊙¬" будет отображен рядом с именем файла данных защищенного изображения.

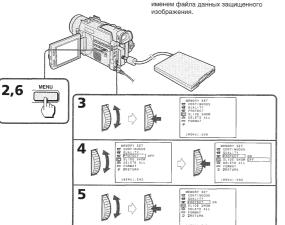

Preventing accidental erasure – PROTECT

## To cancel protection of the image

Formatting erases all information on the floppy disk, including the protected image data. Check the contents of the disk before formatting.

случайного стирания – PROTECT

Для отмены защиты изображения Выберите OFF в пункте 5, а затем нажмите регулировочный диск.

примечание форматирование стирает всю информацию на флоппи-диске, включая защищенные данные изображения. Проверьте содержимое диска перед форматированием.

4

# **Deleting images**

# **Удаление** изображений

# **Deleting selected image**


**Before operation**Connect the floppy disk adapter (with a disk inside) or insert a PC card into the unit.

- (1) Display the image you want to erase.
  (2) Press MEMORY DELETE. "DELETE?"
  appears on the LCD screen.
  (3) Press MEMORY DELETE again. The selected image is deleted.

### Удаление выбранного изображения

Перед началом операции
Подсоедините адаптер флоппи-диска (с
установленным диском) или вставьте плату
персонального компьютера в аппарат.

- (1) Отобразите изображение, которое Вы
- хотите стереть.
  (2) Нажмите MEMORY DELETE. "DELETE?"
- появится на экране ЖКД. (3) Снова нажмите MEMORY DELETE.

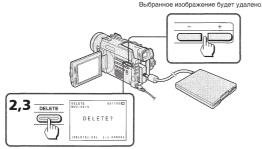

# To cancel deleting an image

# To delete an image displayed on the

index screen
Press MEMORY +/− to move the ▶ indicator to the desired image and follow steps 2 and 3.

- To delete protected image, cancel their
- Once you delete an image, you cannot restore it. Check the images to delete carefully before

### Erasing all the images

You can delete all the unprotected images in a floppy disk or PC card.

# **Для отмены удаления изображения** Нажмите MEMORY- в пункте 3.

# Для удаления изображения,

отображаемого на индексном экаране Нажмите MEMORY +/- для перемещения индикатора ▶ на желаемое изображение и следуйте пунктам 2 и 3.

### Примечания

- для отмены защищенного изображения отмените сперва его защиту.
   Если Вы удалите изображение, Вы не можете его восстановить. Внимательно проверьте удаляемые изображения перед их удалением.

### Стирание всех изображений

Вы можете удалить все незащищенные изображения на флоппи-диске или плате персонального компьютера.

## 141

card

slot

# **Deleting images**

# Connect the floppy disk adapter (with a disk inside) or insert a PC card into the unit.

- (1) Set the POWER switch to MEMORY, Make re that the lock knob is set to the right
- sure that the lock knob is set to the right (unlock) position.

  (2) Press MENU to display the menu.

  (3) Turn the control dial to select the dial.

  (4) Turn the control dial to select DELETE ALL, then press the dial.
- then press the dial.

  (5) Turn the control dial to select OK, then press
- the dial. "OK"changes to "EXECUTE."

  (6) Turn the control dial to select EXECUTE, then press the dial. "DELETING" appears on the LCD screen. When all the unprotected images press the dial. LCD screen. When all the unprotected is are deleted, "COMPLETE" is displayed

# Удаление изображений

Перед началом операции Подсоедините адаптер флоппи-диска (с установленным диском) или вставьте плату персонального компьютера в аппарат.


- персонального компьютера в аппарат.

  (1) Установите выключатель РОМЕЯ в положение МЕМОЯУ. Убедитесь, что фиксирующая ручка установлена в правое положение (отблокировано).

  (2) Нажмите МЕМИ для отображения менно. Затовне в правое положение регулированоный диск для выбора 

  □ , а затем нажмите диск. (4) Поверинте регулировочный диск для выбора DELETE ALL, а затем нажмите диск. (5) Поверите регулировочный диск для выбора Сб. (3) азтем нажмите диск. "ОК" изменяется на "EXECUTE".

  (6) Поверите регулировочный диск для выбора EXECUTE, а затем нажмите диск. "DELETING" появител на экране ЖКД. Когда незащищенные изображения будут удалены, индикация "COMPLETE" будет отображения.

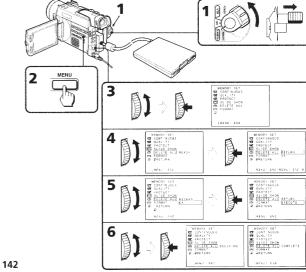

# **Deleting images**

# To cancel deleting all the images on

Select 

RETURN in step 4, then press the control dial.

# While "DELETING" appears Do not turn the POWER switch or press any

# Удаление изображений

### Для отмены удаления всех изображений на диске

Выберите ⊋ RETURN в пу . инкте 4, а затем нажмите регулировочный диск

# При появлении "DELETING"

Не переключайте выключатель POWER и не нажимайте кнопки.

# Copying the image recorded with the memory card slot to mini DV tapes (DCR-TRV900E only)

You can copy still images or titles recorded with the memory card slot and record them to a mini

## Before operation

- Insert a mini DV tape for recording.
   Connect the floppy disk adapter (with a disk inside) or insert a PC card into the unit.
- (1) Set the POWER switch to VTR
- (1) Set the POWER SWICH to VTR.
  (2) Using the tape transport buttons, search a point where you want to record the desired still image. Set the mini DV tape to playback pause mode.
- pause mode.

  (3) Press REC to set the mini DV tape to recording pause mode.

  (4) Play back the still image you want to copy.

  (5) Press II to start recording and press II again to stance.
- to stop. (6) If you have more to copy, repeat steps 4 and 5.

Копирование изображения, записанного с использованием гнезда для платы расширения памяти, на ленты mini DV (только DCR-TRV900E) Вы можете копировать неподвижные изображения или титры, записанные с использованием гнеда для платы расширения памяти на ленту mini DV.

- Перед началом операции

  Вставьте ленту mini DV для записи.

  Подсоедините адаптер флоппи-диска (с установленным диском) или вставьте плату персонального компьютера в аппарат
- (1) Установите выключатель РОМЕВ в положение VTR.

  (2) Используя кнопки перемещения ленты, найдите точку, где Вы хотите записать желаемое неподвижное изображение. Установите ленту min ID V на режим паузы воспроизведения.

  (3) Нажмите Ф ПЕС для установки ленты mini DV на режим паузы записи.


  (4) Воспроизведите неподвижное изображение, которое Вы хотите скопировать.

  (5) Нажмите II для начала записи и снова

- которов Бы хоти те скопировать.

  (5) Нажмите III для начала записи и снова нажмите III для остановки.

  (6) Если Вы хотите продолжить копирование повторяйте пункты 4 и 5.

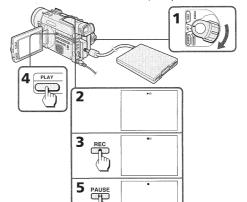

144

Copying the image recorded with the memory card slot to mini DV tapes (DCR-TRV900E only)

To stop copying in the middle

During copying
You cannot operate the following buttons:
MEMORY PLAY, MEMORY INDEX, MEMORY
DELETE, MEMORY +, or MEMORY -.

### Note on the index screen

# If you press the EDITSEARCH buttons during

pause mode Memory playback stops.

If you press the DISPLAY button in Standby or Recording mode
You can see memory playback and the file name indicators in addition to the indicators pertinent to mini DV tapes, such as the time code indicator.

# Для остановки копирования ловки копир посередине процесса Нажмите □.

Во время копирования
Вы не можете использовать следующие
кнопки: MEMORY PLAY, MEMORY INDEX,
MEMORY DELETE, MEMORY + или
MEMORY –.

# **Примечание к индексному экрану** Вы не можете записывать индексны

Если Вы нажимаете кнопки EDITSEARCH во время режима паузы Воспроизведение памяти прекратится.

# Если Вы нажимаете кнопку DISPLAY в

режиме готовности или записи
Вы можете просматривать воспроизведение
памяти и индикаторы имени файлов в дополнение к индикаторам, отниносящимся к ленте mini DV, как например, индикатор

Playing back images in a continuous loop - SLIDE SHOW

You can automatically play back images in sequence. This function is useful especially checking the recorded images or during a presentation.

**Before operation**Connect the floppy disk adapter (with a disk inside) or insert a PC card into the unit.

- (1) Set the POWER switch to MEMORY. Make sure that the lock knob is set to the right (unlock) position.
  (2) Press MENU to display the menu.
  (3) Turn the control dial to select [], then press the dial.
- the dial.

  (4) Turn the control dial to select SLIDE SHOW,
- (4) Turn the coloriod data to select SLIDE STOW, then press the dial.

  (5) Press MEMORY PLAY. The unit plays back the images recorded on a floppy disk or PC card in sequence. When all the images have been played back, the display shows the first image again and the slide show ends.

Воспроизведение изображений в непрерывном замк-нутом цикле – SLIDE SHOW


Вы можете автоматически воспроиз изображения в последовательности. Данная функция будет особенно удобной при провеке записанных изображений ил

Перед началом операции Подсоедините адаптер флоппи-диска (с установленным диском) или вставьте плату персонального компьютера в аппарат.

- (1) Установите выключатель POWER в положение MEMORY. Убедитесь, что фиксирующая ручка установлена в правое положение (отбложуровано). (2) Нажмите МЕNU для отображения меню. 3) Поверите регулировочный диск для выбора 

  при затем нажмите диск. (4) Поверите регулировочный диск для выбора В затем нажмите диск. (4) Поверите регулировочный диск для выбора SLIDE SHOW, а затем нажмите диск.

- диск. (5) Нажмите MEMORY PLAY. Аппарат будет последовательно воспроизводить изображения, записанные на флоппи-диске или плате персонального компьютера. Когда все изображения будут воспроизведены, дисплей будет снова показывать первое изображение и показ слайдов будет закончен

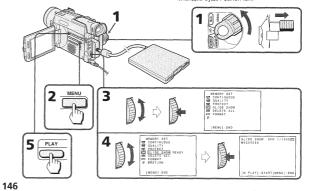

145

ДЛЯ

# Playing back images in a continuous loop – SLIDE SHOW

## To cancel the slide show

# To pause during a slide show Press MEMORY PLAY to set it in a par

# To start the slide show from a particular image Select the desired image using MEMORY +/buttons before step 2.

# To view the recorded images on TV Connect this camorder to a TV with the supplied A/V connecting cable before operation. You cannot play back the images using the LASER LINK function.

# Note on the slide show

You cannot make copy of the slide show on a mini DV tape.

# If you change the floppy disk during

**operation**The slide show does not operate. If you change the disk, be sure to follow the steps again from

# в непрерывном замкнутом цикле – SLIDE SHOW

### Для отмены показа слайдов ите MENU для отмены показа слайдов

Для паузы во время показа слайдов Нажмите MEMORY PLAYдля установки

Для начала показа слайдов с определенного изображения Выберите желаемое изображение с использованием кнопок МЕМОRY +/- перед выполнением пункта 2.

### Для просмотра записанных изображе на экране телевизора

Подсоедините данную видеокамеру к телевизору с помощью прилагаемого соединительного кабеля аудио/видео перед началом операции. Вы не можете воспроизводить изображения с использованием функции LASER LINK

Примечание к показу слайдов Вы не можете копировать показ слайдов на ленту mini DV.

# Если Вы меняете флоппи-диск в проце

операции
Показ слайдов не будет работать. Если Вы поменяете диск обязательно снова следуйт вышеописанным пунктам от начала.

# Additional information Usable cassettes and playback modes

# Selecting cassette types

You can use the MesiDY mini DV cassette only. You cannot use any other IVDV, B 8 mm, HiB Hi8, WIS VHS, SWIS S-VHS, WISE VHSC, SWISE S-VHSCor IB Betamax cassette.

# We recommend mini DV cassette with cassette

we recommend min DV cassette with cassette memory. There are two types of min DV cassettes with cassette memory and without cassette memory. We recommend you to use the tape with cassette memory. The IC memory is mounted on this type of min DV cassette. This camcorder can read and write data such as dates of recording or titles, etc. to this memory. The functions using the cassette memory require successive signals recorded on to this memory. The functions using the classente memory require successive signals recorded on the tape. If the tape has a blank portion in the beginning or between the recorded portions, a title may not be displayed properly or the search functions may not work properly. Not to make any blank portion on the tape, operate the

followings.
Press END SEARCH to go to the end of the Press END SEARCH to go to the end of the recorded portion before you begin the next recording if you operate the followings:

– you have ejected the cassette while recording.

- you have played back the tape in the VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E)
- you have used the Edit Search function
  If there is a blank portion

- you have used the Edit Search function. If there is a blank portion or discontinuous signal on your tape, re-record from the beginning to the end of the tape concerning above. The same result may occur when you record using a digital video camera recorder without a cassette memory function on a tape recorded by one with the cassette memory function. Tapes with cassette memory have CII (Cassette Memory) mark. Sony recommends that you use a tape having CII mark to enjoy this camcorder fully.

## Дополнительная информация Используемые кассеты и режимы воспроизведения

## Выбор типов кассет

Вы можете использовать только кассеты 
™DV mini DV. Вы не можете использовать 
какую-либо другую кассету DV DV, № 8 мм, 
НіВ Нів, №S VHS, SWS S-VHS, №SD VHSC, SWIST S-VHSC или IB Betamax.

## Мы рекомендуем использовать цифровые ивидеокассеты mini DV с памятью

Имеется два типа кассет mini DV: с памятью кассеты и без памяти кассеты. Мы рекомендуем Вам использовать ленты кассет с памятью. На таком типе кассет Mini DV установлено запоминающее устройтсво в виде ИС. Данная видеокамера может считывать и записывать данные, такие как даты выполнения записой или титры и т.д. с использованием этого запоминающего устройства. Функции, использующие память кассеты, нуждаются в непрерывных сигналах, записанных на ленте. Если лента имеет незаписанный участок в начала или между записанными частями, то титр межет не отображаться надлежащим образом, или функции поиска могут работать неправильной части выполняйте следующее. Имеется два типа кассет mini DV: с памятью незаписанной части выполняйте следующее. Нажмите END SEARCH для перехода к концу записанной части перед началом следующей записи, если было сделано следующее: Вы вытолкнули кассету во время

- выполнения записи.
- -Вы воспроизвели ленту в режиме VTR (DCR-TRV900E) или PLAYER (DCR-TRV890E)
- Вы использовали функцию монтажного

Если на Вашей ленте имеется незаписанный участок или прерывающийся сигнал, то вследствие вышеупомянутого перезапишите вспедствие вышеуломянутого перезапишите такую ленту от начала до конца. Такой же результат может произойти, когда Вы выполняете запись с использованием цифоровой видеокамеры без функции памяти кассеты на ленте, записанной на видеокамерь е с функцией памяти кассеты. Ленты кассет с памятыю имеют знак С/II (кассет с памятыю имеют знак С/II) скасста с памятыю у прима Sолу рекомендует, чтобы Вы использовали кассеты со знаком С/II для полного наслаждения от использования данной видеокамеры.

148

# Usable cassettes and playback modes

Используемые кассеты и режимы воспроизведения

### When you play back

# Copyright signal

When playing back
Using any other video camera recorder, you
cannot record on a tape that has recorded a
copyright control signals for copyright protection
of software which is played back in this camcorder.

When recording
Using this camcorder, you cannot record
software that has recorded a copyright control
signals for copyright protection of software.
"COPY INHIBIT" appears on the LCD screen, in
the viewfinder or on the TV screen if you try to record such software

### Audio mode

Audio mode
12-bit mode: The original sound can be recorded
in stereo 1, and the new sound in stereo 2 in
32 kHz. The balance between stereo 1 and stereo
can be adjusted by selecting AUDIO MIX in the
menu system during playback. Both sounds can
be about between

menu system during piayvosa. Some be played back.
16-bit mode: A new sound cannot be recorded but the original sound can be recorded in high quality. Moreover, it can also play back sound recorded in 32 kHz, 44.1 kHz or 48 kHz. When playing back a tape recorded in the 16-bit mode, 168IT indicator appears on the LCD screen or in the view/finder.

### Во время воспроизведения

# Сигнал авторского права

При воспроизведении
Используя какую-либо другую видеокамеру,
Вы не можете выполнить запись на ленте, которая была записана с контрольными сигналами авторского права для защиты авторского права видеопрограммы, которая воспроизводится на данной видеокамере

### При записи

При записи
Используя данную видеокамеру, Вы не
можете записать видеопрограмму, которая
была записана с контрольными сигналами
авторского права для защиты авторского
права видеопрограммы. "СОРУ INHIBIT"
появляется на экране ЖКД, в видоискателе
или на экране телевизора, если Вы
пытаетесь записать такую видеопрограмму.

Звуковой режим
12-битовый режим: Исходный звук может быть записан в стереорежиме 1, а новый звук в стереорежиме 2 на 32 кПц. Баланс между стереозвучанием 1 и стереозвучанием 2 может быть огрегулирован путем выбора установки AUDIO МІХ в системе меню во время воспроизведения. Оба звучания могут быть воспроизведения. Оба звучания могут быть воспроизведения. быть воспроизведены. 16-битовый режим: Новый звук не может

быть записан, но исходный звук может быть записан с высоким качеством. Ко всему, видеокамера может воспроизводить звук записанный на 32 кГц, 44,1 кГц или 48 кГц. При воспроизведении ленты, записанной в 16-битовом режиме, индикатор 16ВІТ появляется на экране ЖКД или в видоискателе.

# Usable cassettes and playback

**Используемые кассеты и** режимы воспроизведения

# Notes on the mini DV cassette

# To prevent accidental erasure

Slide out the protect tab on the cassette so that the red portion is visible. [a]

# When affixing a label on the mini DV cassette Be sure to affix a label only on the locations as

illustrated below so as not to cause malfunction of the camcorder. [b]

### After using the mini DV cassette

Rewind the tape to the beginning, put the cassette in its case, and store it in an upright position

# Примечания к кассете mini DV

# Для предотвращения случайного


**стирания** Передвиньте защитный лепесток на кас так, чтобы была видна крансная метка. [а]

# При приклеивании этикетки на

кассету mini DV
Обязательно наклейте этикетку только на место, указанное ниже на рисунке, так, чтобы не вызвать повреждение видеокамеры. [b]

# После использования кассеты mini

Перемотайте ленту назад на начало, положите кассету в ее футляр и храните ее в вертикальном положении.

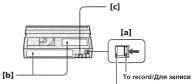

| Slide out to prevent accidental erasur Передвиньте для предотвращения случайного стирания.

Note on gold-plated connector

If the gold-plated connector of mini DV cassettes
is dirty or dusty, you may not operate the
function using cassette memory. Clean up the
gold-plated connector with cotton-wool swab, about every 10 times ejection of a cassette. [c]

Примечание к позолоченному контакту
Если позолоченный контакт кассеты Mini DV
станет грязным или пыльным, Вы не сможете
управлять функциями с использование
памяти кассеты. Очищайте позолоченный
контакт с помощью ватного или шерстяного
тампона приблизительно через каждые 10
выталкиваний кассеты [c].

149

### 150

# Charging the vanadium-lithium battery in the camcorder

Your camcorder is supplied with a vanadiumlithium battery installed so as to retain the date
and time, etc., regardless of the setting of the
POWER switch. The vanadium-lithium battery is
always charged as long as you are using the
camcorder. The battery, however, will get
discharged gradually if you do not use the
camcorder. It will be completely discharged in
about a year if you do not use the camcorder at
all. Even if the vanadium-lithium battery is not
charged, it will not affect the camcorder
operation. To retain the date and time, etc.,
charge the battery if the battery is discharged.
The following are charging methods:
Connect the camcorder to mains using the
supplied AC power adaptor, and leave the
camcorder with the POWER switch turned off
for more than 24 hours.
Or install the fully charged battery pack in the
camcorder, and leave the camcorder with the
POWER switch turned off
for more than 24
hours.

# Зарядка ванадиеволитиевой батарейки в видеокамере

Ваша видеокамера оснащена ванадиево литиевой батарейкой для сохранения даты и времени и т.д., независимо от установки выключателя POWER, Ванадиево-литиевая выключателя РОWER. Ванадиево-литиевая батарейка всегда подзаряжается, пока Вы используете видеокамеру. Однако, батарейка постепенно будет разряжаться, ссли Вы не используете видеокамеру. Она полностью разрядится приблизительно за один год, если Вы не обще не будете использовать видеокамеру. Даже если ванадиево-литиевая батарейка не заряжена, это не будет влиять на работу видеокамеры. Для сохранения даты и времени и т.д. заряжайте батарейку перед использованием видеокамеры, если батарейка разряжена. Существуют следующие методы зарядки: • Подсоедините видеокамеру к электрической сети с использованием прилагаемого оетевого адаптера

- прилагаемого сетевого адаптера переменного тока и оставьте видеокамеру при выключенном выключателе POWER более, чем на 24 часа.
- Установите полностью заряженный батарейный блок в видеокамеру и оставьте видеокамеру при выключенном выключателе POWER более, чем на 24

# Resetting the date and time

# Установка даты и времени

(1) Set the POWER switch to CAMERA (2) Press MENU to display the menu

- (2) Press MENU to display the menu.

  (3) Turn the control dial to select (a), then press the dial.

  (4) Turn the control dial to select CLOCK SET, then press the dial.

  (5) Turn the control dial to adjust the year, then press the dial.

  (6) Set the month, day, hour and minutes by turning and pressing the control dial.

  (7) Press MENU to erase the menu display.


- (1) Установите выключатель POWER в положение CAMERA. (2) Нажмите MENU для отображения меню.
- (3) Поверните регулировочный диск для выбора , а затем нажмите диск.
- (4) Нажмите регулировочный диск для выбора CLOCK SET, а затем нажмите диск.
- (5) Поверните регулировочный диск для
- (э) I (оверните регулировочным диск для регулировки года, а затем нажимте диск.
   (6) Установите месяц, дату, час и минуты путем поворачивания и нажатия регулировочного диска.
   (7) Нажимте MENU для стирания дисплея


# **Resetting the date** and time

The date and time are set at the factory. Set the time according to the local time in your country. If you do not use the camcorder for about a year, the date and time settings may be released (bars may appear) because the vanadium-lithium battery installed in the camcorder will have been discharged. In this case, first charge the vanadium-lithium battery, then reset the date and time. The date and time are set at the factory. Set the

# Установка даты и времени

Дата и время установлены на заволе Дата и время установлены на заводе. Установите время в соответствии с местным временем в Вашей стране. Если Вы не используете видеокамеру приблизительно в течение одного года, то установки даты и времени могут быть утеряны (могут появляться черточки) вследствие разрядки ванадиево-литивеюй батарейки, установленной в Вашей видеокамере. В таком случае сперва зарядите ванадиево-литиевую батарейку, а затем снова установите дату и время.

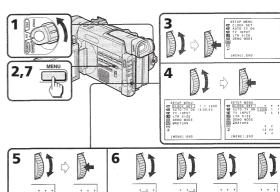

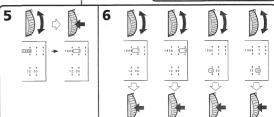

## Resetting the date and time

# To correct the date and time setting

# If you do not set the date and time "-----" is recorded on the tape and "80.1.1" on the PC card or floppy disk.

### The year indicator changes as follows: → 1998 → 1999 →..... 2001 ..... → 2029 —

Note on the time indicator The internal clock of this camcorder operates on a 24-hour cycle

## Установка даты и времени

# Для корректировки установки даты

**и времени** Повторите пункты с 2 по 5.

# Если Вы не установили дату и время "------" будет записано на ленте и "80.1.1" на плате персонального компьютера или флоппи

# Индикатор года изменяется следующим

→ 1998 → 1999 →..... 2001 ..... → 2029 —

Примечание к индикатору времени Встроенные часы данной видеокамеры работают в 24-часовом цикле.

# Simple setting of clock by time difference

You can easily set the clock for a local time by a time difference in the menu system. You can also reset the clock simply by setting the time difference to zero.

(1) While the camcorder is in Standby mode, press MENU to display the menu.

- (2) Turn the control dial to select ETC, then press
- (3) Turn the control dial to select WORLD TIME,
- (3) I'um the control dial to select WORLD TIME, then press the dial.

  (4)Turn the control dial to set a time difference, and press the dial. The hour of clock changes in relation to a time difference which you set.

  (5)Press MENU to erase the menu display.


## Простая установка часов с помощью разницы во времени

Вы можете легко установить часы на местное время по разнице во времени в системе

- (1)Когда видеокамера будет находится в
- Когда видеокамера будет находится в режиме готовности нажмите MENU для отображения меню.
   Поверните регулировочный диск для выбора Ш, а затем нажмите диск.
   Поверните регулировочный диск для выбора WORLD TIME, а затем нажмите диск
- диск.

  (а)Поверните регулировочный диск для установки разницы во времени, а затем нажмите диск. Время на часах изменится в соответствии с разницей во времени, которую Вы установили.

  (5)Нажмите MENU для стирания дисплея
- меню.

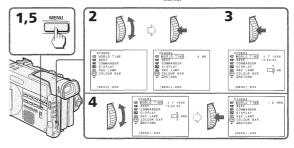

### Note on WORLD TIME

If the clock is not set, WORLD TIME does not

### Примечание к WORLD TIME

ы функция WORLD Если часы не установлен ТІМЕ не будет работать.

153

Допо

# Tips for using the battery pack

This section shows you how you can get the most out of your battery pack.

# Preparing the battery pack

# Always carry additional batteries

Have sufficient battery pack power to do 2 to 3 times as much recording as you have planned.

# Battery life is shorter in a cold

environment
Battery efficiency is decreased, and the battery will be used up more quickly, if you are recording in a cold environment.

To save battery power

Do not leave the camcorder in Standby mode when not recording to save the battery power. A smooth transition between scenes can be made even if recording is stopped and started again. While you are positioning the subject, selecting an angle, or looking at the LCD screen or through the viewfinder, the lens moves automatically and the battery is used. The battery is also used when a tape is inserted or removed.

## Советы по использованию батарейного блока

Данный раздел показывает, как Вы можете олучить наибольшую отдачу от Вашего батарейного блока

## Подготовка батарейного блока

# Всегда носите дополнительные

батарейные блоки
Имейте достаточный заряд батарейного блока для выполнения записи в 2 - 3 раза больше, чем Вы запланировали.

# Срок службы заряда батарейного

Срок службы заряда батарейного будет короче в холодных условиях Эффективность батарейного блока понижается, и заряд батарейного блока используется быстре, если Вы производит запись в холодных условиях.

# Для экономии заряда батарейного

омии заряда батар оставляйте видеокамеру в режиме готовности, когда Вы не производите запись. Плавный переход между сценами может быть выполнен, даже если запись была остановлена и начата снова. Когда Вы позиционируете объект, выбираете угол или смотрите на экран ЖКД или в видоискатель, объектив перемещается автоматически, и батарейный блок будет использоваться Батарейный блок также используется при вставке и удалении ленты.

# Tips for using the battery

# When to replace the battery

While you are using your camcorder, the remaining battery indicator on the LCD screen or in the viewfinder decreases gradually as battery power is used up.

power is used up.
The remaining time in minutes also appears

# Когда заменять батарейный

Советы по использованию батарейного блока

Когда Вы используете видеокамеру индикатор оставшегося заряда батарейного блока на экране ЖКД или в видоискателе опока на экране жку, или в видойскателе постепенно уменьшается по мере использования заряда батарейного блока Также появляется оставшееся время в



When the remaining battery indicator reaches the lowest point, the \indicator appears and starts flashing on the LCD screen or in the viewfinder. When the Indicator on the LCD screen or in When the Windicator on the LCD screen or in the viewfinder changes from slow flashing to rapid flashing while you are recording, set the POWER switch to OFF on the camcorder and replace the battery pack. Leave the tape in the camcorder to obtain a smooth transition between scenes after the battery pack has been replaced.

### Notes on the rechargeable battery pack

## Caution

Never leave the battery pack in temperatures above 60°C (140°F), such as in a car parked in the sun or under direct sunlight.

# The battery pack heats up

During charging or recording, the battery pack heats up. This is caused by energy that has beer generated and a chemical change that has occurred inside the battery pack. This is not cause for concern, and is normal.

Когда индикатор оставшегося заряда батарейного блока достигает наинизшей точки, индикатор 🖾 появляется и начинает мигать на экране ЖКД или в видоискателе. Когда индикатор Ф на экране ЖКД или в видоискателе изменяет медленное мигание видоискателе изменяет медленное мигание на быстрое мигание во время записи, установите выключатель РОЖЕЯ в положение ОFF на видеокамере и замените батарейный блок. Оставьте ленту в видеокамере для получения плавного перехода между сценами после замены батарейного блока.

### Примечания к аккумуляторному батарейному блоку

## Предостережение

предостережение
Никогда не оставляйте батарейный блок при
температуре сыыше 60°С (140°F), как
например, в автомобиле, припаркованном на
солнце, или под прямыми солнечными

# Батарейный блок нагревается

ьатаремным олок нагревается во время зарядки или залиси батарейный блок нагревается. Это вызвано генерируемой энергией и химическими реакциями, которые происходят внутри батарейного блока. Это не должно быть причиной для беспокойства так как это вполне нормалень?

154

# Tips for using the battery pack

# Battery pack care

- Battery pack care

  \*Remove the battery pack from the
  camcorder after using it, and keep it in a cool
  place. When the battery pack is installed to the
  camcorder, a small amount of current flows to
  the camcorder even if the POWER switch is set
  to OFF. This shortens battery life.

  \*The battery pack is always discharging even
  when it is not in use after charging. Therefore,
  you should charge the battery pack right before
  using the camcorder.

## The life of the battery pack

If the battery indicator flashes rapidly just after turning on the camcorder with a fully charged battery pack, the battery pack should be replaced with a new fully charged one.

**Charging temperature**You should charge batteries at temperatures from 10°C to 30°C (from 50°F to 86°F). Lower temperatures require a longer charging time.

### Notes on the "InfoLITHIUM" **Battery Pack**

# What is the "InfoLITHIUM" battery

The "InfoLITHIUM" battery pack is a lithium battery pack which can exchange data with compatible video equipment about its battery

compatible viace equipment about its battery consumption. When you use this battery pack with video equipment having the \$\mathbb{T}\_{interpretain}\$ mark, the video equipment will indicate the remaining battery time in minutes.\*

\* The indication may not be accurate depending.

on the condition and environment which the equipment is used under.

# Советы по использованию батарейного блока

- Уход за батарейным блоком
   Снимите батарейный блок с
  видеокамеры после использования и
  храните его в прохладном месте. Когда
  батарейный блок установлен на
  видеокамеру, небольшое количесвто
  электрического тока поступает на
  видеокамеру, даже если выключатель
  РОМЕВ установлен в положение ОРЕ. Это
  сокращает срок службы заряда батарейного
  блока.
- Батарейный блок всегда разряжается, даже если он не используется после зарядки. Поэтому Вы должны заряжать батарейный блок непосредственно перед использованием видеокамеры

# Срок службы батарейного блока Если индикатор батарейного блока быстро мигает сразу после включения видеокамеры

мин ает сразу после включения видеокс с полностью заряженным батарейным блоком, батарейный блок должен быть заменен новым полностью заряженным батарейным блоком

Температура зарядки
Вы должны заряжать батарейный блок при
температре от 10°C до 30°C (от 50°F до 86°F).
Более низкая температура требует более
длительного времени зарядки.

# Примечания к батарейному блоку "InfoLITHIUM"

Что такое батарейный блок
"InfoLITHIUM"
"InfoLITHIUM"
"InfoLITHIUM" является литиевым
батарейным блоком, который может
обмениваться данными с совместимой
видеоаппаратурой относительно расхода заряда батарейного блока. При использовании данного батарейного блока с видеоаппаратурой, имеющей знак (\*) мюитним, видеоаппаратура будет показывать оставшееся время заряда батарейного блока в минутах.

\* Показание можеть быть неточным, в зависимости от условий и окружающей среды при которых используется аппаратура

# Tips for using the battery

### How the battery consumption is displayed

The power consumption of the camcorder The power consumption of the cameorder changes depending on its use, such as whether the LCD panel is used or not, how the autofocusing is working on or not. While checking the condition of the cameorder, the "InfoLITHIUM" battery pack measures the battery consumption and calculates the remaining battery power. If the condition changes drastically, the remaining battery ation may suddenly decrease or incr more than 2 minutes. Even if 5 to 10 minutes is indicated as the battery

remaining time on the LCD screen or in the viewfinder, the 🖾 indicator may also flash under some conditions.

# To obtain more accurate remaining

To obtain more accurate remaining battery indication
Set the camcorder to recording standby mode and point towards a stationary object. Do not move the camcorder for 30 seconds or more.

•If the indication seems incorrect, use up the battery and then recharge if fully (Full charge<sup>10</sup>). Note that if you have used the battery in a hot or cold environment for long time, or you have repeated charging many times, the battery may not be able to show the correct time even after being fully charged.

 After you have used the "InfoLITHIUM" battery pack with an equipment not having the (1) InioLITHIUM mark, make sure that you use up the battery on the equipment having the (1) InfoLITHIUM mark and then recharge fully.

### Советы по использованию батарейного блока

# Как отображается расход заряда батарейного блока Потребляемая мощность видеокамерой

еняется в зависимости от условий ее использования, как например, используется ли ЖКД или нет, работает ли автоматическая фокусировка или нет. Во время проверки состояния видеокамеры батарейный блок "InfoLITHIUM" измеряет расход батарейного заряда и вычисляет оставшийся заряд батарейного блока. Если условия использования сильно изменя индикация оставшегося заряда батарейного индикация оставшегося заряда батарейно блока может резко уменьшиться или увеличиться блее чем на 2 минуты. Даже если 5 – 10 минут указано на экране ЖКД или в видоискателе в качестве оставшегося времени заряда батарейного блока, индикатор № может все же мигать при некоторых условиях.

# Для получения более точной индикации оставшегося заря батарейного блока

Установите видеокамеру на режим готовности записи и наведите ее на неподвижный объект. Не двигайте видеокамеру в течение 30 секунд или более.

- Если индикация кажется неправильной, используйте батарейный блок до конца, а затем полностью зарядите его (полнавя зарядка"). Имейте в виду, что если Вы использовали батарейный блок в жарких или холодных окружающих условиях в течение длительного времени, или если Вы повторяли зарядку много раз, батарейный блок может не показывать правльное время даже после полной зарядки.

  После использования батарейного блока "InfoLITHIUM" с аппаратурой, которая не имеет знака ()) мыстыми обязательно используйте заряд батарейного блока до конца с аппаратурой, имеющей знак ()) мыстими, а затем полностью зарядите его. затем полностью зарядите его (полнаяя

158

# Tips for using the battery pack

# Why the remaining battery indication does not match to

indication does not match the continuous recording time in the operating instruction

The recording time is affected by the environmental temperature and conditions. The recording time becomes very short in a cold environment. The continuous recording time in the operating instruction is measured under the condition of using a fully charged (or normal charged?) battery pack in 25 °C (77 °F). As the environmental temperature and condition are different when you actually use the camcorder, the remaining battery time is not same as the continuous recording time in the operating instruction. instruction.

- Full charge: Charging for about 1 hour after the charge lamp of the AC power adaptor goes off.
   Normal charge: Charging just until the charge lamp of the AC power adaptor goes off.

## Notes on charging

A brand-new battery pack
A brand-new battery pack is not charged. Before using the battery pack, charge it completely.

# Recharge the battery pack whenever

you din to thave to discharge it before recharging. If you charged the battery pack fully but you did not use it for a long time, it becomes discharged. Then recharge the battery pack

# Советы по использованию батарейного блока

# Почему индикация оставшегося Почему индикация оставшегося заряда батарейного блока не соответствует времени непрерывной записи, указанному в инструкции по эксплуатации На время записи влияет температура окружающей среды и другие условия. Время записи становится очень коротким в холодных условиях. Время непрерывной записи станованное в инструкции по

холодных условянки. Бремян непрерывной записи, указанное в инструкции по эксплуатации, измеряется в условиях использования полностью заряженного батарейного блока (или нормально оатареиного олока (или нормально заряженного<sup>20</sup>) при температуре 25°C (77°F). Так как температура окружающей среды и другие условия отличаются от реальных условий использования виде услювии использовании видеокамеры, то времи оставшегося заряда батарейного блока будет не таким, как время непрерывной записи, указанное в инструкции по эксплуатации.

- Полная зарядка: Зарядка приблизительно еще в течение 1 часа после того, как погаснет лампочка зарядки сетевого адаптера переменного тока.
- адаптера переменного тока.
  Нормальная зарядка: Зарядка только до тех пор, пока не погаснет ламочка заряд сетевого адаптера переменного тока.

# Примечания к зарядке

Совершенно новый батарейный блок Совершенно новый батарейный блок не заряжен. Перед использованием батарейного блока полностью зарядите его

### Подзаряжайте батарейный блок когда Вы хотите

когда вы хотите
Вам не нужно разряжать его перед
подзарядкой. Если Вы полностью зарядили
батарейный блок, но не использовали его
длительное время, то он разрядится. Тогда
зарядите батарейный блок перед
использованием.

# Tips for using the battery

# Notes on the terminals

# If the terminals (metal parts on the back) are not clean, the battery charge duration will be shortened When the terminals are not clean or when the

battery pack has not been used for a long time, repeatedly install and remove the battery pack a few times. This improves the contact condition. Also, wipe the +, - and C terminals with a soft cloth or paper.

## Be sure to observe the following

- Keep the battery pack away from fire.
   Keep the battery pack dry.
   Do not open nor try to disassemble the battery pack.

- Do not expose the battery pack to any mechanical shock.

# Советы по использованию батарейного блока

# Примечания к контактам

Если контакты (металлические части на задней стороне) загрязнены, то продолжительность действия батарейного блока будет сокращем Когда контакты загрязнены, или если батарейный блок не был использован в течение длительного времени, повторите установку и онятие батарейного блока несколько раз. Это улучшает состояние контакта. Также протрите контакты +, – и С мягкой тканью или бумагой. мягкой тканью или бумагой

# Обязательно соблюдайте следующее

- Храните батарейный блок подальше от
- Храните батарейный блок сухим Не пытайтесь открыть или разобрать батарейный блок.
- Не подвергайте батарейный блок никаким механическим ударам.

### Maintenance information and precautions

### Moisture condensation

If the camcorder is brought directly from a cold place to a warm place, moisture may conden inside the camcorder, on the surface of the ta inside the camcorder, on the surface of the tape, on the lens, on the head, or on the floppy disk. In this condition, the tape may stick to the head drum and be damaged or the camcorder may not operate correctly. To prevent possible damage under these circumstances, the camcorder is furnished with moisture sensors. Take the following precautions

### Inside the camcorder

Inside the camcorder

If there is moisture inside the camcorder, the beep sounds and the Ø indicator flashes. Eject the cassette or the floppy disk immediately. If this happens, none of the function except cassette ejection will work. Open the cassette compartment, turn off the camcorder, and leave it about 1 hour. When ≜ indicator flashes at the same time, the cassette is inserted in the camcorder. Eject the cassette, turn off the camcorder, and leave the cassette about 1 hour.

### On the lens

If moisture condenses on the lens, no indicator appears, but the picture becomes dim. Turn off the power and do not use the camcorder for about 1 hour.

How to prevent moisture condensation
When bringing the camcorder from a cold place to a warm place, put the camcorder in a plastic bag and allow it to adapt to room conditions over a period of time.

(1) Be sure to tightly seal the plastic bag containing the camcorder.

containing the camcorder.

(2) Remove the bag when the air temperature inside it has reached the temperature surrounding it (after about 1 hour).

# Информация по уходу за аппаратом и предосторожности

### Конденсация влаги

Если видеокамера принесена прямо из холодного места в теплое место, влага может сконденсироваться внури видеокамеры, на повержности ленты, на словем или на флопии-диске. В таком состоянии лента может прилинуть к барабану головки и будет повреждена, или видеокамера не сможет работать правильно. Для предотвращения возможного повреждения ввиду таких обстоятельств, видеокамера снабжена дат-иками влаги. Соблодайте следующие предосторожности.

## Внутри видеокамеры

Если внутри видеокамеры произошла конденсация влаги, то будет звучать зуммерный сигнал, и индикатор 

 будет мигать. Вытолкните кассету или флоппи диске немедленно. Если это случилось, то никакие функции, кроме выталкивания кассеты, не будут работать. Откройте кассетный отсек, выключите видеокамеру и оставьте ее приблизительно на 1 час. Если оставьте ее прилизительно на тчас. самое индикатор ≜ будет мигать в то же самое время, то значит кассета вставлена в видеокамеру. Вытолкните кассету, выключите видеокамеру и оставьте кассету приблизительно на 1 час.

### На объективе

На объективе Если влага сконденсировалась на объективе никакие индикаторы появляться не будут, нс изображение станет тусклым. Выключите питание и не используйте видеокамеру приблизительно 1 час.

# Как предотвратить конденсацик

Если видеокамера принесена из холодного места в теплое место, то положите видеокамеру в полиэтиленовый пакет и дайте ей адаптироваться к комнатным условиям за некоторый период времени. (1) Обязательно плотно закройте полиэтиленовый пакет, содержащий камеру

(2) Выньте камеру, когда температура воздуха внутри пакета достигнет температуры окружающего воздуха (приблизительно через 1 час).

# Maintenance information

## Video head cleaning

To ensure normal recording and clear pictures, clean the video heads. The video heads may be dirty when

- mosaic-pattern noise appears on the playback
- playback pictures do not move playback pictures are hardly visible
- playback pictures do not appear the & indicator and " CLEANING CASSETTE" message appear one after another or the 

  indicator flashes on the LCD screen or in the viewfinder

Информация по уходу за аппаратом и предосторожности

### Очистка видеоголовок


Для обеспечения нормальной записи и четкого изображения очищайте

- видеоголовки. Видеоголовки наверное загрязнены, когда: Мозаичная структурная помеха появляется
- на воспроизводимом изображении Воспроизводимые изображения не
- перемещеаются.
- Воспроизводимое изображение
- труднопросматриваемое
- Воспроизводимое изображение не появляется
- появляется

  «Индикатор № и сообщение "™ CLEANING

  CASSETE" появляются друг за другом или

  индикатор № мигает на экране ЖКД или в

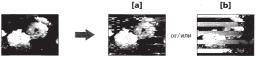

If [a] or [b] happens, clean the video heads with the Sony DVM12CL cleaning cassette (not supplied). Check the picture and if the above problem persists, repeat the cleaning. (Do not repeat cleaning more than 5 times in one session.)

Note
If the DVM12CL cleaning cassette (not supplied)
is not available in your area, consult your nearest
Sony dealer.

Если случится [а] или [b], очистите видеоголовки с помощью очистительной кассеты Sony DVM12CL (не прилагается). Проверьте изображение и, если вышеуказанная проблема все еще существует, повторите очистку. (Не повторяйте очистку более 5 раз за один прием.)

Тримечание Если очистительная кассета DVM12CL (не прилагается) не имеется в продаже в Вашей области, проконсультируйтесь у Вашего ближайшего дилера Sony.

161

# Maintenance information and precautions

# Precautions

- Camcorder operation
  Operate the camcorder on 7.2 V (battery pack) or 8.4 V (AC power adaptor).
  Should any solid object or liquid get inside the
- casing, unplug the camcorder and have it checked by Sony dealer before operating it any
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.

  • Keep the POWER switch set to OFF when not
- using the camcorder.
- Do not wrap up the camcorder and operate it since heat may build up internally.
   Keep the camcorder away from strong magnetic fields or mechanical vibration.

# On handling tapes • Do not insert anything in the small holes on the

- Do not open the tape protect cover or touch the
- tape.
   Avoid touching or damaging the terminals. To remove dust, clean the terminals with a soft cloth.

# Camcorder care

- When the camcorder is not to be used for a long time, disconnect the power source and remove the tape. Periodically turn on the power, operate the camera and player sections and play back a tape for about 3 minutes.

  Clean the lens with a soft brush to remove dust.
- If there are fingerprints on the lens, remove them with a soft cloth.
- Clean the camcorder body with a dry soft cloth.
- Clean the camcorder body with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.
   Do not let sand get into the camcorder. When you use the camcorder on a sandy beach or in a dusty place, protect it from the sand or dust.
  Sand or dust may cause the unit to malfunction, and sometimes this malfunction cannot be renaired.

# Информация по уходу за аппаратом и предосторожности

## Предосторожности

- Предосторожности

  Эксплуатация видеокамеры

   Эксплуатируйте видеокамеру от 7,2 В (батарейный блок) или 8,4 В (сетевой адаптер переменного тока).

   Если какион-имбудь твердый предмет или жидкость попали в корпус, то выключите видеокамеру и проверьте ее у дипера Sony перед дальнейшей ее эксплуатацией.

   Избегайте грубого обращения или механических ударов. Будьте особенно остнорожны с объективом.

   Держите выключатель РОWER в положении ОFF, когда видеокамера не используется.

   Не заворачивайте видеокамеру и не эксплуатируйте ее в таком состоянии, так как может произойти внутреннее повышение температуры.

   Держите видеокамеру подальше от сильных магнитных полей или механической вибрации.

# Относительно обращения с лентами

- Не вставляйте ничего в маленькие отверстия на задней стороне кассеты. Не открывайте защитную крышку ленты и
- трогайте ленту.
- не трогаите ленту.

  избегайте прикосновения к контактам и их
  повреждения. Для удаления пыли очищайте
  контакты с помощью мягкой ткани.

## Уход за видеокамерой

- Уход за видеокамерой 
  Когда видеокамера не используется в 
  течение длительного времени, отсоеди 
  источник питания и удалите ленту. 
  Периодически включайте питание, 
  работайте с секциями камеры и плейер 
  воспроизводите ленту приблизительно 
  течение 3-х минут. 
  Очищайте объектив с помощью мяткой 
  полительном 
  полител

- Очищайте объектив с помощью мягкой кисточки для удалония грязи. Если имеются отпечатки пальцев на объективе, то удалите их с помощью мягкой ткани. Очищайте корпус аппарата с помощью сухой мягкой ткани или мягкой ткани. спекта смоченной растеором умеренного моющего средства. Не используйте каких-либо типов растворителей, которые могут повредить отделку. Не позволяйте песку попасть в видеокамеру. Когда Вы используете видеокамеру на песчаном пляже или в пыльном месте, предохранийте ее от пески и пыль. Песок и пыль могут вызвать неисправность аппарата, и иногда такая неисправность может не подлежать ремонту. подлежать ремонту

# Maintenance information and precautions

# AC power adaptor

162

- Charging

   Use only an "InfoLITHIUM" type battery pack.

   Place the battery pack on a flat surface without vibration during charging.

   The battery pack will get hot during charging.

  This is normal.

- Others

   Unplug the unit from the mains when not in use for a long time. To disconnect the mains lead, pull it out by the plug. Never pull the lead
- Do not operate the unit with a damaged lead or
- Do not operate the unit with a damaged lead or if the unit has been dropped or damaged.
  Do not bend the mains lead forcibly, or put a heavy object on it. This will damage the cord and may cause a fire or an electrical shock.

  Be sure that nothing metallic comes into contact with the metal parts of the connecting plate. If this happens, a short may occur and the unit may be damaged.

  Always keep the metal contacts clean.

  Do not disassemble the unit.

  Do not apply mechanical shock or drop the
- Do not apply mechanical shock or drop the
- While the unit is in use, particularly during charging, keep it away from AM receivers ar video equipment because it will disturb AM reception and video operation.

  The unit becomes warm while in use. This is
- normal.

   Do not place the unit in locations that are: Extremely hot or cold, Dusty or dirty, Very humid, Vibrating.

# Информация по уходу за аппаратом и предосторожности

# Сетевой адаптер переменного тока

- Зарядка
   Используйте только батарейный блок типа
- используит е голько од гарейный олок тип "InfoLITHIUM". Разместите батарейный блок на плоской поверхности без вибрации во время
- зарядки.
   Батарейный блок будет нагреваться во время зарядки. Это является нормальным

- Отсоедините аппарат от электрической сети, если он не используется длительное время. Для отсоединения сетевого провода вытащите его за разъем. Никогда не тяните за сам провод.
- за сам провод. Не эксплуатируйте аппарат с поврежденным проводом, или если аппарат упал или был поврежден.
  • Не сгибайте сетевой провод силой и не
- ставьте на него тяжелые предметы. Это повредит провод и может привести к пожару или удару электрическим током.
  • Убедитесь, что никакие металлические
- предметы не соприкасаются с металлическими частями соединительной

- предметы не соприкасаются с металлическими частним соединительной пластины. Если это случится, может произойти короткое замыкамие, и аппарат может быть поврежден.

  Всегда поддерживайте металлические контакты в чистоте.

  Не разбирайте аппарат.

  Не подвергайте аппарат.

  Когда аппарат используется, особенно во время зарядки, держите его подальше от радиоприемников АМ и видеоаппаратуры, потому что он будет нарушать прием АМ и работу видеоаппаратуры.

  Аппарат становится теплым во время зарядки. Это является нормальным.

  Не размещайте аппарат в местах, которые: чрезмерно жархие или холодные, пыльные или гразные, очень влажные, подвержены вибрации.

# Maintenance information and precautions

### Note on dry batteries

To avoid possible damage from battery leakage or corrosion, observe the following.

• Be sure to insert the batteries in the correct

- Dry batteries are not rechargeable.
   Do not use a combination of new and old
- oatteries.

   Do not use different types of batteries.

   The batteries slowly discharge while not in use.

   Do not use a battery that is leaking.

- If battery leakage occurred

   Wipe off the liquid in the battery case carefully before replacing the batteries.

   If you touch the liquid, wash it off with water.

   If the liquid get into your eyes, wash your eyes with a lot of water and then consult a doctor.

If any difficulty should arise, unplug the unit and contact your nearest Sony dealer.

# Информация по уходу за аппаратом и предосторожности

# Примечания к сухим батарейкам

Во избежание возможного повреждения из-за протечки батареек или корроизии соблюдайте следующее Обязательно вставьте батарейки с

- правильным направлением.
   Сухие батарейки не являются перезаряжаемыми.
- Не используйте комбинацию старых и новых батареек.
- новых батареек.
   Не используйте различные типы батареек.
   Батарейки медленно разряжаются, даже
  если не используются.
   Не используйте батарейку, которая
  протекла.

- Если случится протечка батареек

   Тщательно вытрите жидкость в батарейном отсеке перед установкой батареек.

   Если Вы дотронетесь до жидкости, то промойте то место водой.

   Если жидкость попала Вам в глаза, то промойте Ваши глаза большим количеством воды, а затем обратитесь к врачу.

В случае возникновения каких-либо трудностей, отключите аппарат и обратитесь к Вашему ближайшему дилеру Sony.

# Using your camcorder abroad

Each country or area has its own electric and TV colour systems. Before using your camcorder abroad, check the following points.

### Power sources

You can use your camcorder in any country or area with the supplied AC power adaptor within  $100\,V$  to  $240\,V$  AC,  $50/60\,Hz$ .

## Difference in colour systems

This camcorder is a PAL system-based camcorder. If you want to view the playback picture on a TV, it must be a PAL system-based TV. Check the following list.

PAL system Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Great Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, etc.

# PAL-M system Brazil

PAL-N system Argentina, Paraguay, Uruguay

NTSC system
Bahama Islands, Bolivia, Canada, Central
America, Chile, Colombia, Ecuador, Jamaica,
Japan, Korea, Mexico, Peru, Surinam, Taiwan, the
Philippines, the U.S.A., Venezuela, etc.

### SECAM system

Bulgaria, France, Guiana, Hungary, Iran, Iraq, Monaco, Poland, Russia, Ukraine, etc.

# Использование Вашей видеокамеры за границей

Каждая страна имеет свои собственные системы эелектрической сети и цветного телевидения. Перед использованием Вашей видеокамеры за границей проверьте следующие пункты.

### Источники питания

Вы можете использовать видеокамеру в любой стране с помощью прилагаемого сетевого адаптера переменного тока в пределах от 100 В до 240 В перем. тока, 50/60 Гц.

### Различия в системах цветного телевидения

Данная видеокамера основана на системе PAL. Если Вы хотите просмотреть восроизводимое изображение на телевизор то это должен быть телевизор, основанный на системе PAL. Проверьте по слеюующему перечню.

Система РАL Австралия, Австрия, Бельтия, Великобритания, Германия, Голландия, Гонконг, Дания, Испания, Италия, Китай, Кувейт, Малайзия, Новая Зеландия, Норвегия, Португалия, Сингалур, Словащкая Республика, Тайланд, Фильяндия, Чешская Республика, Швейцария, Швеция и т.д.

# Система PAL-M

Система PAL-N

Аргентина, Парагвай, Уругвай

### Система NTSC

Система N1SC Багамские острова, Боливия, Венесуэла, Канада, Колумбия, Корея, Мексика, Перу, Суринам, США, Тайвань, филиппины, Центральная Америка, Чили, Эквадор, Ямайка, Япония и т.д.

### Система SECAM

Болгария, Венгрия, Гайяна, Ирак, Иран, Монако, Польша, Россия, Украина, Франция и

## 165

# English **Trouble check**

If you run into any problem using the camcorder, use the following table to troubleshoot the problem. Should the difficulty persist, disconnect the power source and contact your Sony dealer or local authorized Sony service facility.

Symptom	Cause and/or corrective actions
The power cannot be turned on.	The battery pack is not installed. Install the battery pack. (p. 8) The battery is dead.  Use a charged battery pack. (p. 9) The AC power adaptor is not connected to mains. Connect the AC power adaptor to mains. (p. 32)
The power goes off.	While being operated in CAMERA mode, the camcorder has been in Standby mode for more than 5 minutes. Set the POWER switch to OFF, then to CAMERA. (p. 14) The battery is dead. Use a charged battery pack. (p. 9)
The battery pack is quickly discharged.	The ambient temperature is too low. (p. 155) The battery pack has not been charged fully. Charge the battery pack again. (p. 9) The battery pack is completely dead, and cannot be recharged. Lise another battery pack (p. 32)

Symptom	Cause and/or corrective actions
START/STOP does not operate.	The tape is stuck to the drum. Figet the cassette. (p. 13) The tape has run out. Rewind the tape or use a new one. (p. 27) The POWER switch is not set to CAMERA. Set it to CAMERA. (p. 14) The tab on the cassette is out (red). Use a new tape or slide the tab. (p. 13) The START/STOP MODE selector is set to SSEC or ≜ ANTI GROUND SHOOTING. Set it to ≜. (p. 19)
The cassette cannot be removed from the holder.	<ul> <li>The AC power adaptor is not connected to mains.</li> <li>→ Connect the AC power adaptor to mains. (p. 32)</li> <li>The battery is dead.</li> <li>→ Use a charged battery pack or the AC power adaptor. (p. 9, 32)</li> </ul>
■ and  imes indicators flash and no function except for cassette ejection works.	<ul> <li>Moisture condensation has occurred.</li> <li>→ Remove the cassette and leave the camcorder for at least 1 hour. (p. 161)</li> </ul>
"CLOCK SET" appears when the camcorder is turned on.	Reset the date and time. (p. 151)
The end search function does not work.	You did not make a new recording after reinserting the cassette. The tape without cassette memory ejected after recording.

# Trouble check

## Operation

166

Symptom	Cause and/or corrective actions
The end search function does not work correctly.	The tape has a blank portion in the middle.
The tape does not move when a tape transport button is pressed.	The POWER switch is not set to VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E). Set it to VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E). (p. 27) The tape has run out. Rewind the tape or use a new one. (p. 27)
No sound or only a low sound is heard when playing back a tape.	<ul> <li>The volume is turned to the minimum.</li> <li>Open the LCD panel and press VOLUME +. (p. 27)</li> <li>AUDIO MIX is set to ST2 side in the menu system.</li> <li>Adjust AUDIO MIX in the menu system. (p.114)</li> </ul>
The new sound added to the recorded tape is not heard.	<ul> <li>AUDIO MIX is set to ST1 side in the menu system.</li> <li>Adjust AUDIO MIX in the menu system. (p. 114)</li> </ul>
The Steady Shot function does not work.	STEADYSHOT is set to OFF in the menu system.     Set it to ON. (p. 67)
Recording stops in a few seconds.	The START/STOP MODE selector is set to <b>5SEC</b> or  ANTI GROUND SHOOTING.  Set it to  ☐ (p. 19)
The autofocus function does not work.	<ul> <li>Focus is set to the manual mode.</li> <li>Set it to autofocus. (p. 75)</li> <li>Shooting conditions are not suitable for autofocus.</li> <li>Set focus to manual mode to focus manually. (p. 75)</li> </ul>
The fader function does not work.	The START/STOP MODE selector is set to <b>5SEC</b> or  ANTI GROUND SHOOTING.  Set it to   (p. 19)
The title is not displayed.	TITLE DSPL is set to OFF in the menu system.     → Set it to ON in the menu system. (p. 39)
The title is not recorded.	The tape has no cassette memory.  The tape has no cassette memory. (p. 79)  The cassette memory is full.  Erase another title. (p. 81)  The tape is set to prevent accidental erasure.  Slide the protect tab so that red portion is not visible. (p. 13)  Nothing is recorded in that position on the tape.  Superimpose the title to the recorded position. (p. 79)
The cassette label is not recorded.	The tape has no cassette memory.  Use a tape with cassette memory. (p. 84)  The cassette memory is full.  Erase some titles. (p. 81)  The tape is set to prevent accidental erasure.  Slide the protect tab so that red portion is not visible. (p. 13)
Displaying the recorded date, date search function does not work.	<ul> <li>• The tape has no cassette memory.</li> <li>→ Use a tape with cassette memory. (p. 91)</li> <li>• CM SEARCH is set to OFF in the menu system.</li> </ul>

→ Set it to ON. (p. 92)

## Trouble check

### Operation

Symptom	Cause and/or corrective actions
The title search function does not work.	The tape has no cassette memory.  Use a tape with cassette memory. (p. 95)  CM SEARCH is set to OFF in the menu system.  Set it to ON. (p. 96)  There is no title in the tape.  Superimpose the titles. (p. 79)
CIII indicator does not appear when using a tape with cassette memory.	<ul> <li>The gold-plated connector of the tape is dirty or dusty.</li> <li>→ Clean the gold-plated connector. (p. 150)</li> </ul>
The date search, title search, or end search does not work correctly.	The tape has a blank portion between the recorded portions. (p. 148)
The click of the shutter does not sound.	<ul> <li>BEEP is set to OFF in the menu system.</li> <li>→ Set it to MELODY or NORMAL. (P. 41)</li> </ul>
Picture Symptom	Cause and/or corrective actions
The image on the viewfinder screen is not clear.	<ul> <li>The viewfinder lens is not adjusted.</li> <li>→ Adjust the viewfinder lens. (p. 15)</li> </ul>
A vertical band appears when a subject such as lights or a candle flame is shot	<ul> <li>The contrast between the subject and background is too high. The camcorder is not malfunctioning.</li> <li>Change locations.</li> </ul>
against a dark background.	Tenange locations.
0	The video heads may be dirty. Clean the heads using the Sony DVM12CL (not supplied) cleaning cassette. (p. 162)
against a dark background.  The picture is "noisy" or does not appear.  indicator flashes on the LCD screen or in the viewfinder.	The video heads may be dirty.     Clean the heads using the Sony DVM12CL (not

The picture does not appear on the LCD screen or in the viewfinder.

In picture does not appear on the LCD on the viewfinder.

In picture does not appear on the LCD on the viewfinder.

Continued to the next page

LCD BRIGHT is not adjusted properly.
 → Press + or – to obtain the brightness you want. (p. 20, 27)

→ Close the LCD panel.
 If I D minutes elapse after you set the POWER switch to CAMERA without inserting a cassette, the camcorder automatically sarris the demonstration or DEMO MODE is set to ON in the menu system.
 → Insert the cassette and the demonstration stops, You can deactivate the demonstration. (p. 193)
 The self-diagnosis display function has been activated.
 → Check the code and diagnosis the problem by referring to the code chart. (p. 172)

· The camcorder is not malfunctioning.

169

# Trouble check

The picture is too bright or too dark on the LCD screen.

A vertical band appears when shooting a very bright subject.

An unknown picture is displayed on the LCD screen or in the viewfinder.

A display such as "C:□□:□□" appears on the LCD screen or in the viewfinder.

## Others

Symptom	Cause and/or corrective actions
No function works though the power is on.	<ul> <li>Disconnect the mais lead of the AC power adaptor or remove the battery, then reconnect it in about 1 minute. Turn the power on. If the functions still do not work, open the LCD panel and press the RESET button beside the speaker using a sharp-pointed object. (If you press the RESET button, all the settings including the date and time return to the default.) (p. 183)</li> </ul>
DV synchro-editing does not function.	<ul> <li>The input selector on the VCR is not set correctly.</li> <li>Set the selector to DV input position. If you use another DV camcorder, set the power switch to VTR.</li> <li>The camcorder is connected to DV equipment of other than Sony.</li> <li>Operate normal editing.</li> <li>Setting programme on a blank portion of the tape is attempted.</li> <li>Set the programme again on a recorded portion.</li> </ul>

Trouble check

## Picture

Symptom	Cause and/or corrective actions
The picture seems to be in flash motion.	<ul> <li>PROG. SCAN is set to ON in the menu system, or the POWER switch is set to MEMORY. This is caused by progressive scanning (display with all the pixels) and is not a malfunction.</li> </ul>
●●●● is displayed on the LCD screen or in the viewfinder.	The START/STOP MODE selector is set to <b>5SEC</b> .  Set it to ≚ . (p. 19)
Remaining tape indicator is not displayed.	<ul> <li>The ™REMAIN in the menu system is set to AUTO.</li> <li>If the remaining tape indicator is always displayed, set it to ON.</li> </ul>
The memory card slot does not function.	The battery is dead.  Juse a charged battery pack or the AC power adaptor. The floppy disk is not inserted correctly.  Eject the floppy disk and insert it correctly. The POWER switch is set to CAMERA.  Set it to MEMORY or VTR (DCR-TRV900E)/PLAYER (DCR-TRV990E).
Recording does not function.	The disk has already been recorded to its full capacity.  Trase unnecessary images and record again. The floppy disk or PC card is not inserted.  Insert the disk or card. Unusable floppy disk is inserted.  Use 2HD 1.44 MB, MS-DOS format floppy disk. Unformatted disk is inserted.  Format the disk. The protect tab on the floppy disk is set to protect.  Side the tab to write.
The image cannot be deleted.	The image is protected.     → Cancel the protect.

# Others

Symptom	Cause and / or corrective actions
While editing using the i.LINK cable (DV connecting cable), recording picture cannot be monitored.	Remove the i.LINIK cable (DV connecting cable), and connect it again.
The camcorder becomes warm.	If the power of the camcorder is on for a long time, it becomes warm, which is not malfunction.
The supplied Remote Commander does not work.	COMMANDER is set to OFF in the menu system.     → Set it to ON.     Something is blocking the infrared rays.     → Remove the obstacle.     The battery is not inserted with the correct polarity.     Insert the battery with the correct polarity. (p. 189)     The batteries are dead.     → Insert new ones. (p. 189)

170

# English **Self-diagnosis function**

The camcorder has a self-diagnosis display. This function displays the camcorder's condition with five digits (a combination of a letter and figures) on the LCD screen or in the viewfinder. If this occurs, check the following code chart. The five-digit display informs you of the camcorder's current condition. The last two digits (indicated by  $\square\square$ ) will differ depending on the state of the camcorder.



Self-diagnosis display

•C:□□:□□


You can service the camcorder yourself.
•E:□□:□□


Contact your Sony dealer or local authorized Sony facility.


Five-digit display	Cause and/or corrective actions
C:04:□□	<ul> <li>The battery other than "InfoLITHIUM" is used.</li> <li>→ Use the "InfoLITHIUM" battery.(p. 157)</li> </ul>
C:21:□□	<ul> <li>Moisture condensation has occurred.</li> <li>Remove the cassette and leave the camcorder for at least 1 hour (p. 161).</li> </ul>
C:22:□□	<ul> <li>The video heads are dirty.</li> <li>Clean the heads using the Sony DVM12CL cleaning cassette (not supplied). (p. 162)</li> </ul>
C:31:□□ C:32:□□	<ul> <li>A serviceable situation not mentioned above has occurred.</li> <li>Remove the cassette and insert it again, then operate the camcorder. (p. 13)</li> <li>Disconnect the mains lead of the AC power adaptor or remove the battery pack. After reconnecting the power source, operate the camcorder.</li> </ul>
E:61:□□ E:62:□□	<ul> <li>A camcorder malfunction which you cannot service has occurred.</li> <li>Contact your Sony dealer or local authorized Sony service facility and inform them of the five digits. (example: E:61:10)</li> </ul>


If you are unable to resolve the problem, contact your Sony dealer or local authorized Sony service facility.


information Дополнительная

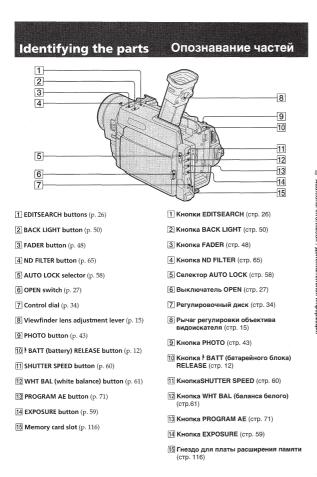

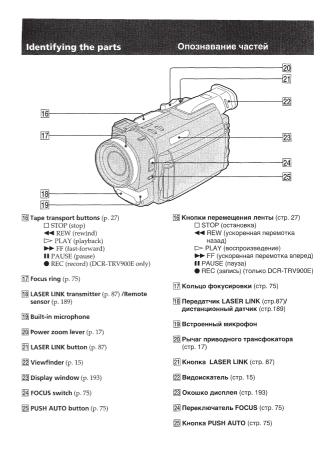

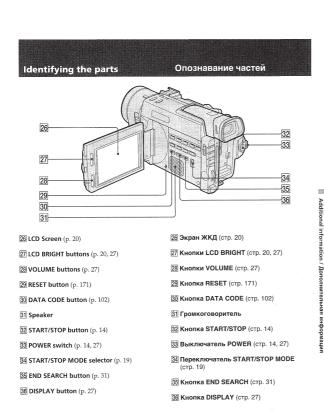

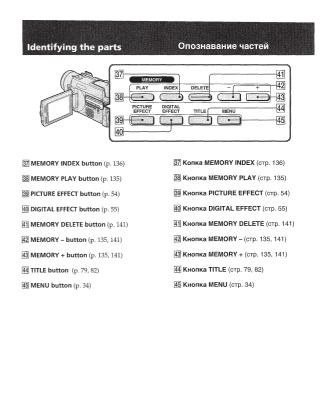

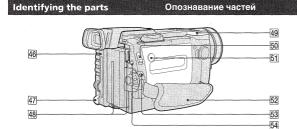

46 Access lamp (p. 120)

47 DC IN jack (p. 9)

48 Hooks for shoulder strap (p. 190)

49 Intelligent accessory shoe

50 EJECT switch (p. 13)

51 PUSH button (p. 13)

52 Grip strap (p. 24)

53 Lock knob (p. 16)

54  $\circlearrowleft$  (self-timer) button (p. 23)

# Intelligent Accessory Shoe

Note on the intelligent accessory shoe Supplies power to optional accessories such as a video light or microphone. The intelligent accessory shoe is linked to the POWER switch, allowing you to turn a pad of the control of the allowing you to turn on and off the power supplied by the shoe. Refer to the operating instruction of the accessory for further information. To connect an accessory, press down and push it to the end, and then tighten the screw. To remove an accessory, loosen the screw and then press down and pull out the accessory.

46 Лампочка доступа (стр. 120)

47 Гнездо DC IN (стр. 9)

48 Ушки для плечевого ремня (стр. 190)

49 Башмак для установки вспомогательного оборудования

50 Выключатель ЕЈЕСТ (стр. 13)

51 Кнопка PUSH (стр. 13)

52 Ременной захват (стр. 24)

53 Фиксирующая ручка (стр. 16)

54 Кнопка 🚫 (таймера самозапуска) (стр. 23)

Intelligent Accessory Shoe

Примечание к башмаку для установки вспомогательного оборудования Подает питание на дополнительное вспомогательное оборудование, как например, видеофонарь или микрофон. Башмак для установки вспомогательного оборудования связан с выключателем РОWER, что позволяет Вам включать и выключать питание. подаваемое черовз выключать питание, подаваемое через башмак. Смотрите инструкцию по эксплуатации вспомогательного оборудования для получения дальнейшей информации. Для подсоединения вспомогательного оборудования нажмите его вниз и вдвиньте до конца, а затем затяните винт. Для снятия вспомогательного оборудования отпустите винт, а затем нажмите вниз и вытащите вспомогательное 185

EANC ← control jack
 Stands for Local Application Control Bus System. The ← control jack is used for controlling the tape transport of video equipment and peripherals connected to it. This jack has the same function as the jack indicated as CONTROL L or REMOTE.

[56] § DV IN/OUT jack (DCR-TRV900E) (p. 104) § DV OUT jack (DCR-TRV890E) (p. 104) This "i.LINK" mark is a trademark of Sony Corporation and indicates that this product is in agreement with IEEE 1394-1995 specifications and their revisions.

The  $\slash\hspace{-0.6em}\mathring{}_{\! \! \! i}$  DV IN/OUT and  $\slash\hspace{-0.6em}\mathring{}_{\! \! \! i}$  DV OUT jacks are i.LINK compatible.

57 Tripod receptacle (p. 25) Make sure that the length of the tripod screw is less than 6.5 mm (9/32 inch). Otherwise, you cannot attach the tripod securely and the screw may damage the camcorder.

58 Stand

59 MEMORY RELEASE lever

60 (headphones) jack (p. 28)

61 AUDIO/VIDEO jack (p. 86, 103)

62 S VIDEO jack (p. 45, 86, 103)

63 Camera recording lamp

64 MIC jack (PLUG IN POWER) (p. 112) Connect an external microphone (not supplied). This jack also accepts a "plug-inpower" microphone.

186

Identifying the parts Опознавание частей 60 61 62 55 56 57 58 59 63 64

ББ Гнездо управления LANC €

№ Гнездо в DV IN/OUT (DCR-TRV900E) (стр. 104) Гнездо в DV OUT (DCR-TRV900E) (стр. 104) Данный энак "I.LINK" является товарным знаком корпорации Sony и указывает на то, что данная продукция соответствует техническим характеристикам IEEE 1394-1995 и их модификациям.

Гнезда і DV IN/OUT и і DV OUT являются совместимыми с і.LINK.

√П Держатель треноги (стр. 25)
Убедитесь, что длина винта треноги мен
б,5 мм. В противном случае Вы не смож
надержно подсоединить треногу, а винт
может повредить видеокамеру.

Может повредить видеокамеру.

Телера повредить видеокамеру.

Телер

58 Подставка

59 Рычаг MEMORY RELEASE

60 Гнездо ( (головных телефонов) (стр. 28)


61 Гнездо AUDIO/VIDEO (стр. 86, 103)

62 Гнездо S VIDEO (стр. 45, 86, 103)

Пампочка записи видеокамерой

В Тнездо МІС (PLUG IN POWER) (стр. 112) Для подсоединения внешнего микрофона (не прилагается). Это гнездо допускает подключение микрофона "подключаемого к питанию".

# Identifying the parts Опознавание частей Floppy disk adapter Адаптер флоппи-диска

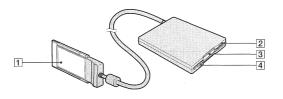

1 Memory slot connector (p. 120)

2 Floppy disk eject button (p. 121)

3 Floppy disk slot (p. 121) 4 Access lamp (p. 120)

1 Соединитель гнезда для платы расширения памяти (стр. 120)

[2] Кнопка выталкивания флоппи-диска (CTD. 121) З Гнездо флоппи диска (стр. 121)

4 Лампочка доступа (стр. 120)

**Identifying the parts** 


Remote Commander

The buttons that have the same name on the Remote Commander as on the camcorder function identically.

Опознавание частей

Пульт дистанционного управления

Кнопки пульта дистанционного упрвления, которые имеют одинаковые наименованик кнопками на видеокамере, функционирую идентично.

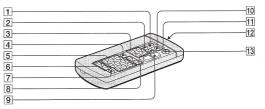

1 PHOTO button (p. 43)

2 DISPLAY button (p. 28)

 $\fbox{3} \ \textbf{Memory control buttons} \ (p.\ 135)$ 

 $\boxed{\textbf{4} \textbf{ SEARCH MODE button} \ (p.\ 92,\ 96,\ 98)}$ 

5 Tape transport buttons (p. 27)

 $\begin{tabular}{ll} \hline \textbf{6} & \textbf{REC button} \ (p.\ 110) \ / \textbf{MARK button} \ \textbf{(DCR-TRV900E only)} \ (p.\ 106) \\ \hline \end{tabular}$ 

7 AUDIO DUB button (p. 114)

**8 I ◄ / ▶►I** buttons (p. 92, 96, 98)

 $\fbox{9} \ \textbf{Power zoom button} \ (p.\ 17)$ 

 $\fbox{10}$  ZERO SET MEMORY button (p.~101)

11 DATA CODE button (p. 102)

12 Transmitter Point toward the remote sensor to control the camcorder after turning on the camcorder.

13 START/STOP button (p. 14)

**П Кнопка РНОТО** (стр. 43)

2 KHORKA DISPLAY (CTD. 28)

3 Кнопки управления памятью (стр. 135)

4 Кнопка SEARCH MODE (стр. 92, 96, 98) 5 Кнопки перемещения ленты (стр. 27)

6 Кнопка REC (стр. 110)/кнопка MARK (только DCR-TRV900E) (стр. 106)

7 Кнопка AUDIO DUB (стр. 114)

8 Кнопки I◄◄/▶►I (стр. 92, 96, 98)

9 Кнопка приводного трансфокатора (стр. 17)

10 Кнопка ZERO SET MEMORY (стр. 101)

11 Кнопка DATA CODE (стр. 102)

12 Передатчик
Нацельте в направлении дистанционного датчика для управления видеокамерой после ее включения.

13 Кнопка START/STOP (стр. 14)

# **Identifying the Parts**

## Опознавание частей

# To prepare the Remote Commander

To use the Remote Commander, you must inset two R6 (size AA) batteries. Use the supplied R6 (size AA) batteries.

- Remove the battery cover from the Remote Commander.
- Commander.

  (2) Insert both of the R6 (size AA) batteries with correct polarity.


  (3) Put the battery cover back onto the Remote Commander.

## Для подготовки пульта

- Для подготовки пульта дистанционного управления Для использования пульта дистанционного управления Вы должны вставить две батарейки Вб (размером АА). Используйте прилагаемые батарейки Вб (размером АА). (1) Снимите батарейную крышку с пульта дистанционного управления. (2) Вставьте обе батарейки Вб (размером АА) с правильной полярностью. (3) Обратно установить батарейную крышку на пульт дистанционного управления.





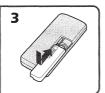

### Note on battery life

The batteries for the Remote Commander last about 6 months under normal operation. When the batteries become weak or dead, the Remote Commander does not work.

# To avoid damage from possible battery

leakage
Remove the batteries when you will not use the
Remote Commander for a long time.

### Remote control direction

sensor.

The operative range of the Remote Commander is about 5 m (16.4 feet) indoors. Depending on the angle, Remote Commander may not activate the camcorder.

ие к сроку службы батареек

Примечание к сроку служовы ратареек Батареек для пульта дистанционного управления хватает приблизительно на 6 месяцев при нормальных условиях эксплуатации. Когда батарейки станут слабыми или полностью разрядятся, пуль дистанционного управления не будет работать.

Во избежание повреждения из-за возможной утечки из батареек Удалите батарейки, если Вы не будете использовать пульт дистанционного управления в течение длительного времени

# Направление пульта дистанционного управления Нацельте пульт дистанционного управления

Нацельте пульт дистанционного управлени на дистанционный датчин. Рабочий диапазон пульта дистанционного упрваления составляет около 5 м в помещении. В зависимости от угла использования пульт дистанционного управления может не действовать на видеокамеру.

Identifying the parts Notes on the Remote Commander

# Опознавание частей Примечания к пульту дистанционного управления • Держите дистанционный датчик подальше

- Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise, the remote control may not be
- Be sure that there is no obstacle between the remote sensor on the camcorder and the Remote Commander.
- Remote Commander.

   This camcorder works in commander mode VTR 2. The commander modes (1, 2 and 3) are used to distinguish this camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR in commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VCR with black paper.

# Attaching the shoulder strap

Attach the supplied shoulder strap to the hooks for the shoulder strap.

- Держите дистанционный датчик подальше от сильных источников света, как например, прямые солнечные лучи или иллюминация.
   В противном случае дистанционное управление может не действовать.
   Убедитесь, что между дистанционным датчиком на видеокамере и пультом дистанционного управления нет полотатствия.
- препятствия
- пропятствия.

  Данная видеокамера работает в режиме пульта дистанционного управления VTR2. Режимы пульта дистанционного управления (1,2 и 3) используются для отличия данной видеокамеры от других КВМ фирмы Sony во избежание неправильной работы дистанционного управления. Если Вы используете другой КВМ фирмы Sony, работающий в режиме VTR2, мы рекомендуем Вам изменить режим пульта дистанционного управления или закрыть дистанционного управления или закрыть дистанционный датчик КВМ черной

# Прикрепление плечевого ремня

Прикрепите прилагаемый плечевой ремень к ушкам для плечевого ремня








3



189

190

# **Identifying the parts** Опознавание частей

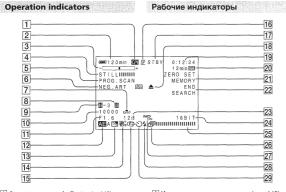

- $\fbox{1} \ \textbf{Cassette memory indicator} \ (p.\ 148)$
- $\fbox{2} \textbf{ Remaining battery indicator} \ (p.\ 156)$

3 Zoom indicator (p. 17) /Exposure indicator (p. 59) /Data file name indicator (p. 117)

- 4 Digital effect indicator (p. 56)
- $\fbox{5}$  PROG. SCAN indicator  $(p.\,46)$  /16:9WIDE
- 6 Picture effect indicator (p. 54)
- 7 White balance indicator (p. 61)
- 8 Gain shift indicator (p. 69)
- 9 AE shift indicator (p. 68)
- 10 Shutter speed indicator (p. 60)
- 11 Aperture indicator (p. 72)
- 12 Program AE indicator (p. 71)
- 13 Back light indicator (p. 50)

- 1 Индикатор памяти кассеты (стр. 148)
- 2 Индикатор оставшегося заряда батарейного блока (стр. 156)




- ③ Индикатор трансфокации (стр. 17)/ индикатор экспозиции (стр. 59)/индикатор имени файла данных (стр. 117)
- 4 Индикатор цифрового эффекта (стр. 56)
- 5 Индикатор PROG. SCAN (стр.46)/ индикатор 16:9 WIDE (стр. 51)
- [6] Индикатор эффекта изображений (стр. 54)
- 7 Индикатор баланса белого (стр. 61)
- 8 Индикатор смещения усиления (стр. 69)
- 9 Индикатор смещения АЕ (стр. 68)
- 10 Индикатор скорости затвора (стр. 60)
- 11 Индикатор апертуры (стр. 72) 12 Индикатор программы АЕ (стр. 71)
- 13 Индикатор задней подсветки (стр. 50)

- **Identifying the parts**
- 14 Steady shot OFF indicator (p. 67)
- 15 Manual focus/Infinity indicator (p. 74) 16 Recording mode indicator (p. 39)
- To Standby/Recording Indicator (p. 14) /Tape transport mode indicator (p. 27) /Image quality mode indicator (p. 122)
- 18 Warning indicators (p. 194)
- 19 Time code indicator (p. 16) /Self diagnosis indicator (p. 172) /Image number indicator (p. 136)
- 20 Remaining tape indicator (p. 193) /Memory playback indicator (p. 136)
- 21 ZERO SET MEMORY indicator (p. 101)
- 22 END SEARCH indicator (p. 31) 23 Gain indicator (p. 102)
- 24 Audio mode indicator (p. 39)
- 25 Microphone level indicator (p. 64)
- 26 Continuous mode indicator (p. 134)
- 27 ND filter indicator (p. 65)
- 28 Video flash ready indicator (p. 44)
- 29 Self-timer indicator (p. 23)

- Опознавание частей
- 14 Индикатор отключения устойчивой съемки (стр. 67)
- 15 Индикатор ручной фокусировки/ бесконечности (стр. 74)
- 16 Индикатор режима записи (стр. 39)
- 17 Индикатор готовности/записи (стр. 14)/ индикатор режима перемещения ленты (стр. 27)/индикатор режима качества изображения (стр. 122)
- 18 Предупреждающие индикаторы (стр. 194)
- ПЭ Индикатор временного когда (стр. 16)/ индикатор самодиагностики (стр. 172)/ индикатор номера изображения (crp. 136)
- Индикатор оставшейся ленты (стр. 193)/ индикатор воспроизведения из памяти (стр. 136)
- 21 Индикатор ZERO SET MEMORY (стр. 101)
- 22 Индикатор END SEARCH (стр. 31)
- 23 Индикатор усиления (стр. 102)
- 24 Индикатор звукового режима (стр. 39)
- 25 Индикатор уровня микрофона (стр. 64)
- 26 Индикатор непрерывного режима (стр. 134)
- 27 Индикатор фильтра ND (стр. 65)
- 28 Индикатор готовности видеолампывспышки (стр. 44)
- 29 Индикатор режима самозапуска (стр. 23)

192

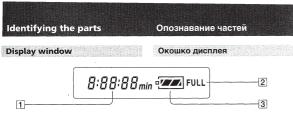

 $\begin{tabular}{ll} \hline \begin{tabular}{ll} \hline \begin{tabular}{ll} Remaining time in minutes indicator $(p,9)$ / Tape counter $(p,101)$ / Memory counter $(p,136)$ / Time code indicator $(p,14)$ \\ \hline \end{tabular}$ 

 $\fbox{2} \ \textbf{FULL charge indicator} \ (p.\ 9)$ 

 $\fbox{3} \textbf{ Remaining battery indicator} \ (p.\ 9,\ 156)$ 

## To watch the demonstration

You can watch a brief demonstration of pictures with special effects. If the demonstration appears when you turn on the camcorder for the first time, exit the demo mode to use your camcorder.

To enter demo mode
(1) Eject the cassette and set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-

TRV890E).

(2) While holding down ▷, set the POWER switch to CAMERA. The demonstration starts. The demonstration stops when you insert the

Note that once you enter demo mode, this mode is retained as long as the vanadium rechargeable battery is in place. Therefore, demonstration starts automatically 10 minutes later every time you set the POWER switch to CAMERA, and after you eject the cassette.

# To exit demo mode

(1) Set the POWER switch to VTR (DCR-TRV900E) or PLAYER (DCR-TRV890E). (2) While holding down □, set the POWER switch to CAMERA.

Индикатор оставшегося времени в минутах (стр. 9)/счетчик ленты (стр. 101)/счетчик памяти (стр. 136)/индикатор

временного кода (стр. 14) 2 Индкатор зарядки FULL (стр. 9)

③ Индикатор оставшегося заряда батарейного блока (стр. 9, 156)

# Для просмотра демонстрации

для просмотра демонстрации
Вы можете просмотреть короткую
демонстрацию изобраежний со специальными
эффектами. Если демонстрация появляется,
когда Вы включаете видеокамеру в первый
раз отключите режим демонстрации для
использования Вашей видеокамеры.

использования вашей видеокамеры.

Для ввода демонстрационного режима
(1) Вытолкните кассету и установите
выключатель РОWЕН в положение VTR
(DCR-ТПУЗООЕ) или РLAYER (DCRTTVЯЗООЕ) или РLAYER (DCRTTVЯЗООЕ) или РLAYER (DCRTTVЯЗООЕ) или РLAYER (DCRTTVЯЗООЕ)
(2) Удерживая в нажатом состоянии ▷,
установите выключатель РОWЕР в
положение САМЕЯА. Демонстрация
начинается. Демонстрация перкращается,
когда Вы вставите кассету.
Примите к оведению, кто если Вы введете
режим демонстрации, то этот режим будет
сохраняться до тех пор, пока аккумуляторная
ванадичевая батарейка находитея на месте.
Таким образом, демонстрация автоматически
одет начинаться каждый раз через 10 имнут
после того, как Вы установите выключатель
РОWER в положение САМЕЯА и вытолкните
кассету.

# Для отключения демонстрационного

режима
(1) Установите выключатель РОWER в положение VTR (DCR-TRV900E) или PLAYER (DCR-TRV890E).
(2) Удерживая в нажатом состоянии Д, установите выключатель РОWER в положение CAMERA.

**Warning indicators** 


# Предупреждающие индикаторы

If indicators flash on the LCD screen or in the viewfinder or warning messages appear on the screen, check the following:

• You can hear the beep sound when BEEP is to MELODY or NORMAL in the menu

system.

Если индикаторы мигают на экране ЖКД или в видоискателе или предупреждающие сообщения появляются в комине дисплея, то проверьте следующее: Љ: Вы можете слышать зуммерный звуковой сигнал, когда функция ВЕЕР установлена на MELODY или NORMAL в системе меню.

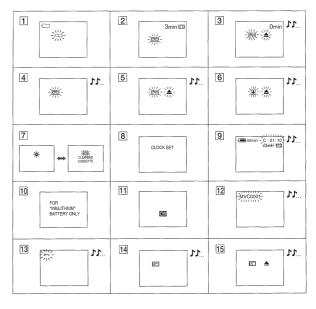

194

193

# **Warning indicators**

- 1 The battery is weak or dead. Slow flashing: The battery is w Slow flashing: The battery is weak.
  Fast flashing: The battery is dead.
  Depending on conditions, the ⇔ indicator
  may flash, even if there are 5 to 10 minutes remaining.
- 2 The tape is near the end. The flashing is slow.
- 3 The tape has run out. The flashing becomes rapid.
- 4 No tape has been inserted.
- 5 The tab on the tape is out (red).
- 6 Moisture condensation has occurred (p. 161)
- 7 The video heads may be contaminated.
- 8 The clock is not set. When this message appears though you set the date and time, the vanadium-lithium battery is discharged. Charge the vanadium-lithium battery. (p. 151)
- 9 Some other trouble has occurred Use the self-diagnosis function (p. 172). If the display does not disappear, contact your Son dealer or local authorized Sony service
- 10 The battery is not the "InfoLITHIUM" type
- 11 The tape has no cassette memory. (p. 5)
- 12 The file cannot be read properly
- 13 The image data file is protected. The flashing is slo
- 14 The tape has no memory left or cannot use the memory.
- 15 The protect tab is set to prevent accidental


# Предупреждающие индикаторы

- 1 Батарейный блок слабый или полностью разряженный Медленное мигание: Батарейный блок Быстрое мигание: Батарейный блок рави полностью разряженный. В зависимости от условий индикатор Ф может мигать, даже если еще осталось 5 или 10 минут.
- 2 Лента приближается к концу. Медленное мигание
- Э Лента закончилась.
  Мигание становится быстрым.
- 4 Лента не вставлена.
- 5 На кассете нет лепестка (красная
- [6] Произошла конденсация влаги. (стр. 161)

- [8] Часы не установлены. Когда данное сообщение появляется несмотря на то, что Вы установили дату и время, то ванадиеео литиевая батарейка разряжена. Зарядите ванадиево-литиевую батарейку. (стр. 151)
- Олучилась какая-либо другая проблема.
  Используйте функцию самодиагностики (стр. 178) Если индикация не исчезает, свяжитесь с Вашим дипером Sony или местным уполномоченным предприятием по техническому обслуживанию Sony.
- 10 Батарейный блок не является блоком типа "InfoLITHIUM".
- 11 Кассета ленты не имеет памяти. (стр. 5)
- 12 Файл не может быть считан надлежащим образом
- 13 Файл данных изображения защищен
- 14 На ленте не осталось памяти или память не может быть использов
- 15 Защитный лепесток установлен в положение для предотвращения случайного стирания.


# **SECTION 2 DISASSEMBLY**


NOTE: Follow the disassembly procedure as shown in the flow chart below.

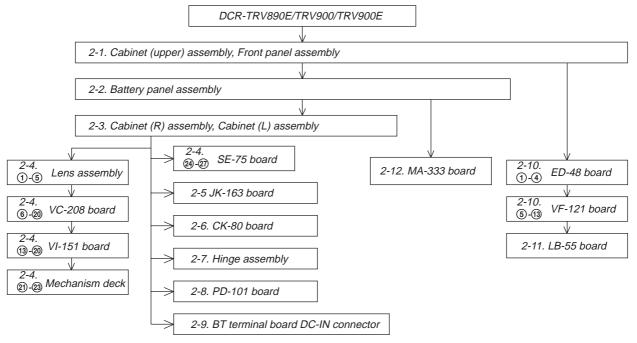


**NOTE:** Follow the disassembly procedure in the numerical order given.

# 2-1. CABINET (UPPER) ASSEMBLY, FRONT PANEL ASSEMBLY

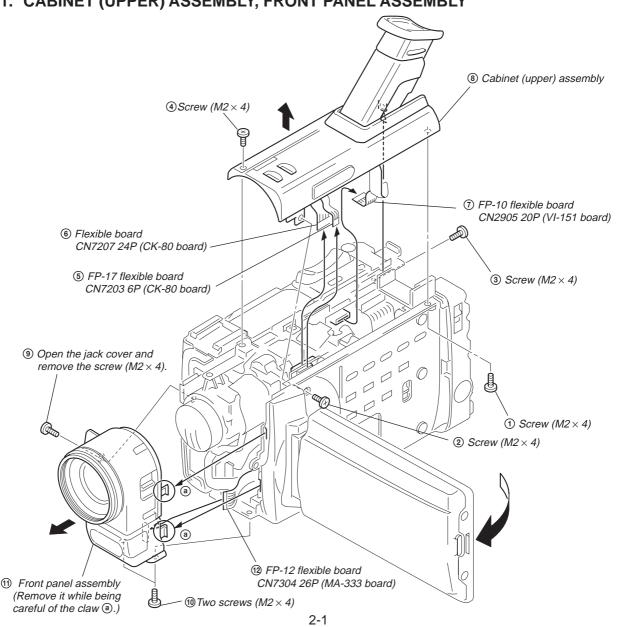


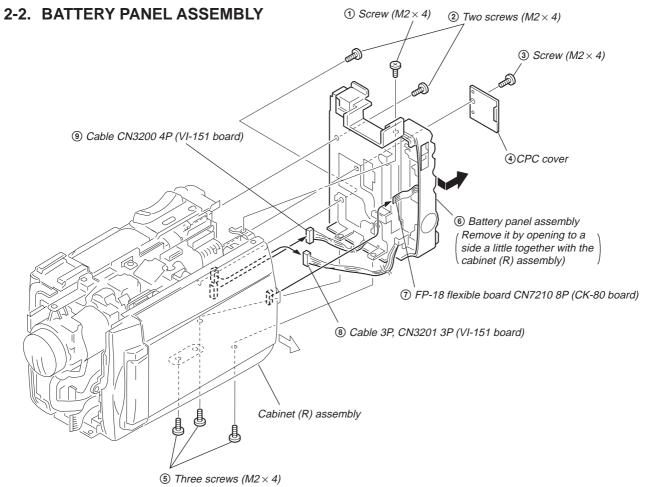



# 2-3. CABINET (R) ASSEMBLY, CABINET (L) ASSEMBLY

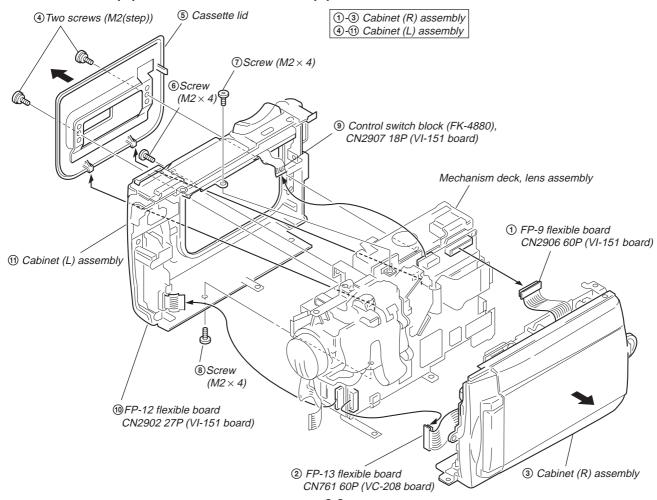


# 2-4. MECHANISM DECK, LENS ASSEMBLY, VC-208, VI-151, SE-75 BOARDS

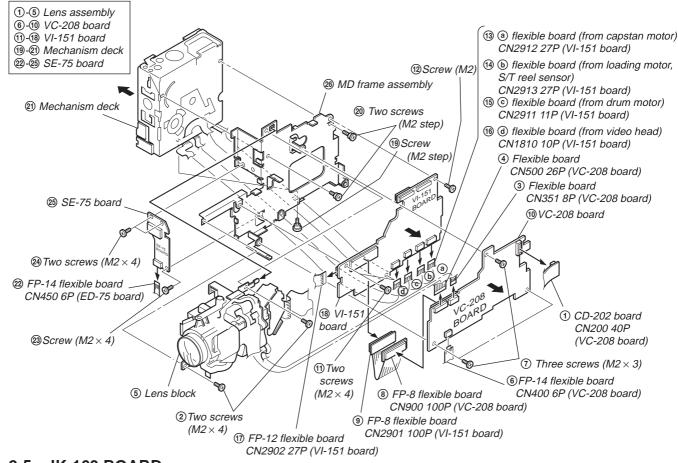

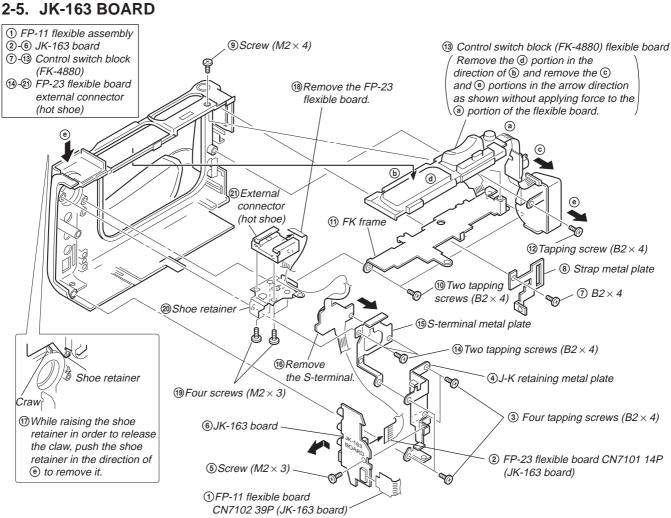


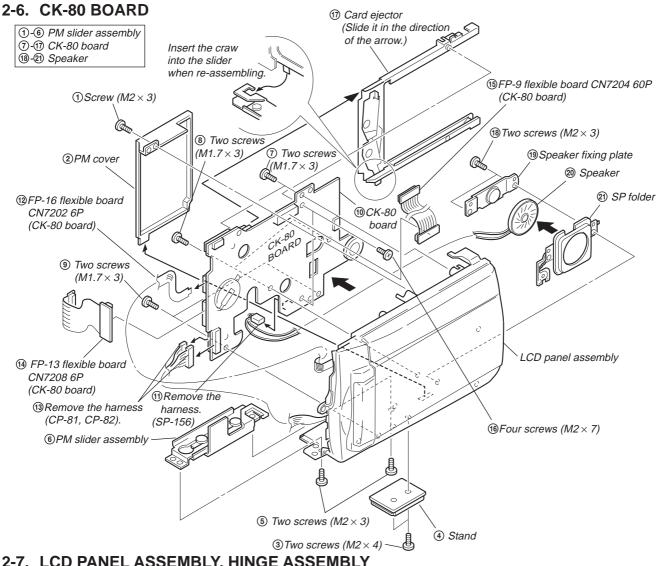


# 2-7. LCD PANEL ASSEMBLY, HINGE ASSEMBLY

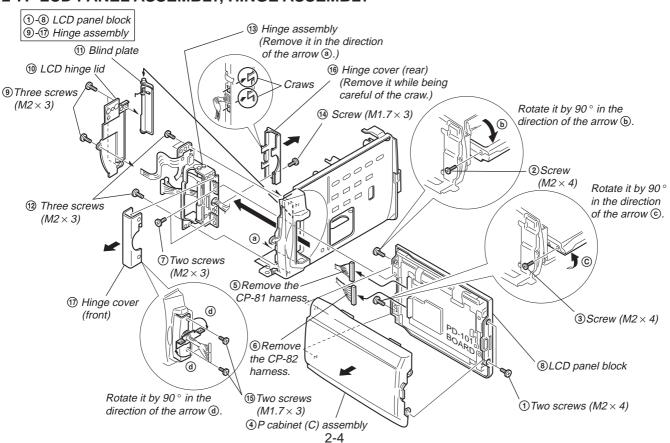


# 2-8. PD-101 BOARD

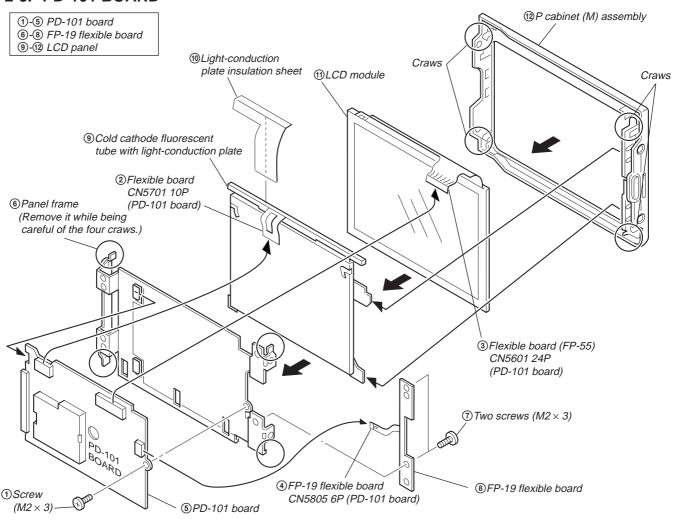


# 2-9. BT TERMINAL BOARD, DC-IN CONNECTOR

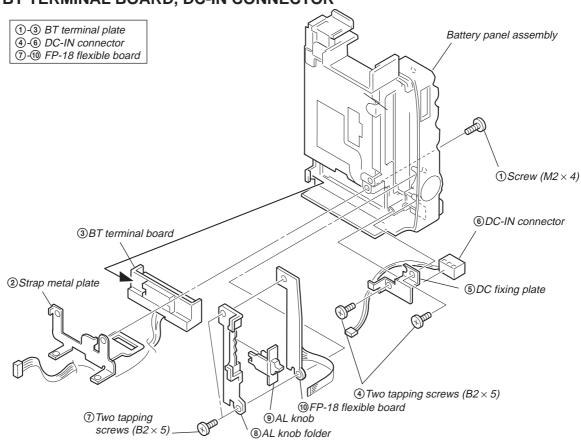


# 2-10.ED-48, VF-121 BOARDS

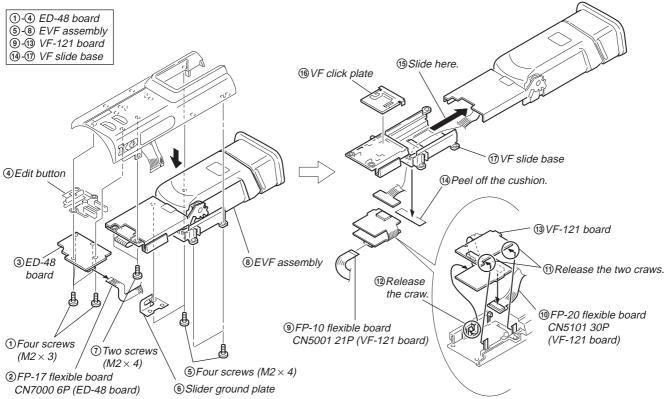

# 2-11. LB-55 BOARD

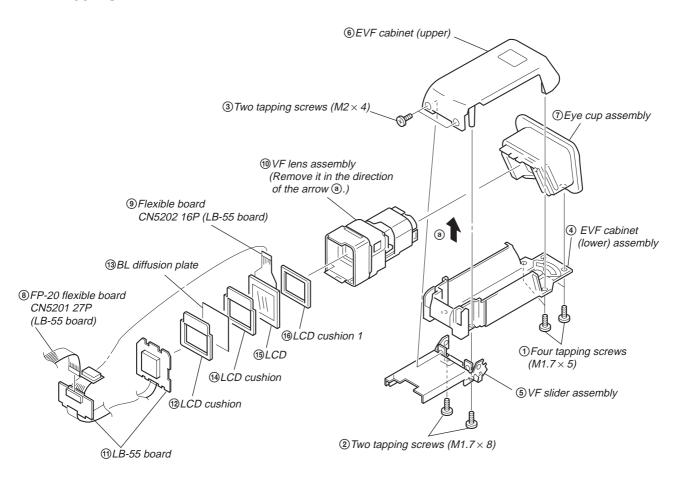


# 2-12.MA-333 BOARD

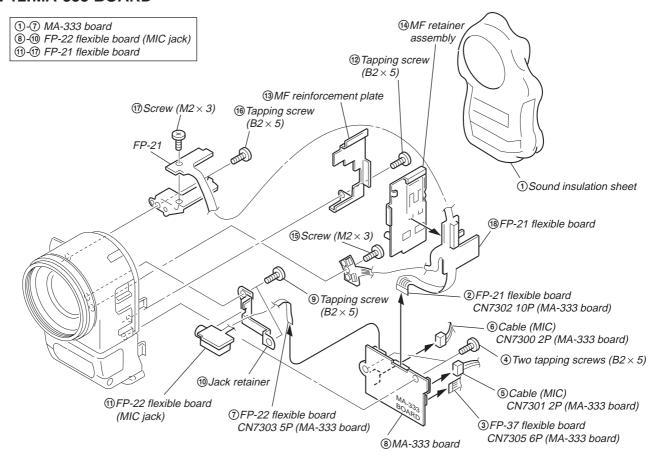



# 2-13. SERVICE POSITION (Mainly for check and voltage measurement)

Firstly, remove the following parts referring to DISASSEMBLY (sections 2-1 to 2-6, 2-10 and 2-12), and connect parts as shown below.

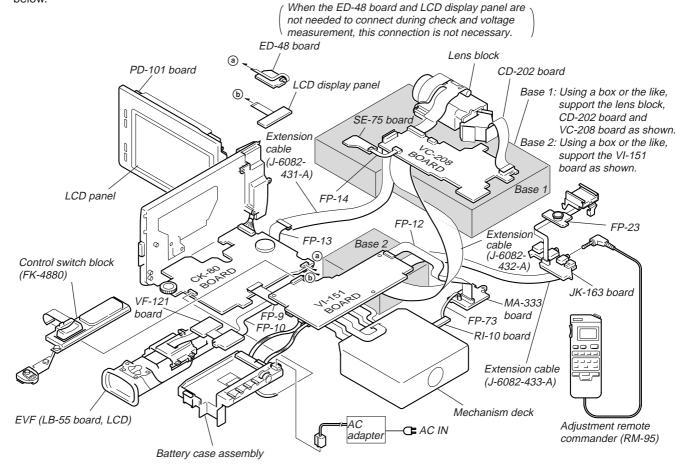



# 2-14. CIRCUIT BOARDS LOCATION

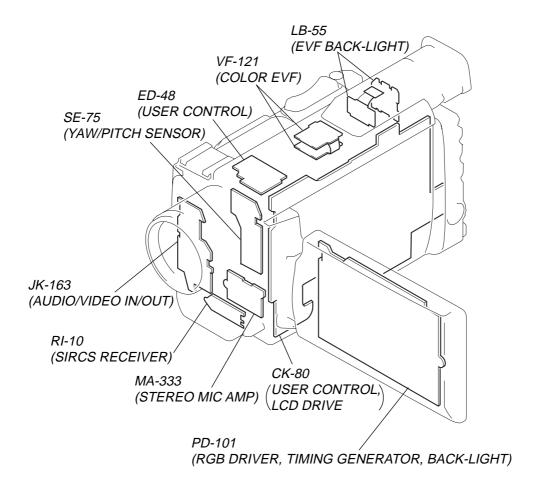

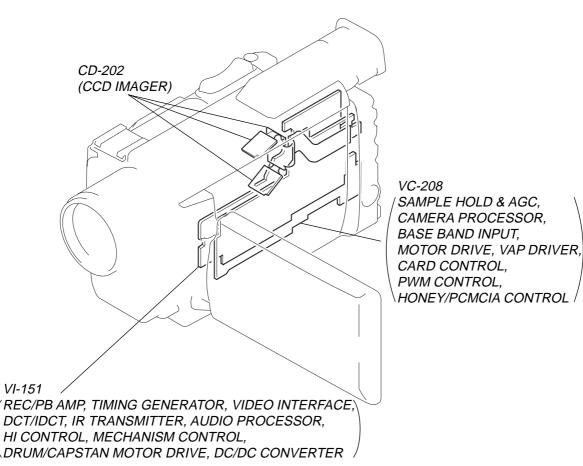


# 2-15.FLEXIBLE BOARDS LOCATION

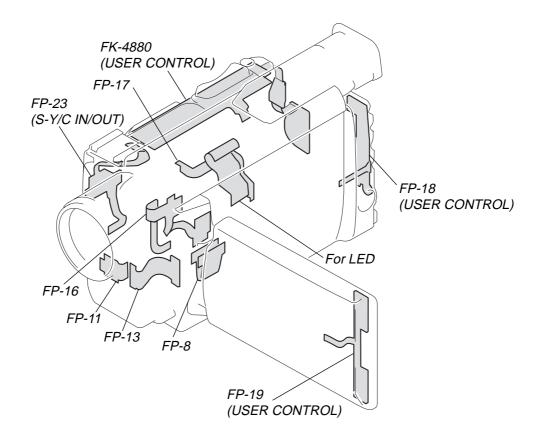


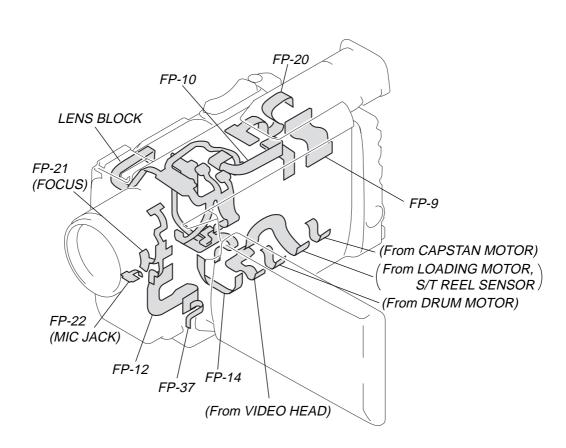

# SECTION 3 BLOCK DIAGRAMS

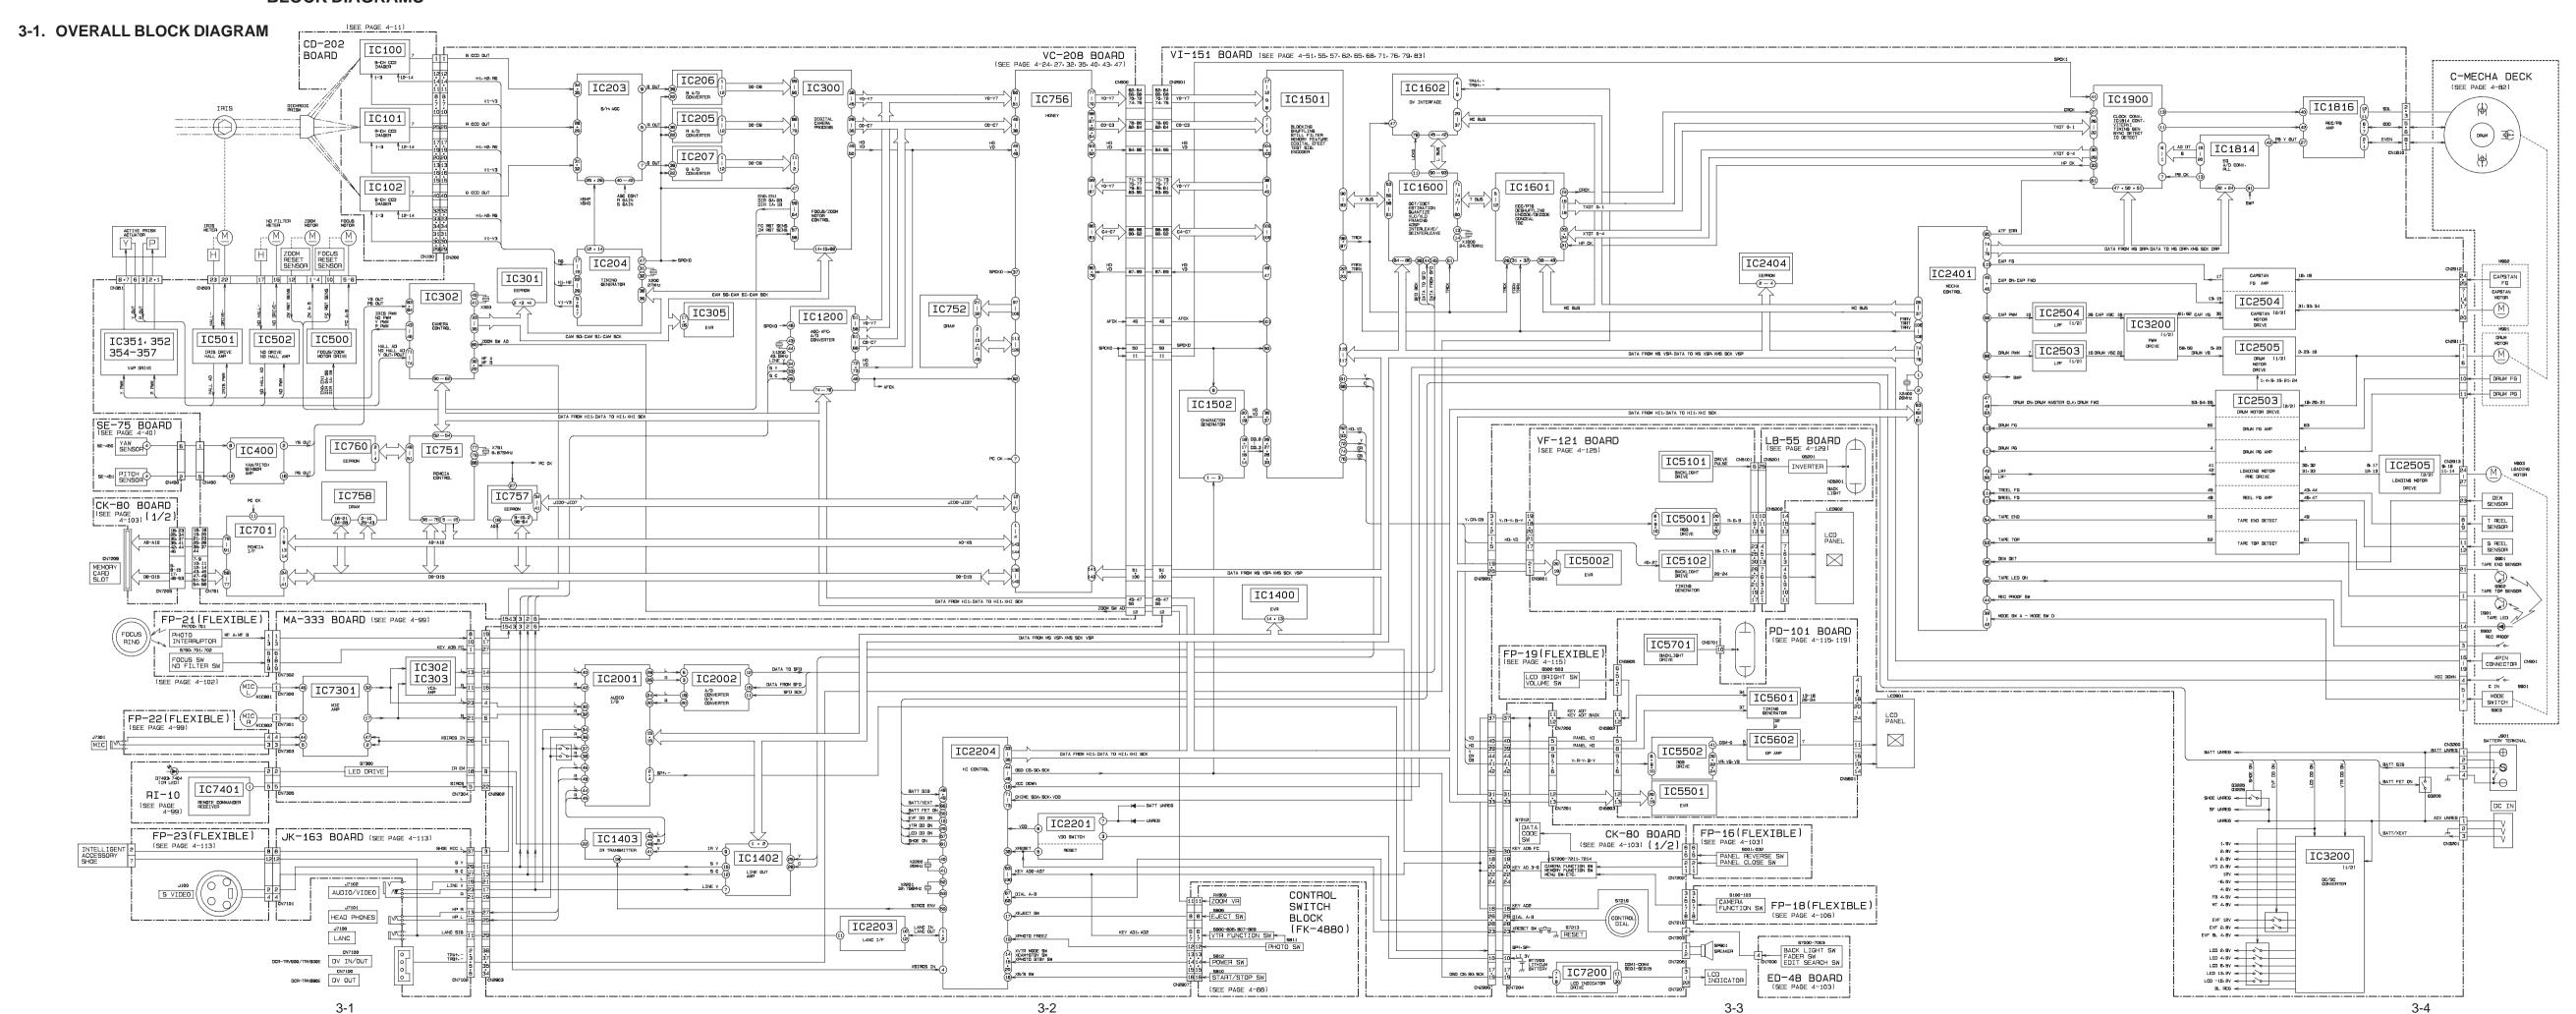


# 3-2. POWER BLOCK DIAGRAM

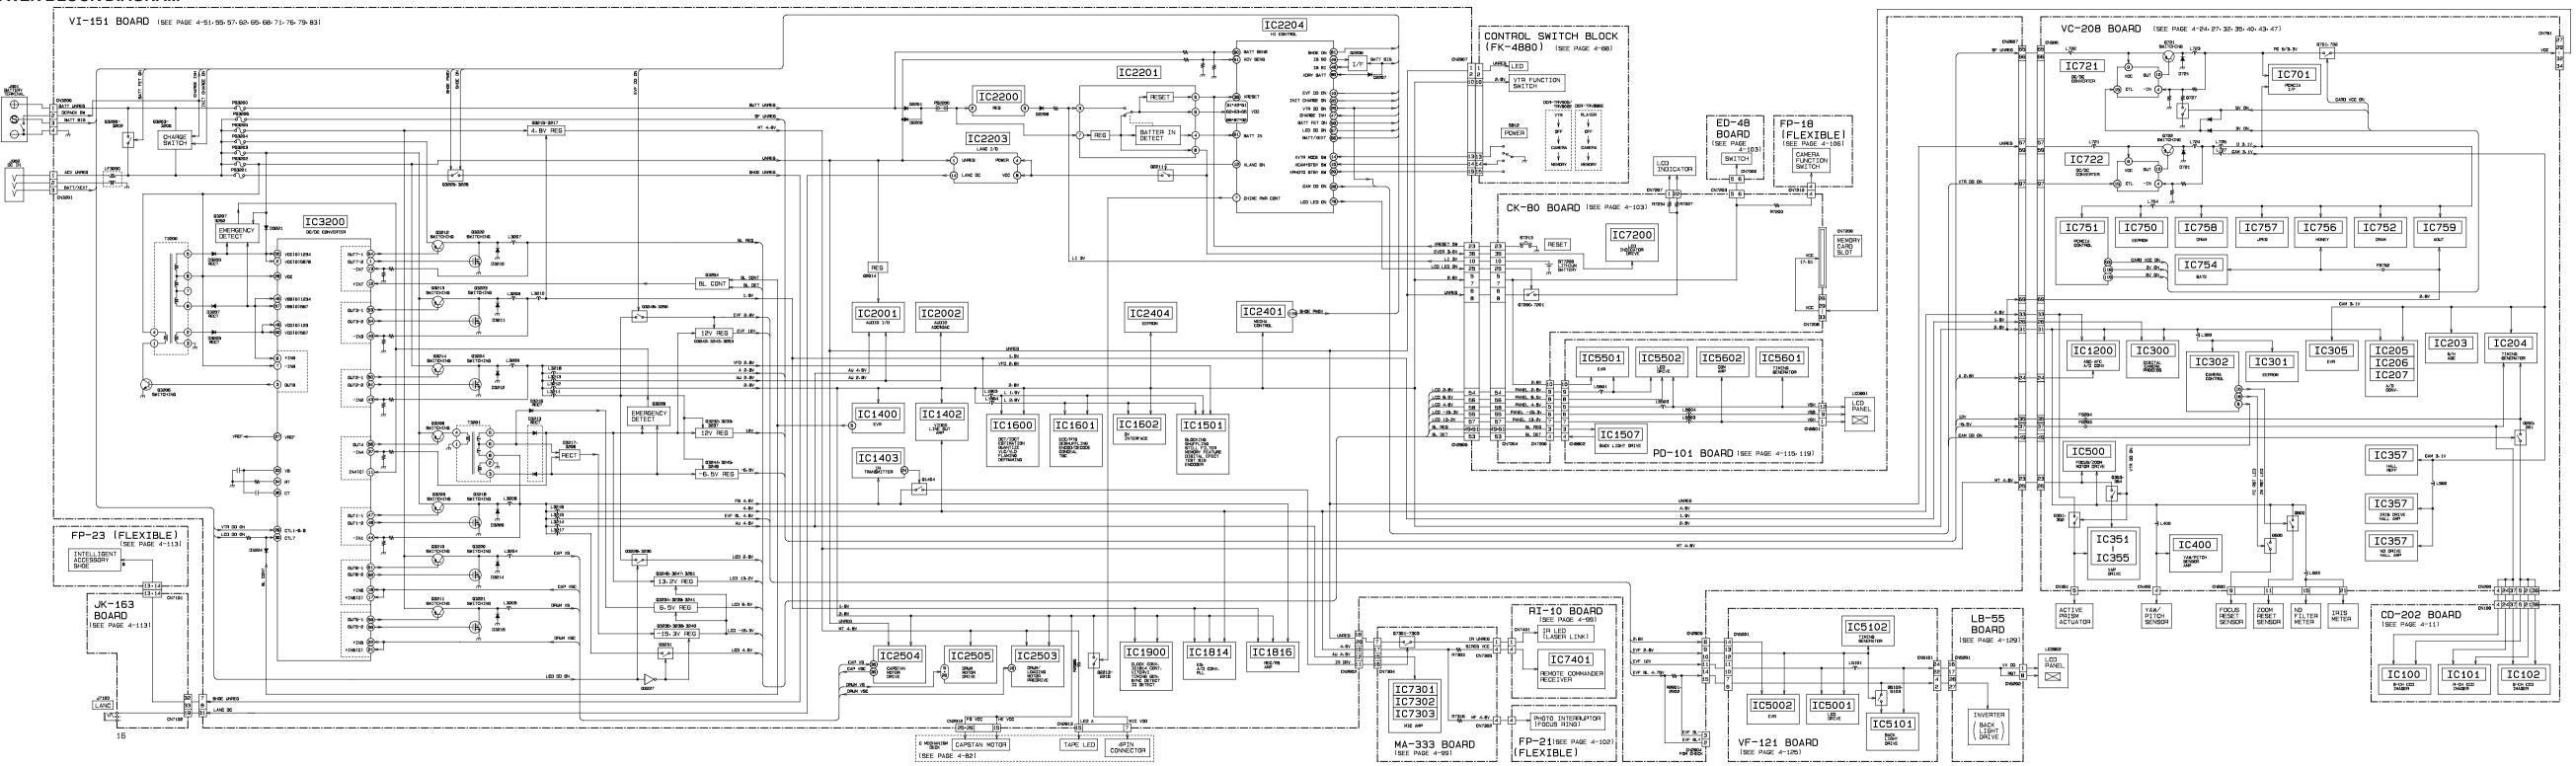


3-5 3-8E

# **SECTION 4** PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

# 4-1. FRAME SCHEMATIC DIAGRAM-1

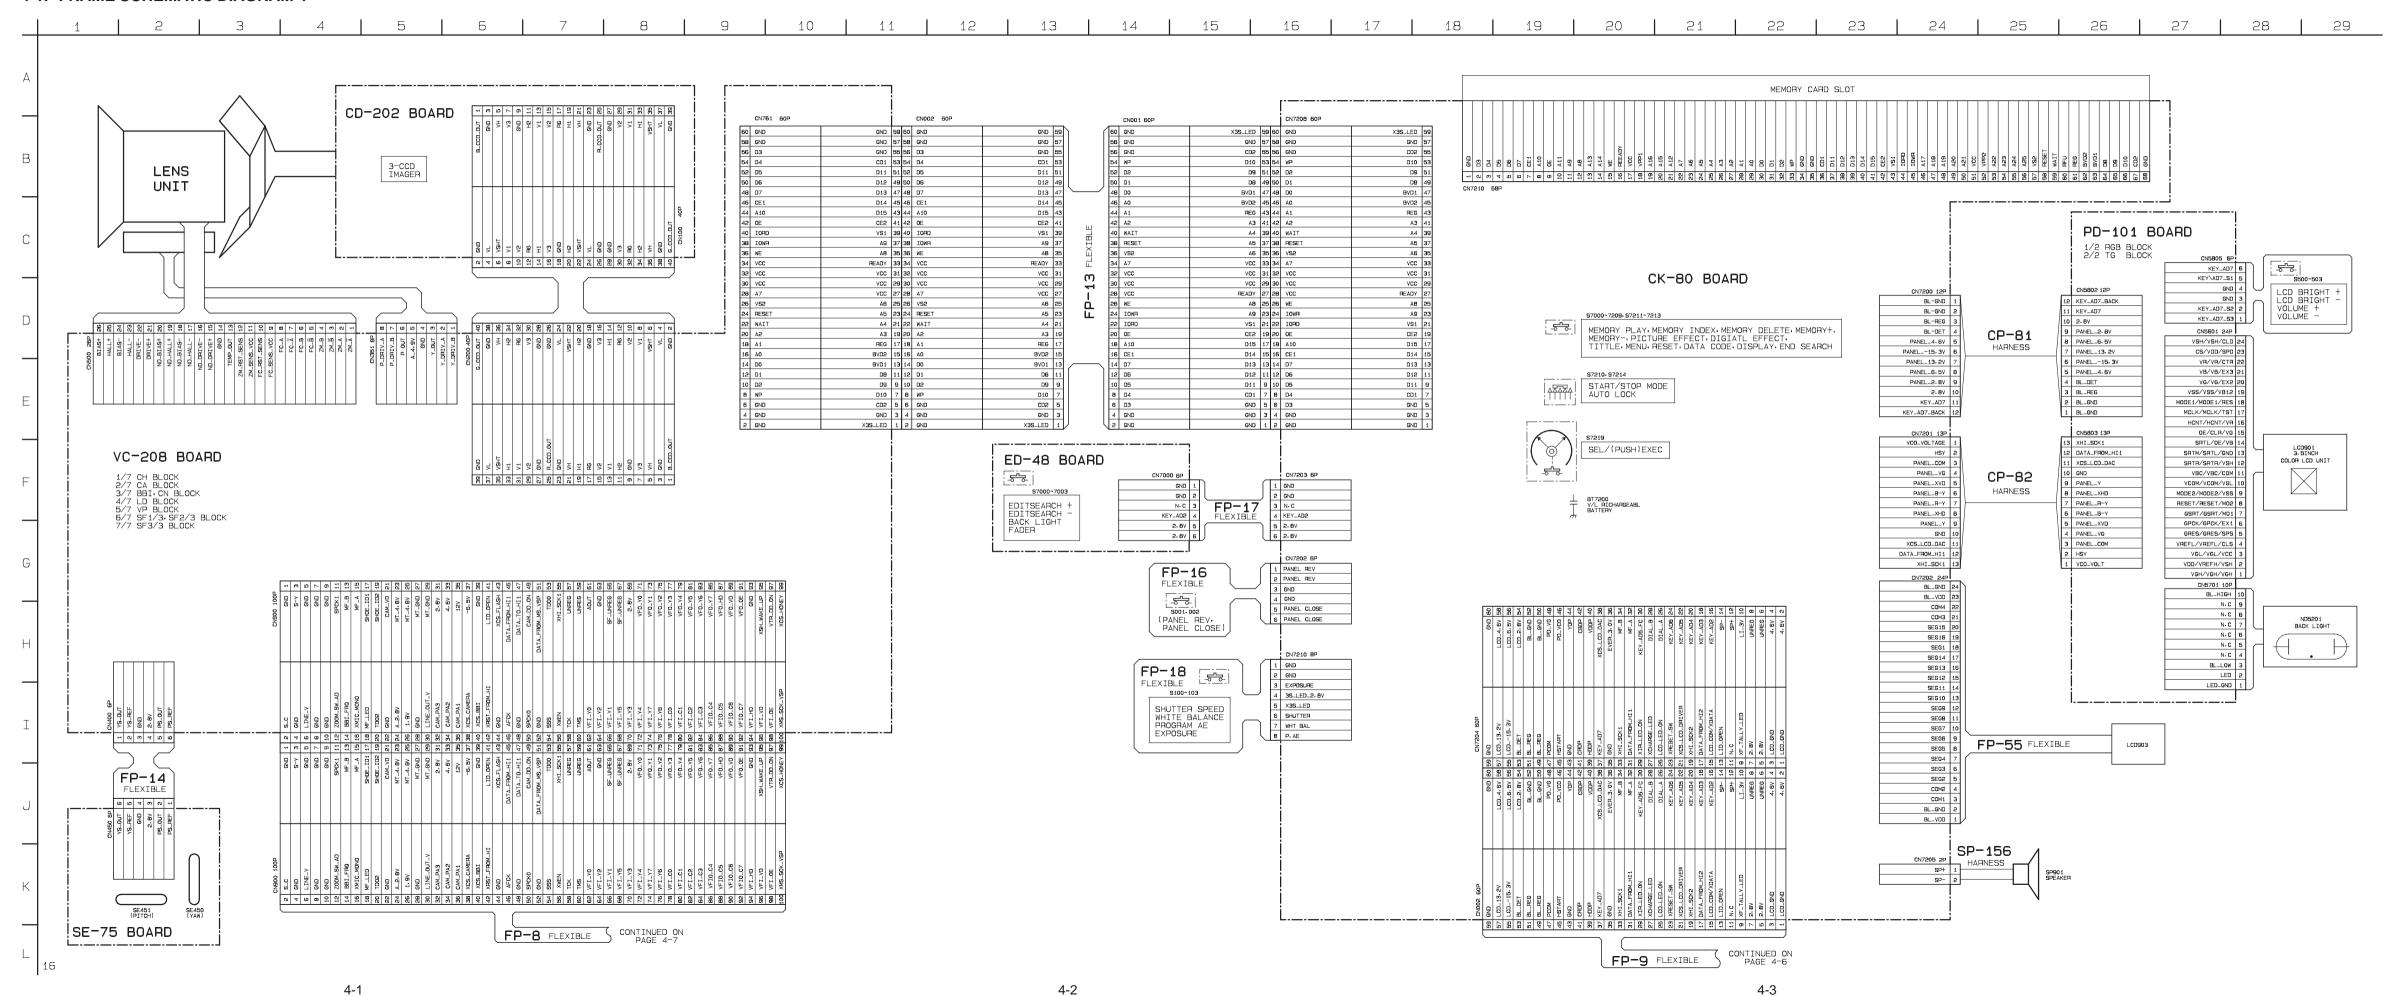

4-4

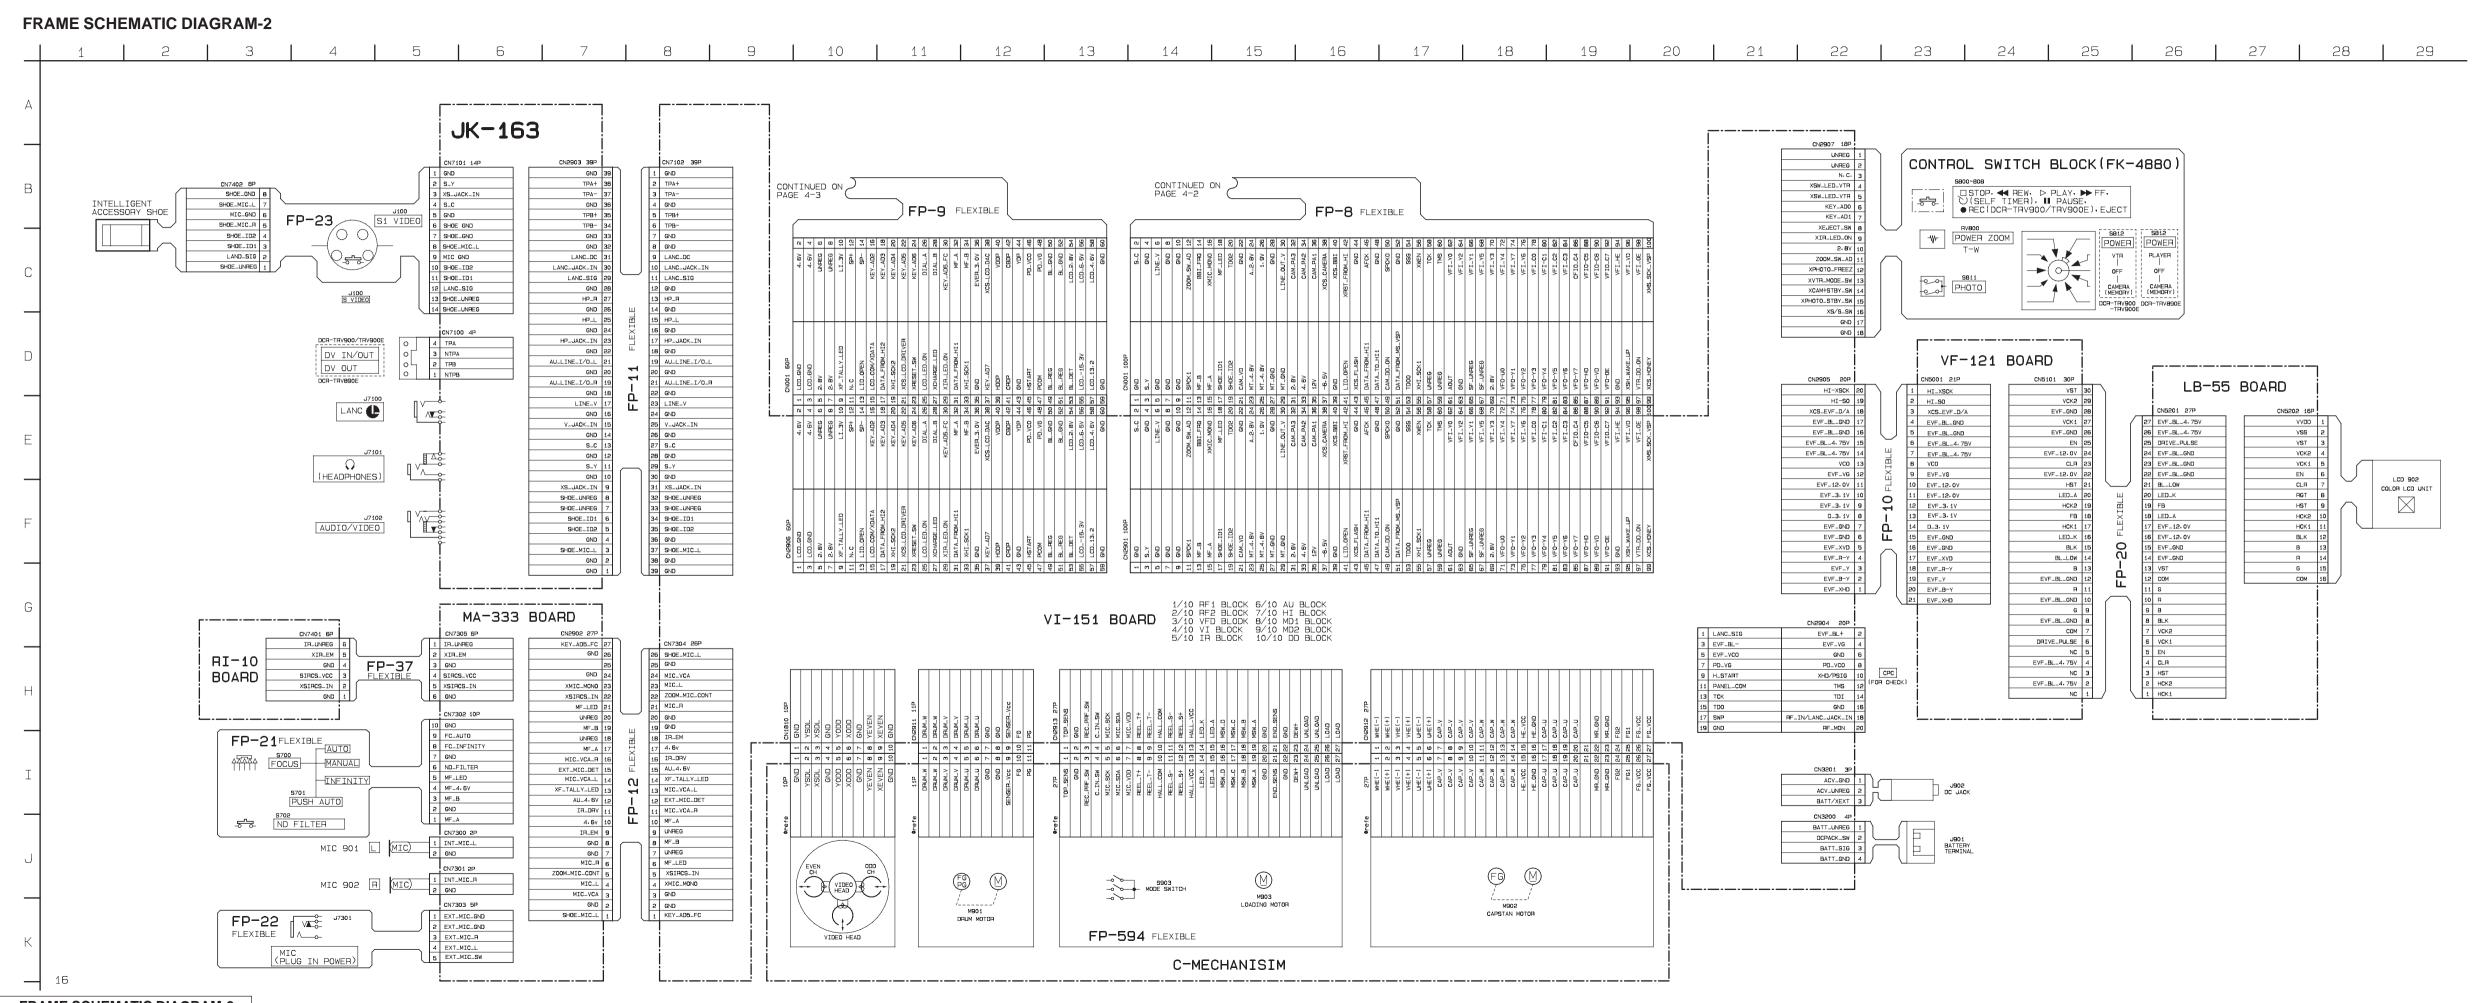

FRAME SCHEMATIC DIAGRAM-2
4-5
4-7

# DCR-TRV890E/TRV900/TRV900E


# 4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

# THIS NOTE IS COMMON FOR WIRING BOARDS AND SCHEMATIC DIAGRAMS (In addition to this, the necessary note is printed in each block)

# (For printed wiring boards)

- Pattern from the side which enables seeing.

  (The other layers' patterns are not indicated.)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are few cases that the part printed on diagram isn't mounted in this model.
- · Chip parts.

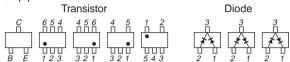


# (For schematic diagrams)

- All capacitors are in  $\mu F$  unless otherwise noted. pF :  $\mu \mu F$ . 50V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10W unless otherwise noted. k $\Omega$ =1000 $\Omega$ , M $\Omega$ =1000k $\Omega$ .
- Caution when replacing chip parts.

New parts must be attached after removal of chip.

Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.

Some chip part will be indicated as follows.

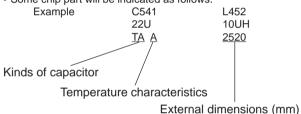

• Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.

In such cases, the unused circuits may be indicated.

- Parts with ★ differ according to the model/destination.
   Refer to the mount table for each function.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name

XEDIT → EDIT PB/XREC → PB/REC

• Important the property of th

• + : fusible resistor

• \_\_\_\_\_ : panel designation • \_\_\_\_\_ : B+ Line \*

• === : B- Line \*

• E : IN/OUT direction of (+,-) B LINE. \*

• \_\_\_\_\_ : adjustment for repair. \*

• Circled numbers refer to waveforms. \*

\* Indicated by the color red.

## Note:

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.


Ne les remplacer que par une pièce portant le numéro spécifié.

# (Measuring conditions voltage and waveform)

 Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms.\*

(VOM of DC 10 MW input impedance is used.).

- Voltage values change depending upon input impedance of VOM used.)
- 1. Connection

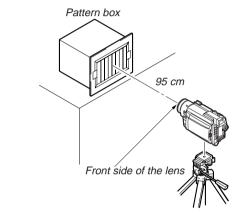

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

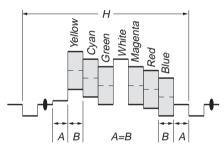


Fig. a (Video output terminal output waveform)


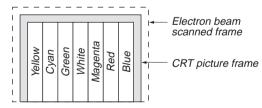


Fig.b (Picture on monitor TV)


- 3. The LINE REC waveform shows the waveform when the color for signal (video signal) is input from a color bar pattern.
- The LINE OUT waveform shows the waveform when the signals are connected to the S-VIDEO and VIDEO/AUDIO jacks but not to other jacks.

When indicating parts by reference number, pleas include the board name.

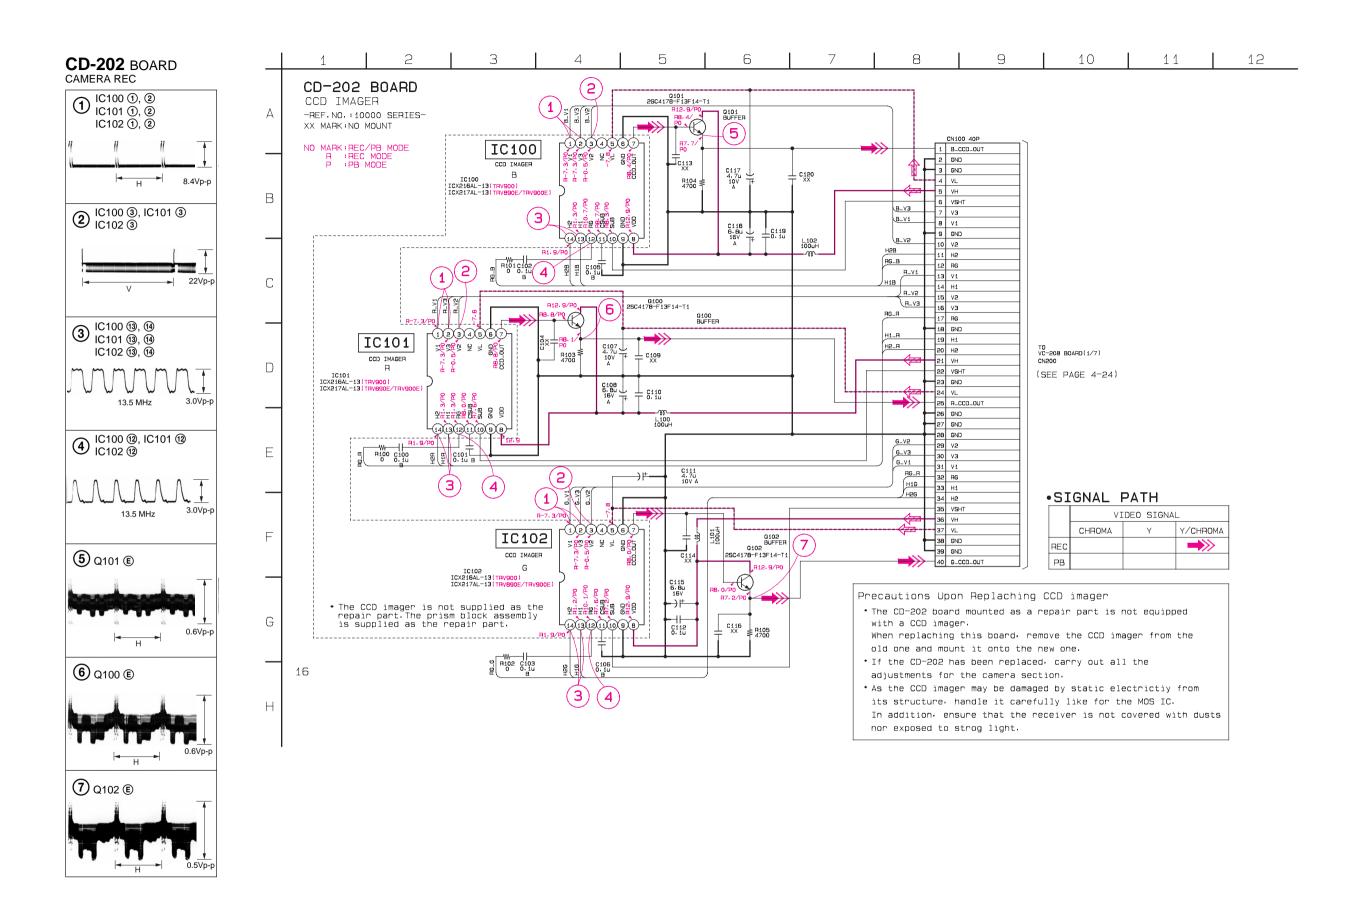

CCD IMAGER CD-202

4-11

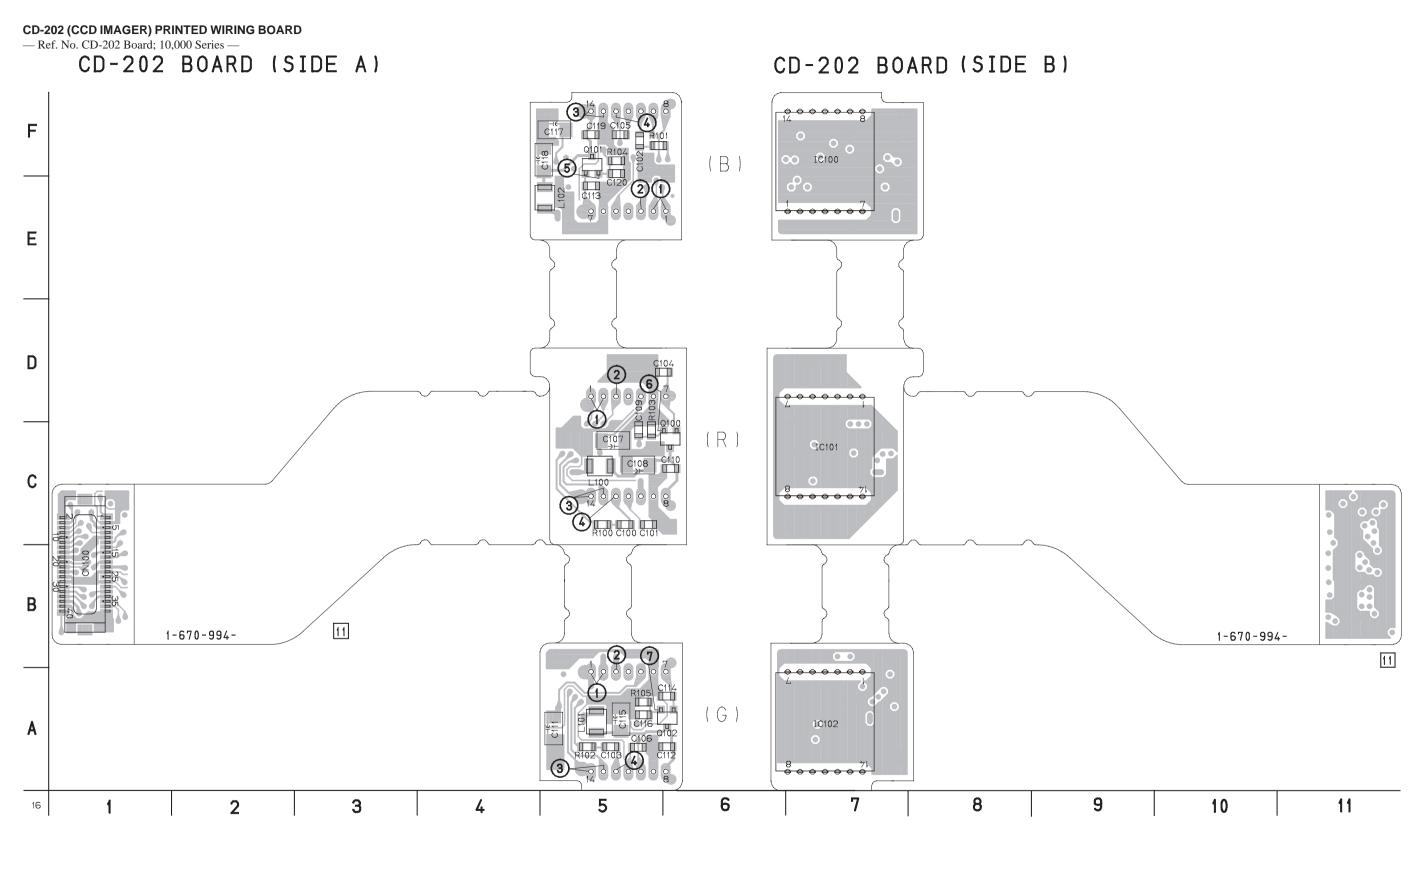

# CD-202 BOARD


C100	C-5	CN100	B-1
C101	C-5	10100	
C102	F-5	IC100	F-7
C103	A-5	IC101	C-7
C104	D-5	IC102	A-7
C105	F-5		
C106	A-5	L100	C-5
C107	C-5	L101	A-5
C108	C-5	L102	E-5
C109	C-5		
C110	C-6	Q100	C-6
C111	A-5	Q101	F-5
C112	A-6	Q102	A-6
C113	E-5		
C114	A-6	R100	C-5
C115	A-5	R101	F-5
C116	A-5	R102	A-5
C117	F-5	R103	C-5
C118	F-5	R104	F-5
C119	F-5	R105	A-5
C120	E-5		

- For printed wiring boards
   This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

# Transistor



There are few cases that the part printed on this diagram isn't mounted in this model.

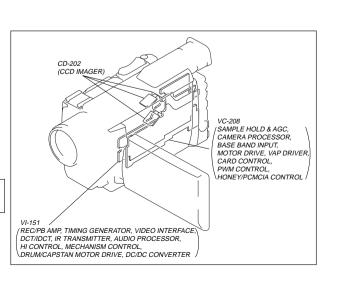


# VC-208 BOARD (SIDE A)


/ C-Z	00 007	נועט (טו							
228	E-7	l C530	D-6	l FB754	A-7	l R501	C-4	l R703	A-1
234	E-6	C530	D-5	10/34	Λ-7	R502	C-5	R704	A-1
235	E-6	C531	C-3	IC205	D-8	R502	C-3	R734	B-2
236	D-7	C533	C-5	IC206	D-7	R504	C-5	R735	B-2
237	D-7	C534	C-6	IC207	D-6	R505	C-5	R765	B-9
238	E-6	C701	A-1	IC300	C-7	R506	C-5	R766	B-9
239	E-5	C703	A-1	IC500	C-4	R507	C-5	R767	B-9
252	E-7	C704	A-1	IC501	C-5	R508	C-5	R768	B-8
253	E-6	C733	B-2	IC502	C-6	R509	C-5	R769	B-8
254	E-5	C734	A-2	IC752	B-3	R510	D-5	R770	B-8
255	E-8	C735	C-1	IC756	B-5	R511	C-5	R771	B-8
256	E-7	C736	A-1	IC757	B-6	R512	D-5	R772	B-8
257	E-7	C737	A-1	IC758	B-8	R513	D-5	R773	A-8
258	E-6	C738	B-1	10730	БО	R514	C-5	R774	A-8
259	E-6	C739	C-1	L201	E-6	R515	D-5	R775	A-8
		C740	B-3	L500			D-5 D-5	1	
260	E-6		C-2		D-4 C-4	R516		R776	A-8
300	D-7	C742		L501		R517	D-5	R777	A-8
301	C-8	C743	C-3	L503	D-5	R518	C-5	R778	A-9
500	D-5	C752	C-3	L721	B-2	R519	C-5	R779	A-9
501	C-5	C753	C-3	L722	B-2	R520	C-5	R780	A-9
502	C-4	C754	C-5	L723	B-1	R521	C-5	R788	B-6
503	C-4	C760	A-5	L723	C-2	R522	C-5	R789	A-7
504	C-5	C762	B-4	L724	B-1	R523	D-5	R790	A-7
505	C-5	C763	C-5	L725	B-3	R524	D-6	R791	B-6
506	D-5	C764	A-7	L726	C-1	R525	C-6	R792	A-6
507	D-5	C765	A-8	L727	C-2	R526	C-6	R800	A-8
508	D-4	C766	A-8	L751	C-4	R528	C-6	R801	B-8
509	C-5	C767	B-7	L752	A-8	R529	C-6	R802	B-6
510	D-5	C768	B-7			R530	D-6	R803	B-6
511	C-5			Q500	C-4	R531	C-6	R807	C-6
512	C-5	CN200	E-8	Q501	C-5	R532	D-6	R808	C-4
514	D-5	CN351	C-3	Q502	C-5	R533	D-6	R810	C-4
515	D-5	CN400	A-2	Q503	D-5	R534	C-6	R811	C-4
516	C-4	CN500	C-2	Q504	C-6	R535	D-6	R900	B-5
517	D-4	CN761	B-1	Q505	C-4	R536	D-6	R901	B-5
518	C-4	CIN/OI	D-1	Q701	A-1	R537	D-6	R902	B-5
	D-5	DEOO	C-5			R538	C-6	R902	B-5
519 520	D-5 D-5	D500 D501	C-5 D-5	Q702 Q721	A-3 B-2	R538	C-6		в-э В-5
				_				R904	
521	C-6	D721	B-2	Q722	B-2	R540	C-6	R905	B-5
522	C-6	D722	B-2			R541	C-6	R906	B-5
523	D-6			R201	D-7	R542	C-6	R907	B-5
524	D-6	FB202	D-7	R204	D-5	R543	C-3	R908	B-5
525	C-6	FB300	C-8	R205	D-6	R544	D-5	R909	B-5
526	D-6	FB301	D-6	R325	B-8	R545	C-4	R910	B-5
527	C-6	FB501	C-4	R326	B-8	R701	A-1	R919	B-6
528	C-6	FB752	C-5	R500	C-3	R702	A-1		

# For printed wiring boards


- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

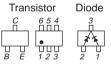


There are few cases that the part printed on this diagram isn't mounted in this model.

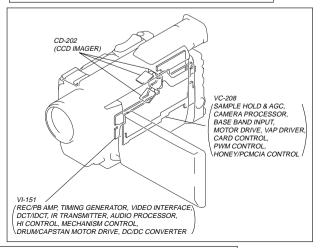

VC-208 (SAMPLE HOLD & AGC, CAMERA PROCESSOR, BASE BAND INPUT, MOTOR DRIVE, VAP DRIVER, CARD CONTROL, PWM CONTROL, HONEY, PCMCIA CONTROL) PRINTED WIRING BOARD — Ref. No. VC-208 Board; 10,000 Series —

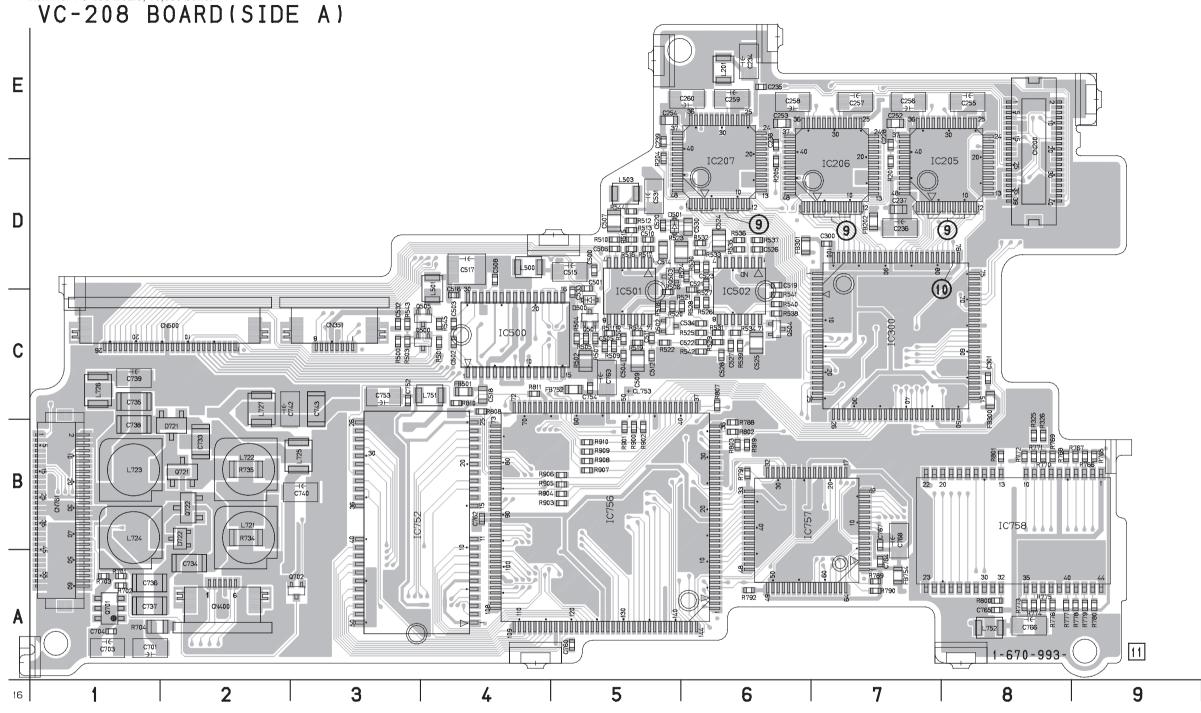

VC-208 (SAMPLE HOLD & AGC, CAMERA PROCESSOR, BASE BAND INPUT, MOTOR DRIVE, VAP DRIVER, CARD CONTROL, PWM CONTROL, HONEY, PCMCIA CONTROL) PRINTED WIRING BOARD

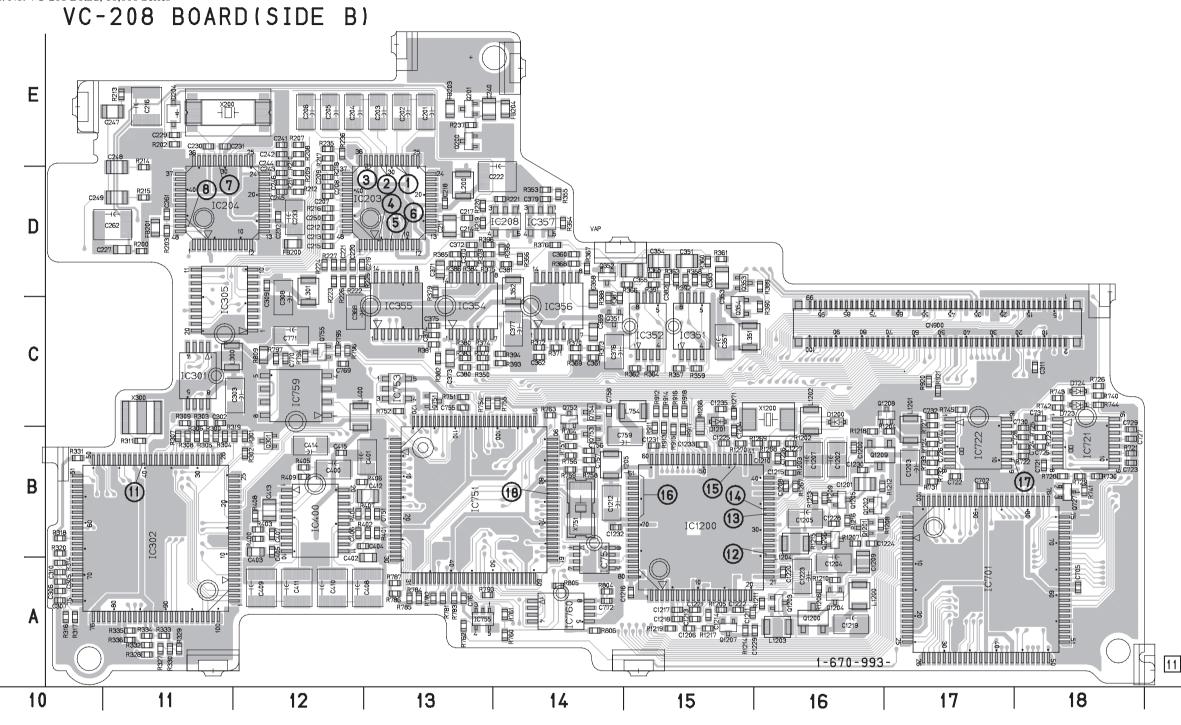


C-208	ROA	RD	(SIDE	R۱


VC-208 BOARD (SIDE B)													
	C201 C202 C203 C204 C205 C206 C207 C208 C209 C211 C212 C213 C214 C215 C216 C216 C217 C218 C219 C220 C221 C222 C227 C229 C230 C231 C232 C233 C240 C241 C242 C243 C244 C245 C246 C247 C248 C250 C261 C262 C303 C305 C306 C307 C308 C309 C310 C311 C353 C354 C357 C358 C359 C360 C361 C362 C373 C374 C375 C377 C378 C378 C379 C388 C370 C371 C372 C373 C374 C375 C377 C379 C388 C377 C377 C379 C388 C377 C378 C377 C379 C388 C377 C378 C377 C379 C388 C377 C378 C376 C377 C379 C388 C309 C301 C401 C402 C403 C404 C405 C406 C407 C408 C409	E-13 E-13 E-13 E-13 E-12 E-12 E-12 D-12 D-12 D-12 D-13 D-12 D-13 D-12 D-13 D-12 D-13 D-13 D-13 D-13 D-13 D-14 D-11 E-11 D-11 D-11 D-11 D-11 D-11 D-11	C410 C411 C412 C413 C414 C415 C702 C705 C721 C702 C705 C721 C722 C723 C724 C725 C726 C727 C728 C729 C730 C731 C732 C744 C751 C755 C756 C757 C758 C757 C758 C757 C758 C759 C761 C751 C702 C1200 C1201 C1201 C1202 C1203 C1201 C1202 C1203 C1201 C1202 C1203 C1201 C1202 C1203 C1201 C1202 C1203 C1201 C1202 C1203 C1204 C1207 C1208 C1207 C1208 C1207 C1208 C1207 C1208 C1201 C1211 C1212 C1213 C1214 C1215 C1216 C1217 C1218 C1217 C1218 C1218 C1219 C1221 C1223 C1224 C1225 C1226 C1227 C1228 C1229 C1233 C124 C1227 C1228 C1229 C1233 C124 C1225 C1226 C1227 C1228 C1227 C1228 C1229 C1233 C124 C125 C126 C127 C127 C128 C129 C1210 C1211 C1212 C1213 C1214 C1215 C1216 C1217 C1218 C1218 C1219 C1220 C1221 C1223 C1224 C1225 C1226 C1227 C1228 C1229 C1233 C1244 C125 C1227 C1228 C1229 C1233 C1244 C125 C125 C126 C127 C127 C128 C129 C123 C1224 C1225 C1227 C1228 C1227 C1228 C1229 C1233 C1234 C1235 C1236 C1237 C1237 C1238 C1237 C1238 C1237 C1238 C1237 C1238 C1237 C1238 C1237 C1238 C1237 C1238 C1229 C1231 C1231 C1232 C1233 C1234 C1235 C1236 C1237 C1237 C1238 C1237 C1238 C1229 C1230 C1221 C1223 C1223 C1224 C1225 C1226 C1227 C1228 C1227 C1228 C1229 C1233 C1234 C1235 C1236 C1237 C1238 C1237 C1238	A-12 A-12 A-12 A-13 B-13 B-14 B-13 B-15 B-18 B-18 B-18 B-18 B-18 B-18 B-18 B-18	IC208   IC308   IC301   IC302   IC305   IC351   IC355   IC356   IC355   IC356   IC357   IC400   IC701   IC721   IC722   IC753   IC754   IC755   IC756   IC300   IC300   IC301   IC30	D-14 C-11 C-15 C-15 C-15 C-13 C-14 D-14 D-14 D-14 D-14 D-12 D-12 C-15 D-13 C-11 D-11 C-15 D-14 C-15 D-16 D-17 C-16 D-17 D-17 D-17 D-17 D-17 D-17 D-17 D-17	R236 R237 R300 R301 R302 R303 R304 R305 R306 R307 R308 R309 R311 R314 R314 R316 R317 R318 R319 R320 R331 R332 R333 R334 R335 R355 R356 R357 R358 R359 R350 R351 R362 R360 R361 R362 R360 R371 R372 R378 R378 R379 R380 R371 R372 R373 R374 R375 R378 R379 R380 R371 R377 R378 R379 R380 R371 R377 R378 R379 R380 R371 R377 R378 R379 R380 R391 R392 R393 R394 R395 R390 R391 R392 R393 R394 R395 R396 R400 R401 R402 R403 R404 R405 R406 R407 R408 R409 R721	E-12 E-13 B-12 B-12 B-11 B-11 B-11 B-11 B-11 B-11	R722   R723   R724   R725   R726   R727   R728   R730   R731   R732   R733   R740   R741   R742   R745   R755   R756   R757   R758   R759   R760   R757   R758   R759   R760   R761   R762   R762   R763   R764   R785   R785   R786   R787   R788   R789   R780   R781   R782   R783   R784   R785   R786   R787   R788   R789   R780   R781   R782   R783   R784   R785   R786   R787   R793   R794   R795   R806   R806   R807   R807   R808   R808   R809   R911   R912   R913   R914   R915   R916   R917   R918   R920   R921   R1208   R1208   R1208   R1208   R1208   R1208   R1208   R1209   R1210   R1211   R1212   R1213   R1214   R1216   R1217   R1218   R1218   R1219   R1218   R1219   R1211   R1218   R1219   R1211   R1218   R1219   R1211   R1218   R1219   R1211   R1211   R1212   R1213   R1214   R1216   R1217   R1218   R1219   R1211   R1211   R1212   R1213   R1214   R1216   R1217   R1218   R1219   R1211   R1211   R1212   R1213   R1214   R1216   R1217   R1218   R1219   R1210   R1211   R1211   R1212   R1213   R1214   R1216   R1217   R1218   R1219   R1210   R1211   R1211   R1212   R1213   R1214   R1216   R1217   R1218   R1219   R1218   R1219   R1218   R1219   R1218   R1219   R1218   R1219   R1211   R1218   R1219   R1219   R1218   R1218   R1219   R1218   R1	B-1			

4-19


4-20

CAMERA PROCESS & CNT, S/H &AGC, BASE BAND INPUT, LENS DRIVER, VAP SENSOR, FLASH DD/CNT, VAP DRIVER
VC-208

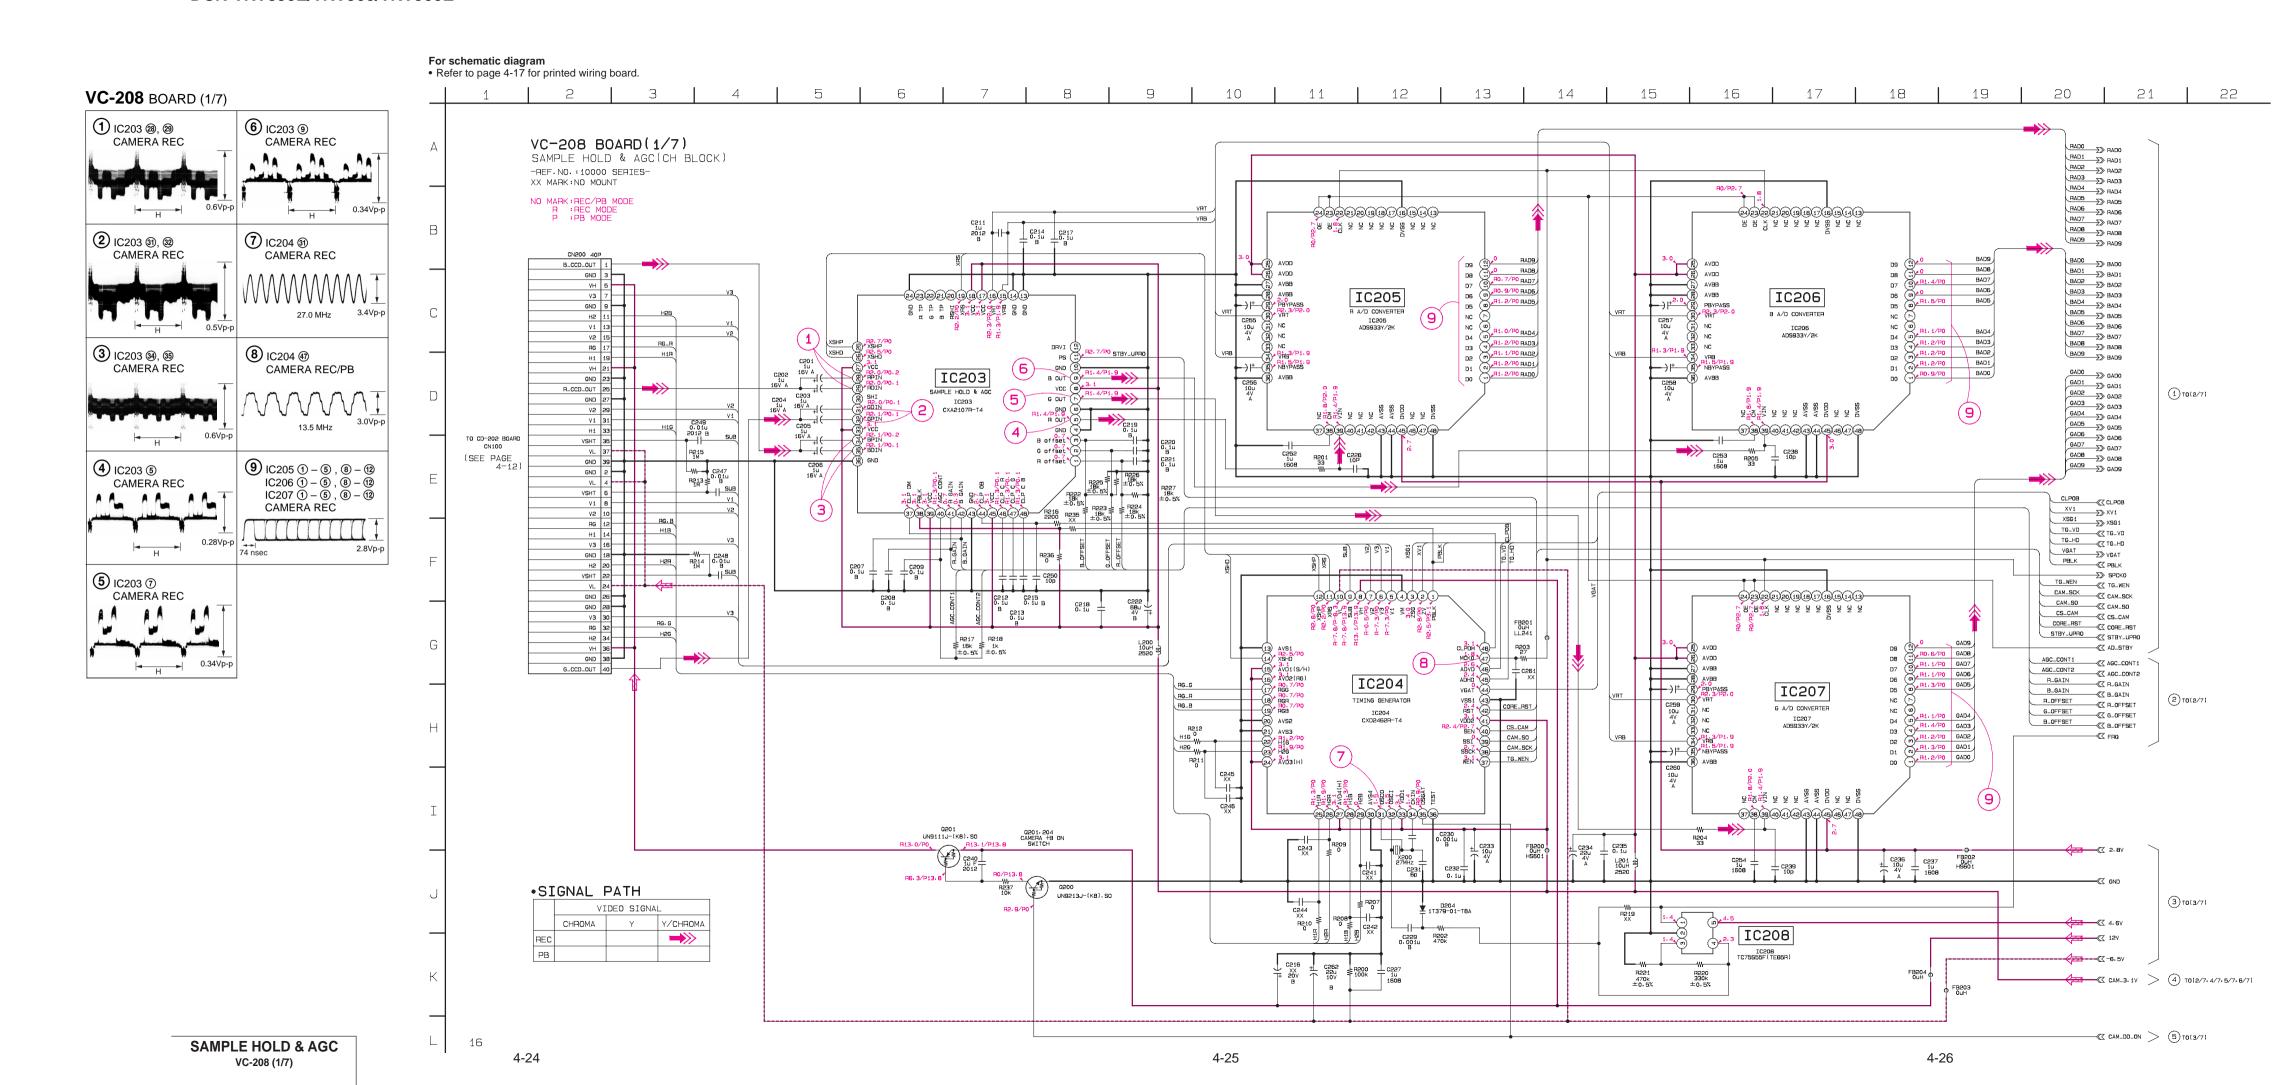

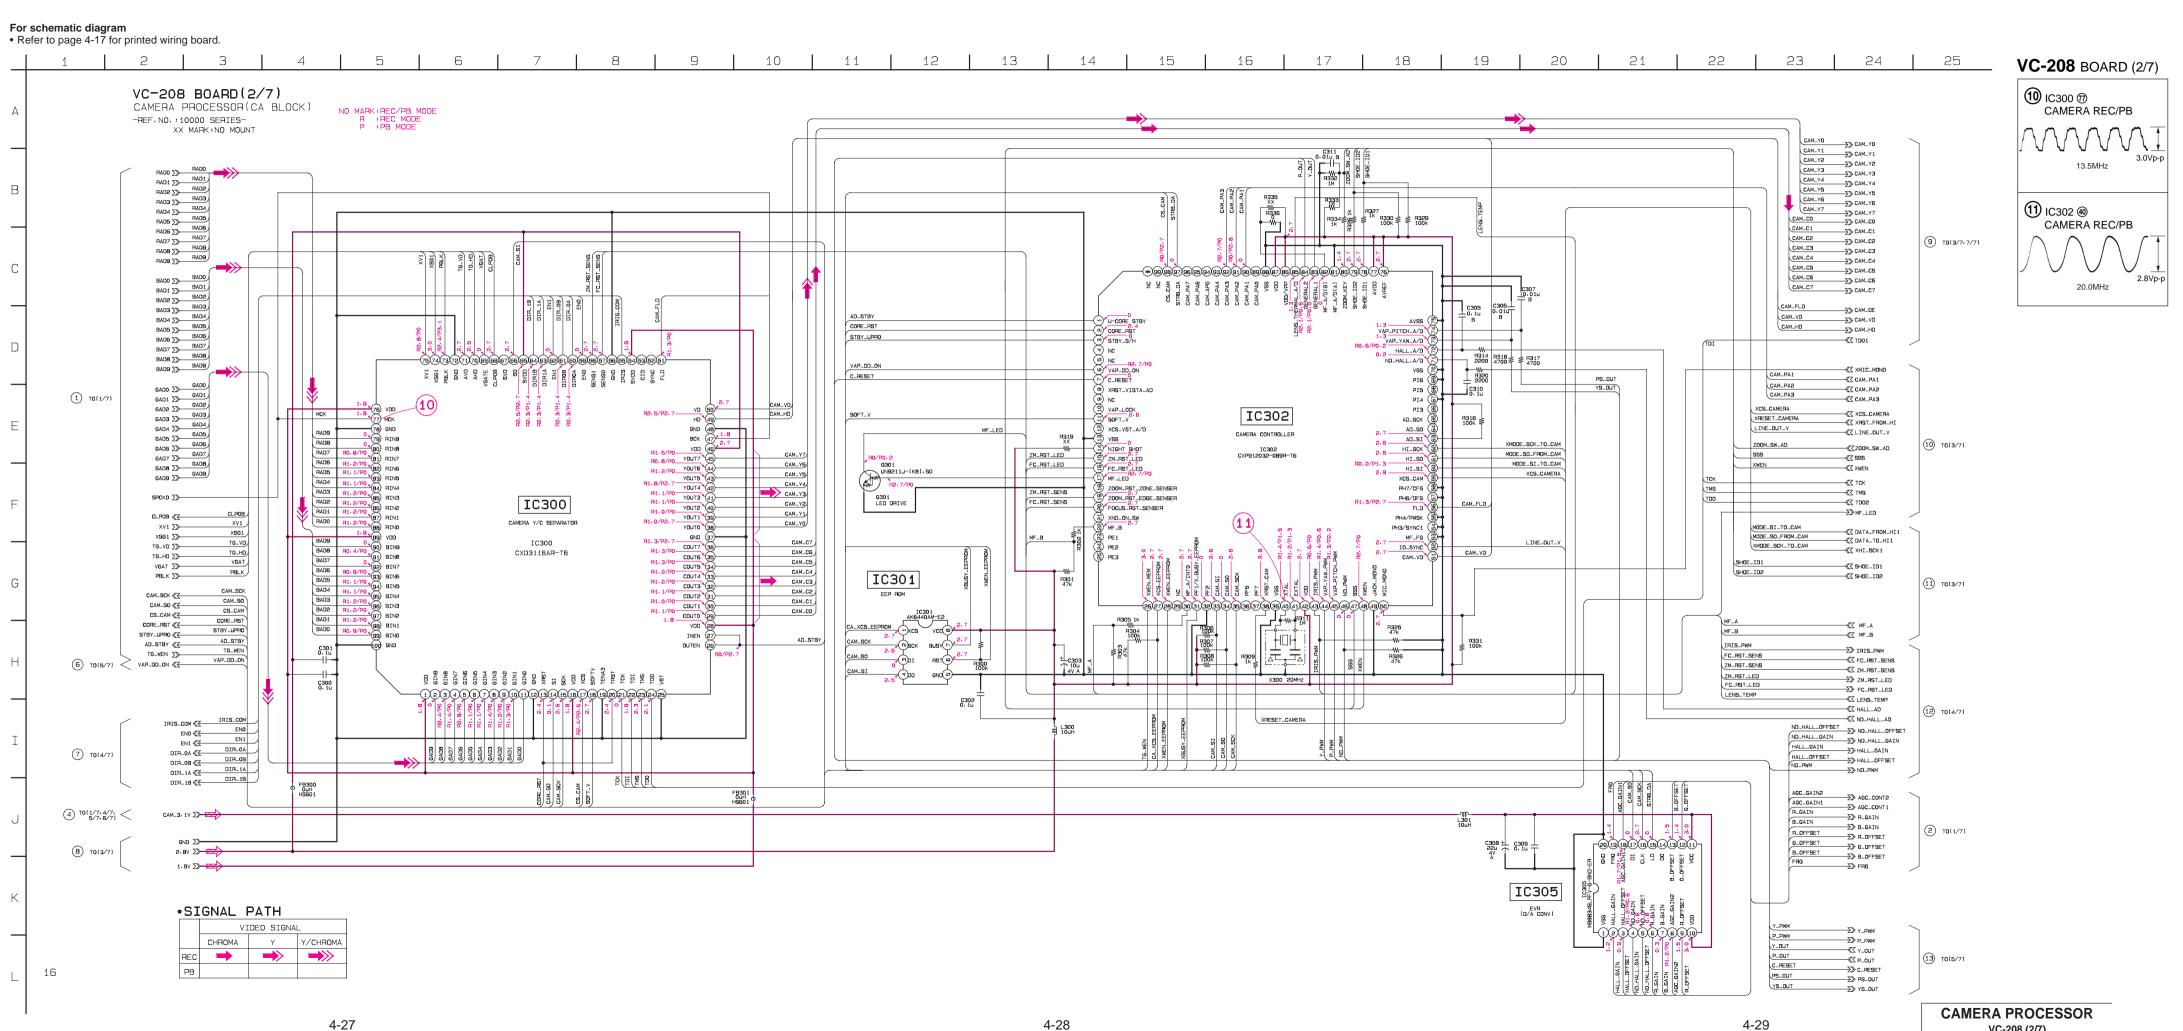


4-32

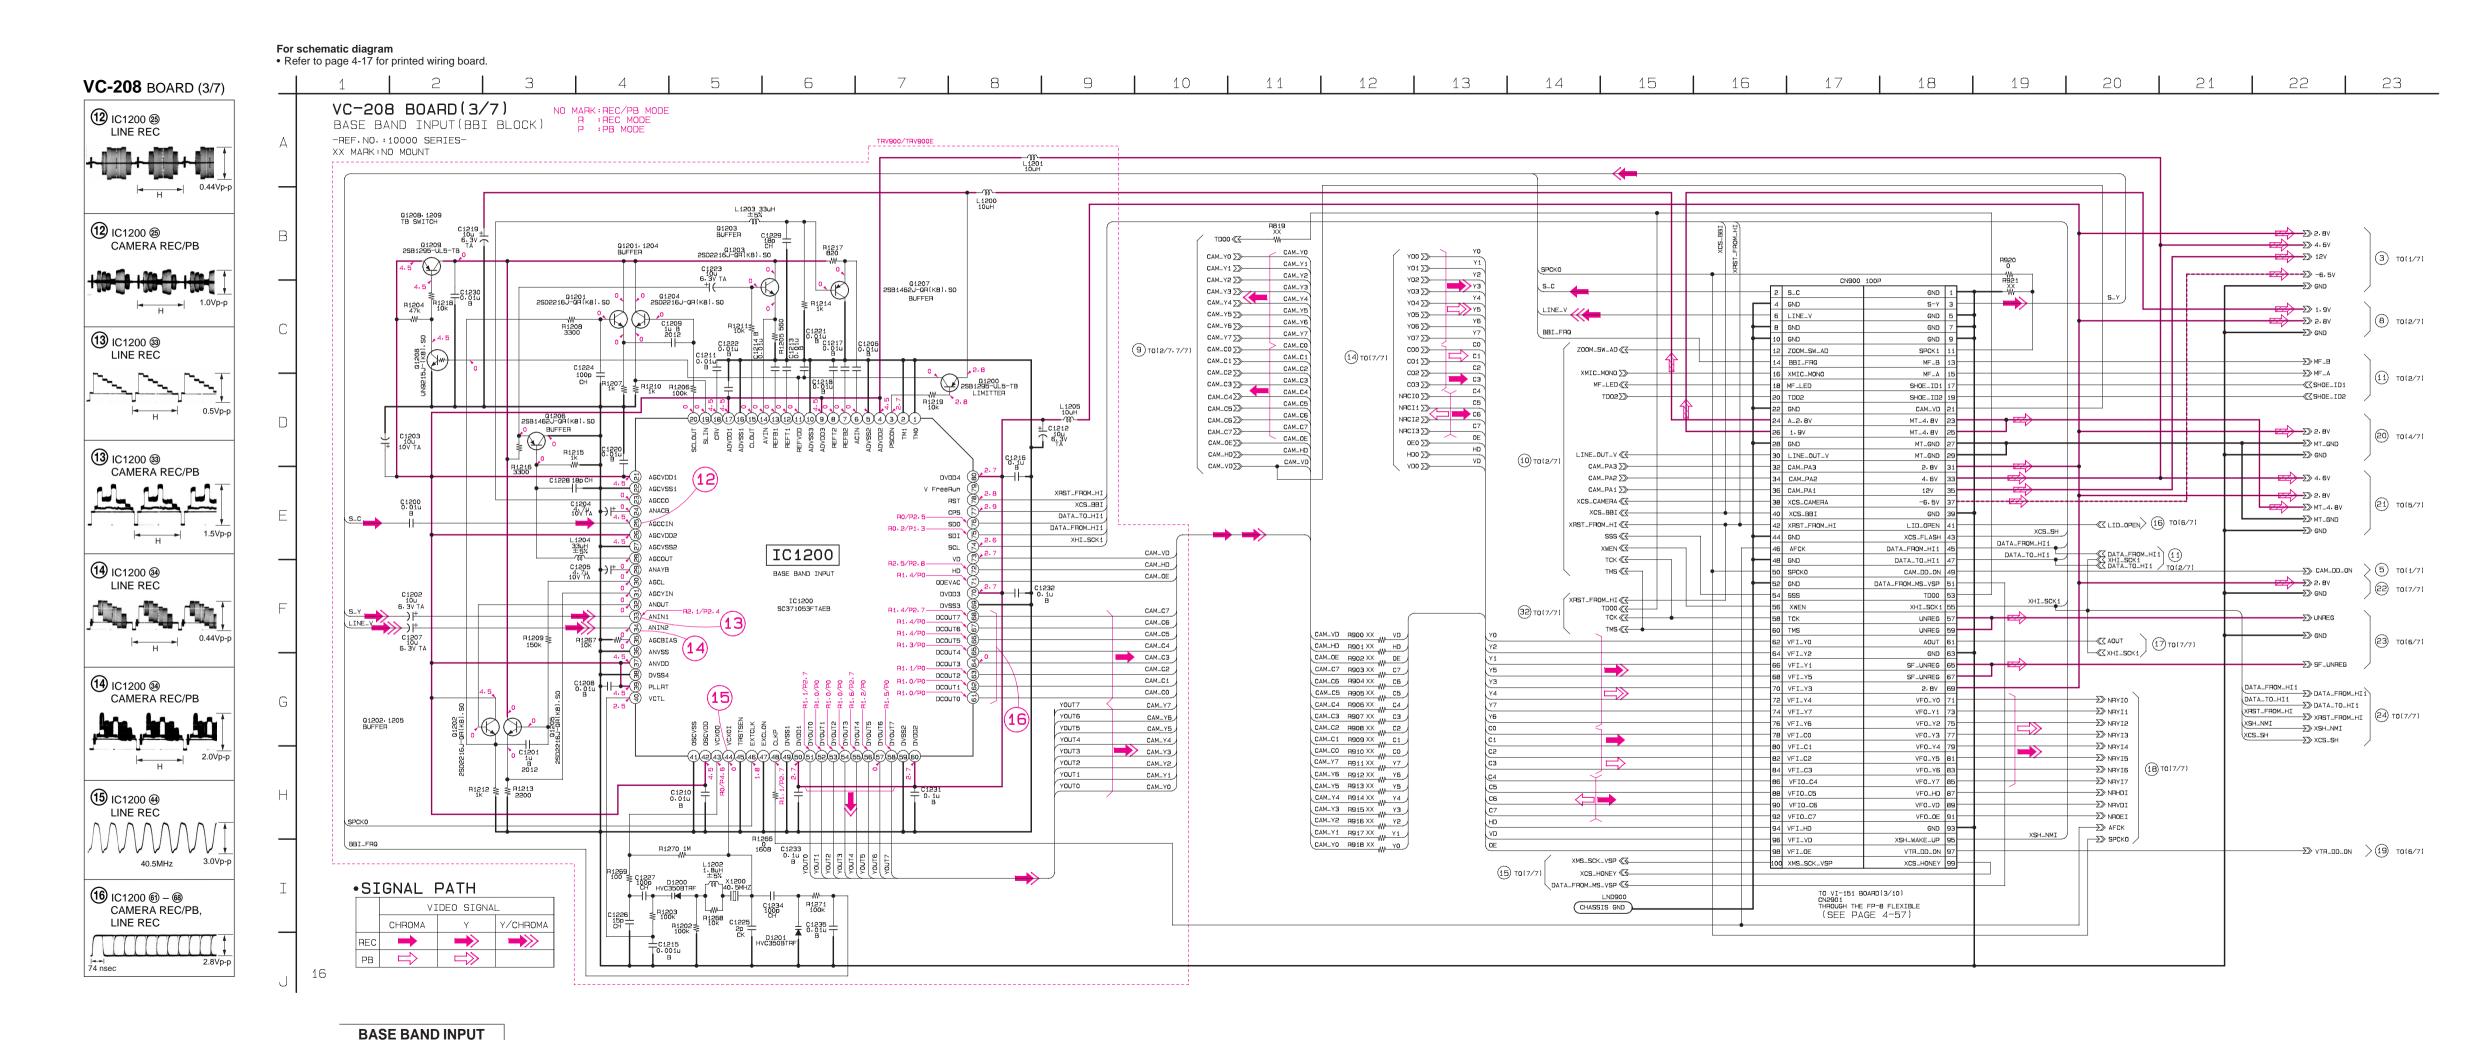

4-33

4-34

# DCR-TRV890E/TRV900/TRV900E

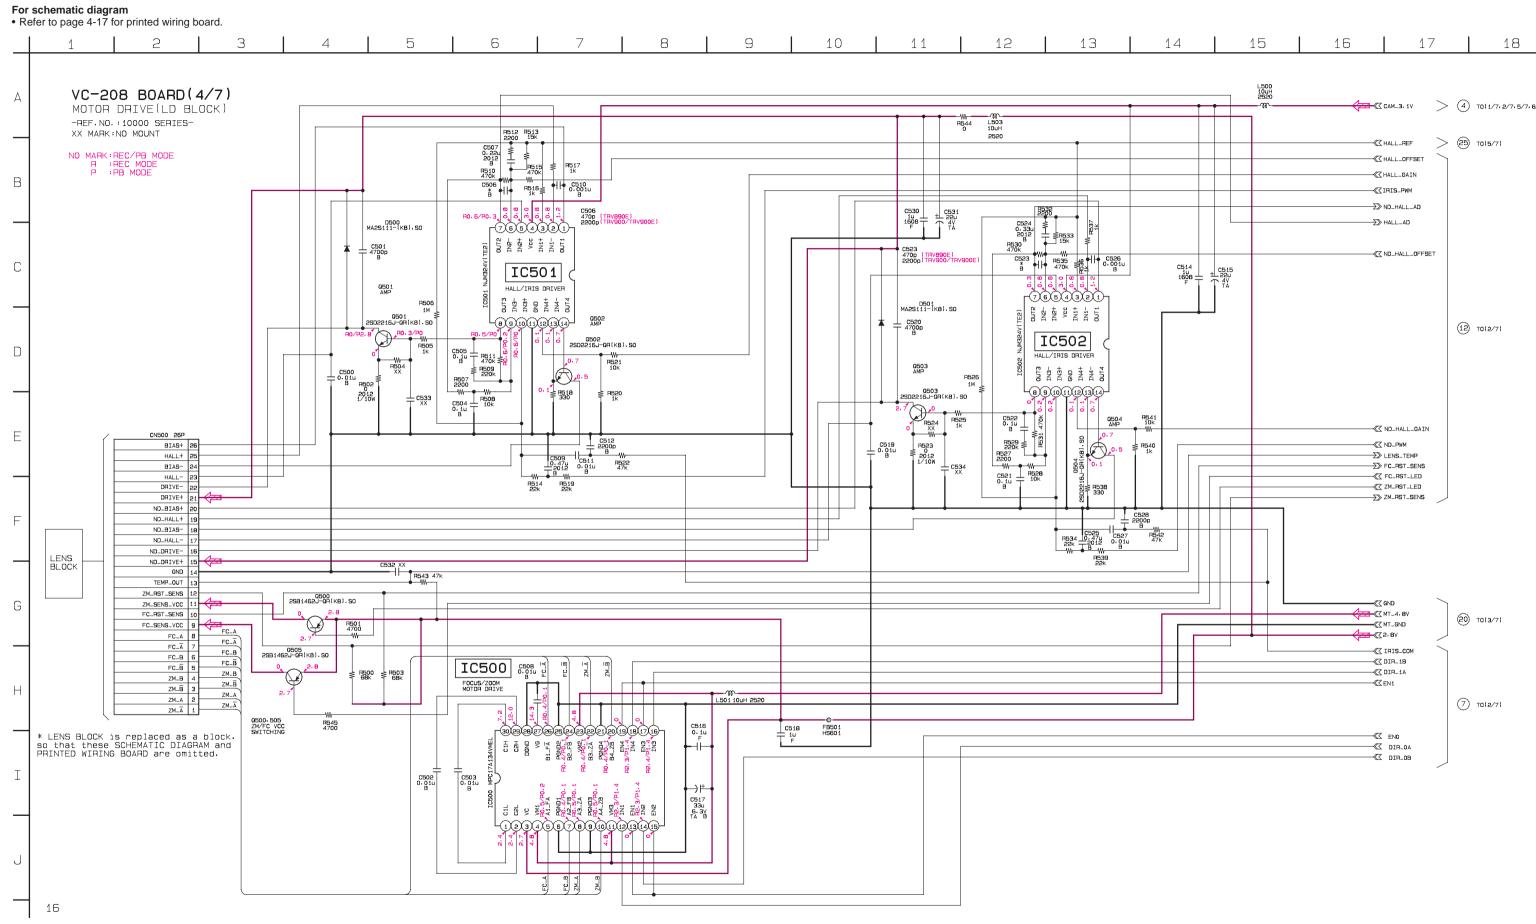

4-35 4-36 MOTOR DRIVE VC-208 (4/7)

17	18	
>	(d) T0(1/7.2/7.6/7.6/7)	
	②5) TO(5/7)	
FSET		
FSEI		
	(12) TO(2/7)	
AIN		
is o		
is /		
	20) TO(3/7)	
	(7) TO(2/7)	


# SE-75 (YAW/PITCH SENSOR) PRINTED WIRING BOARD — Ref. No. SE-75 Board; 10,000 Series —

SE-75 BOARD

C450 B-2 C451 A-2

CN450 A-2 L450 B-1


# SE-75 BOARD (SIDE A)

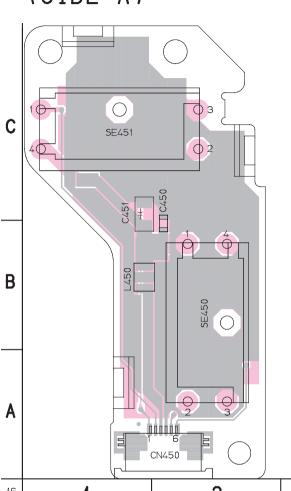

# For printed wiring boards


• This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.

# There are few cases that the part printed on this diagram isn't mounted in this model.

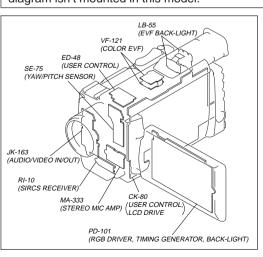


4-39

For schematic diagram
• Refer to page 4-17 for printed wiring board of VC-208. | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |

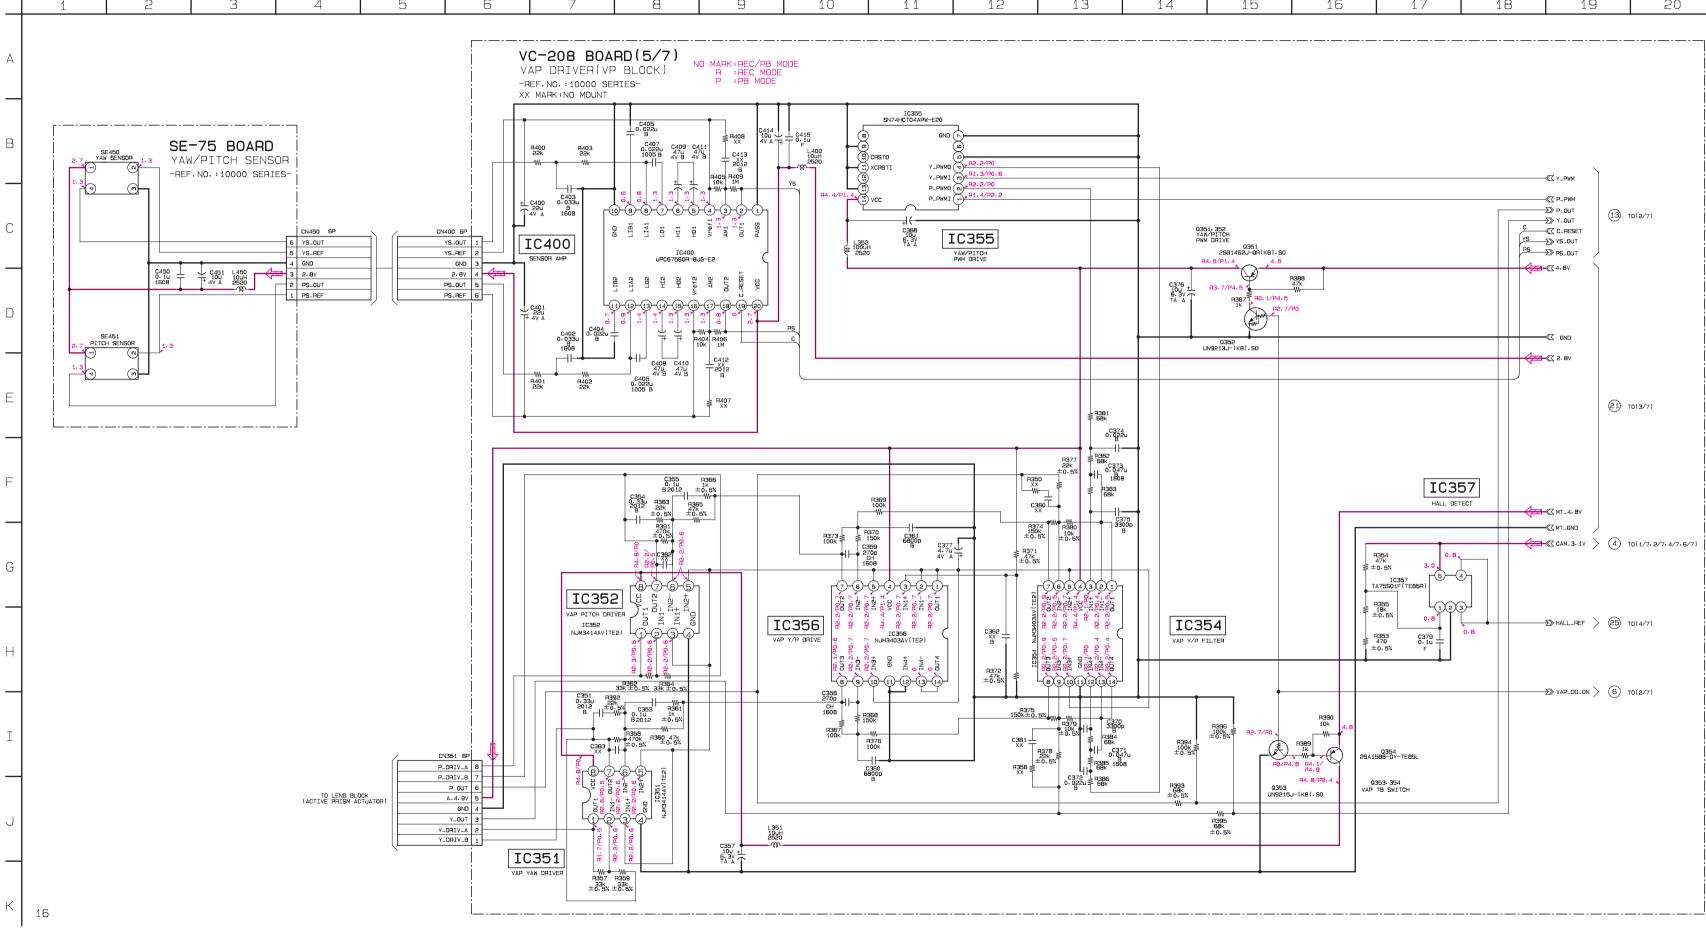



4-41

VAP DRIVER / YAW/PITCH SENSOR VC-208 (5/7)

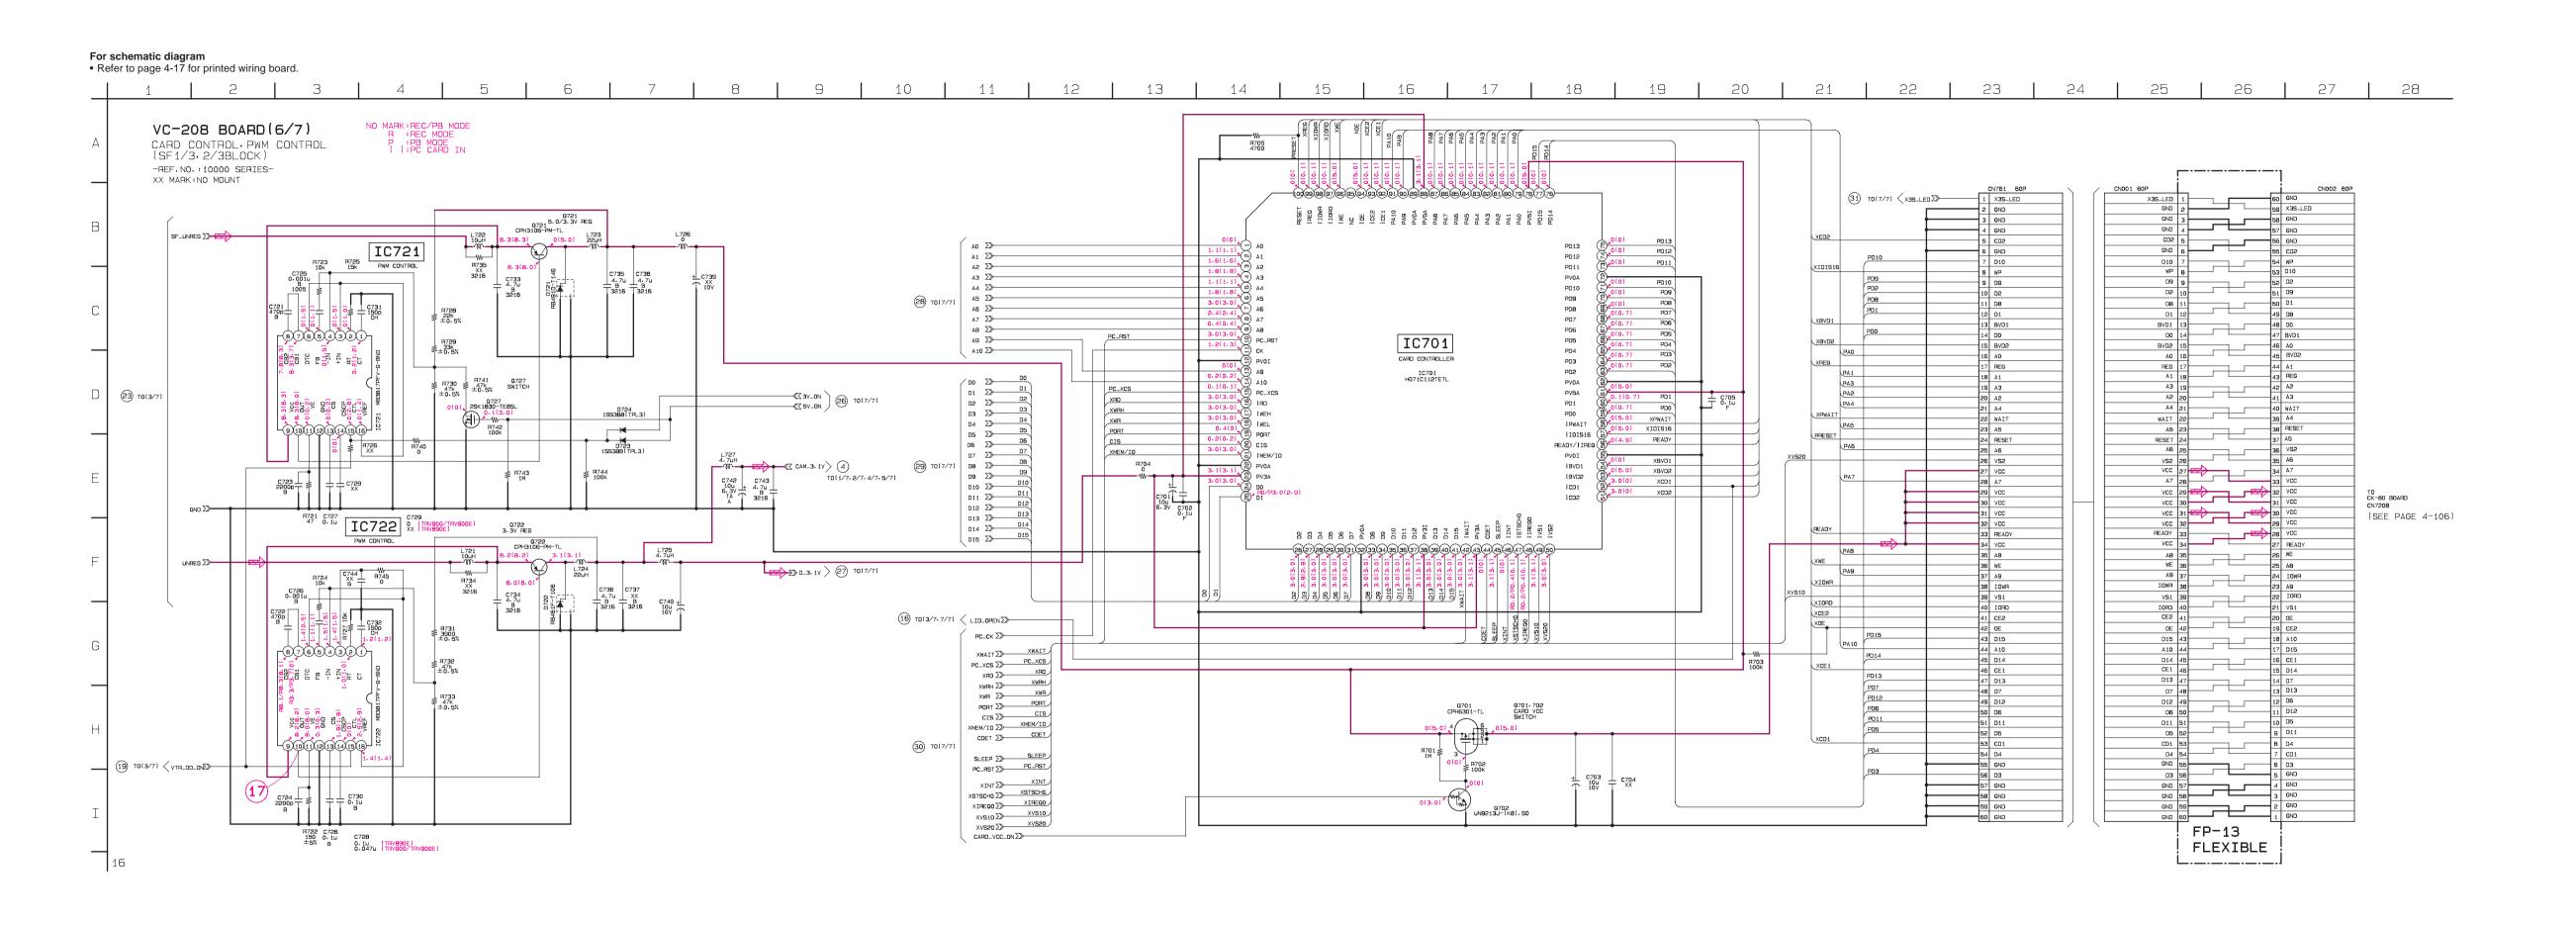

VC-208 BOARD (6/7) CAMERA REC/PB

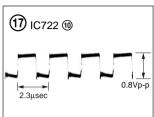

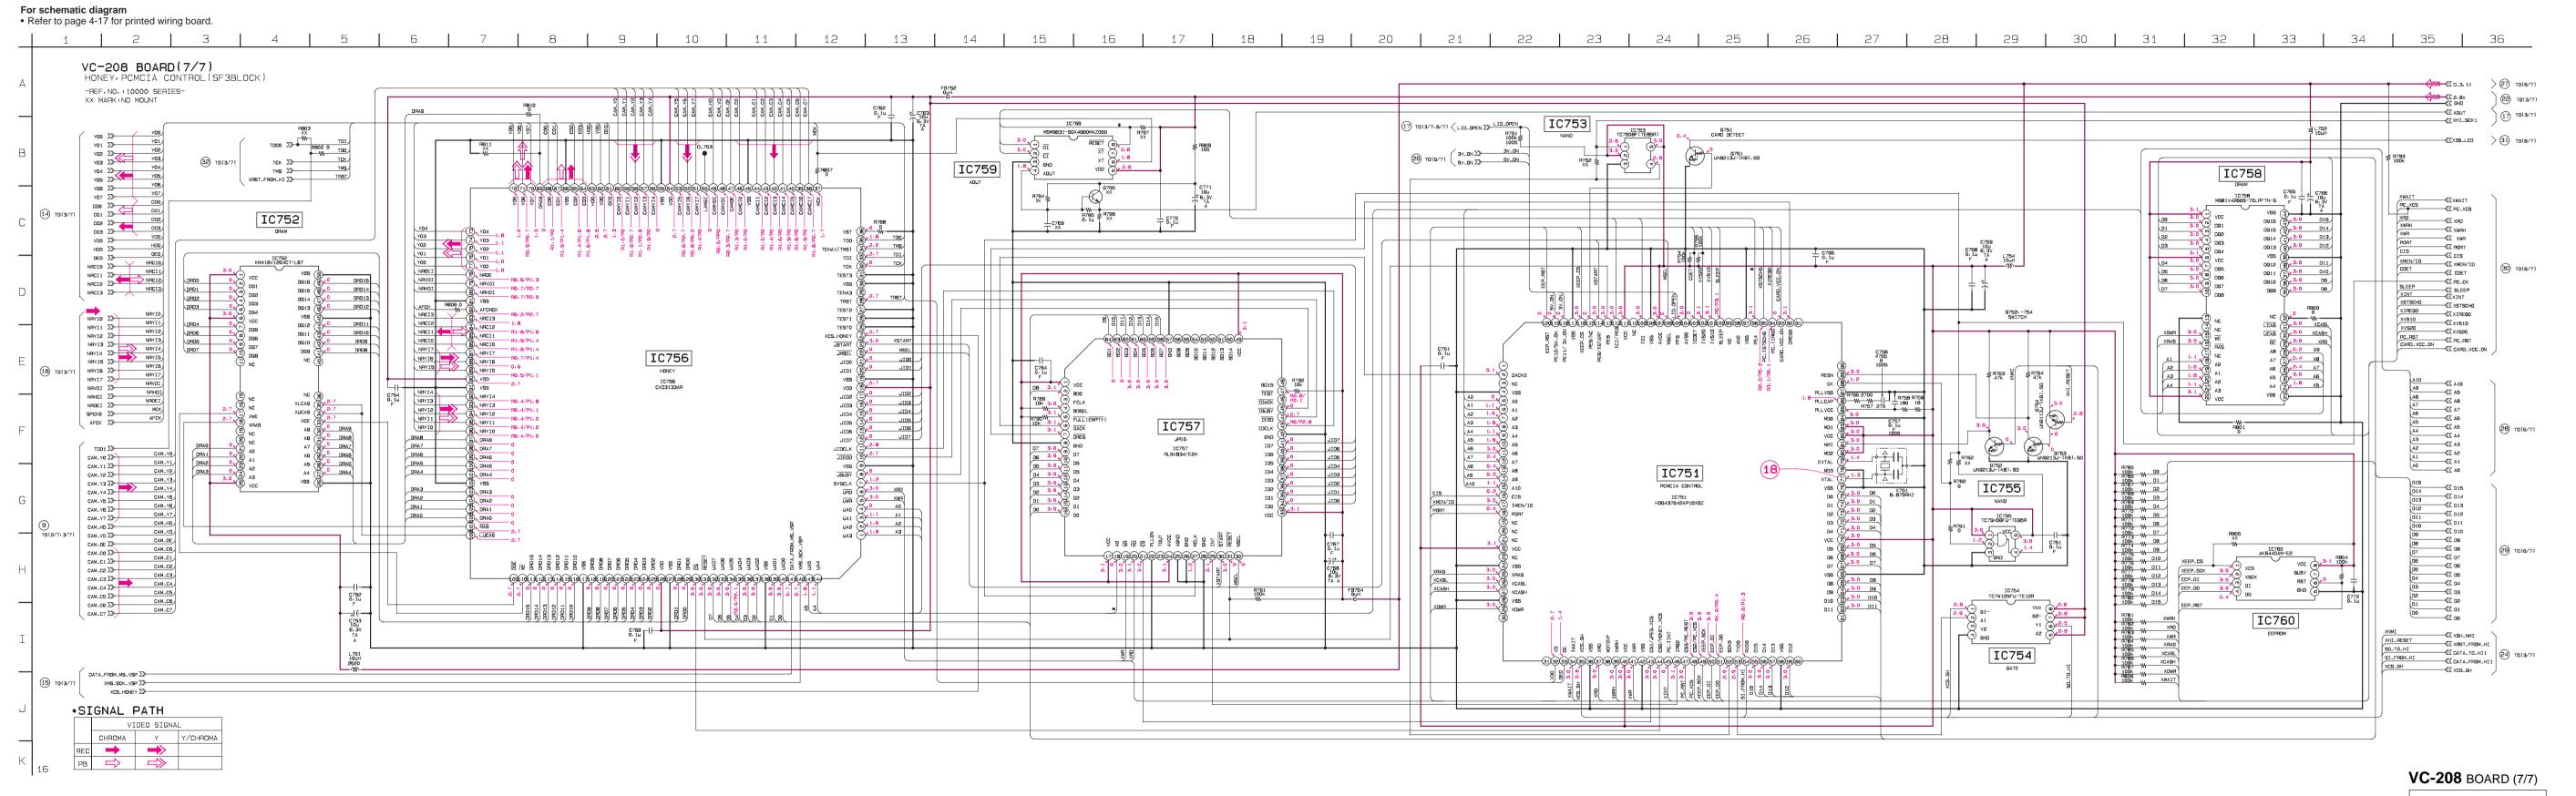


(18) IC751 (7) CAMERA REC/PB  $\wedge \wedge \wedge \wedge \wedge$ 

 $V V V V V V \downarrow$ 6.85MHz

HONEY, PCMCIA CONTROL VC-208 (7/7)


4-47


4-49 4-50 4-48

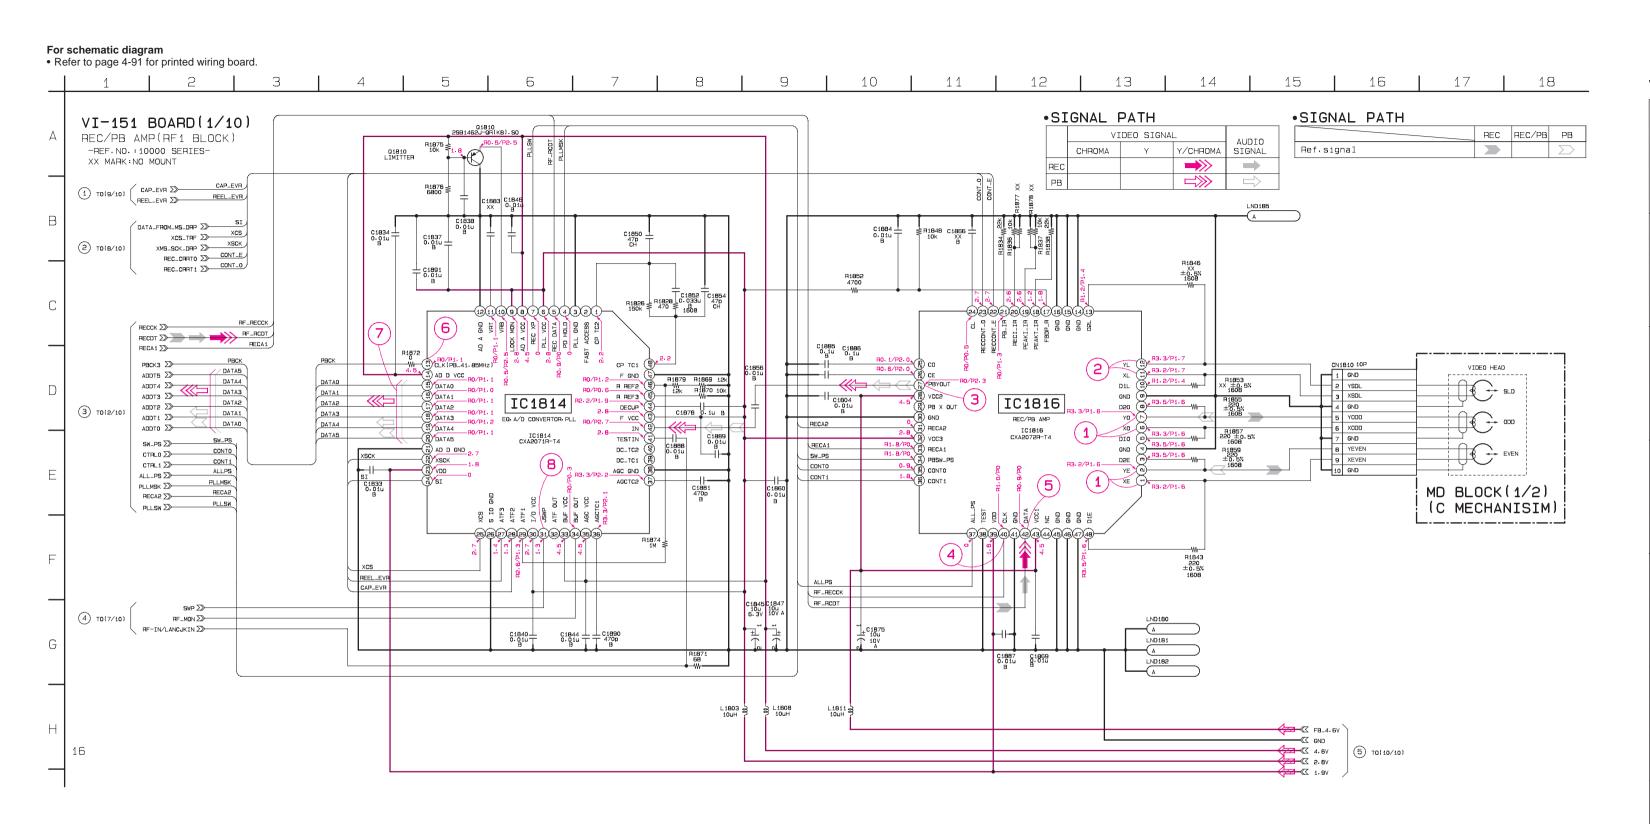


**VI-151** BOARD (1/10) 1 IC1816 ①, ②, ⑥, ⑦ CAMERA REC **2** IC1816 ①, ⑫ CAMERA REC 6.8msec ► 3 IC1816 @ PB 0.35Vp-p 4 IC1816 49 CAMERA REC/PB 2.3Vp-p 41.7MHz (5) IC1816 (49) 2.2Vp-p (6) IC1814 (3) PB 41.85MHz 2.0Vp-p 7 IC1814 (5) – (20) PB 2.2Vp-p 8 IC1814 39 CAMERA REC/PB 2.6Vp-p

VI-151 BOARD (2/10) CAMERA REC

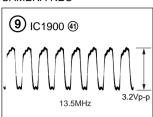


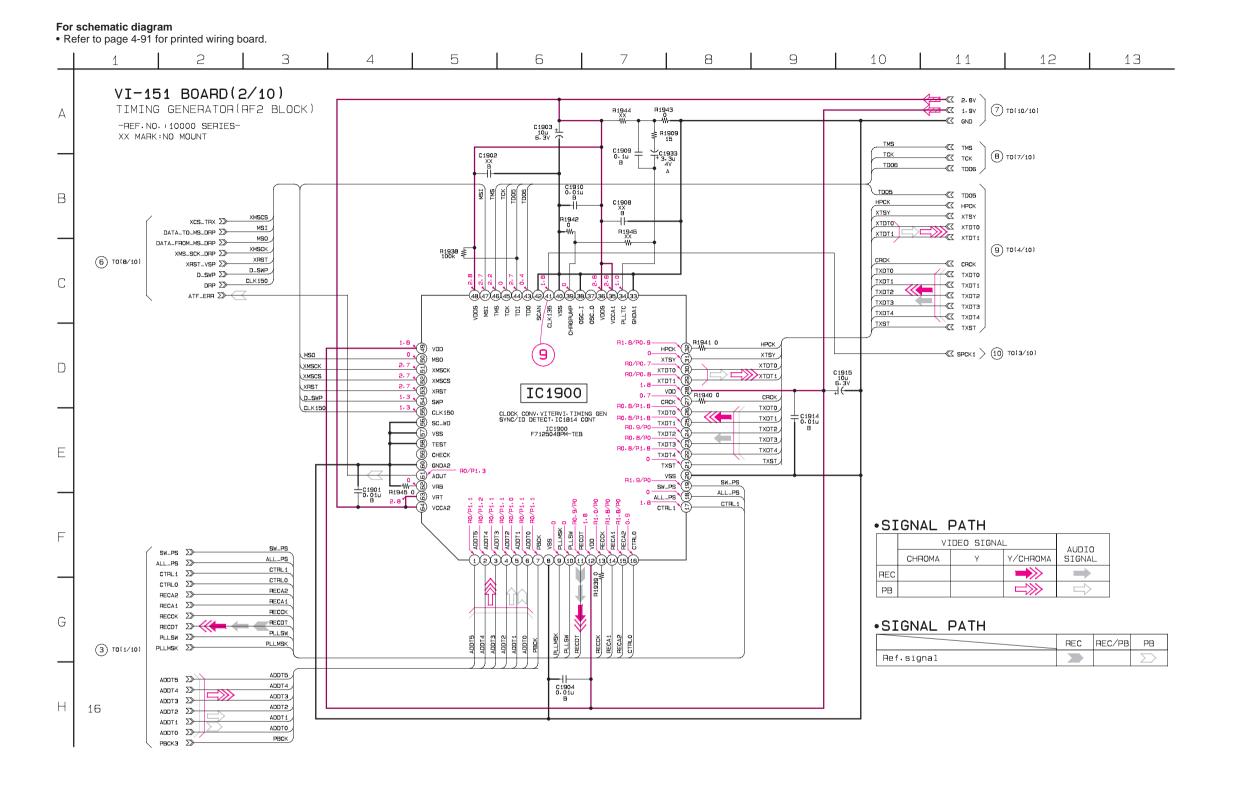


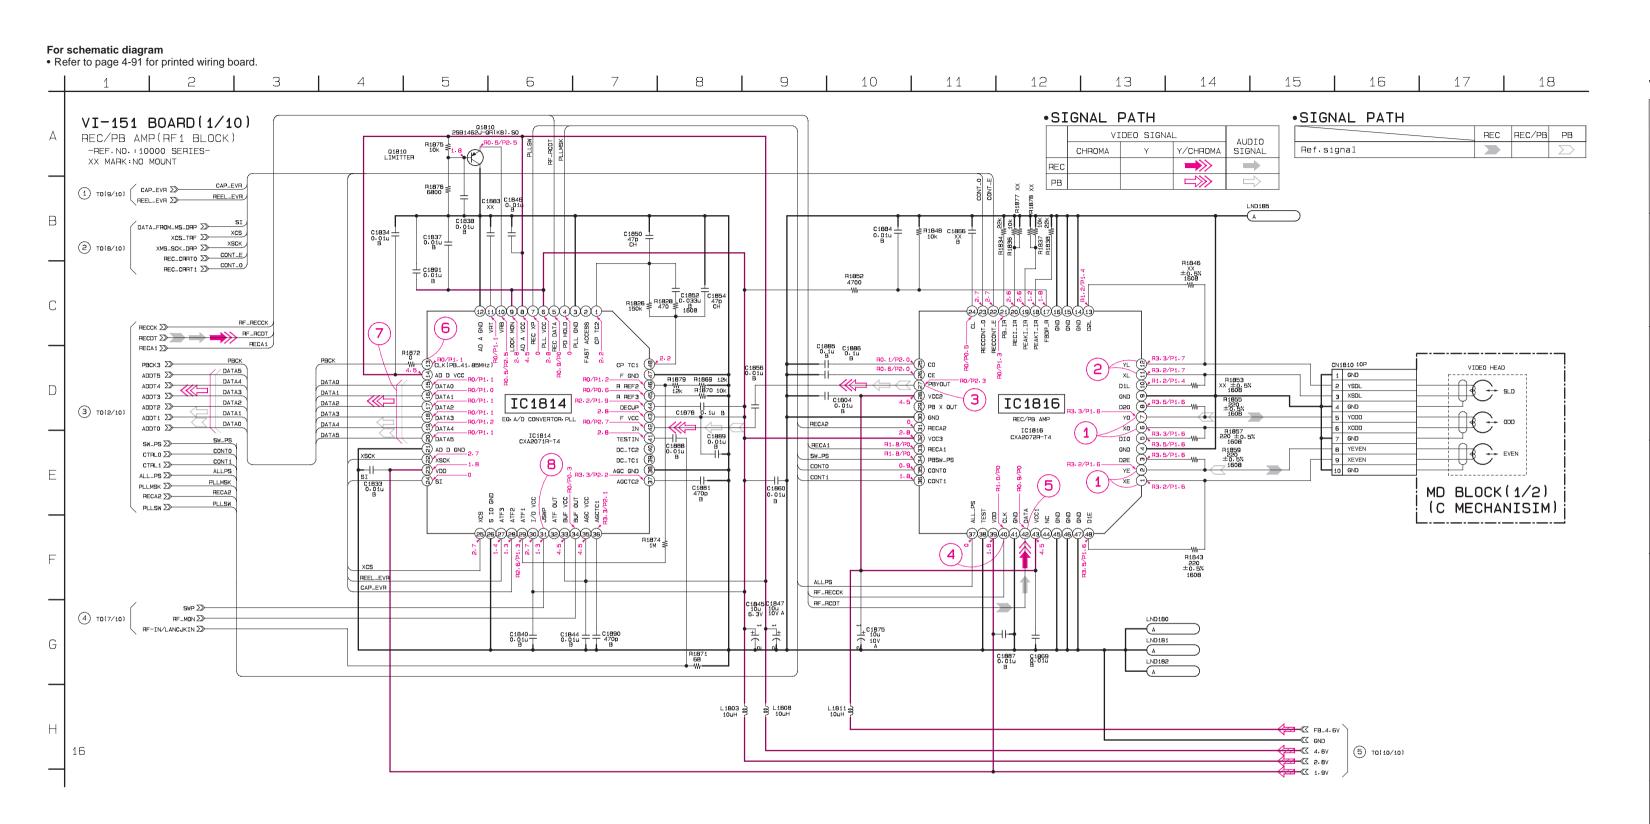


**VI-151** BOARD (1/10) 1 IC1816 ①, ②, ⑥, ⑦ CAMERA REC **2** IC1816 ①, ⑫ CAMERA REC 6.8msec ► 3 IC1816 @ PB 0.35Vp-p 4 IC1816 49 CAMERA REC/PB 2.3Vp-p 41.7MHz (5) IC1816 (49) 2.2Vp-p (6) IC1814 (3) PB 41.85MHz 2.0Vp-p 7 IC1814 (5) – (20) PB 2.2Vp-p 8 IC1814 39 CAMERA REC/PB 2.6Vp-p

VI-151 BOARD (2/10) CAMERA REC

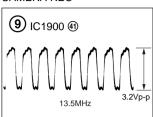

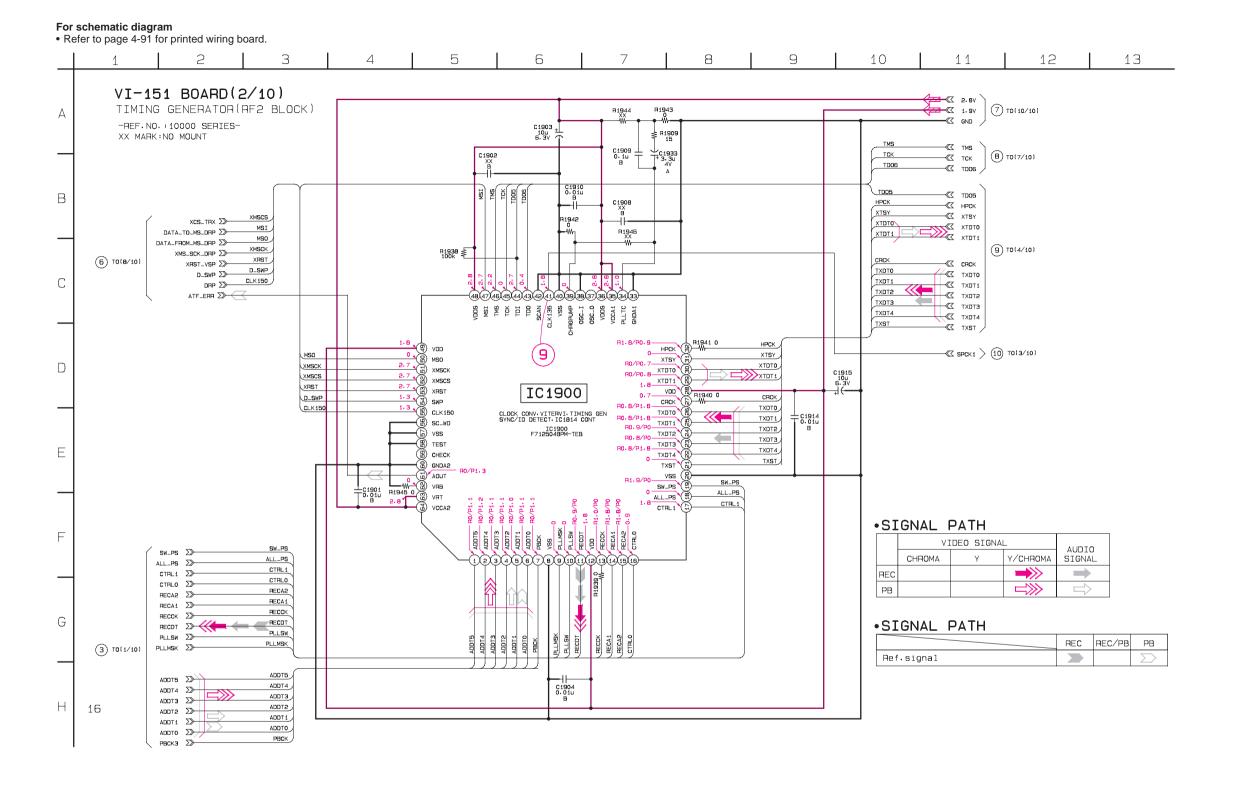


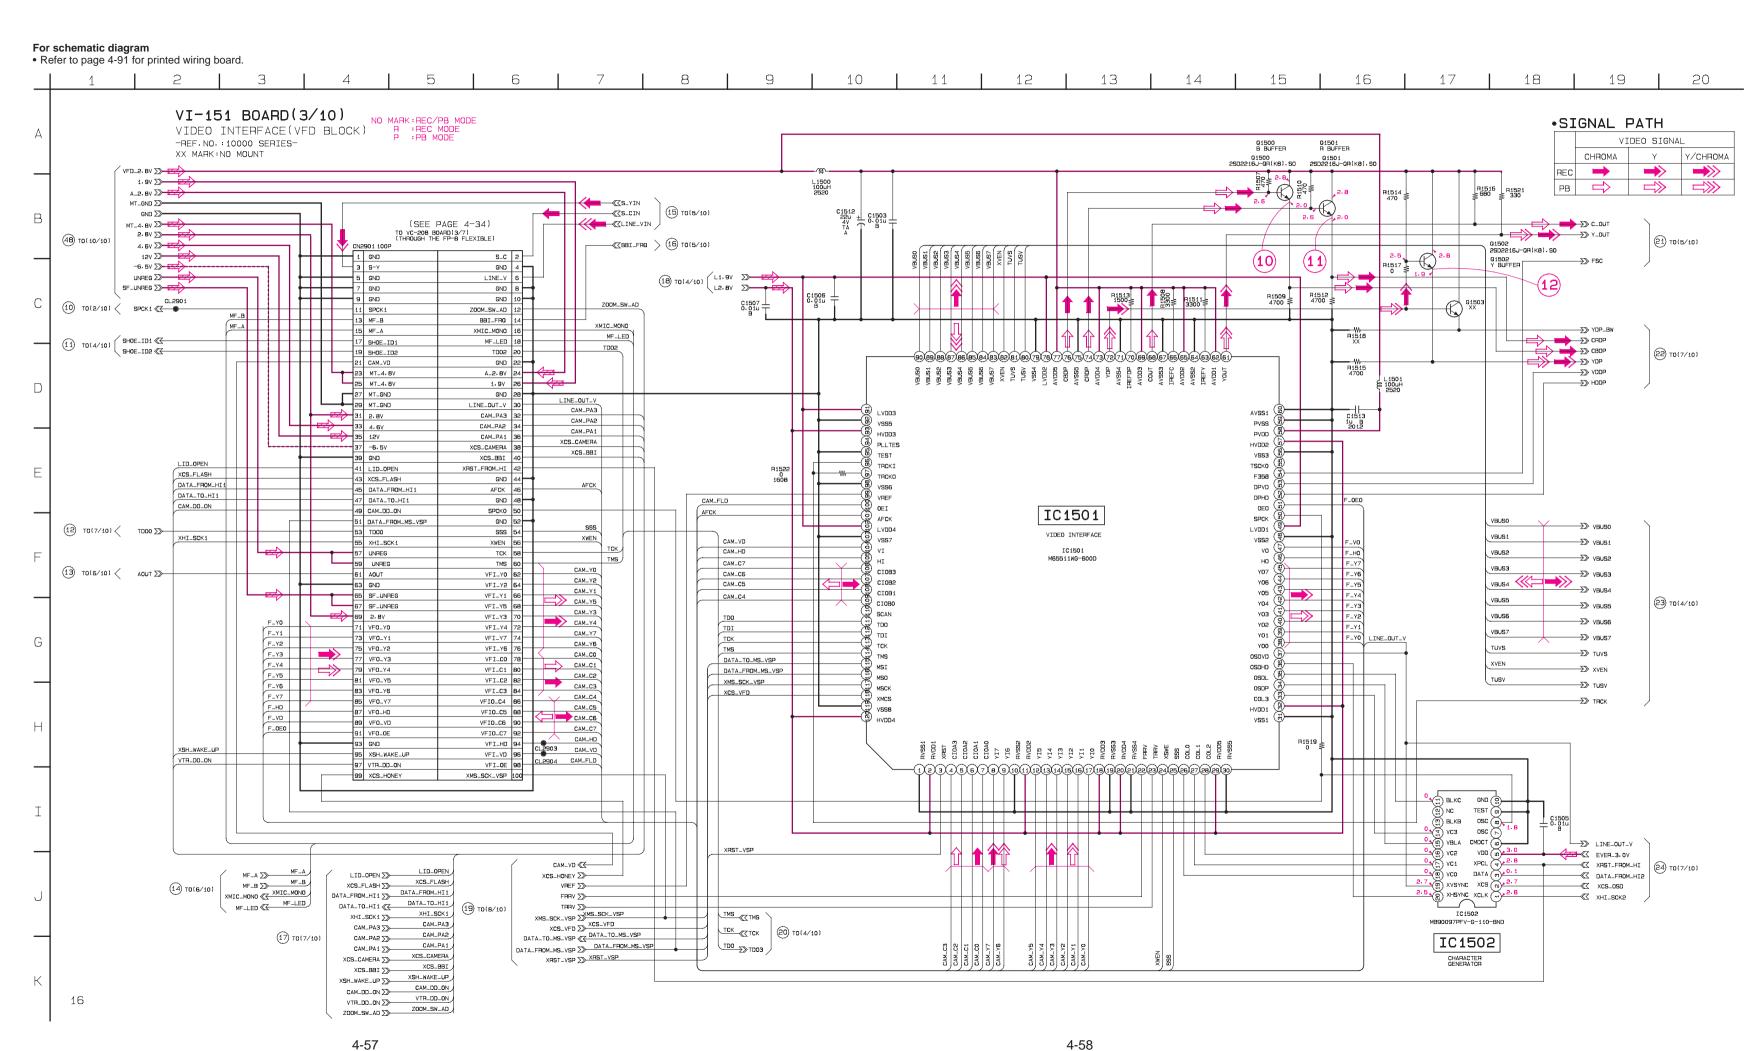


VI-151 BOARD (3/10) (10) Q1500 (E) CAMERA REC Menhammed0.22Vp-p 10 Q1500 (E) LINE REC 0.3Vp-p (1) Q1501 (E) CAMERA REC 0.2Vp-p 11 Q1501 ® LINE REC **┑**┋┕╾┑┋┕╼┑┊┆ **12** Q1502 **E** CAMERA REC 12 Q1502 (E) LINE REC 


VIDEO INTERFACE

VI-151 (3/10)

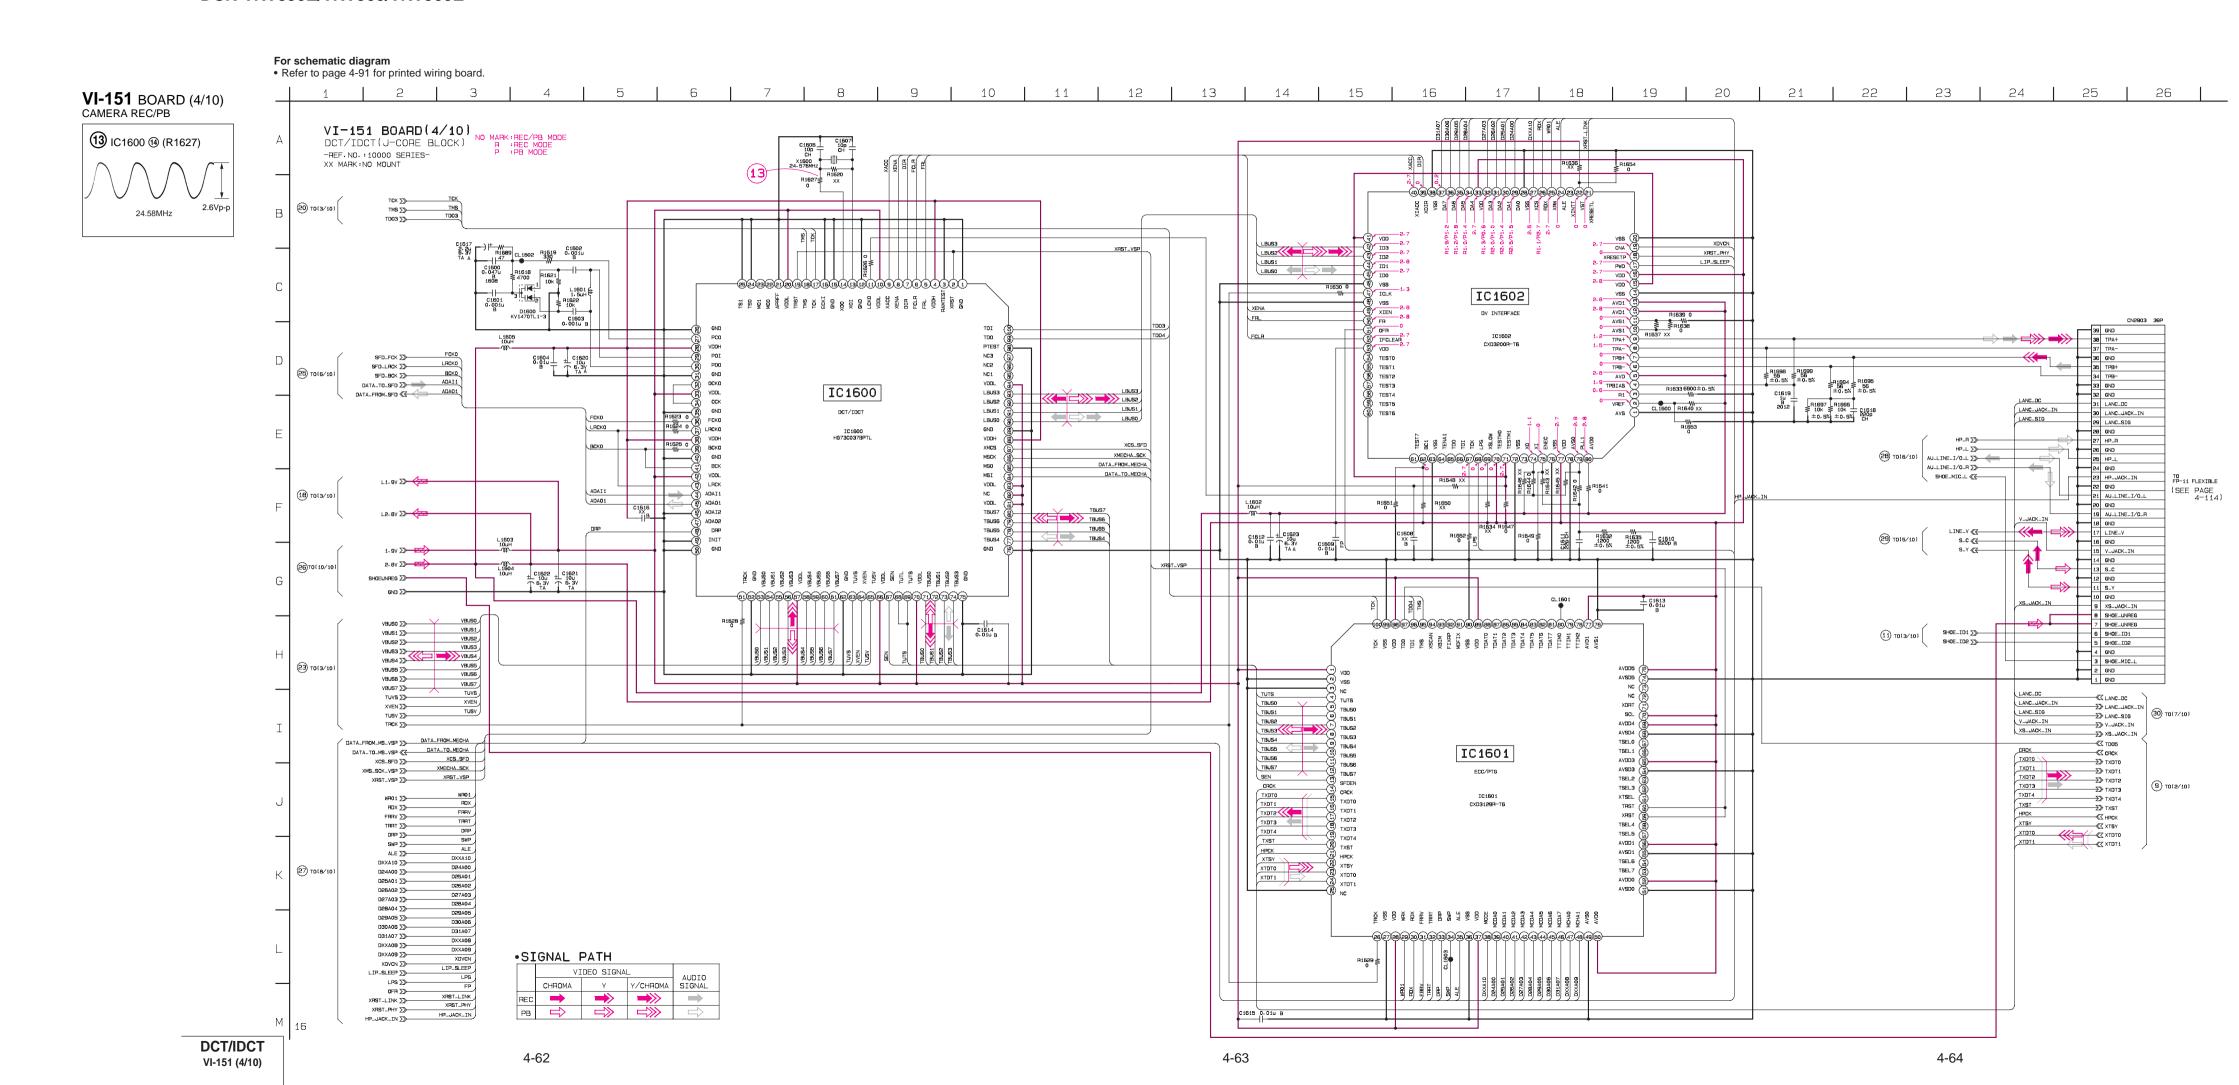

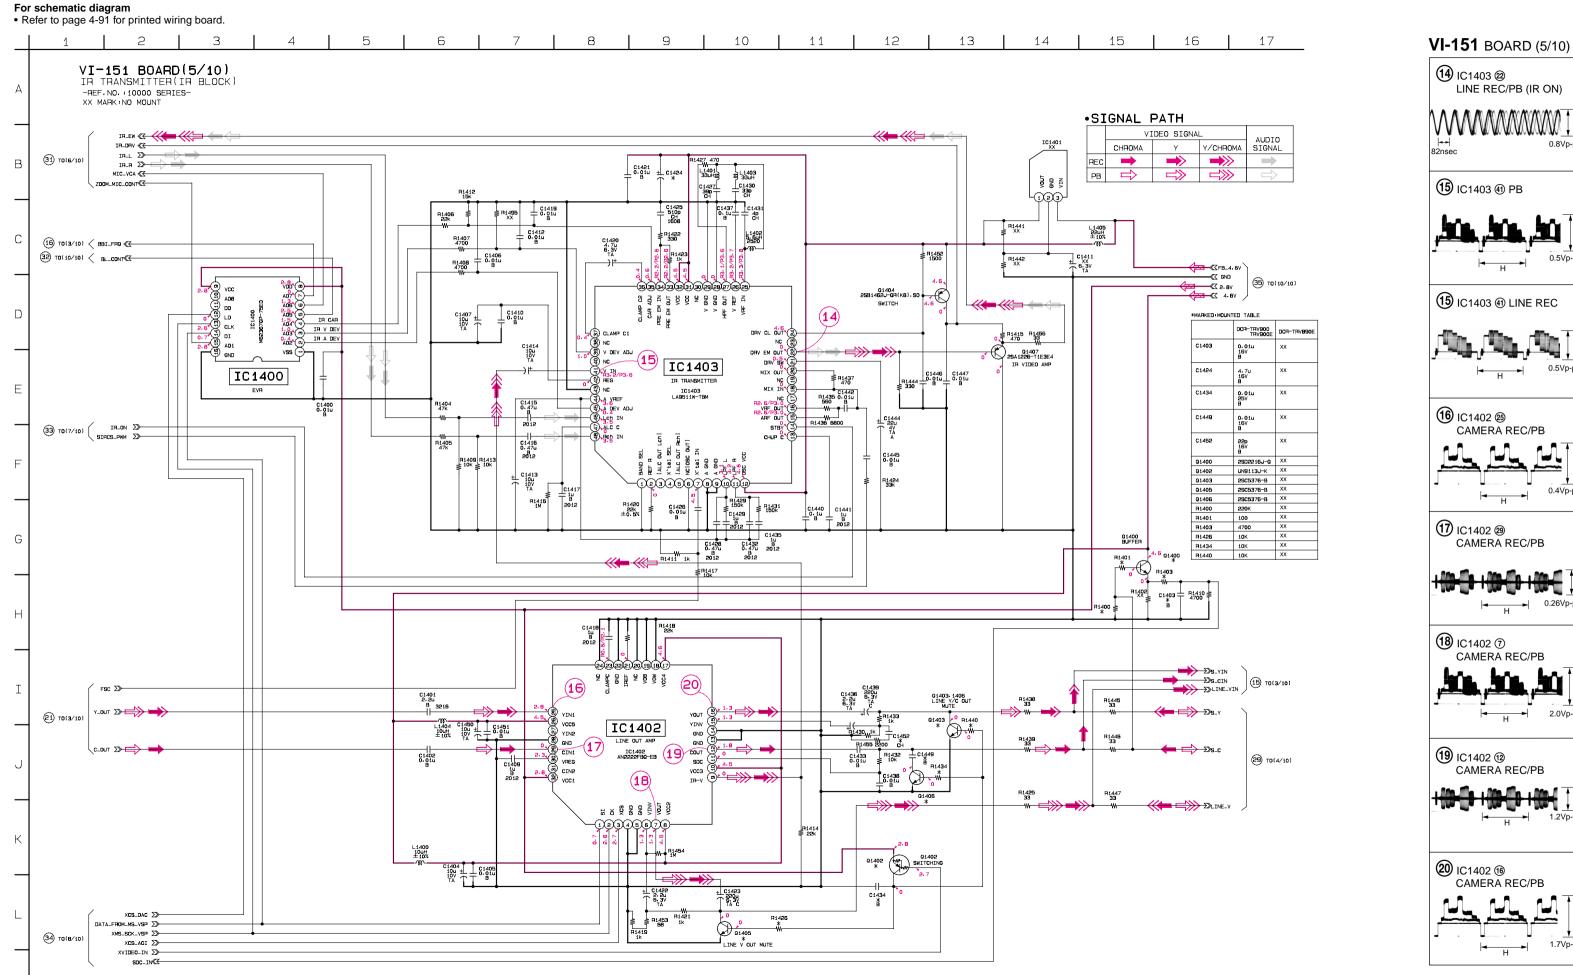


4-66

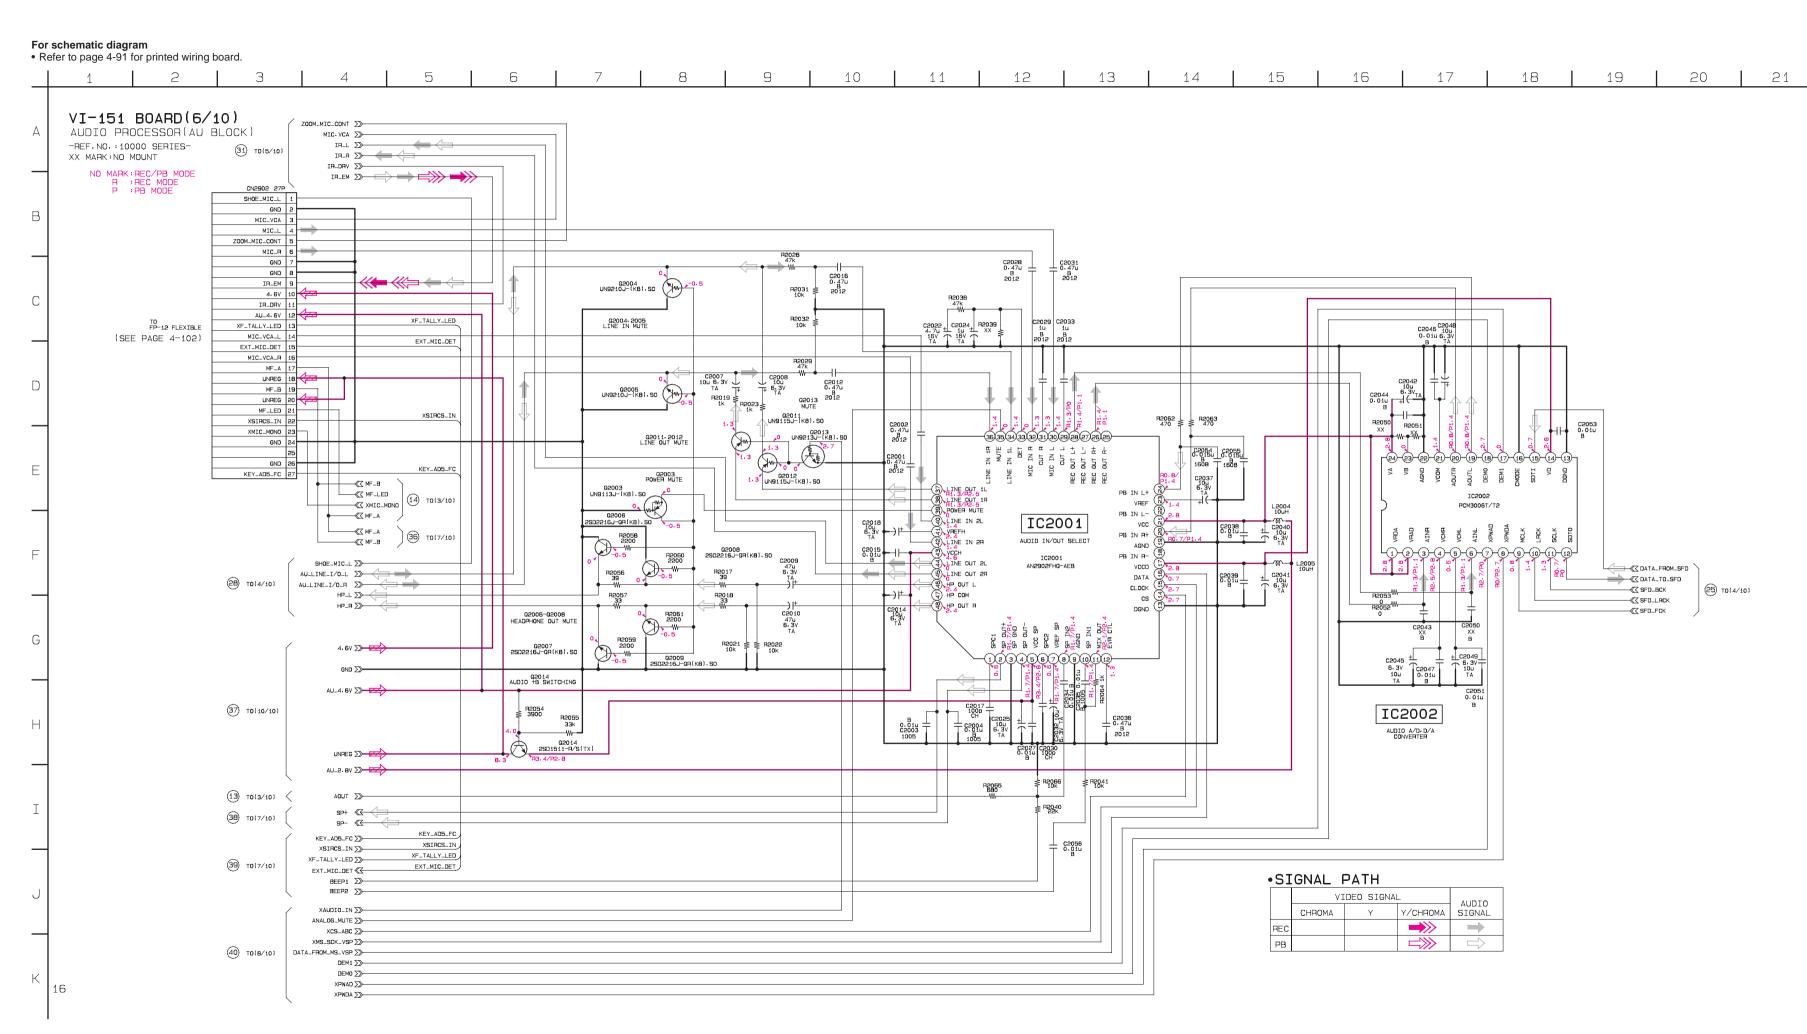

AUDIO PROCESSOR VI-151 (6/10)

4-69 4-70

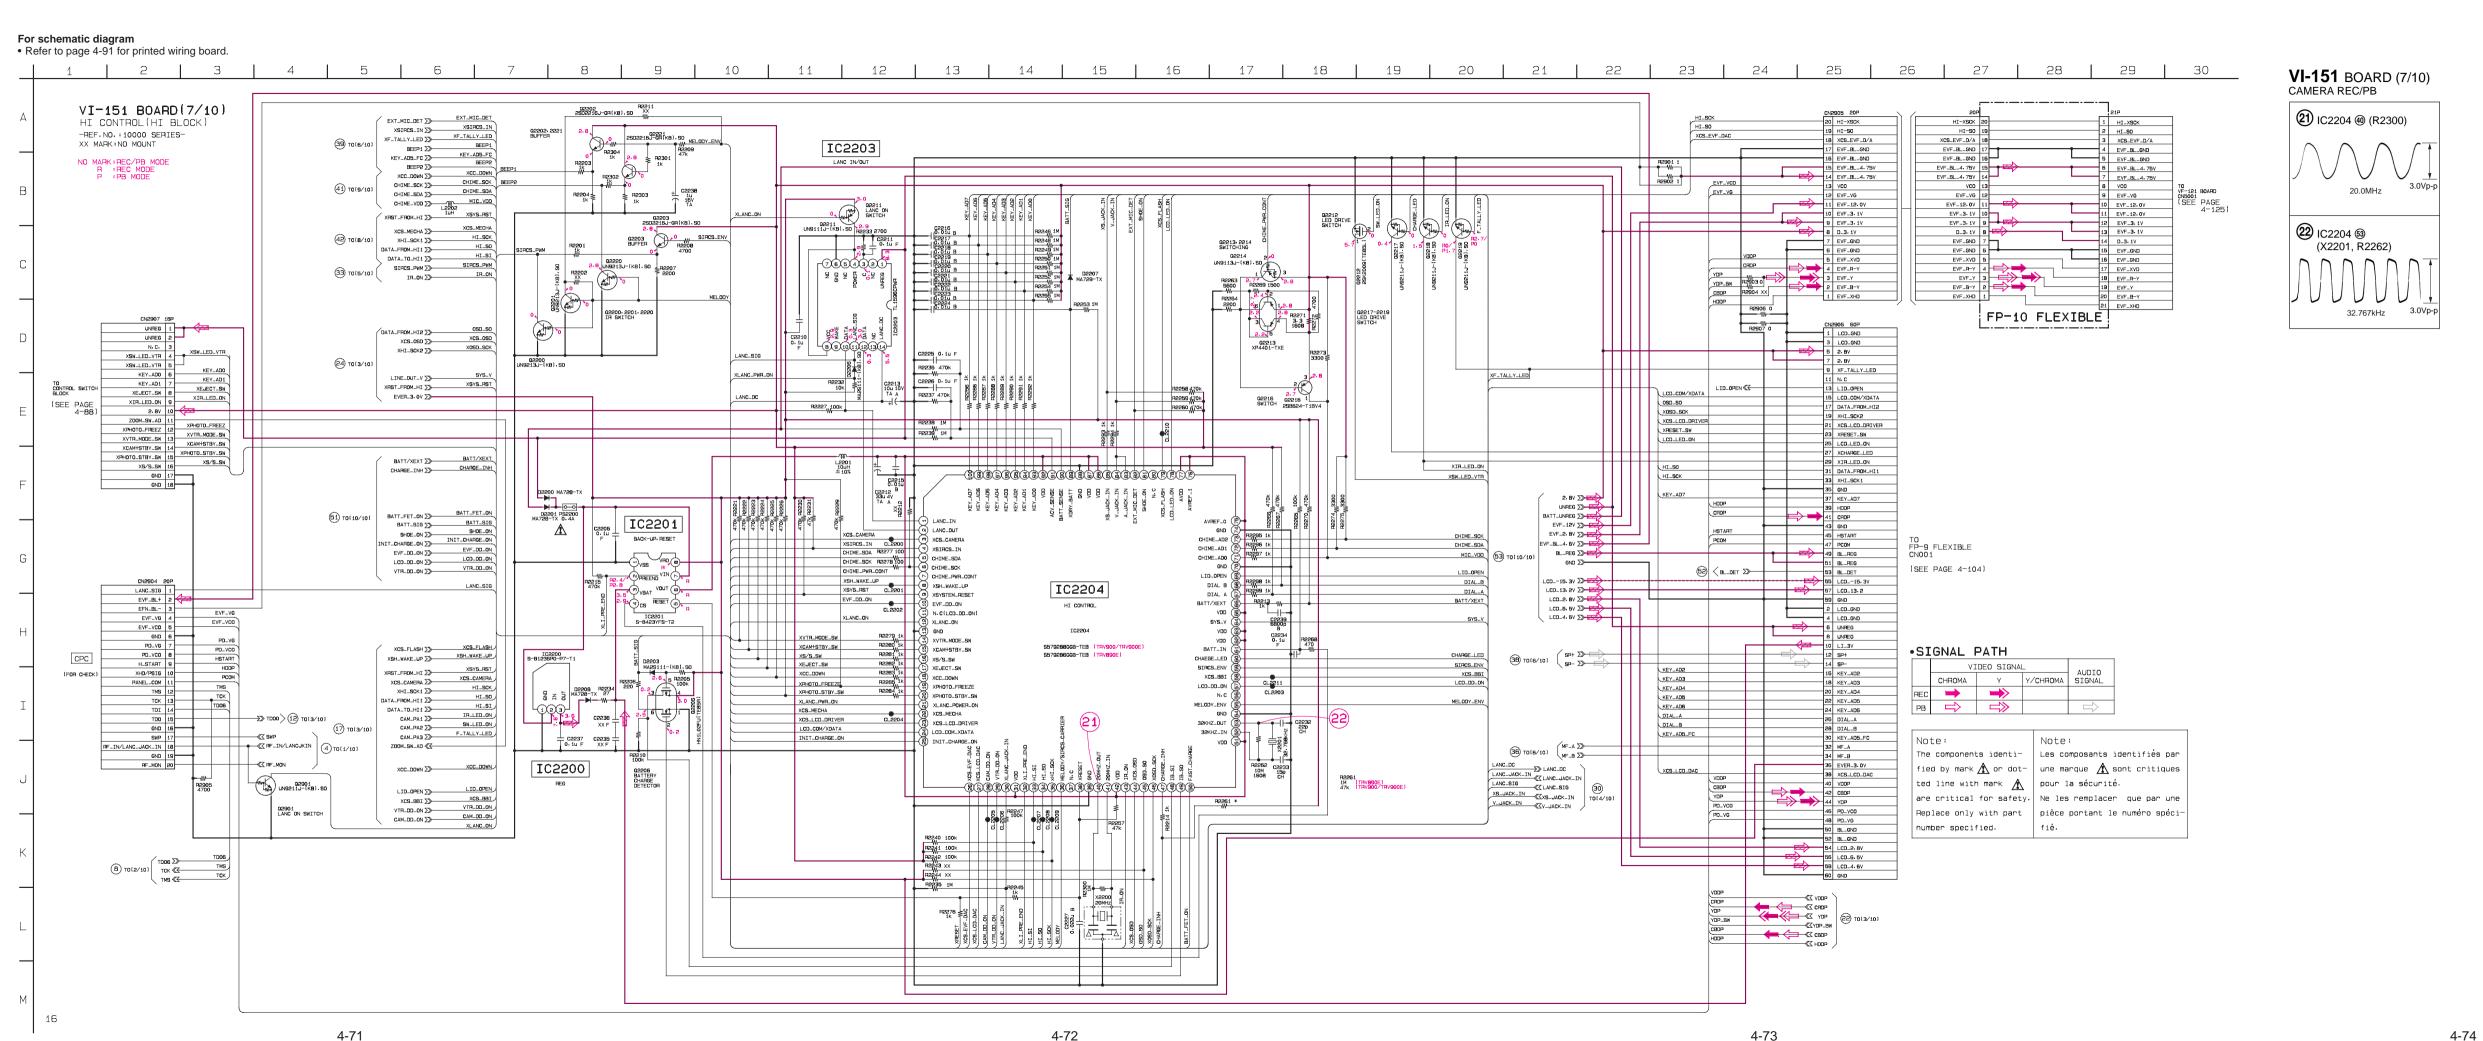

# DCR-TRV890E/TRV900/TRV900E

MS18 MS19

ATF\_ERR > ATF\_ERR

D\_SWP ≪<del><</del>

| MS19 | CL2415 | @) RDX | MS19 | CL2415 | @) XCS\_ADI | MS19 | CL2417 | @) XCS\_ADA | MS20 | CL2418 | @) AUDIO\_IN | MS21 | CL2418 | @) AUDIO\_IN | XCS\_ABC

XHP\_ON R) XCS\_TRF

D25A01 - R D25A02 - R D27A03

#### For schematic diagram • Refer to page 4-91 for printed wiring board. 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 **VI-151** BOARD (8/10) CAMERA REC/PB VI-151 BOARD(8/10) MECHANISIM CONTROL (MD1 BLOCK) -REF.NO.:10000 SERIES-**23** IC2401 ① (X2400) XX MARK: NO MOUNT MS74 MS75 XMS\_SCK\_VSP << NO MARK:REC/PB MODE R :REC MODE P :PB MODE 44 T0(5/10) DATA\_FROM\_MS\_VSP << XVIDEO\_IN << XCS\_DAC << 20.0MHz SDC\_IN ≪< XMS\_SCK\_DRP << DATA\_FROM\_MS\_DRP 《< 2 TO(1/10) REC\_CRRTO << XCS\_TRF **≪**₹ DEM1 << XPWAD ≪₹ 40) TO(6/10) ANALOG, MUTE << XAUDIO\_IN ≪<del>X</del> XCS\_ABC 《~ MS74 MS75 XMS\_SCK\_VSP << DATA\_FROM\_MS\_VSP XCS\_HONEY << DATA\_FROM\_MS\_VSP << XRST\_VSP≪ DATA\_TO\_MS\_VSP∑> XMS\_SCK\_VSP (19) TO(3/10) FRRV 《<del>X</del> VREE >>> CAM\_VD ∑≫ H2402 XX VFI\_VD ∑> ₩ XRST\_LINK << XRST\_PHY << HP\_JACK\_IN ∑>> WR01 ≪<del><</del> TRRT 《~ DFR << DATA\_TO\_MS\_VSP << LPS 《~ XMS\_SCK\_VSP <<< DBb 《<del>【</del> LTP\_SLEEP «~ D25A01 《~ D26A02 《~---D28A04 << XDVCN >>>--D29A05 《~ D31A07 ≪₹---DXXA08 《<del>₹</del> DXXA10 《~ XCS\_SFD ≪< XMS\_SCK\_DRP << DATA\_FROM\_MS\_DRP << DATA\_TO\_MS\_DRP XRST\_VSP <<<

IC2401

MECHANISIM CONTROL

IC2401 MB91191LGA-G-4780MP4

MISSIS MI

DE9406 D330406 D330407 D33407 D33408 D33408 D33408 D33408 D33408 D33408 D3408 D3408

R2429 R2430 R2432 ±0.5% ₹ ₹47k ₹ R2432 ±0.5% 100k

EEP\_RDY/BSY
EEP\_RST
XCS\_EEP

XCS\_HONEY ?

LIP\_SLEEP (

HI\_SO(HI→MS)

HI\_SI(MS→HI)

XHI\_CS\_WS (0)\_ ATF\_PWSV (0)\_ XVSP\_SCK (4)\_

ATF\_DEBUG (2)

GND(EXTAL) N. C. (XTAL)

DRUM\_MASTER\_CLK

ATF\_RF\_CUT

ATF\_GAIN\_CTL

CL2404 MS80 CL2403 MS79 CL2402 MS78 MS77

(43) TO(10/10)

(44) TO(9/10)

(45) TO(9/10)

(42) TO(7/10)

REC REC/PB PB

——≪≾MODE\_SW\_A

---≪ZMODE\_SW\_B

—≪∑MODE\_SW\_C

——≪ZMODE\_SW\_D

---≪≺REC\_PROOF

→ CAP\_ON 

MS114 《 TREEL\_FG MS105 》 REEL\_PWSY

•SIGNAL PATH

Drum speed servo

Drum phase servo

Ref.signal

Capstan speed servo

Drum servo (speed and phase)

Capstan servo (speed and phase)

TAPE\_END

DATA\_TO\_HI1


XXHI\_SCK1

—≪XRST\_FROM\_HI

MS45


IC2404

R2436 100k

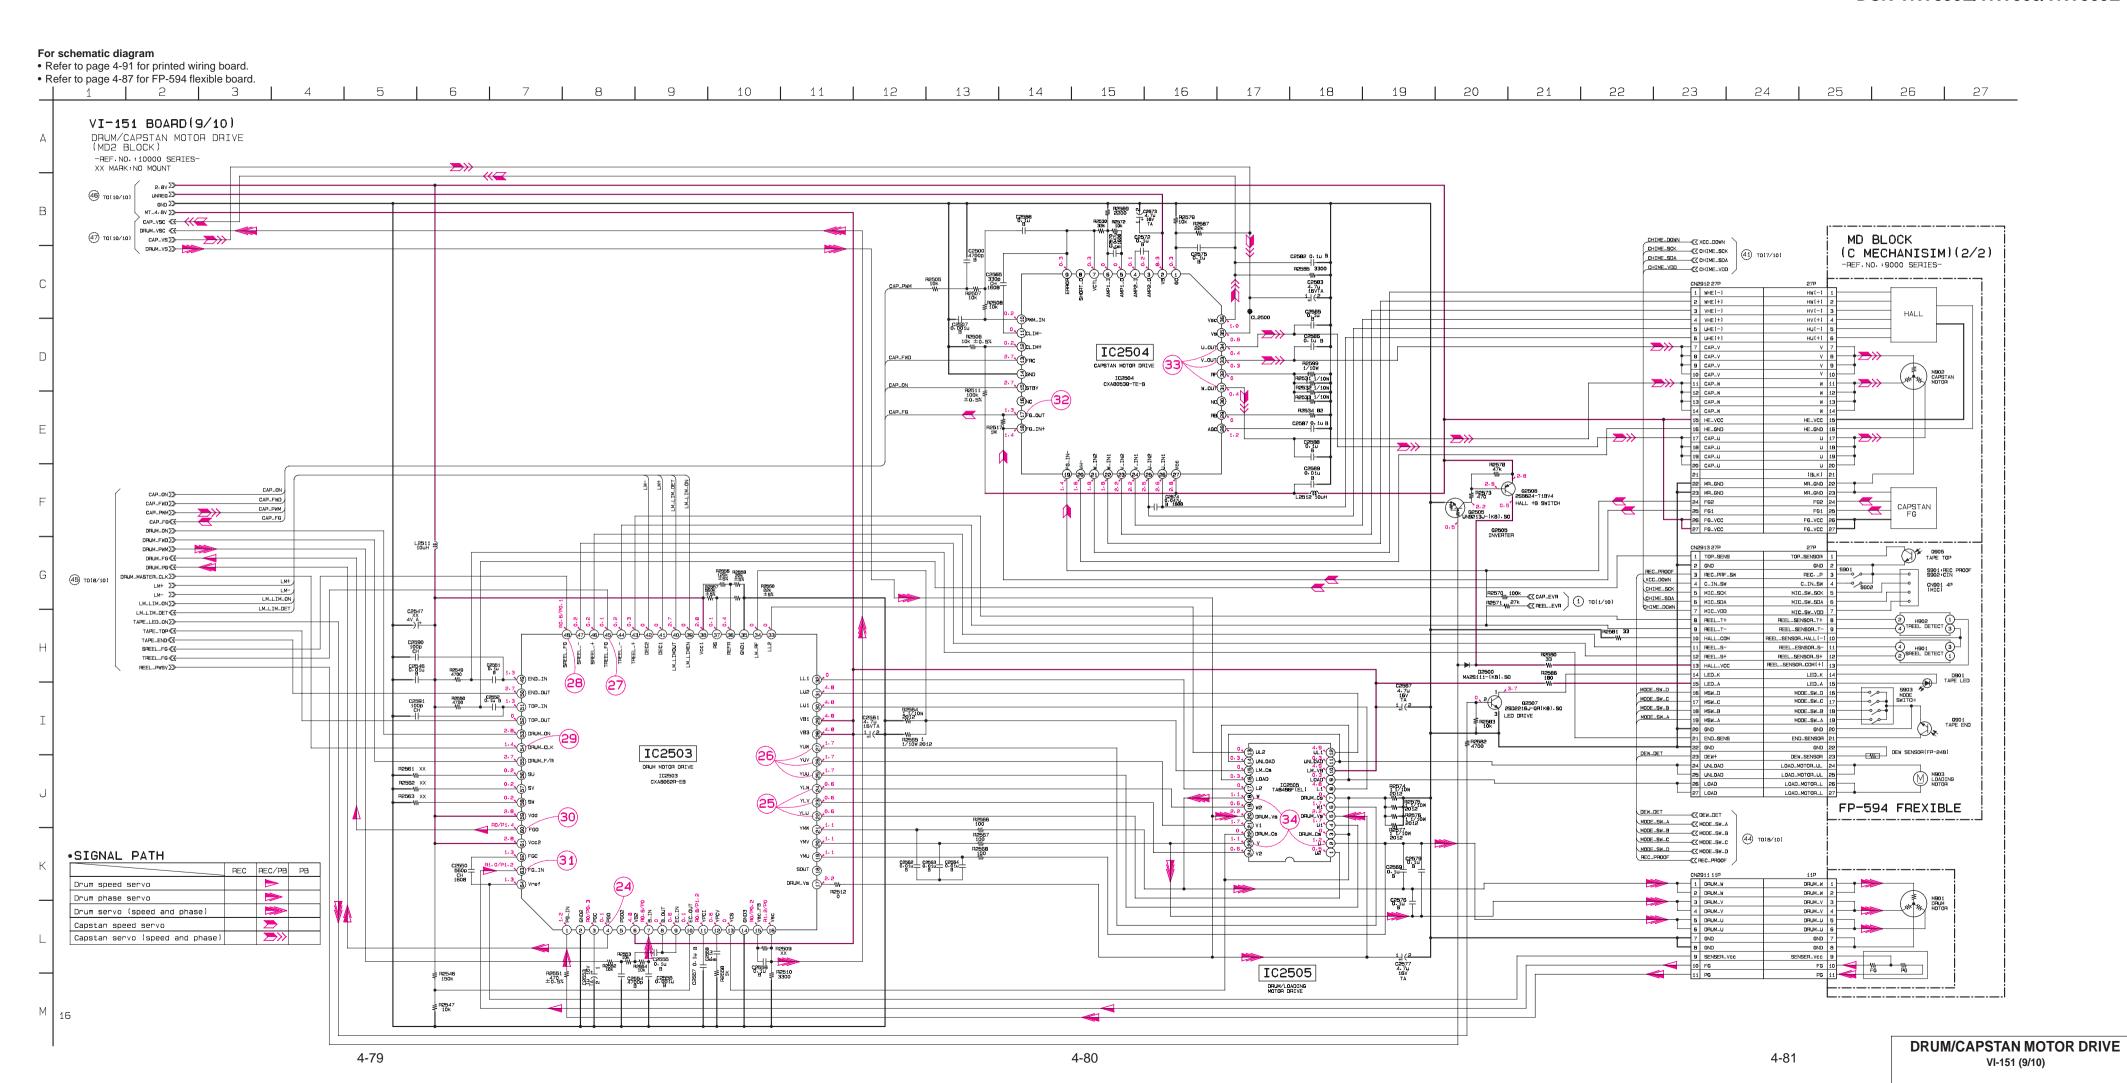

# **VI-151** BOARD (9/10) CAMERA REC/PB **24** IC2503 (4) **30** IC2503 @ € 6.7msec **(25)** IC2503 (29, 29, 29 31) IC2503 (6) 900kHz 0.23Vp-p **32** IC2504 <sup>(†)</sup> **26** IC2503 **25**, **26**, **27** 1.1msec ► 2.3Vp-p 0.92msec 33 IC2504 (3), (3), (3) **27** IC2503 **4**5 80msec 0.56sec 2.7Vp-p **28** IC2503 (8) 34 IC2505 ②, ®, 33 0.76sec **29** IC2503 🚱


3µsec ►

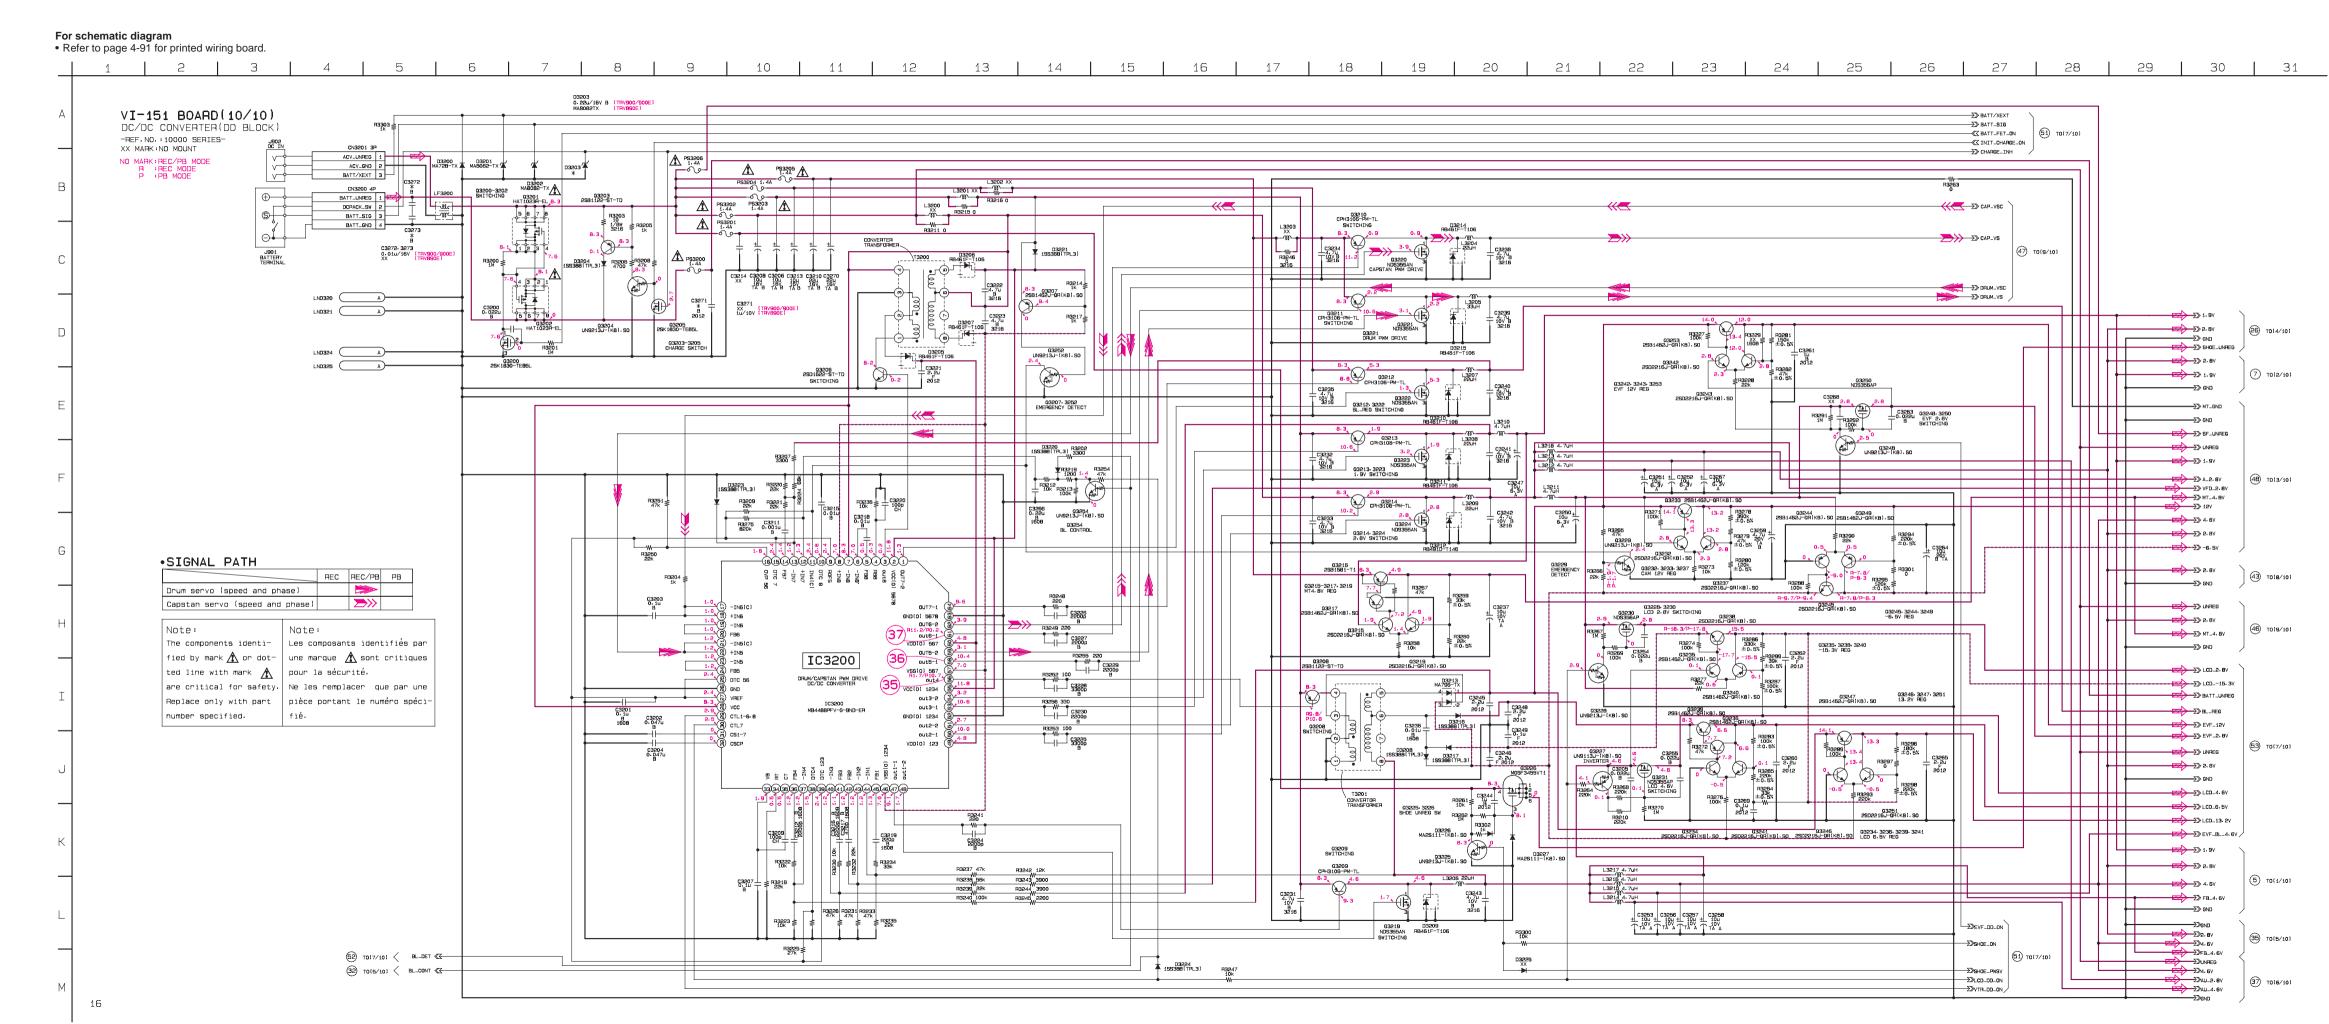


# FP-594 (LOADING MOTOR, S/T REEL SENSOR) PRINTED WIRING BOARD

— Ref. No.: FP-594 Board; 9,000 Series —

# FP-594 BOARD

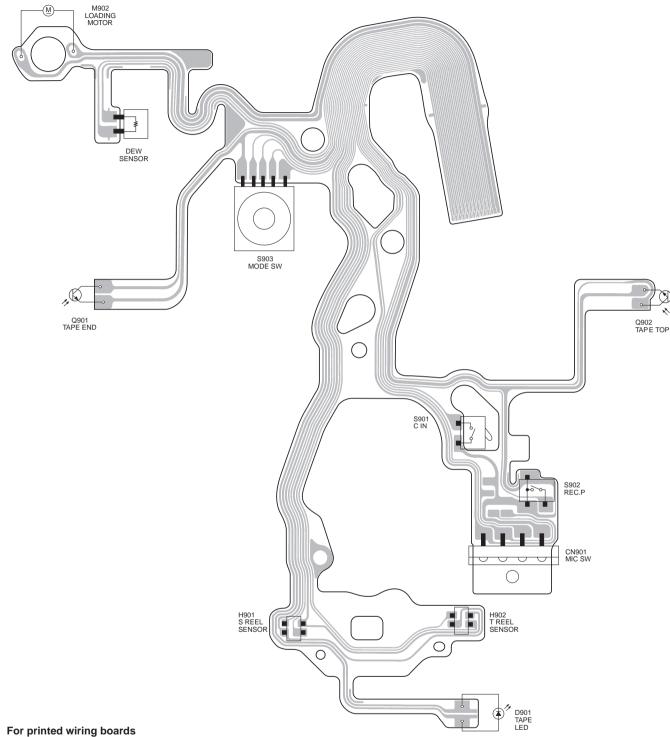

• Refer to page 4-82 for FP-594 board schematic diagram.

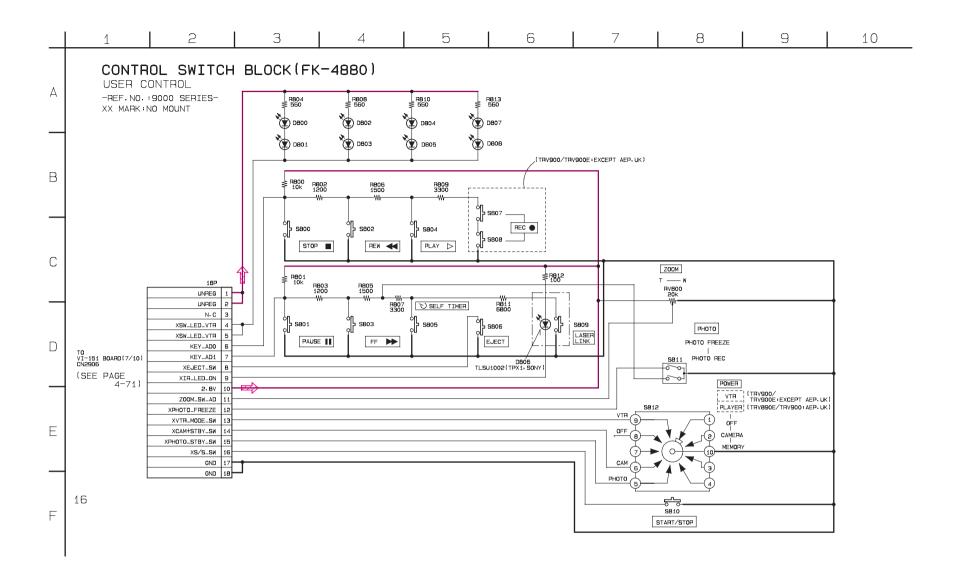


4-89


VI-15	1 BOAF	RD (SIDE A)		
C1401 C1402 C1404 C1405 C1409 C1414 C1405 C1409 C14138 C1422 C1423 C1433 C1434 C1436 C1438 C1439 C1449 C1450 C1507 C1512 C1513 C1600 C1601 C1601 C1601 C1601 C1601 C1602 C1603 C1606 C1607 C1512 C1613 C1614 C1615 C1617 C1612 C1613 C1614 C1908 C1909 C1910 C1914 C1915 C1903 C1904 C1908 C1909 C2033 C2044 C2045 C2046 C2047 C2056 C2566 C2566 C2566 C2567 C2577 C2578 C2578 C2588 C3237	A-3 A-2 B-3 A-2 B-1 A-2 B-2 A-4 A-4 A-3 A-4 B-3 A-4 A-4 A-3 A-4 B-3 B-5 B-1	C3244 C-7 C3248 E-7 C3248 E-8 C3249 E-8 C3249 E-8 C3255 E-9 C3260 D-7 C3262 D-7 C3262 D-7 C3263 A-9 CN1810 A-5 CN2901 C-2 CN2903 A-1 CN2904 D-9 CN2905 F-6 CN2905 F-6 CN2912 A-8 CN2911 A-7 CN3200 B-9 CN3201 C-9 D1600 A-4 D3204 C-8 D3204 C-8 D3205 C-8 D3208 E-7 D3216 E-8 D3205 C-7 D3216 E-8 D3207 C-7 IC1402 A-2 IC1501 B-3 IC1601 B-4 IC1900 B-6 IC2002 C-2 IC3501 B-3 IC1601 B-4 IC1900 B-6 IC2002 C-2 IC3501 B-3 IC1601 A-4 IC1900 B-6 IC2002 C-2 IC3501 B-7 L3206 C-7 D3227 C-7 IC1402 A-2 IC1501 B-3 IC1601 B-4 IC1900 B-6 IC2002 C-2 IC3501 B-9 IC3201 C-9	03205         C-8           03206         C-8           03215         C-7           03216         C-7           03217         C-7           03217         C-7           03225         C-7           03226         C-7           03227         E-9           03231         E-9           03235         E-7           03236         D-7           03237         D-7           03238         E-7           03239         D-7           03241         D-7           R1414         B-2           R1419         B-2           R1421         B-2           R1425         B-1           R1430         A-1           R1433         A-1           R1434         B-1           R1433         A-1           R1434         B-1           R1435         B-2           R1437         B-1           R1445         B-1           R1447         B-1           R1445         A-1           R1445         A-1           R1453         B-2           R1507 </td <td>  R2416   C-6   R2417   C-6   R2419   C-6   R2420   C-6   R2421   C-6   R2421   C-6   R2422   C-6   R2422   C-6   R2423   C-6   R2424   C-6   R2425   D-6   R2427   C-6   R2429   D-6   R2430   D-6   R2430   D-6   R2430   C-6   R2441   C-6   R2442   D-6   R2505   B-9   R2506   B-8   R2507   B-8   R2507   B-8   R2507   B-8   R2507   B-8   R2508   B-8   R2507   B-7   R2530   B-8   R2507   B-7   R2530   B-8   R2511   A-7   R2575   B-7   R2576   A-7   R2576   B-8   R2577   B-7   R2576   B-8   R2577   B-7   R2579   B-8   R2582   B-8   R2582   B-8   R2583   B-8   R2585   B-8   R2585   B-8   R2580   C-8   R3200   C-7   R3201   C-7   R3201   C-7   R3201   C-7   R3202   C-7   R3203   C-7   R3204   C-7   R3204   C-7   R3204   C-7   R3205   C-7   R3206   C-7   R3207   C-7   R3207   C-7   R3207   C-7   R3208   C-7   R3208   C-7   R3209   D-7   R3207   C-7   R3200   C-7   R3200   C-7   R3200   C-7   R3200   C-7   R3201   C-7   R3201   C-7   R3201   C-7   R3200   C-7   R3201   C-7   R3200   C-7  </td>	R2416   C-6   R2417   C-6   R2419   C-6   R2420   C-6   R2421   C-6   R2421   C-6   R2422   C-6   R2422   C-6   R2423   C-6   R2424   C-6   R2425   D-6   R2427   C-6   R2429   D-6   R2430   D-6   R2430   D-6   R2430   C-6   R2441   C-6   R2442   D-6   R2505   B-9   R2506   B-8   R2507   B-8   R2507   B-8   R2507   B-8   R2507   B-8   R2508   B-8   R2507   B-7   R2530   B-8   R2507   B-7   R2530   B-8   R2511   A-7   R2575   B-7   R2576   A-7   R2576   B-8   R2577   B-7   R2576   B-8   R2577   B-7   R2579   B-8   R2582   B-8   R2582   B-8   R2583   B-8   R2585   B-8   R2585   B-8   R2580   C-8   R3200   C-7   R3201   C-7   R3201   C-7   R3201   C-7   R3202   C-7   R3203   C-7   R3204   C-7   R3204   C-7   R3204   C-7   R3205   C-7   R3206   C-7   R3207   C-7   R3207   C-7   R3207   C-7   R3208   C-7   R3208   C-7   R3209   D-7   R3207   C-7   R3200   C-7   R3200   C-7   R3200   C-7   R3200   C-7   R3201   C-7   R3201   C-7   R3201   C-7   R3200   C-7   R3201   C-7   R3200   C-7

### For printed wiring boards

- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

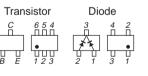



There are few cases that the part printed on this diagram isn't mounted in this model.

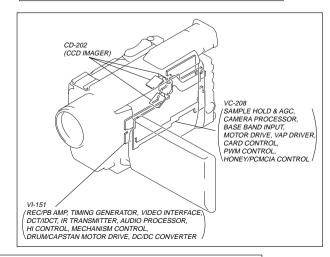

VI-151 (REC/PB AMP, TIMING GENERATOR, VIDEO INTERFACE, DCT/IDCT, IR TRANSMITTER, AUDIO PROCESSOR, HI CONTROL, MECHANISM CONTROL, DRUM/CAPSTAN MOTOR DRIVE, DC/DC CONVERTER) PRINTED WIRING BOARD

— Ref. No. VI-151 Board; 10,000 Series —

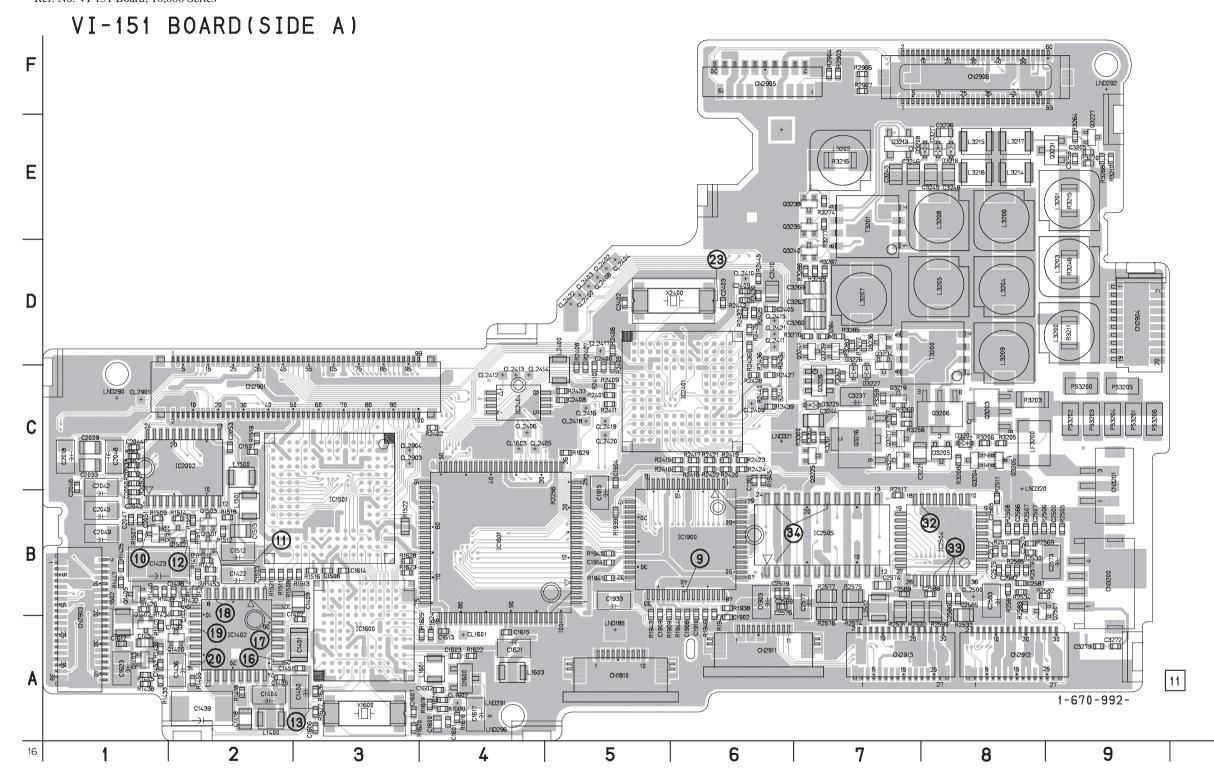

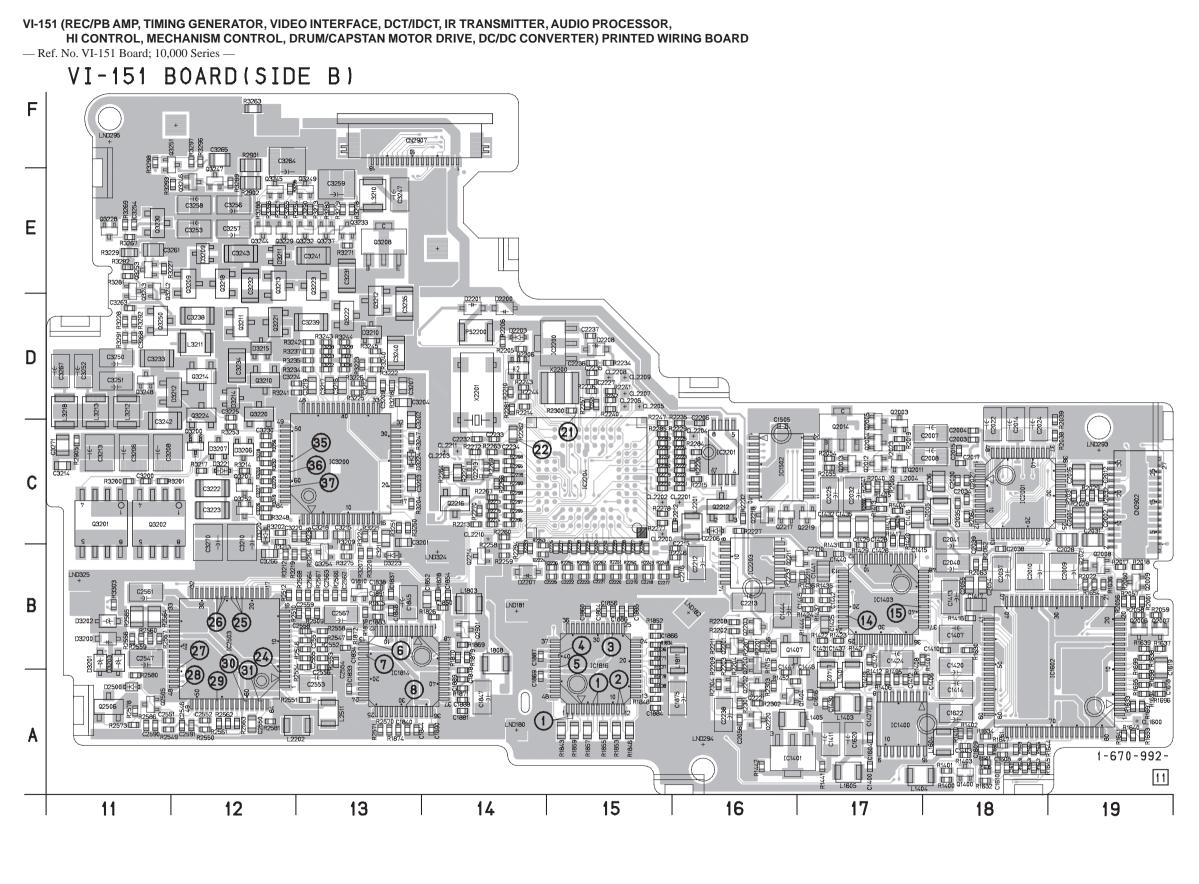

# VI-151 BOARD (SIDE B)

A17	VI-151 BOAI	RD (SIDE B)						
CHAPT   CATTON   CA	C1400 A-17	C2016 C-19	C3219 D-13	L1401 A-17	Q3247 E-12	R1857 A-15	R2252 B-15	R2902 E-12
Section   Color   Co							1	
CH410   A-17   CO27   C-18   CO27   C-17   C-227   C-17   C-227   C-18   C-227								
CH412								
CA140   A-77   CO200   B-19   CO276   C-72   1-1605   A-77   CO254   B-13   R1878   A-13   CO200   C-14   C-2027   C-12   L1803   B-14   C-2026   C-14   C-2027							1	
CH14  A B-18   C2930   C-18   C3227   C-12   L1803   B-14   C3224   B-13   R1875   B-13   R2250   C-14   R3209   B-13   C1410   C-17   C3214   C-19   C3226   C-12   L1808   B-14   R1876   B-13   R1876   B-13   R2250   C-14   R3212   B-12   C-1416   C-17   C3214   C-17   C3214   C-17   C3214   C-17   C3214   C-17   C-12								
CHIT								
CH14    CH15    C2035   CH18    C3220   CH2   L2001   CH17    RH00    AH8    RH78   AH5    R2256   CH4    R3214   CH2    CH14    AH7    C3036   CH8    C3225   CH12    L2201   CH0   RH00    AH8    RH00    AH7    R2256   CH4    R3216   CH2    CH14    AH7    C3036   CH8    C3225   CH12    L2201   CH0   RH00    AH8    RH00    AH7    R2256   CH4    R3216   CH2    CH14    AH7    C2036   BH8    C3235   BH2    CH2		C2031 C-19	C3228 C-12	L1808 B-14		R1876 B-13	R2261 D-14	R3212 B-12
CH419   A17   C230   C-18   C323   C-19   C322   C-12   C-120   C-140   A17   C-120   C-140								
CH400   A-17								
CH420   B-18   C2003   B-18   C2234   D-11   L2202   A-13   R1404   C-17   R2018   B-19   R226   C-14   R3210   B-13   C-1424   B-17   C2009   B-18   C2234   D-12   L2210   L313   R1406   A-17   R2019   C-17   R227   C-14   R3220   C-13   R227   C-14   R3210   C-14   R227   C-14   R3220								
CHA12   B-17   C2008   B-18   C3224   D-12   L2511   A-13   R1405   C-17   R2011   B-19   R226   C-14   R3220   D-13   C-1425   B-17   C2000   B-18   C3235   D-13   L3210   D-13   R1405   A-17   R2012   B-19   R226   C-14   R3220   D-13   C-1425   B-17   C2006   A-16   C3200   D-14   L3211   D-12   R1407   A-18   R2020   B-19   R226   C-14   R3220   D-13   C-1425   C-14   R3220   C-14   R3220   D-13   C-1425   C-14   R3220								
CH426   B-17   C2009   B-18   C3225   D-13   L3210   D-12   R1409   B-19   R2268   C-14   R3221   D-13   C426   B-17   C2040   B-18   C3228   D-13   L3212   D-13   R1409   B-18   R2022   B-19   R2262   C-14   R3220   D-13   C426   B-17   C2061   C-16								
CHAPPA   CASH		C2039 B-18			R1406 A-17	R2021 B-19		
C1428   C17   C2056   B-18   C3240   D-13   L3213   D-11   R1400   A-18   R2026   C1-9   R2271   C-14   R3226   C-13   C1428   C-17   C2056   C-16   C3242   C-14   C-17   C2056   C-16   C-17   C2056   C-16   C-17   C-1								
C1429   C172   C2056   A16   C3242   C114   C3245   C115   C1430   A17   C2056   C16   C3242   C12   C3247   C14   C1430   A17   C2056   C16   C3243   C12   C3247   C14   C1430   A17   C2056   C16   C3243   C12   C3247   C14   C1430   A17   C2056   C16   C3243   C13   C3247   C14   C1430   C1430   C17   C2150   B17   C3247   C13   C1430   C1430   C17   C2150   B17   C3247   C13   C1430   C17   C2150   B17   C3247   C13   C1430   C17   C2150   B16   C3255   D11   C1440   A16   C1450   C14								
C1490   C17								
CH430   A-17   C2006   C-16   C3243   E-12   P\$200   D-14   R1413   C-17   R2038   C-19   R2275   C-14   R2278   C-11   C1433   C-17   C2211   B-17   C3226   D-11   C1404   A-16   R1415   B-16   R2090   C-19   R2275   C-15   R3220   D-13   C1404   A-16   R1415   B-16   R2090   C-17   R2277   C-15   R3230   D-13   C1404   A-16   C-17   R2078   C-17				L3210 D 11				
C1435   C.17   C.221   B-17   C.325   D-11   C1400   A-18   R1415   B-18   R2039   C-19   R2276   C-15   R3230   D-13   C1435   B-17   C.2213   B-16   C.3255   D-11   C1407   B-16   R1416   B-18   R2040   C-17   R2277   C-15   R3230   D-13   C1440   B-17   C.2215   B-16   C.3255   E-12   C1410   B-17   R2041   C-17   R2277   C-15   R3230   D-13   C1441   B-17   C.2216   B-16   C.3255   E-12   C1410   B-17   R2041   C-17   R2278   C-15   R3232   D-13   C1441   B-17   C.2216   B-16   C.3255   E-12   C0003   C-17   R1423   B-17   R2055   C-17   R2279   C-15   R3232   D-13   C1446   B-17   C.2216   B-16   C.3255   E-12   C0003   C-17   R1423   B-17   R2056   C-17   R2279   C-15   R3232   D-13   C1446   B-17   C.2216   B-15   C.3256   E-12   C0005   C-17   R1423   B-17   R2058   B-19   R2280   C-15   R3232   D-13   C1446   B-17   C.2220   B-15   C.3256   E-12   C.0006   B-19   R1425   B-17   R2058   B-19   R2280   C-15   R3232   C-15   R323				PS2200 D-14				
C1436   C-17   C2212   B-16   C3255   D-11   O1407   B-16   R1417   C7   R2404   C-17   R2276   C-15   R3231   D-13   C1440   B-17   C2216   B-16   C3255   E-12   O2003   C-17   R1422   B-17   R2605   B-19   R2226   C-15   R3231   D-13   C1442   B-17   C2217   B-15   C3255   E-12   O2005   C-17   R1422   B-17   R2605   B-19   R2236   C-15   R3233   D-13   C1442   B-17   C2218   B-15   C3255   E-12   O2005   C-17   R1422   B-17   R2605   B-19   R2226   C-15   R3233   D-13   C1444   B-17   C2208   B-15   C3256   E-12   O2005   C-17   R1424   B-17   R2605   B-19   R2226   C-15   R3233   D-13   C-1444   B-17   C2208   B-15   C3256   E-12   O2005   C-17   R1424   B-17   R2605   B-19   R2226   C-15   R3233   D-13   C-1445   B-17   C3202   B-15   C3265   E-12   O2005   C-17   R1424   B-17   R2605   B-19   R2226   C-15   R3238   D-13   C-1445   B-17   C3202   B-15   C3265   B-17   C3206   B-19   R1431   B-17   R2605   B-19   R2226   C-15   R3238   D-13   C-15   C-1447   A-16   C2222   B-15   C3266   B-12   C3201   B-16   R2428   B-17   R2605   B-19   R2226   C-15   R3238   D-13   C-15   C-14   C-1								
C1440   B-17   C2213   B-16   C3255   C-11   C1407   B-16   C3255   C-17   C2216   B-16   C3255   C-12   C3200   C-17   R1427   B-17   R2266   C-17   R2279   C-15   R3232   D-13   C1444   B-16   C2216   B-16   C3256   E-12   C2000   C-17   R1423   B-17   R2265   C-17   R2270   C-15   R3232   D-13   C1444   B-16   C2216   B-15   C3256   E-12   C2000   C-17   R1423   B-17   R2266   B-19   R2261   C-15   R3234   D-13   C1444   B-16   C2216   B-15   C3256   E-12   C2000   C-17   R1423   B-17   R2266   B-19   R2261   C-15   R3234   D-13   C1446   B-17   C2220   B-15   C3256   E-12   C2000   B-19   R1427   B-17   R2266   B-19   R2261   C-15   R3234   D-13   C1446   B-17   C2220   B-15   C3256   E-12   C2000   B-19   R1427   B-17   R2266   B-19   R2261   C-15   R3235   D-13   C1447   A-16   C2226   B-15   C3266   B-11   C2006   B-19   R1428   B-17   R2266   B-19   R2261   C-15   R3236   D-13   C1447   A-16   C2226   B-15   C3266   B-12   C2011   C-17   R1427   B-17   R2266   B-19   R2261   C-15   R3236   D-13   C1446   A-17   C3223   B-15   C3266   B-12   C2011   C-17   R1427   B-17   R2266   B-18   R2267   B-15   R3260   D-13   C1604   A-17   C3223   C-14   C3270   C-12   C2010   B-16   R1426   B-17   R2266   C-17   R2270   B-15   R3240   D-13   C1616   A-17   C2232   C-14   C3270   C-12   C2010   B-16   R1426   B-16   R2202   B-15   R3240   D-13   C1616   A-17   C2232   C-14   C3270   C-12   C2010   B-16   R1426   B-16   R2202   B-16   R2247   C-13   R3244   D-13   C1616   A-17   C2232   C-14   C3270   C-12   C2010   B-16   R1426   B-16   R2202   B-16   R2202   B-15   R3246   D-13   C1616   A-17   C2232   C-14   C3270   C-12   C2010   B-16   R1426   B-16   R2202   B-16   R2202   B-15   R3246   D-13   C1616   A-17   C2232   C-14   C3270   C-12   C2010   B-16   R1426   B-16   R2202   B-16   R2202   B-15   R3246   D-13   C1616   A-17   C2232   C-14   C3270   C-12   C2010   B-16   R1426   B-16   R2202   B-16   R2202   B-15   R3246   D-13   C1616   A-17   C2232   C-14   C3270   C-12   C2010   B-16   R1426   B-16   R220								
C1440   B-17   C2215   B-16   C3254   E-12   C1810   B-13   R1420   B-17   R2056   C-17   R2227   C-15   R3232   D-13   C1442   B-16   C2218   B-15   C3256   E-12   C2005   C-17   R1422   B-17   R2056   B-19   R2226   C-15   R3233   D-13   C1444   B-16   C2218   B-15   C3255   E-12   C2005   C-17   R1424   B-17   R2056   B-19   R2226   C-15   R3233   D-13   C1446   B-17   C2227   B-15   C3256   E-12   C2005   C-17   R1424   B-17   R2056   B-19   R2226   C-15   R3235   D-13   C1446   A-17   C2228   B-15   C3256   E-12   C2006   B-19   R1427   B-17   R2056   B-19   R2226   C-15   R3225   D-13   C-1446   A-17   C2228   B-15   C3256   E-12   C2006   B-19   R1427   B-17   R2056   B-19   R2226   C-15   R3235   D-13   C-1446   A-17   C2228   B-15   C3256   E-11   C2008   B-19   R1427   B-17   R2056   B-19   R2226   C-15   R3225   D-13   C-146   A-17   C2228   B-15   C3256   E-17   C2001   B-19   R1428   B-17   R2056   B-19   R2226   C-15   R3235   D-13   C-1566   A-17   C2228   B-15   C3256   B-17   C2001   C-17   R1436   B-17   R2056   B-19   R2266   C-15   R3235   D-13   C-1566   A-17   C2228   B-15   C3256   B-12   C2001   C-17   R1436   B-17   R2056   B-18   R2226   C-15   R3235   D-13   C-1566   A-17   C2228   B-15   C3256   B-12   C2001   C-17   R1436   B-17   R2056   B-18   R2226   C-15   R3246   D-13   C-1566   A-17   C2222   B-15   C3256   B-15   C3256   B-11   C2200   B-15   R1442   A-15   R2056   B-18   R2226   B-15   R3247   D-13   C1566   A-17   C2223   C-14   C3270   C-12   C2010   B-16   R1442   A-16   R2056   C-17   R2296   B-15   R3246   D-13   C1566   A-17   C2238   D-15   C3256   D-11   C2200   B-16   R1442   A-16   R2056   C-17   R2296   B-15   R3246   D-13   C1566   A-17   C2236   D-15   C3256   D-15								
C1442 B-17   C2216 B-16   C2254 E-11   C2000 C-17   R1422 B-17   R2055 C-17   R2280 C-15   R3233 D-13   C1444 B-16   C2218 B-15   C2256 E-12   C2000 B-19   R1428 B-17   R2056 B-19   R2282 C-15   R3236 D-13   C1446 B-17   C2219 B-15   C2256 E-12   C2000 B-19   R1427 B-17   R2058 B-19   R2282 C-15   R3236 D-13   C1446 B-17   C2210 B-15   C2259 E-13   C2000 B-19   R1427 B-17   R2058 B-19   R2284 C-16   R3237 D-13   C1505 C-16   R2232 B-15   C3256 E-11   C2000 B-19   R1428 B-17   R2059 B-19   R2284 C-16   R3237 D-13   C1505 C-16   C2222 B-15   C3263 D-11   C2000 B-19   R1435 B-17   R2059 B-19   R2286 C-15   R3238 D-13   C1505 C-16   C2222 B-15   C3263 D-11   C2000 B-19   R1435 B-17   R2059 B-19   R2286 B-15   R3239 D-13   C1606 A-17   C2232 B-15   C3265 D-11   C2010 B-19   R1435 B-17   R2050 B-19   R2286 B-15   R3239 D-13   C1610 A-18   C2226 B-15   C3266 B-12   C2011 C-17   R1445 B-17   R2054 C-18   R2289 B-15   R3249 D-13   C1610 A-18   C2226 B-15   C3266 B-12   C2010 B-16   R1444 B-17   R2056 C-17   R2298 B-15   R3249 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C2201 B-16   R1444 B-17   R2056 C-17   R2291 B-15   R3249 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C2201 B-16   R1444 B-17   R2056 C-17   R2291 B-15   R3249 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C2201 B-16   R1444 B-17   R2056 C-17   R2291 B-15   R3249 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C2201 B-16   R1444 B-17   R2056 C-17   R2291 B-15   R3249 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C2201 B-16   R1444 B-17   R2056 C-17   R2291 B-15   R3249 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C2201 B-16   R1444 B-17   R2056 C-17   R2291 B-15   R3249 D-13   C1616 A-17   C2232 C-14   C3270 C-14   C3270 D-14   C3270 C-14   R1444 B-17   R2056 D-14   R2295 C-14   R3256 C-15   R3256 D-14   R2295 C-14   R3256 D-14   R2296 D-14   R22								
C1444 B-17   C2219 B-15   C3256 B-12   C3200 C-17   R1428 B-17   R2056 B-19   R2281 C-15   R3234 D-13   C1446 B-17   C2219 B-15   C3258 B-12   C30006 B-19   R1427 B-17   R2058 B-19   R2282 C-15   R3236 D-13   C1447 A-16   C2221 B-15   C3256 B-13   C3207 B-19   R1428 B-17   R2058 B-19   R2286 C-15   R3237 D-13   C1447 A-16   C2221 B-15   C3261 E-11   C3000 B-19   R1428 B-17   R2058 B-19   R2286 C-15   R3237 D-13   C1447 A-16   C2221 B-15   C3261 E-11   C3000 B-19   R1431 B-17   R2060 B-19   R2286 E-15   R3239 D-13   C1604 A-17   C2223 B-15   C3264 F-12   C3011 C-17   R1431 B-17   R2060 B-19   R2286 B-15   R3239 D-13   C1604 A-17   C2223 B-15   C3266 B-12   C3011 C-17   R1435 B-17   R2061 B-19   R2286 B-15   R3239 D-13   C1609 A-18   C2225 B-15   C3266 D-11   C3011 C-17   R1435 B-17   R2061 B-19   R2288 B-15   R3240 D-13   C1609 A-18   C2225 B-15   C3267 D-11   C3011 C-17   R1437 B-17   R2063 B-18   R2289 B-15   R3242 D-13   C1604 A-17   C3223 B-15   C3266 D-11   C3011 C-17   R1441 A-17   R2064 C-18   R2229 B-15   R3242 D-13   C1616 A-17   C3223 B-15   C3267 D-11   C3011 C-17   R1443 B-17   R2065 C-17   R2298 B-15   R3243 D-13   C1616 A-17   C3235 D-18   C3268 B-12   C3267 D-11   C3211 C-17   R1437 B-17   R2063 B-18   R2248 B-15   R3247 D-13   C1616 A-17   C3223 B-15   C3267 D-14   C3211 C-11   C3212 D-15   C3267 D-14   R3260 B-17   R3262 B-15   R3243 D-13   C3268 B-12   C3268 B-15   C3267 D-14   R3260 B-17   R3262 B-15   R3247 D-13   C1616 A-17   C3225 D-15   C3267 D-14   R3260 B-15   R3248 B-15   R3247 D-13   C1616 A-17   C3225 D-15   C3267 D-14   R3260 B-15   R3264 B-16   R3260 B-16   R3								
C1446   B-17   C2229   B-15   C2258   E-12   C20006   B-19   R1427   B-17   R2058   B-19   R2283   C-15   R3236   C-13   C1447   A-16   C2221   B-15   C2256   E-13   C20007   B-19   R1431   B-17   R2056   B-19   R2285   C-15   R3238   D-13   C1447   A-16   C2222   B-15   C2264   E-12   C2011   C-17   R1435   B-17   R2056   B-19   R2256   B-15   R3239   D-13   C1604   A-17   C2223   B-15   C2264   E-12   C2011   C-17   R1435   B-17   R2056   B-19   R2256   B-15   R3239   D-13   C1604   A-17   C2223   B-15   C3266   B-12   C2011   C-17   R1435   B-17   R2056   B-19   R2256   B-15   R3239   D-13   C1604   A-17   C2225   B-15   C3256   B-12   C2011   C-17   R1435   B-17   R2056   B-19   R2228   B-15   R3247   D-13   C1609   A-18   C2225   B-15   C3256   D-11   C2010   C-17   R1443   A-16   R2056   C-17   R2298   B-15   R3244   D-13   C1604   A-18   C2227   D-15   C3266   D-11   C2010   B-16   R1444   B-17   R2056   C-17   R2298   B-15   R3244   D-13   C1616   A-19   C2222   C-14   C3270   C-12   C2020   B-16   R1445   B-17   R2056   C-17   R2298   B-15   R3244   D-13   C-1604   A-19   C2224   C-14   C3270   C-12   C2020   B-16   R1445   B-17   R2056   C-17   R2298   B-15   R3244   D-13   C-1606   A-17   C-1225   C-18   C-1227   C-122				Q2004 C-17				
C1447 A-16   C2229 B-15   C3269 B-13   C32007 B-19   R1429 B-17   R2069 B-19   R2286 B-15   R3237 D-13   C1505 C-16   C2222 B-15   C3263 D-11   C32008 B-19   R1435 B-17   R2061 B-19   R2286 B-15   R3236 D-13   C1506 A-18   C2224 B-15   C3264 F-12   C3201 D-17   R1435 B-17   R2061 B-19   R2286 B-15   R3236 D-13   C1608 A-18   C2224 B-14   C3265 F-12   C3201 B-16   C1-7   R1436 B-17   R2062 B-18   R2286 B-15   R3240 D-13   C1608 A-18   C2225 B-15   C3266 B-12   C3201 B-16   R1441 A-17   R2063 B-18   R2288 B-15   R3240 D-13   C1610 A-18   C2225 B-15   C3266 B-12   C3201 B-16   R1444 A-16   R2065 C-17   R2298 B-15   R3240 D-13   C1611 A-18   C2225 B-15   C3266 B-11   C3200 B-16   R1444 B-17   R2064 C-18   R2291 B-15   R3244 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C3201 B-16   R1442 A-16   R2065 C-17   R2298 B-15   R3244 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C3201 B-16   R1445 A-16   R2261 B-16   R2229 B-15   R3245 D-13   C1618 A-19   C2233 C-14   C3270 C-12   C3201 B-16   R1445 A-16   R3266 B-16   R2229 B-16   R3237 B-13   R3245 D-13   C1616 A-17   C2235 D-15   C3268 D-11   C3200 B-16   R1445 A-16   R3266 B-16   R3229 B-16   R3246 D-13   R3245 D								
Control   Cont								
C1009 A-18   C2222 B-15   C3263 D-11   C2009 B-19   R1435 B-17   R2061 B-19   R2286 B-15   R3240 D-13   C1009 A-18   C2224 B-14   C3265 F-12   C2011 C-17   R1437 B-17   R2063 B-18   R2288 B-15   R3240 D-13   C1010 A-18   C2225 B-15   C3266 B-12   C2013 C-17   R1441 A-17   R2063 B-18   R2288 B-15   R3241 D-13   C1010 A-18   C2225 B-15   C3267 D-11   C2014 C-17   R1442 A-16   R2065 C-17   R2299 B-15   R3242 D-13   C1011 A-18   C2225 B-15   C3267 D-11   C2016 B-16   R1452 A-16   R2065 C-17   R2299 B-15   R3243 D-13   C1016 A-17   C2232 C-14   C3270 C-12   C2201 B-16   R1452 A-16   R2201 B-16   R2292 B-15   R3245 D-13   C1016 A-17   C2235 D-15   C3268 D-11   C2200 B-16   R1455 B-16   R2201 B-16   R2299 B-14   R3247   C-13   C1019 A-19   C2233 C-14   C3270 C-12   C2203 B-16   R1495 A-17   R2203 B-16   R2299 B-14   R3249 C-12   C1020 A-16   R1455 B-16   R1455 B-16   R2294 B-16   R2295 B-14   R3249   C-12   C1020 A-16   R1455 B-16   R1495 A-17   R1202 B-16   R2299 B-14   R3249   C-12   C1020 A-16   R1453 B-18   R2205 B-16   R2299 B-14   R3249   C-12   C1020 A-16   R1453 A-18   R2205 B-16   R2299 B-14   R3290   C-13   C1014   C101								
Cloop A-18   C2224 B-15   C3266 F-12   C2011 C-17   R1436 B-17   R2066 B-18   R2287 B-15   R3240 D-13   C1609 A-18   C2225 B-15   C3266 B-12   C2013 C-17   R1441   A-17   R2064 C-18   R2298 B-15   R3241 D-13   C1610 A-18   C2225 B-15   C3266 B-12   C2013 C-17   R1441   A-17   R2065 C-17   R2290 B-15   R3242 D-13   C1611   A-18   C2227 D-15   C3268 D-11   C2200 B-16   R1442 A-16   R2065 C-17   R2290 B-15   R3243 D-13   C1616 A-17   C2232 C-14   C3270 C-12   C2201 B-16   R1442 B-17   R2066 C-17   R2299 B-15   R3244 D-13   C1618 A-19   C2233 C-14   C3270 C-12   C2201 B-16   R1455 B-16   R2201 B-16   R2299 B-15   R3245 D-13   C1619 A-19   C2234 C-14   C3270 C-12   C2202 A-16   R1455 B-16   R2201 B-16   R2299 B-15   R3245 D-13   C1619 A-19   C2234 D-15   C1220 D-14   C2202 B-16   R1455 B-16   R2203 B-16   R2299 B-15   R3245 D-13   C1620 A-17   C2235 D-15   CN2907 F-13   C2211 B-17   R1630 B-18   R2205 B-16   R2299 B-14   R3247 C-13   C1622 A-18   C2235 D-15   CN2907 F-13   C2211 B-17   R1630 B-18   R2205 D-14   R2295 C-14   R3295 C-13   C1833 A-13   C2238 A-16   D2200 D-14   C2213 B-14   R1635 A-18   R2205 D-14   R2295 C-14   R3255 C-13   C1838 B-13   C2247 B-11   D2206 C-16   C2217 C-16   R1633 B-19   R2210 B-16   R2299 C-14   R3255 C-12   C1848 B-13   C2556 A-12   D2208 D-15   C2210 C-16   R1637 B-19   R2210 B-16   R2290 D-15   R3256 C-12   C1644 A-13   C2556 B-13   D3200 B-11   C3220 B-16   R1643 A-18   R2221 B-16   R2290 D-15   R3256 C-12   C164   R1643 A-18   R2221 B-16   R2303 A-16   R3255 C-12   C1644 A-13   C2556 B-13   D3200 B-11   C3221 B-16   R1643 A-18   R2221 B-16   R2303 A-16   R3255 C-12   C164   R1643 A-18   R2221 B-16   R2304 A-16   R3255 C-12   C164   R1643 A-18   R2221 B-16   R3204 B-13   R3266 B-12   C1648 B-13   C2556 B-13   D3200 B-11   C3200 B-15								
C1610								
C1611 A-18   C2226 B-15   C3267 D-11   O2014 C-17   R1442 A-16   R2066 C-17   R2290 B-15   R3244 D-13   C1616 A-17   C2232 C-14   C3270 C-12   O2201 B-16   R1452 A-16   R2201 B-16   R2292 B-15   R3244 D-13   C1616 A-17   C2232 C-14   C3271 C-11   O2202 A-16   R1452 A-16   R2201 B-16   R2292 B-15   R3245 D-13   C1616 A-17   C2235 C-14   C3271 C-11   O2202 A-16   R1456 B-16   R2202 B-16   R2293 B-14   R3247 C-13   C1616 A-17   C2235 D-15   C02907 C-19   O2203 B-16   R1459 B-17   R2203 B-16   R2294 B-14   R3248 C-12   C1620 A-17   C2235 D-15   C02907 C-19   O2205 B-16   R1459 B-17   R2203 B-16   R2294 B-14   R3248 C-12   C1622 A-18   C2236 D-15   C02907 F-13   O2211 B-17   R1632 B-18   R2204 B-16   R2296 C-14   R3250 C-13   C1834 B-13   C2238 A-16   D2200 D-14   O2213 C-16   R1633 B-19   R2206 D-14   R2296 C-14   R3250 C-13   C1834 B-13   C2239 C-14   D2201 D-14   O2213 C-14   R1634 B-18   R2209 B-16   R2299 C-14   R3252 C-12   C1633 B-13   C2247 B-11   D2206 C-16   C2217 C-16   R1637 B-19   R2210 B-16   R2209 B-16								
Color   Colo								
C1616								
Cidigo   A-19								
C1622								
C1804 B-15   C2237 D-15   C1290 F-13   C2211 B-17   R1632 A-18   R2205 D-14   R2296 C-14   R3250 C-13								
C1894   B-15   C2237   C-15   C2237   C-16   C2207   C-16   C2207   C-16   C2207   C-16   C2207   C-16   C2207   C-16   C2207   C-16								
C1833   A-13   C2238   A-16   D2200   D-14   C2214   B-14   R1654   A-18   R2207   B-16   R2298   C-14   R3252   C-12   C1837   B-13   C2254   A-12   D2203   D-14   C2214   C-14   R1636   B-19   R2209   B-16   R2299   C-14   R3253   C-12   C-16   C-16   C2217   C-16   R1637   B-19   R2210   D-14   R2300   D-15   R3254   B-13   C-12   C-16			CN2907 F-13					
C1838   B-13			D2200 D-14					
C1840 A-13								
C1844 A-13								
C1844 A-13 C2551 A-11 D2208 D-15 D2209 C-17 R1639 B-19 R2212 C-16 R2303 A-16 R3265 E-12 C1845 B-13 C2552 A-12 D2500 A-11 D2220 A-16 R1640 A-19 R2213 C-14 R2304 A-16 R3265 E-12 C1846 B-13 C2553 A-13 D3200 B-11 D2201 A-16 R1641 A-19 R2214 D-14 R2509 B-13 R3266 E-12 C1847 A-14 C2555 B-13 D3201 B-11 D2201 A-16 R1641 A-19 R2214 D-14 R2509 B-13 R3266 E-12 C1850 B-14 C2555 B-13 D3202 B-11 D2505 A-11 R1642 A-18 R2215 C-16 R2510 B-13 R3266 E-11 C1850 B-14 C2555 B-13 D3202 B-11 D2505 A-11 R1642 A-18 R2221 C-16 R2510 B-13 R3267 E-11 C1850 B-14 C2555 B-13 D3202 B-11 D2505 A-11 R1644 A-18 R2222 C-16 R2546 B-12 R3269 E-11 C1852 B-14 C2557 B-13 D3203 C-12 D3200 C-12 R1645 A-18 R2222 C-16 R2546 B-13 R3271 E-13 C1856 B-15 C2558 B-13 D3207 C-12 D3201 C-11 R1646 A-18 R2222 C-16 R2546 B-13 R3271 E-13 C1866 B-15 C2558 B-13 D3209 E-12 D3202 C-11 R1647 A-18 R2225 C-16 R2550 A-12 R3278 E-13 C1869 A-14 C2562 B-13 D3210 D-13 D3207 C-12 R1645 A-18 R2225 C-16 R2550 A-12 R3278 E-13 C1869 A-14 C2562 B-13 D3211 E-12 D3208 E-13 R1649 A-18 R2227 C-16 R2550 B-13 R3280 E-13 C1859 A-14 C2563 B-13 D3212 D-12 D3209 E-12 R1650 A-18 R2227 C-16 R2551 B-13 R3280 E-13 C1858 A-14 C2564 B-13 D3215 D-12 D3210 D-12 R1650 A-18 R2227 C-16 R2555 B-13 R3282 E-11 C1881 A-14 C2567 B-13 D3215 D-12 D3210 D-12 R1652 A-18 R2231 C-16 R2555 B-13 R3282 E-11 C1881 A-14 C2567 B-13 D3215 D-12 D3211 D-12 R1652 A-18 R2231 C-16 R2555 B-11 R3289 E-12 C1888 B-15 C3200 C-11 D3222 C-12 D3212 D-12 R1650 A-18 R2232 C-16 R2556 B-11 R3289 E-12 C1888 B-15 C3201 C-13 D3221 C-12 D321 D-12 R1651 A-18 R2233 C-16 R2555 B-11 R3289 E-12 C1888 B-15 C3201 C-13 D3221 C-12 D3211 D-12 R1652 A-18 R2231 C-16 R2556 B-11 R3289 E-12 C1888 B-15 C3201 C-13 D3224 C-13 D3224 C-13 D3215 D-12 R1651 A-18 R2233 B-16 R2556 B-11 R3299 E-12 C1888 B-15 C3201 C-13 D3224 C-13 D3224 D-12 R1696 A-19 R2233 B-16 R2556 B-11 R3299 E-12 C1889 B-14 C3200 D-15 C3203 C-18 C3211 C-14 C3203 B-16 C3224 D-12 R1696 A-19 R2238 B-15 R2566 B-11 R3299 E-12 C1890 A-14 C3200 D-15 C3303 E-11 R1888 B-15 R2244 D-15 R2566 B-11 R3299 E-12 C								
C1845 B-13								
C1846 B-13								
C1847 A-14								
C1852 B-14	C1847 A-14	C2554 b-13		Q2505 A-11	R1642 A-18	R2215 C-16	R2510 B-13	R3267 E-11
C1854 B-14								
C1866 B-15								
C1860   B-15   C2559   B-13   D3209   E-12   D3202   C-11   R1647   A-18   R2225   C-16   R2550   A-12   R3278   E-13   R327							1	
C1869 A-14								
C1875 A-16							1	
C1878 A-14								
C1881 A-14								
C1883 B-13							1	
C1885 B-15						R2232 C-16		
C1886         B-15         C3201         C-13         D3224         C-13         Q3218         E-12         R1695         A-19         R2235         C-16         R2560         B-11         R3292         D-11           C1887         B-14         C3202         C-13         IC1400         A-17         Q3221         D-12         R1696         A-19         R2236         B-15         R2561         A-12         R3293         E-12           C1888         A-14         C3203         C-13         IC1400         A-16         Q3222         D-13         R1697         A-19         R2237         B-15         R2562         A-12         R3294         E-13           C1890         A-14         C3204         D-13         IC1401         A-16         Q3222         D-13         R1698         A-19         R2238         B-15         R2563         A-12         R3294         E-12           C1890         A-14         C3206         C-11         IC1403         B-17         Q3223         E-13         R1698         A-19         R2238         B-15         R2564         B-11         R3296         E-12           C1891         B-13         C3207         D-13         IC1602         B-19								
C1887 B-14								
C1888 A-14			D3224 C-13					
C1889 A-14			IC1400 A-17				1	
C1891 B-13								
C2001         C-19         C3208         C-11         IC1602         B-19         Q3228         E-11         R1828         B-14         R2241         D-15         R2566         B-13         R3298         F-11           C2002         C-19         C3209         D-13         IC1814         A-13         Q3229         E-12         R1834         B-15         R2242         D-15         R2566         B-13         R3301         E-12           C2003         C-18         C3210         C-12         IC1816         B-15         Q3230         E-11         R1836         B-15         R2243         D-14         R2568         B-13         R3301         E-12           C2004         C-18         C3211         C-13         IC2001         C-18         Q3232         E-13         R1836         B-15         R2243         D-14         R2568         B-13         R3303         B-11           C2007         C-18         C3212         D-13         IC2200         D-15         Q3233         E-13         R1838         A-15         R2244         D-15         R2571         A-13         X2200         D-15           C2008         C-18         C3213         C-11         IC2201         C-16							1	
C2002         C-19         C3209         D-13         IC1814         A-13         Q3229         E-12         R1834         B-15         R2242         D-15         R2567         B-13         R3301         E-12           C2003         C-18         C3210         C-12         IC1816         B-15         Q3230         E-11         R1836         B-15         R2243         D-14         R2568         B-13         R3303         B-11           C2004         C-18         C3211         C-13         IC2001         C-18         Q3232         E-13         R1837         A-15         R2244         D-14         R2568         B-13         R3303         B-11           C2007         C-18         C3212         D-13         IC2200         D-15         Q3233         E-13         R1837         A-15         R2244         D-14         R2570         A-13         X2200         D-15           C2008         C-18         C3213         C-11         IC2201         C-16         Q3237         E-13         R1843         A-15         R2246         B-16         R2573         A-11         X2200         D-15           C2009         B-19         C3214         C-11         IC2203         B-16				Q3224 D-12				
C2003         C-18         C3210         C-12         IC1816         B-15         Q3230         E-11         R1836         B-15         R2243         D-14         R2568         B-13         R3303         B-11           C2004         C-18         C3211         C-13         IC2001         C-18         Q3232         E-13         R1837         A-15         R2244         D-14         R2570         A-13         X2200         D-15           C2007         C-18         C3212         D-13         IC2200         D-15         Q3233         E-13         R1838         A-15         R2245         D-15         R2571         A-13         X2200         D-15           C2008         C-18         C3213         C-11         IC2201         C-16         Q3237         E-13         R1843         A-15         R2246         B-16         R2573         A-11         X2200         D-15           C2009         B-19         C3214         C-11         IC2203         B-16         Q3242         E-11         R1846         A-15         R2247         C-15         R2578         A-11           C2010         B-18         C3215         C-13         IC2504         C-15         Q3243         E-11								
C2004         C-18         C3211         C-13         IC2001         C-18         Q3232         E-13         R1837         A-15         R2244         D-14         R2570         A-13         X2200         D-15           C2007         C-18         C3212         D-13         IC2200         D-15         Q3233         E-13         R1838         A-15         R2245         D-15         R2571         A-13         X2200         D-15           C2008         C-18         C3213         C-11         IC2201         C-16         Q3237         E-13         R1843         A-15         R2246         B-16         R2573         A-11         X2201         D-14           C2009         B-19         C3214         C-11         IC2203         B-16         Q3242         E-11         R1846         A-15         R2247         C-15         R2578         A-11           C2010         B-18         C3215         C-13         IC2204         C-15         Q3243         E-11         R1846         A-15         R2248         B-15         R2580         A-11           C2012         C-19         C3216         D-13         IC2503         B-12         Q3244         E-12         R1852         B-15								
C2007         C-18         C3212         D-13         IC2200         D-15         Q3233         E-13         R1838         A-15         R2245         D-15         R2571         A-13         X2200         D-15           C2008         C-18         C3213         C-11         IC2201         C-16         O3237         E-13         R1843         A-15         R2246         B-16         R2573         A-11         X2201         D-14           C2009         B-19         C3214         C-11         IC2203         B-16         Q3242         E-11         R1846         A-15         R2247         C-15         R2578         A-11           C2010         B-18         C3215         C-13         IC2204         C-15         Q3243         E-11         R1846         A-15         R2248         B-15         R2580         A-11           C2012         C-19         C3216         D-13         IC2503         B-12         Q3244         E-12         R1852         B-15         R2249         B-15         R2581         A-12           C2014         C-18         C3217         D-13         IC3200         C-13         Q3245         E-12         R1853         A-15         R2250         B-15								
C2009     B-19     C3214     C-11     IC2203     B-16     Q3242     E-11     R1846     A-15     R2247     C-15     R2578     A-11       C2010     B-18     C3215     C-13     IC2204     C-15     Q3243     E-11     R1848     A-15     R2248     B-15     R2580     A-11       C2012     C-19     C3216     D-13     IC2503     B-12     Q3244     E-12     R1852     B-15     R2249     B-15     R2581     A-12       C2014     C-18     C3217     D-13     IC3200     C-13     Q3245     E-12     R1853     A-15     R2250     B-15     R2586     A-11	C2007 C-18	C3212 D-13	IC2200 D-15	Q3233 E-13	R1838 A-15	R2245 D-15	R2571 A-13	
C2010     B-18     C3215     C-13     IC2204     C-15     Q3243     E-11     R1848     A-15     R2248     B-15     R2580     A-11       C2012     C-19     C3216     D-13     IC2503     B-12     Q3244     E-12     R1852     B-15     R2249     B-15     R2581     A-12       C2014     C-18     C3217     D-13     IC3200     C-13     Q3245     E-12     R1853     A-15     R2250     B-15     R2586     A-11								X2201 D-14
C2012 C-19								
C2014 C-18   C3217 D-13   IC3200 C-13   Q3245 E-12   R1853 A-15   R2250 B-15   R2586 A-11								
	C2015 C-18	l C3218 C-13	I	l Q3246 E-12	l R1855 A-15	l R2251 B-15	l R2901 F-12	I

VIDEO IF, VIDEO I/O & IR, SYSTEM/SERVO CONTROL, AUDIO, POWER

# FP-21 (FOCUS SW) FLEXIBLE BOARD


# PH700 PH700 PH700 S700 FOCUS INFINITY - MANUAL - AUTO INFINITY - MANUAL - AUTO

# MA-333 BOARD

IVIA-3	33 DU	אאט			
C7300	A-1	C7348	B-2	l R7313	A-
C7301	D-3	C7350	B-2	R7314	A-
C7302	A-2	C7351	D-2	R7315	A-
C7305	A-2	C7352	D-3	R7316	A-
C7306	A-2	C7353	D-2	R7317	A-
C7307	A-3	C7354	D-3	R7318	B-
C7308	A-2	C7355	D-2	R7319	B-
C7309	A-3	C7356	C-3	R7320	B-
C7310	A-2	C7357	D-3	R7321	B-
C7312	A-3			R7322	B-
C7313	A-2	CN7300	E-1	R7323	C-
C7314	A-3	CN7301	E-3	R7324	B-
C7315	A-2	CN7302	E-2	R7326	B-
C7316	A-3	CN7303	E-3	R7327	B-
C7317	A-1	CN7304	D-1	R7328	B-
C7318	A-2	CN7305	D-1	R7329	D-
C7319	A-3			R7331	B-
C7320	A-3	D7300	A-1	R7332	B-
C7321	A-1	D7304	E-2	R7335	B-
C7322	B-1	D7305	E-2	R7337	B-
C7323	B-1			R7339	B-
C7324	A-1	FB730	A-3	R7342	B-
C7325	B-3	FB731	A-3	R7343	B-
C7326	B-3			R7344	B-
C7327	D-1	IC7301	B-2	R7345	C-
C7328	B-2	IC7302	D-2	R7346	B-
C7329	B-1	IC7303	D-2	R7347	B-
C7330	B-1			R7348	B-
C7331	B-3	Q7300	D-1	R7350	D-
C7332	B-3	Q7301	B-1	R7351	D-
C7333	B-3	Q7302	B-1	R7352	D-
C7336	B-3	Q7303	B-1	R7353	D-
C7337	B-3	Q7304	D-3	R7354	D-
C7338	B-2			R7355	D-
C7339	B-3	R7302	A-3	R7356	D-
C7340	B-2	R7303	A-1	R7357	D-
C7341	B-3	R7304	A-1	R7358	D-
C7342	B-3	R7305	E-2	R7359	D-
C7343	B-2	R7306	E-2	R7360	D-
C7344	C-1	R7309	A-2	R7361	E-
C7345	C-3	R7310	A-2	R7362	E-
C7346	C-3	R7311	E-2	R7363	D-
C7347	B-3	R7312	E-2	I	


# MA-333 (STEREO MIC AMP) PRINTED WIRING BOARD

- Ref. No. MA-333 Board; 10,000 Series - MA - 333 BOARD (SIDE A)

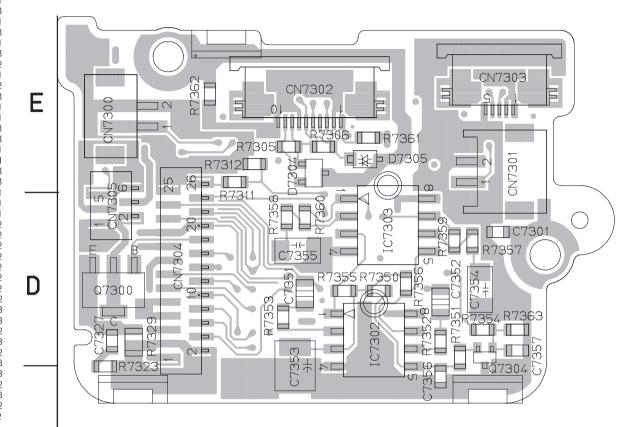


# RI-10 (SIRCS RECEIVER) PRINTED WIRING BOARD


— Ref. No. RI-10 Board; 10,000 Series —

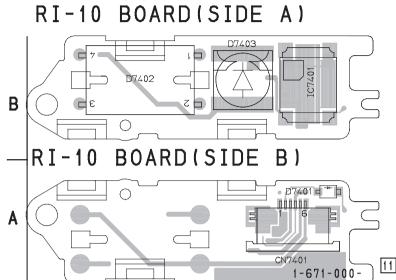


# FP-22 (MIC JACK) FLEXIBLE BOARD

# FP-22 FLEXIBLE BOARD

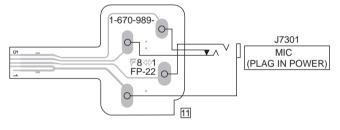

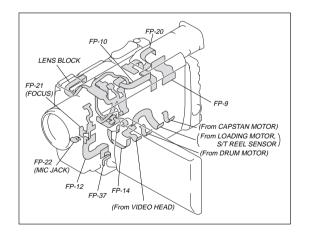

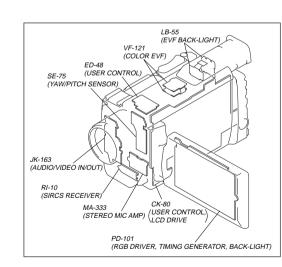


# For printed wiring boards

- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

Transistor	Diode
C III B E	2 1

There are few cases that the part printed on this diagram isn't mounted in this model.

# MA-333 BOARD (SIDE B)

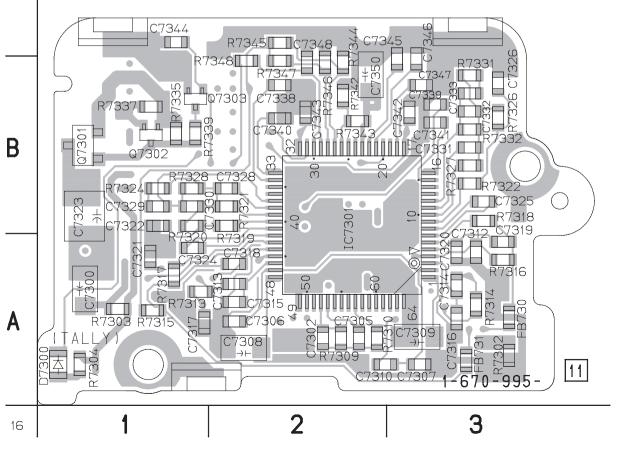

**RI-10 BOARD** 

CN7401 A-3


D7401 A-3 D7402 B-1 D7403 B-2

IC7401 B-3

STEREO MIC AMP / SIRCS RECEIVER RI-10

4-96

4-97

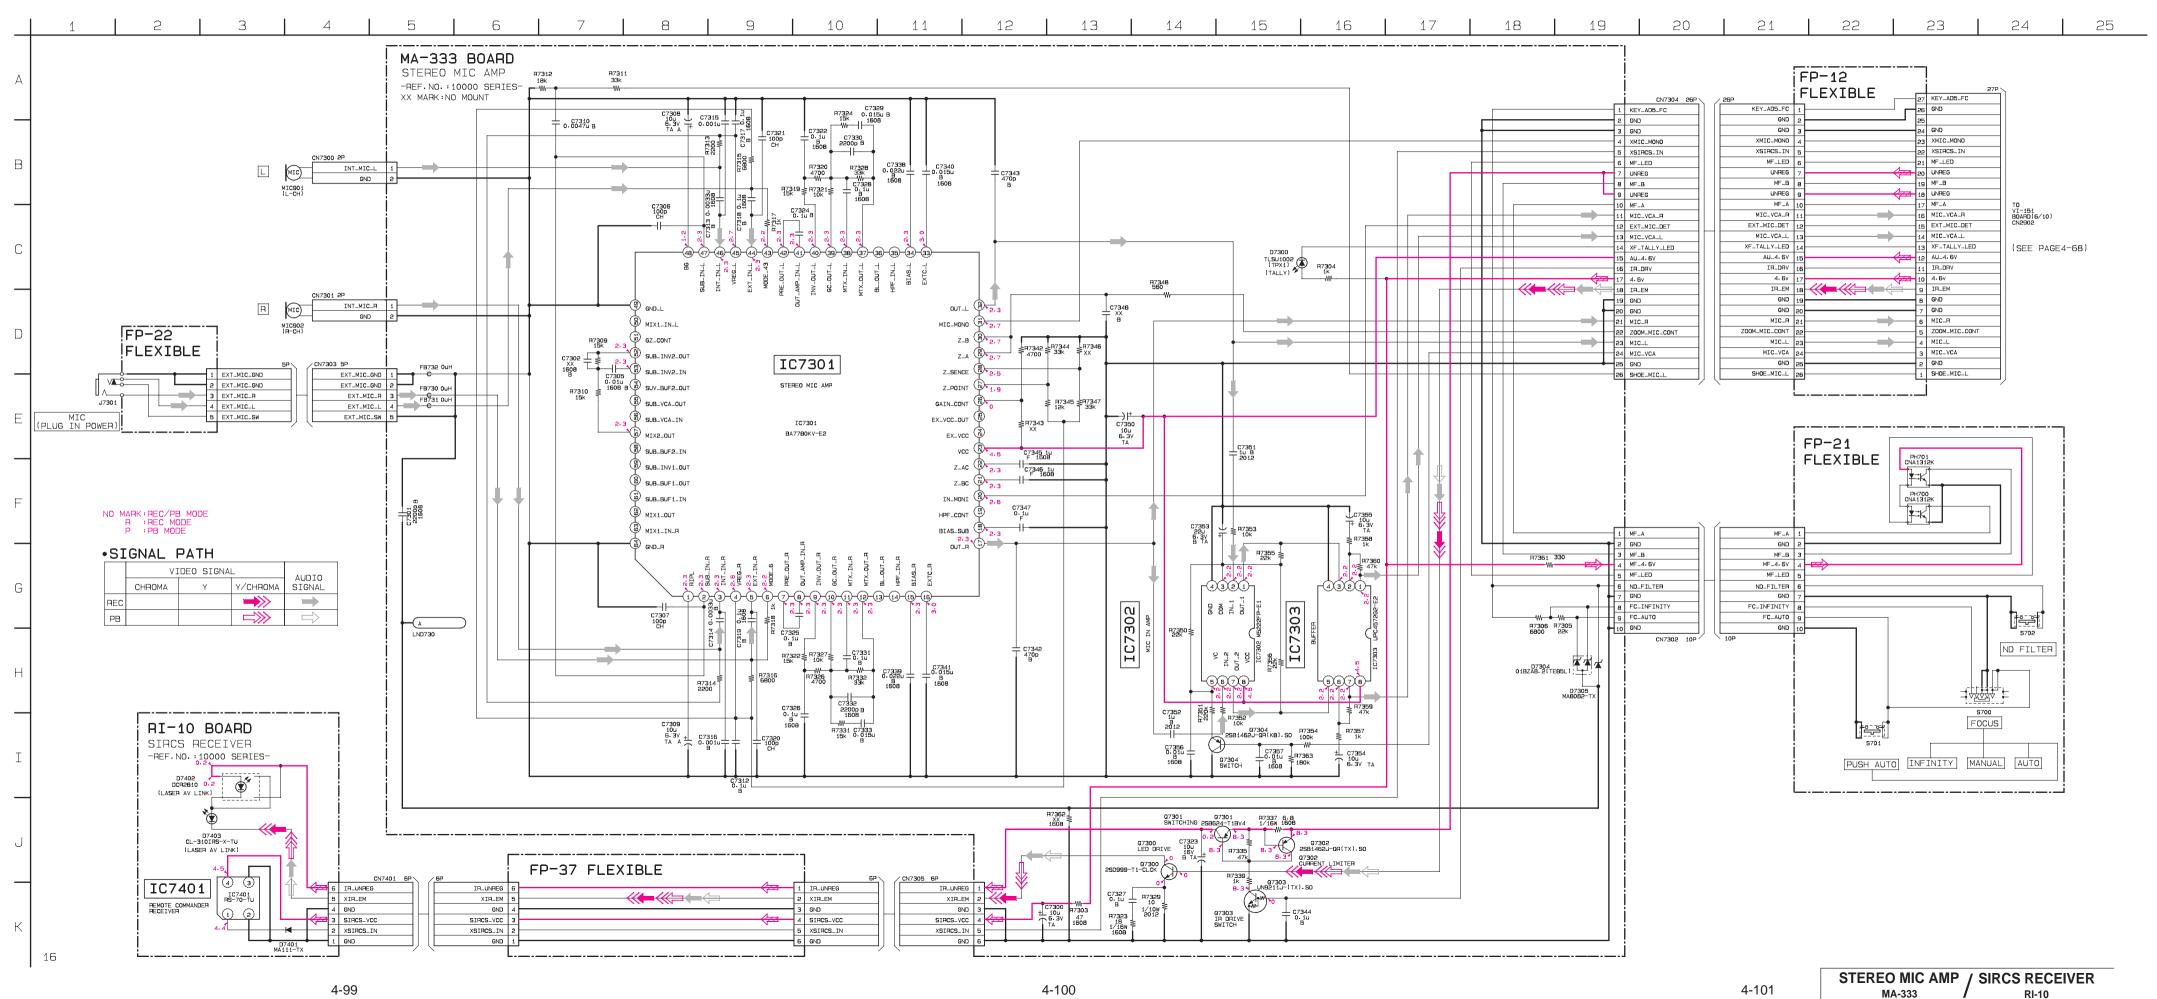


#### FP-16 (PANEL SWITCH) FLEXIBLE BOARD | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 FP-16 FLEXIBLE BOARD S002 (PANEL CLOSE) S001 (PANEL REV) CK-80 BOARD (USER CONTROL.LCD DRIVER) -REF.NO.:10000 SERIES-XX MARK:NO MOUNT FP-16 1-670-983- F 8⇔1 B.-GND 1 B.-GND 2 B.-FEC 3 B.-FEC 3 B.-FET 4 PANEL.-4.6V 5 PANEL.-15.3V 6 PANEL.-13.2V 7 PANEL.-5.5V 8 PANEL.-5.9V 9 FP-18 FLEXIBLE (SEE PAGE 4-115) R7232 1500 W 87211 1200 R7216 1500 START/STOP MODE 9722B 57219 10k SEL (PUSH) EXE DIGITAL EFFECT (SEE PAGE 4-115) FP-16 ED-48 BOARD |FLEXIBLE COM1 COM2 SE02 SE02 SE03 SE04 SE05 SE06 SE06 SE06 SE09 SE010 SE011 SE012 SE014 SE014 SE015 COM3 (USER CONTROL) -REF.NO.:10000 SERIES FP-18 (USER CONTROL) FLEXIBLE BOARD SP-LCD\_COM/XDATA 14 SP-15 LCD\_COM/XDATA SEIDEN LND723 SEIDEN LND724 SEIDEN LND725 LCD.-COM/XDATA | KEY\_AD2 | DATA\_FROM\_HIZ | KEY\_AD3 | KEY\_AD4 | XCS\_LCO\_DRIVER | KEY\_AD5 | KEY\_AD6 | KEY\_AD6 | LCD\_LED\_-ON | REY\_AD6 | LCD\_LED\_-ON EDITSEARCH -FP-18 FLEXIBLE BOARD BACK LIGHT FADER DIAL\_A 26 XCHARGE\_LED 27 DIAL\_B 28 XIR\_LED\_ON 25 KEY\_AD5\_FC 30 26 DIAL\_A 27 XCHARGE\_LED 28 DIAL\_B 29 XIR\_LED\_ON 30 KEY\_AD5\_FC 31 DATA\_FROM\_HI1 BT7200 A V/L PICHARGEABLE BATTERY D7204 01BZAB-2(TE85L) CCL-CD-15 AV 65 LCD-15 AV 65 BL.DET 53 BL.PEC 51 BL.PEC 45 PCOM 47 HSTART 45 GND 41 HDDP 39 KEV\_AD7 37 GND 35 XHI\_SCK1 DATA\_FROM\_H11 31 XIR\_LED\_ON 26 XCS\_LCD\_DRIVER 21 XHI\_SCK2 DATA\_FROM\_H12 17 LCD\_LCD\_NDIVER 21 XHI\_SCK2 19 DATA\_FROM\_H12 17 LCD\_COM/XDATA LCD\_COM/XDATA DATA\_FROM\_HI1 3 FP-18 01BZA8-2(TE85L) FLEXIBLE LND720 T.J. H7206 ≥ LND721 SEIDEN 7.8 7 1.4 0.9 SEC15 SEC14 SEC12 SEC12 SEC12 LND722 SEIDEN H7207≨ •SIGNAL PATH TO VI-151 BOARD(7/10) CN2906 SEG18 SEG17 SEG18 SEG14 SEG12 SEG12 SEG12 PCOM 47 PD\_VG 48 BL\_REG 49 BL\_GND 50 BL\_REG 51 CHROMA IC7200 BL\_GND 52 BL\_DET 53 LCD\_2.8V 54 LCD DRIVER IC7200 BU9729K-E2 LID\_OPEN 13 55 LCD.-15.3V 56 LCD.-5.5V 57 LCD-13.2 58 LCD.-4.6V Note: Note: The components identi- Les composants identifiés par fied by mark 🛧 or dot- une marque 🛕 sont critiques ted line with mark 🏚 pour la sécurité. XCS XCS CC/XD COM1 COM2 COM3 COM4 SEG1 900110203140506 Replace only with part | pièce portant le numéro spéci-FLEXIBLE number specified. fié.

USER CONTROL CK-80, ED-48, FP-16, FP-18 4-103

# CK-80 (USER CONTROL) PRINTED WIRING BOARD


— Ref. No. CK-80 Board; 10,000 Series —


# CK-80 BOARD(SIDE A)

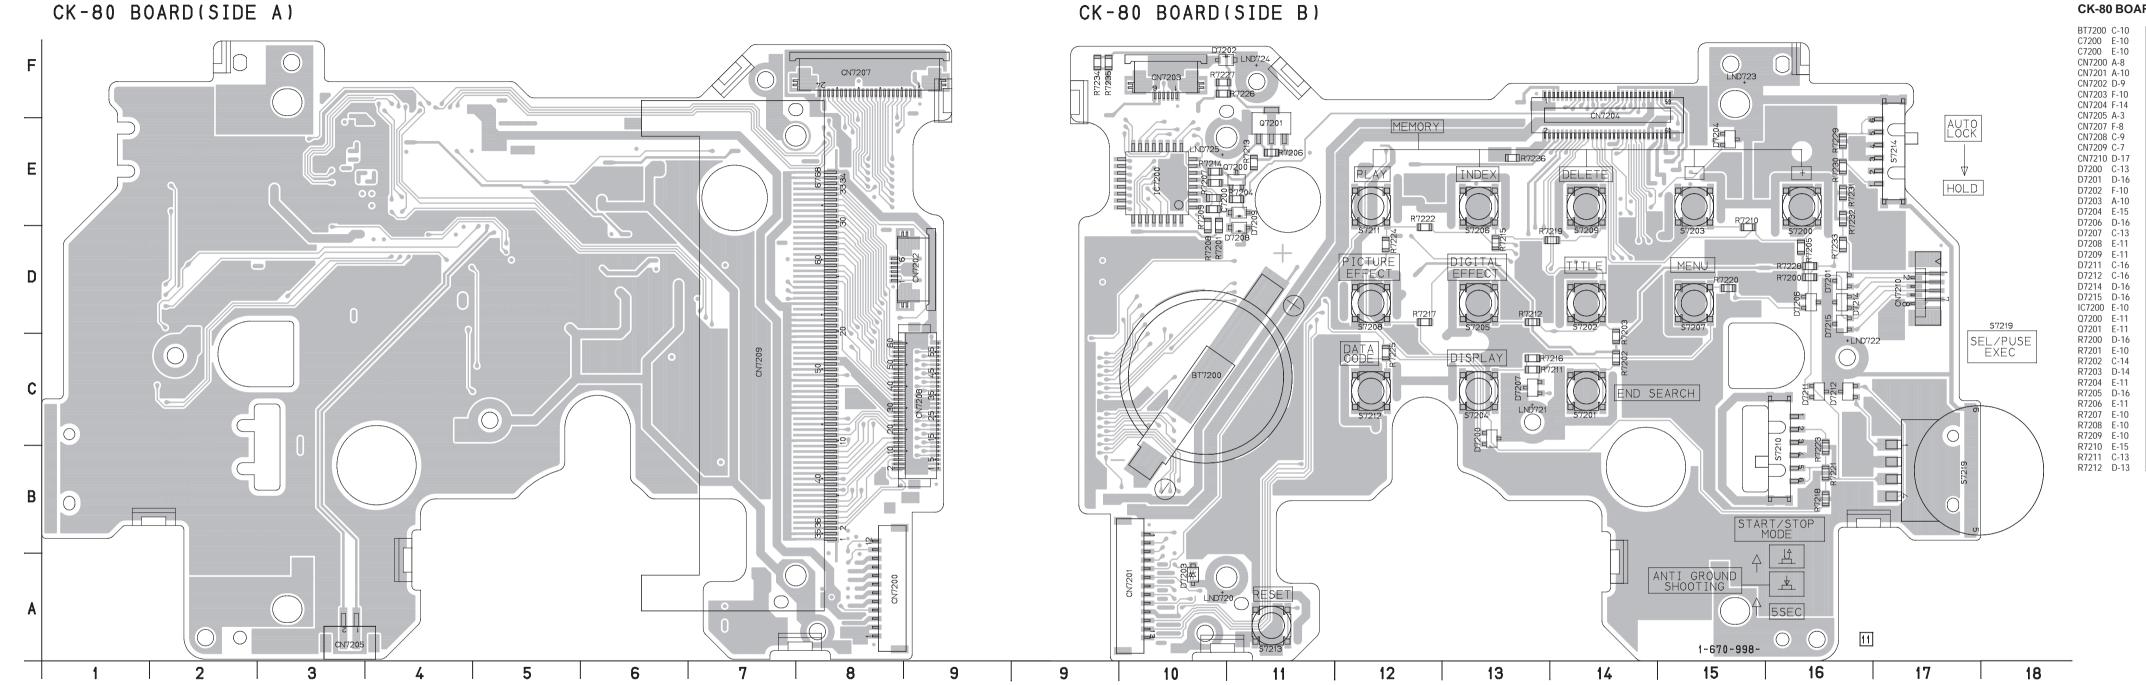

# ED-48 (USER CONTROL) PRINTED WIRING BOARD

— Ref. No. ED-48 Board; 10,000 Series —

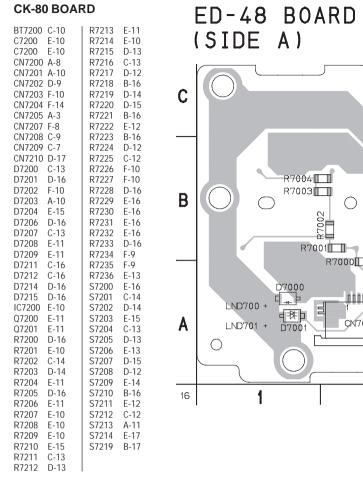

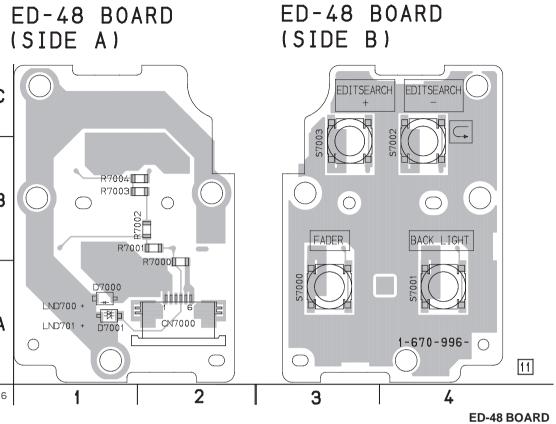

# R7000 A-2 R7001 B-2 R7002 B-2 R7003 B-2 R7004 B-2


CN7000 A-2

D7000 A-1 D7001 A-1


\$7000 A-3 \$7001 A-4 \$7002 B-4 \$7003 B-3

For printed wiring boards
• This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.

There are few cases that the part printed on this diagram isn't mounted in this model.

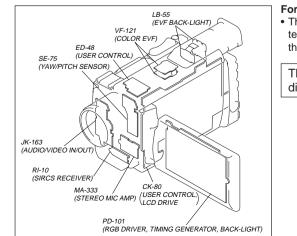

# FP-23 (S VIDEO) FLEXIBLE BOARD

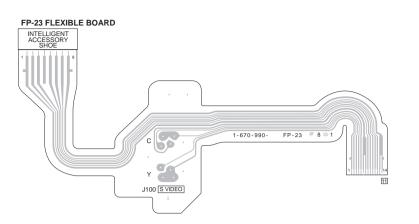

# JK-163 BOARD


7100	C-4	FB715	C-E
7101	D-4	FB716	C-1
7102	C-5	FB717	C-1
7103	D-4	FB718	C-1
7104	C-1		
		J7100	C-2
N7100	B-2	J7101	C-2
N7101	C-1	J7102	D-2
N7102	B-5		
		L7100	C-4
7100	B-4	L7101	C-5
7102	B-1	L7102	C-5
7103	C-5	L7103	D-4
7104	D-5	L7104	C-1
7105	C-5		
7106	C-5	R7102	C-4
B710	B-4	VDR711	C-4
B711	C-4	VDR714	C-5
B712	B-1	VDR715	B-5
B713	D-1	VDR717	D-
B714	C-1	VDR718	C-5


# For printed wiring boards

- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts





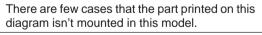


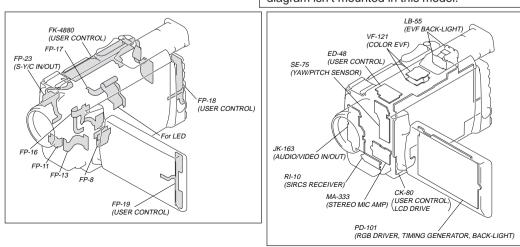

# JK-163 (AUDIO/VIDEO IN/OUT) PRINTED WIRING BOARD

— Ref. No. JK-163 Board: 10.000 Series — JK-163 BOARD JK-163 BOARD (SIDE A) (SIDE B) AUDIO/VIDEO (ID-2) HEADPHONE LANC

DV IN/OUT

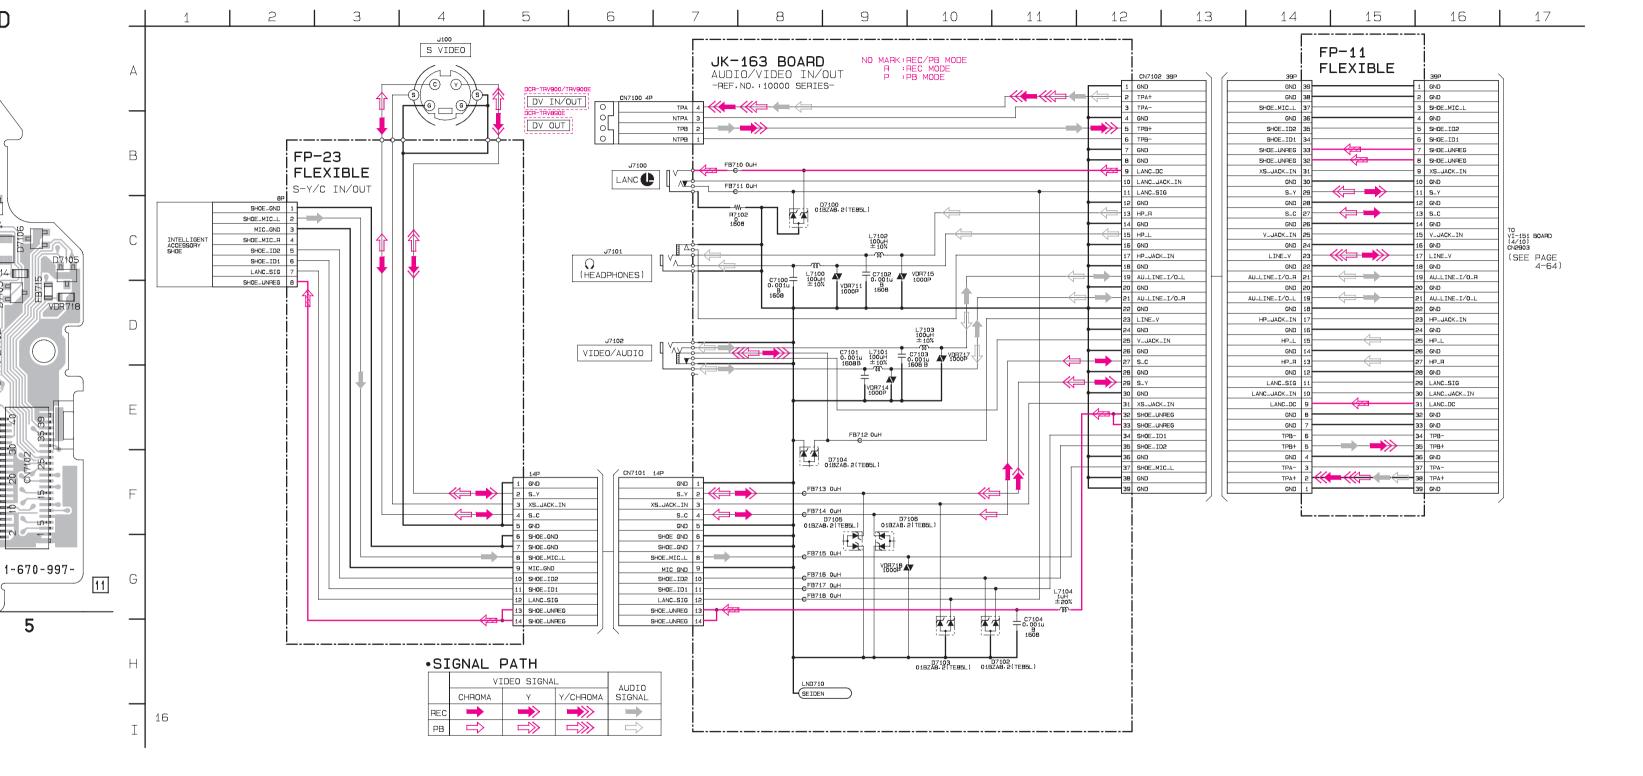


S-Y/C IN/OUT / AUDIO/VIDEO IN/OUT 4-111 4-112 4-113 4-114 FP-23 JK-163


# For schematic diagram


• Refer to page 4-121 for PD-101 printed wiring board.




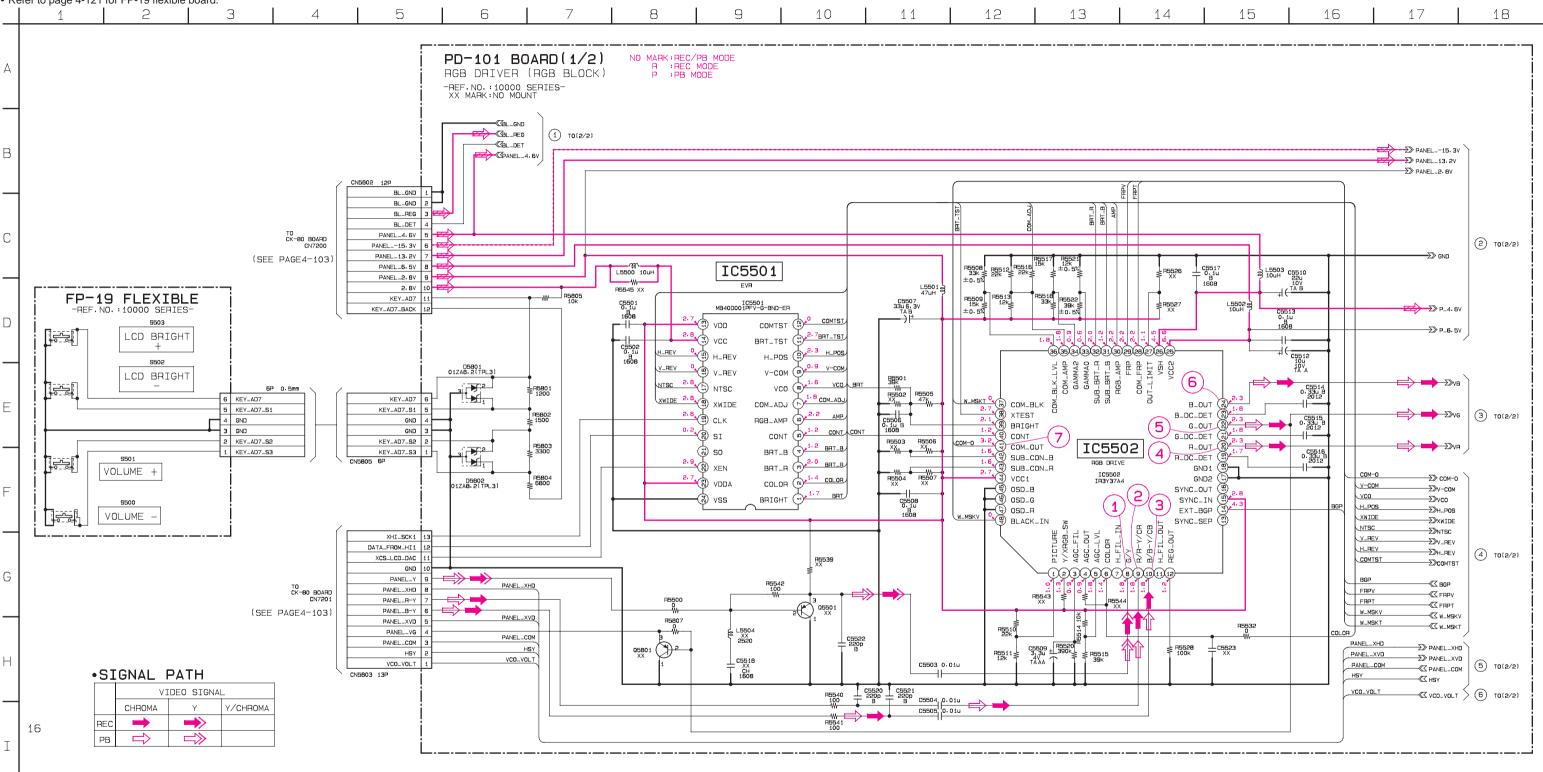


# **PD-101** BOARD (1/2) CAMERA REC/PB

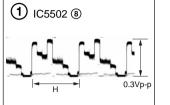

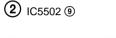


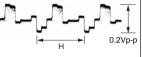




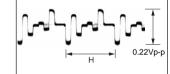



4 IC5502 @

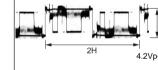




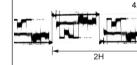

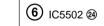

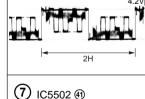



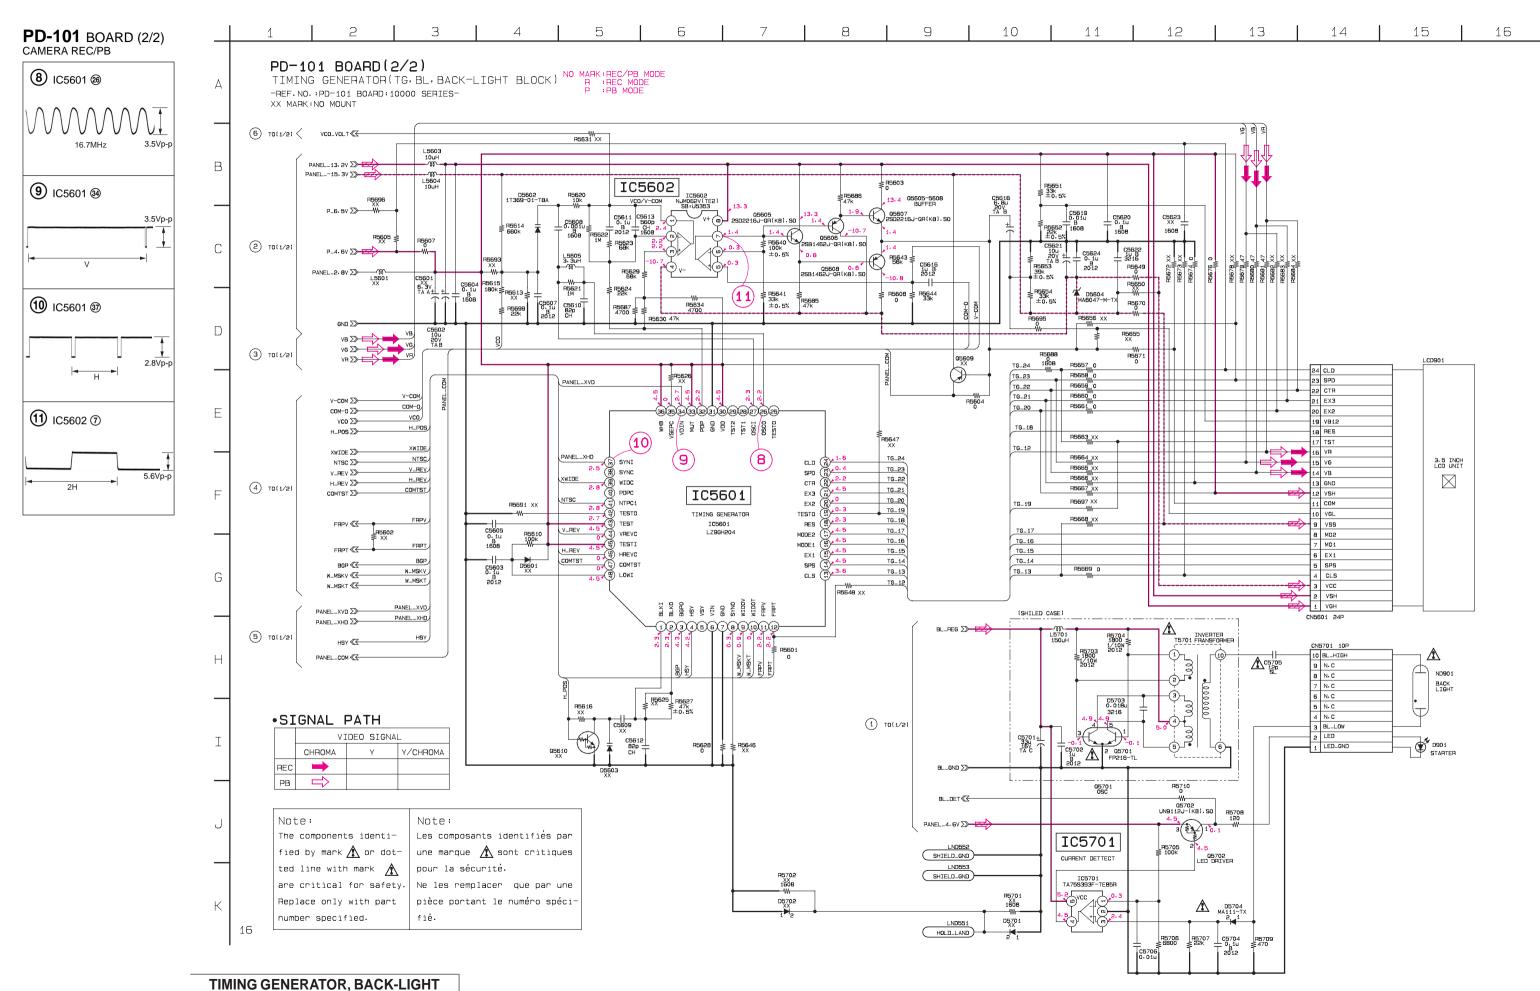

4-120

#### PD-101 (RGB DRIVER, TIMING GENERATOR, BACK-LIGHT) PRINTED WIRING BOARD - Ref. No. PD-101 Board; 10,000 Series -PD-101 BOARD PD-101 BOARD C5501 R5501 A-5 R5623 C-4 R5682 D-4 C5706 D-2 C5502 R5502 A-5 R5624 C-4 R5683 D-4 C5503 CN5601 D-4 R5503 A-5 R5625 R5684 C5504 B-6 CN5701 D-2 R5504 A-5 R5626 R5685 D-3 C5505 R5686 B-6 CN5802 C-1 R5505 A-5 R5627 D-3 CN5803 B-1 R5628 R5687 C5506 A-5 R5506 A-5 C5507 A-4 CN5805 C-6 R5507 R5629 R5688 П Q560S C5508 A-5 R5508 R5630 R5691 C5509 A-6 D5601 B-5 R5509 A-5 R5631 R5693 CN5701 C5510 A-3 D5602 B-4 R5510 A-6 R5634 R5695 Q5606 U U U Q5605 D5603 B-5 D5604 D-5 C5512 B-5 R5511 A-6 R5640 R5696 C5513 B-5 R5697 R5512 A-5 R5641 П D5701 D-3 C5514 B-5 R5513 A-5 R5699 R5643 B-5 C5515 R5514 A-5 R5701 D5702 R5644 C5516 D5704 D-2 R5515 A-5 R5646 R5702 C5517 D5801 R5516 R5647 R5703 C5602 C5518 A-4 D5802 R5517 A-5 R5648 R5704 IC5701 R5705 D-2 C5520 B-6 R5518 A-5 R5649 D-5 C5521 IC5501 A-4 R5706 R5520 A-6 R5650 B-6 D-2 IC5502 A-5 C5522 A-6 R5521 A-5 R5651 R5707 D-2 C5523 A-6 IC5601 C-5 R5522 A-5 R5708 D-2 R5652 C5601 B-4 IC5602 C-4 R5526 A-5 R5653 R5709 D-2 LND552 C5602 IC5701 C-2 R5527 A-5 R5654 R5710 D-2 C5603 R5528 B-6 R5655 R5801 (8) L5500 B-4 L5501 A-4 R5802 D-6 C5604 C-3 R5532 A-6 R5656 D-4 C5605 R5803 A-4 R5539 A-5 R5657 D-4 L5502 B-4 R5540 A-6 R5804 D-6 C5607 B-5 R5658 D-4 L5503 A-3 R5541 B-6 C5608 R5659 D-4 R5805 C-6 = i L5504 R5542 R5660 R5807 C-3 C5610 C-4 L5601 B-4 R5543 A-6 R5661 D-4 C-4 C-4 T5701 B-2 C5611 C-4 L5603 R5544 A-6 R5663 L5604 L5605 R5545 A-4 C5612 C-5 R5664 C-4 C5613 C-4 R5601 R5665 D-5 R5613 C-5 C5616 D-3 L5701 B-3 R5602 R5666 C-5 C-5 C5618 R5603 R5667 LND551+ C5619 Q5501 R5604 R5668 1.5601 C5620 Q5605 D-3 R5605 R5669 B T5701 Q5606 D-3 Q5607 D-3 C5621 D-5 R5607 B-4 R5670 C5601 C5622 C-5 C5623 C-4 R5608 D-3 R5671 D-3 Q5608 D-3 R5610 B-5 R5672 D-3 C5624 D-5 Q5609 R5613 B-5 R5673 D-3 D-5 C5701 C-3 Q5610 R5614 R5674 D-5 C5517 C5702 C-3 Q5701 B-3 R5615 B-5 R5676 20 C5703 B-3 Q5702 D-2 R5616 B-5 R5678 D-4 C5704 D-2 Q5801 D-3 R5620 C-4 R5679 C-5 R5526 II II C550 R5621 C5705 R5680 D-5 R5527 C5502 R55220 D ||\_\_\_\_R5540 R5500 A-4 R5622 R5681 C5503 5522 □□C5522 E I LND553 ШС5523 E CHILLIANT \_\_\_\_\_ R553: R5544 IIIR5512 C5510 11 1-671-001 3 5 6 16 For printed wiring boards FP-19 (USER CONTROL) FLEXIBLE BOARD • This board is six-layer print board. However, the pat-(EVF BACK-LIGHT) FK-4880 (USER CONTROL) terns of layers two to five have not been included in **FP-19 FLEXIBLE BOARD** the diagram. (USER CONTROL Chip parts FP-19 رجي Transistor Diode 1-670-986-(USER CONTROL) ₄ mk 0 S500 S503 11 For LED VOLUME VOLUME LCD BRIGHT LCD BRIGHT JK-163 There are few cases that the part printed on this

(SIRCS RECEIVER)

MA-333 / (STEREO MIC AMP) (

(USER CONTROL)

PD-101 (RGB DRIVER, TIMING GENERATOR, BACK-LIGHT)

diagram isn't mounted in this model.

(USER CONTROL)

VF-121 BOARD

C5013

C5014

C5015

C5016

C5020

C5101

C5102

C5103

C5104

C5105

C5106

C5107

C5108

C5109

C5110

C5111

C5112

C-5

B-5

C-3

C-6

B-3

C-2

C-2

C-2

C-2

C-1

C-1

C-2

C-1

C-1

C-1

C-1

C-1

#### VF-121 (COLOR EVF) PRINTED WIRING BOARD

— Ref. No. VF-121 Board; 10,000 Series —

#### C5001 B-6 | C5113 C-4 C5002 B-6 C5114 C-1 Q5102 B-1 R5046 C-4 C5003 B-5 C5115 B-2 Q5103 B-1 R5047 C-4 C5116 C5004 R5101 C-1 B-5 C-7 C5005 B-5 C5117 B-7 R5001 C-5 R5102 C-8 R5003 C5006 B-5 C5118 B-2 R-4 R5103 C-7 C5007 B-5 C5119 R5005 B-4 R5104 C-8 C5008 C5120 B-1 R5008 R5105 A-5 B-3 C-8 R5009 C5009 B-5 C5121 B-1 B-3 R5106 C-1 R5013 R5107 C5010 A-5 C5122 B-8 B-5 C-1 C5011 C-5 C5123 A-2 R5016 B-6 R5108 C-1 C5012 C-5 R5018 C-3 R5109 C-1

R5020

R5021

R5023

R5024

R5025

R5026

R5029

R5030

R5031

R5035

R5038

R5039

R5040

R5041

R5042

R5044

R5022

C-3

C-3

B-5

C-3

C-6

C-6

C-6

B-4

C-5

C-5

C-5

B-4

B-5

B-4

R5110

R5111

R5113

R5114

R5115

R5116

R5117

R5118

R5119

R5121

R5123

R5125

R5133

B-4 R5128

B-5 R5135

B-3 R5136

C-1

C-1

C-1

C-7

C-1

C-1

C-8

C-1

B-7

B-7

B-7

B-7

B-7

B-8

A-7

B-7

CN5001 C-4

CN5101 B-1

C-1

B-1

C-5

C-4

C-1

B-7

C-6

B-2

B-1

B-1

D5101

D5102

IC5001

IC5002

IC5101

IC5102

L5001

L5002


L5101

L5102

L5103

# VF-121 BOARD (SIDE A)

# VF-121 BOARD (SIDE B)

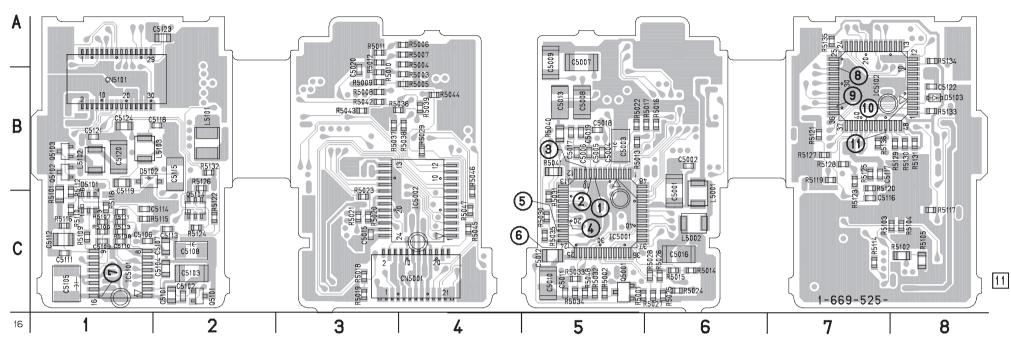


# LB-55 (EVF BACK-LIGHT) (COLOR EVF) (VAW/PITCH SENSOR) JK-163 (AUDIO/VIDEO IN/OUT) RI-10 (SIRCS RECEIVER) MA-333 (STEREO MIC AMP) (USER CONTROL) PD-101 (RGB DRIVER, TIMING GENERATOR, BACK-LIGHT)

### For printed wiring boards


- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts


Trans	sistor	Diode
C B B E	6 5 4	654

There are few cases that the part printed on this diagram isn't mounted in this model.

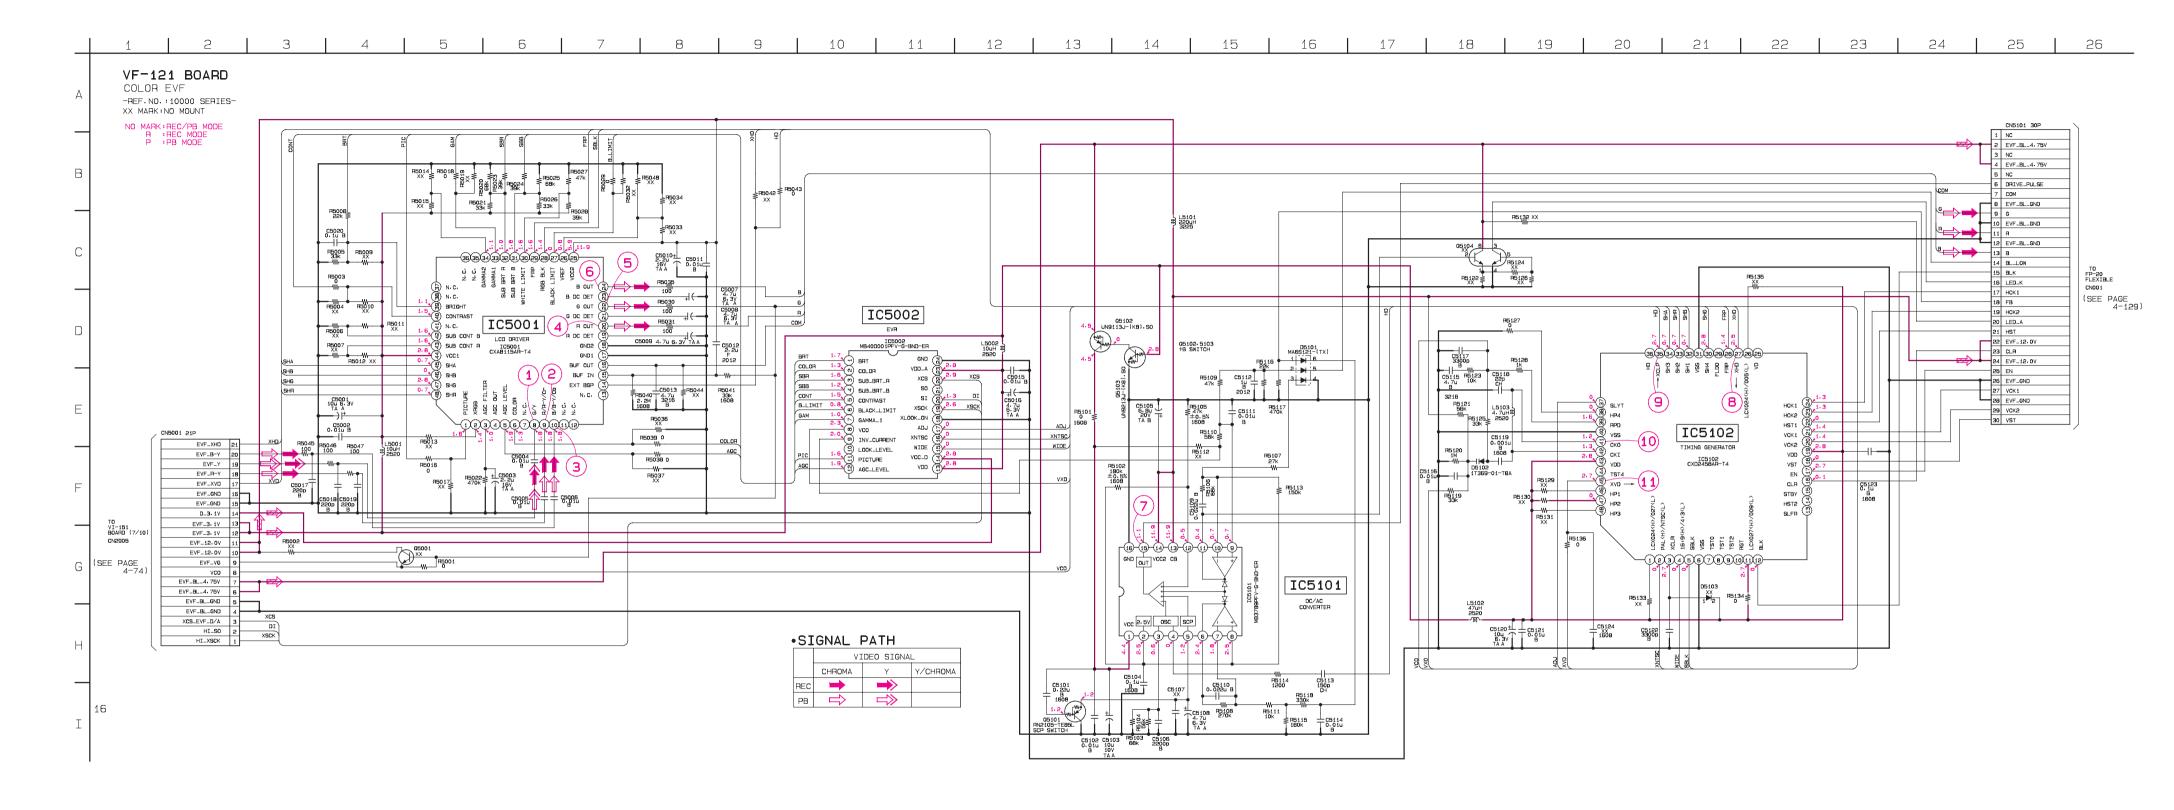

# VF-121 BOARD CAMERA REC/PB

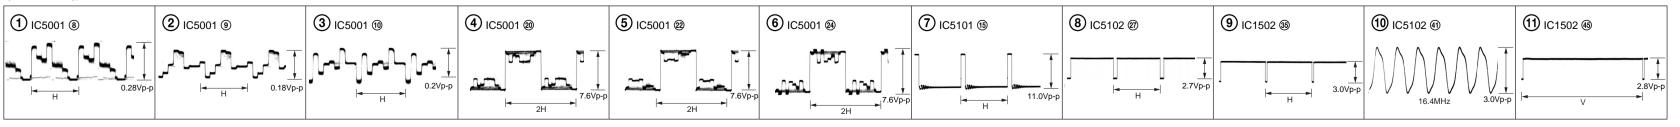

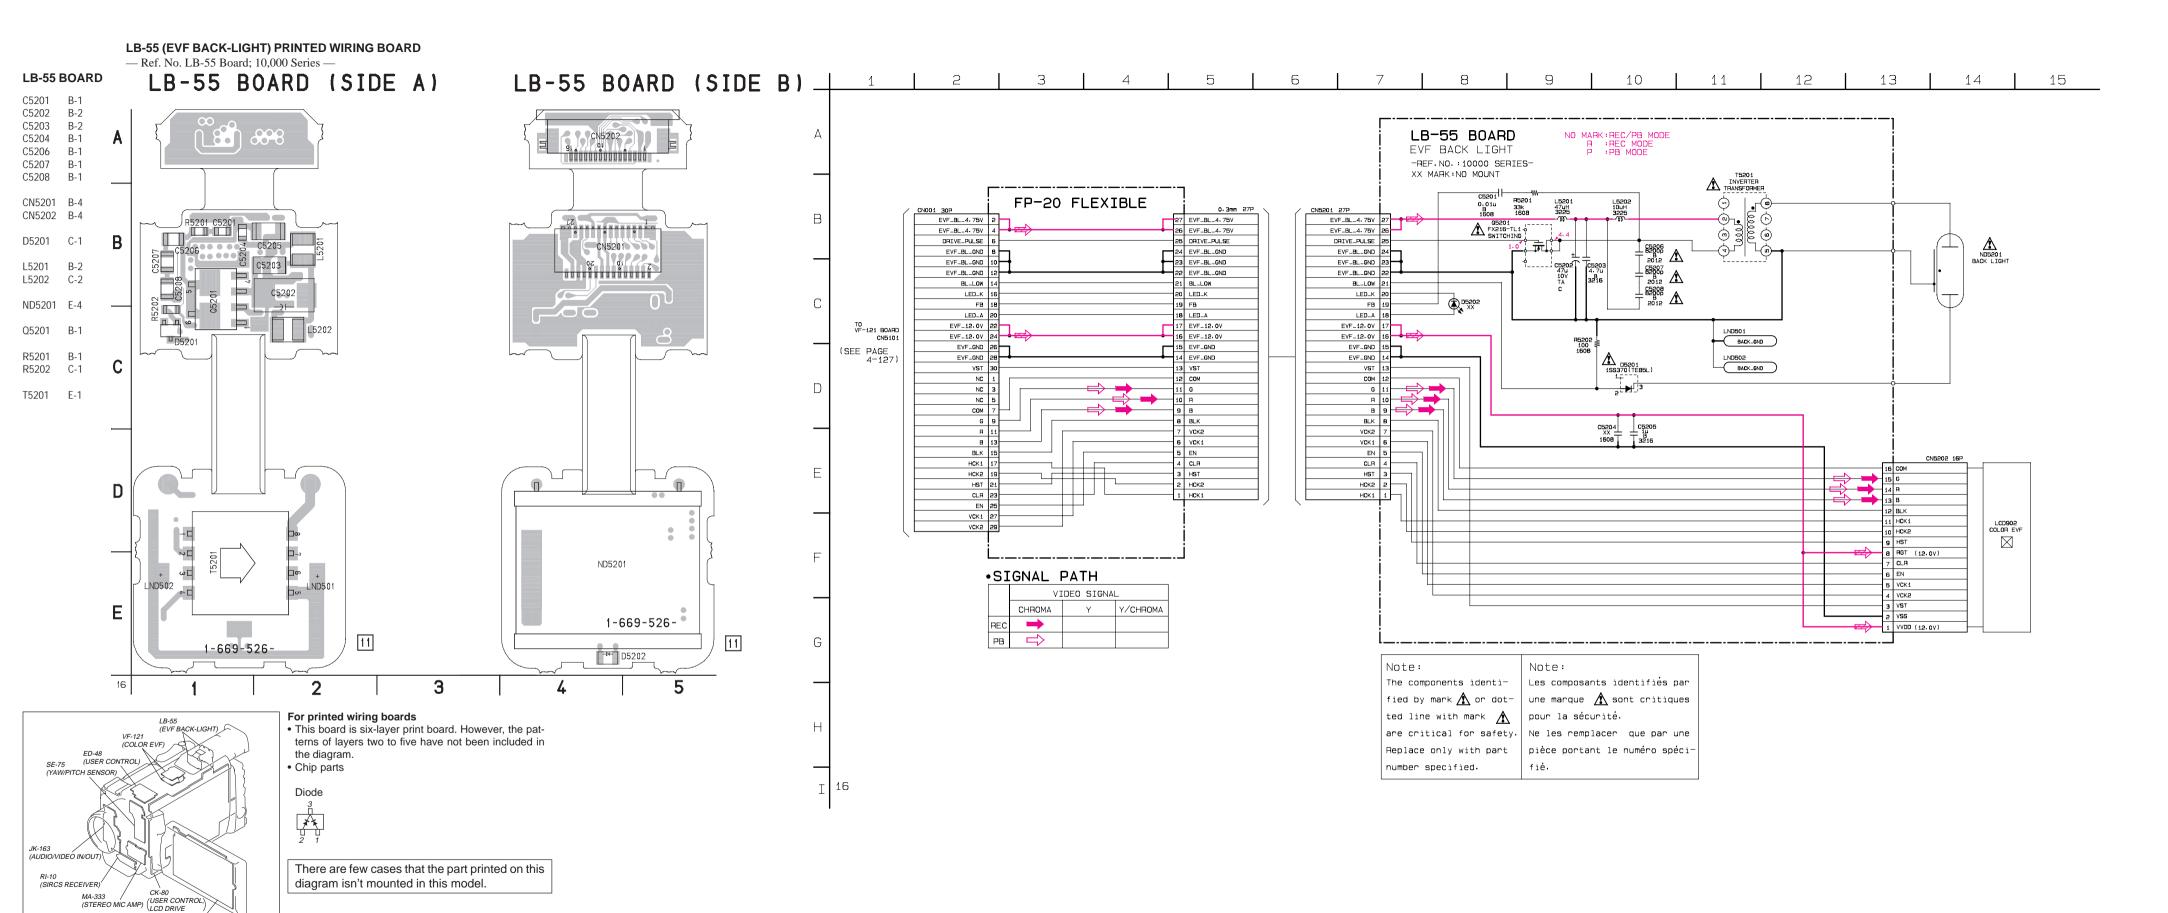

EVF BACK-LIGHT LB-55

PD-101 (RGB DRIVER, TIMING GENERATOR, BACK-LIGHT)

4-128 4-130E

# SECTION 5 ADJUSTMENTS

# 5-1. CAMERA SECTION ADJUSTMENT

NTSC model: DCR-TRV900

PAL model: DCR-TRV890E/TRV900E

# 1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

#### 1-1-1. List of Service Tools

• Oscilloscope • Regulated power supply • Vectorscope

• Color monitor • Digital voltmeter

Ref. No.	Name	Parts Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto white balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0 ND filter 0.3	J-6080-808-A J-6080-818-A	White balance check White balance check
J-3	Pattern box PTB-450	J-6082-200-A	
J-4	Color chart for pattern box	J-6020-250-A	
J-5	Adjustment remote commander (RM-95 upgraded). (Note 1)	J-6082-053-B	
J-6	Siemens star chart	J-6080-875-A	For checking the flange back
J-7	Clear chart for pattern box	J-6080-621-A	
J-8	CPC-8 jig	J-6082-388-A	For adjusting the video section For adjusting the LCD system For adjusting the viewfinder
J-9	Extension cable (60P, 0.5mm)	J-6082-431-A	For extension between the VC-208 board (CN761) and the CK-80 board (CN7208)
J-10	Extension cable (100P, 0.5mm)	J-6082-432-A	For extension between the VC-208 board (CN900) and the VI-151 board (CN2901)
J-11	Extension cable (39P, 0.3mm)	J-6082-433-A	For extension between the JK-163 board (CN7102) and the VI-151 board (CN2903)
J-12	IR receiver jig	J-6082-383-A	For adjusting the IR transmitter

**Note 1:** If the microprocessor IC in the adjustment remote commander is not the new microprocessor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new microprocessor (8-759-148-35).

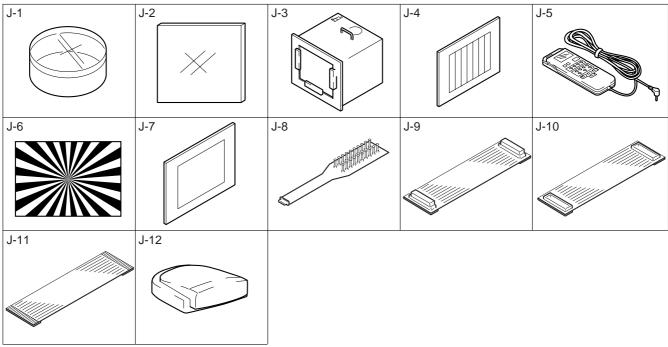


Fig. 5-1-1.

#### 1-1-2. Preparations

- **Note 1:** For details of how remove the cabinet and boards, refer to "2. DISASSEMBLY".
- **Note 2:** When performing only the adjustments, the lens block and boards need not be disassembled.
- Connect the equipment for adjustments according to Fig. 5-1 3.
- The front panel block (MA-333 board, focus ring, focus switch, ND filter switch, microphone unit) must be assembled because the focus ring and ND filter switch are used for adjustments.
- The viewfinder (VF-121 board, LB-55 board) and upper cabinet (LCD window, ED-48 board) are need be connected. To remove them, disconnect the following connectors.
  - 1. VI-151 board CN2905 (20P, 0.5mm)
  - 2. CK-80 board CN7207 (24P, 0.5mm)
  - 3. CK-80 board CN7203 (5P, 0.5mm)
- Note 3: As removing the cabinet (R) (removing the VI-151 board CN2906) means removing the lithium 3V power supply (BT7200), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and the data on history use (data of page: 2, address: A2 to AA). (Refer to "SELF-DIAGNOSIS FUNCTION" for the self-diagnosis data, and to "5-4.Service Mode" for the data on the history use.)
- Note 4: Setting the "Forced Camera Power ON" Mode
  - 1) Select page: 0, address: 01, and set data: 01.
  - 2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.

    The above procedure will enable the camera power to be turned on with the operation switch block (FK-4880) removed. After completing adjustments, be sure to exit the "Forced Camera Power ON Mode".
- Note 5: Exiting the "Forced Camera Power ON" Mode
  - 1) Select page: 0, address: 01, and set data: 01.
  - 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
  - 3) Select page: 0, address: 01, and set data: 00.

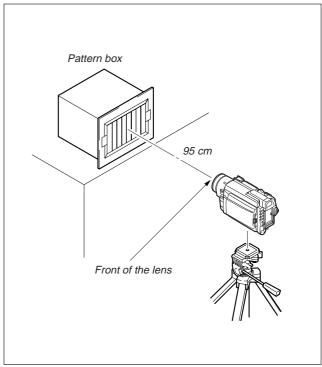


Fig. 5-1-2.

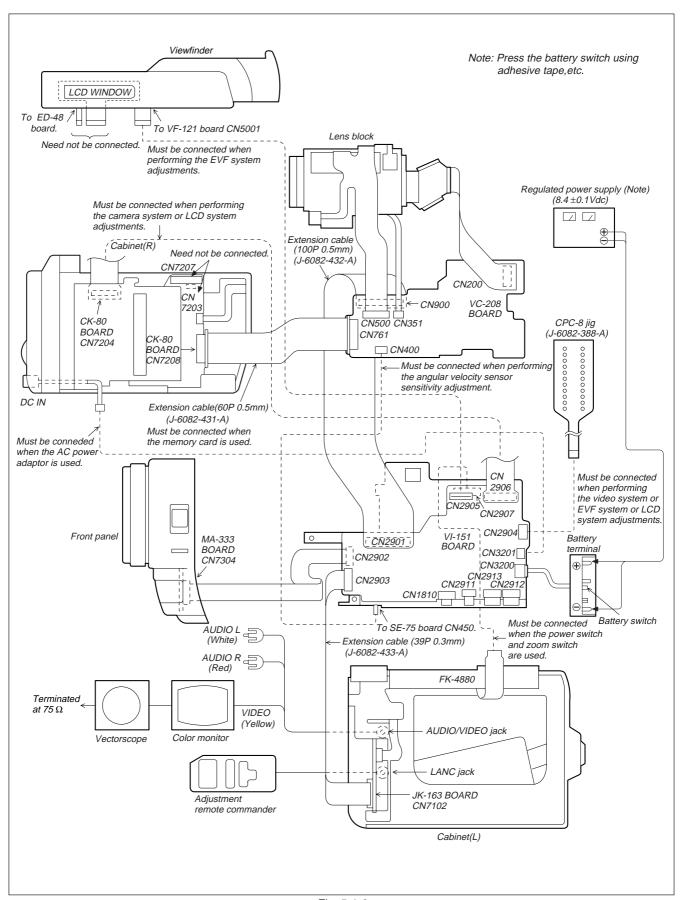


Fig. 5-1-3

#### 1-1-3. Precaution

#### 1. Setting the Switch

Unless otherwise specified, set the switches as follows and perform adjustments without loading cassette.

1.	POWER switch (FK-4880 block)	CAMERA
2.	DEMO MODE (Menu display)	OFF
3.	DIGITAL ZOOM (Menu display)	OFF
4.	STEADY SHOT (Menu display)	OFF
5.	DISPLAY (Menu display)	V-OUT/LCD
6.	DISPLAY (CK-80 board)	ON
7.	AUTO LOCK (CK-80 board)	AUTO
8.	ND FILTER	OFF

9.	FOCUS switch (FP-21)	MANUAL
10.	BACK LIGHT (ED-48 board)	OFF
11.	PICTURE EFFECT (CK-80 board)	OFF
12.	DIGITAL EFFECT (CK-80 board)	OFF
13.	16:9 WIDE (Menu display)	OFF
14.	AUTO SHUTTER (Menu display)	OFF
15.	PROG.SCAN (Menu display)	OFF

#### 2. Order of Adjustments

Basically carry out adjustments in the order given.


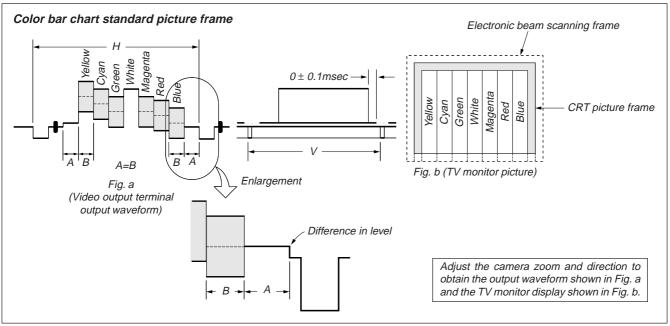


Fig. 5-1-4

#### 3. Subjects

- 1) Color bar chart (Standard picture frame).
  - When performing adjustments using the color bar chart, adjust the picture frame as shown in Fig. 5-1-4. (Standard picture frame)
- Clear chart (Standard picture frame)
   Remove the color bar chart from the pattern box and insert a
  - clear chart in its place. (Do not perform zoom operations during this time.)
- 3) Flange back adjustment chart Make the chart shown in Fig. 5-1-5 using A0 size (1189 mm × 841 mm) black and white vellum paper.

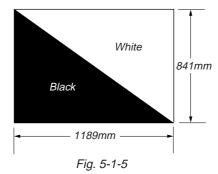

**Note:** Use matte vellum paper bigger than A0, and make sure the edges of the black and white paper joined together are not rough.

#### 1-2. INITIALIZATION OF F, E PAGE DATA

#### 1. Initializing the F, E Page Data

**Note:** If the F, E page data is initialized, the following adjustments must be performed again.

- 1) Modification of F, E PAGE Data
- 2) Camera system adjustments

Adjusting page	F
Adjusting Address	10 to FF
Adjusting page	E
Adjusting Address	00 to 9B

#### **Initializing Method:**

- 1) Set the power switch to the CAMERA position.
- 2) Select page: 0, address: 01, and set data: 01.
- Select page: 6, address: 01, and set data: 2D (NTSC) or data: 2F (PAL), and press the PAUSE button of the adjustment remote commander.
- 4) Select page: 6, address: 03, set data: 01, and press the PAUSE button of the adjustment remote commander.
- 5) Select page: 6, address: 02, and check that the data is "01".
- 6) Perform "Modification of F, E Page Data".

#### 2. Modification of F, E PAGE Data

If the F, E PAGE data has been initialized, change the data of the "Fixed data-2" address shown in the following tables by manual input.

#### **Modifying Method:**

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.

**Note:** If copy the data built in the different model, the camcorder may not operate.

- 3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
- Check that the data of adjustment addresses is the initial value.
   If not, change the data to the initial value.

#### Processing after Completing Modification of F, E Page data

- 1) Select page: 2, address: 00, and set data: 29.
- Select page: 2, address: 01, and set data: 29, and press the PAUSE button of the adjustment remote commander.
- 3) Perform the "Camera System Adjustments".

#### 3. F Page Table

Note 1: Fixed data-1 :Initialized data. (Refer to "1. Initializing the F, E Page Data".)

Fixed data-2: Modified data. (Refer to "2. Modification of F, E PAGE Data").

Address	Initial value		Remark
	NTSC	PAL	Kemark
00 to 0F			
10			Fixed data-1
11			(Initialized data)
12			
13			
14			
15			
16			
17			
18			

	Initial	value	
Address	NTSC	PAL	Remark
19			Fixed data-1
1A			(Initialized data)
1B			
1C	80	80	27MHz origin osc. adj.
1D			Fixed data-1
1E	60	60	IRIS & ND HALL adj.
1F	40	60	-
20	00	00	AWB standard data input
21	28	28	
22	00	00	
23	50	50	
24	8E	2C	Flange back adj.
25	1A	17	
26	80	78	
27	24	1D	
28	65	FB	
29	11	12	
2A			Fixed data-1
2B			
2C	64	64	Max gain adj.
2D			Fixed data-1
2E			(Initialized data)
2F			
30			
31			
32			
33			
34	88	90	Auto white balance adj.
35	6C	8F	
36	D6	D6	Flange back adj.
37	E6	E6	
38	15	23	
39	45 2F	00	
3A	3F 3F	19	
3B 3C		00	
3D	16 A8	27 A8	
3E	80	80	LV standard data input
3F	76	76	Lv standard data mput
40	70	70	Fixed data-1
41	50	50	Angular velocity sensor sensitivity
42	50	50	adj.
43	30	- 50	Fixed data-1
44	D5	D5	Color reproduction adj. (1)
45	EC	EC	(ND filter OFF)
46	20	20	(1.12 11101 011)
47	20	20	
48	60	60	IRIS & ND HALL adj.
49	40	60	9
4A	00	00	WB ND filter compensation adj.
4B	00	00	r
4C	89	89	IRIS & ND HALL adj.
4D			Fixed data-1
4E			(Initialized data)
4F			
50			Fixed data-2

	Imiti - I I	T
Address	Initial value  NTSC PAL	Remark
51	NIOC TAL	Fixed data-2
52		Fixed data-1
53		(Initialized data)
54		(
55		
56		
57		Fixed data-2
58		Fixed data-1
59		(Initialized data)
5A		
5B		
5C		
5D		
5E		
5F		
60		
61		
62		
63		Fixed data-2
64		(Modified data, copy the data built in
65		the same model.)
66		Fixed data-1
67		(Initialized data)
68		,
69		
6A		
6B		Fixed data-2
6C		
6D		
6E		Fixed data-1
6F		
70	89 89	IRIS & ND HALL adj.
71		Fixed data-1
72		(Initialized data)
73		
74		Fixed data-2
75		Fixed data-1
76		(Initialized data)
77		
78		
79		
7A		
7B		
7C		
7D		
7E		
7F		
80		
81		
82		
83		
84		
85		
86		
87		
88	1	
	1	

Ī	Initial	value	
Address	NTSC	PAL	Remark
89			Fixed data-1
8A			(Initialized data)
8B			
8C			
8D			
8E			
8F			
90			
91			
92			
93			
94			
95			
96			
97			
98			
99			
9A			Fixed data-2
9B			Fixed data-1
9C			(Initialized data)
9D			
9E			
9F			
A0			
A1			
A2			
A3			
A4			
A5 A6			Fixed data-2
A6 A7			Fixed data-2
A8			(Initialized data)
A9			(initialized data)
AA			
AB			
AC			
AD			
AE			
AF			
В0			
B1			
B2			
В3			
B4			
B5			
В6			
В7			
В8			
В9			
BA			
BB			
BC			
BD			
BE			
BF			
C0			

	Initial value	T
Address	Initial value	Remark
C1	NISC PAL	Fixed data-1
C1		(Initialized data)
C3		(Initianized data)
C4		
C5		
C6		Fixed data-2
C7		(Modified data, copy the data built in
C8		the same model.)
C9		the same moder.)
CA		Fixed data-1
СВ		Tirod data T
CC		Fixed data-2
CD		(Modified data, copy the data built in
CE		the same model.)
CF		
D0		
D1		
D2		
D3		Fixed data-1
D4		(Initialized data)
D5		,
D6		
D7		
D8		
D9		
DA		
DB		
DC		
DD		
DE		
DF		
E0		
E1		
E2		
E3		
E4		
E5		
E6		
E7		
E8		
E9		
EA		
EB		
EC		
ED		
EE		
EF		
F0		
F1		
F2		
F3		
F4		
F5		
F6		
F7		
F8		

Address	Initial value		Remark
Address	NTSC	PAL	Remark
F9			Fixed data-1
FA			(Initialized data)
FB			
FC			Fixed data-2
FD			Fixed data-1
FE			
FF			

Table. 5-1-1

4. E Page table

Note 1: Fixed data-1 :Initialized data. (Refer to "1. Initializing the F, E
Page Data".)

Fixed data-2 :Modified data. (Refer to "2. Modification of F, E

Address         Initial value         Remark           00         Fixed data-1           01         (Initialized data)           02         03           04         05           06         07           08         Fixed data-2           0A         Fixed data-1           0B         Fixed data-1           0C         Fixed data-1           0D         (Initialized data)	
00         Fixed data-1           01         (Initialized data)           02         03           04         05           06         07           08         09         Fixed data-2           0A         Fixed data-1           0B         Fixed data-2           0C         Fixed data-1           0D         (Initialized data)	
02 03 04 05 06 07 08 09 Fixed data-2 0A Fixed data-1 0B Fixed data-1 0C Fixed data-1 (Initialized data)	
03 04 05 06 07 08 09 Fixed data-2 0A Fixed data-1 0B Fixed data-1 (Initialized data)	
04 05 06 07 08 09 Fixed data-2 0A Fixed data-1 0B Fixed data-2 Fixed data-1 (Initialized data)	
05         06           07         08           09         Fixed data-2           0A         Fixed data-1           0B         Fixed data-2           0C         Fixed data-1           0D         (Initialized data)	
06           07           08           09         Fixed data-2           0A         Fixed data-1           0B         Fixed data-2           0C         Fixed data-1           0D         (Initialized data)	
07           08           09         Fixed data-2           0A         Fixed data-1           0B         Fixed data-2           0C         Fixed data-1           0D         (Initialized data)	
08 09 Fixed data-2 0A Fixed data-1 0B Fixed data-2 0C Fixed data-1 0D (Initialized data)	
09 Fixed data-2 0A Fixed data-1 0B Fixed data-2 0C Fixed data-1 0D (Initialized data)	
0A Fixed data-1  0B Fixed data-2  0C Fixed data-1  0D (Initialized data)	
0B Fixed data-2  0C Fixed data-1  0D (Initialized data)	
OC Fixed data-1 OD (Initialized data)	
0D (Initialized data)	
0E	
0F	
10	
11 Fixed data-2	
12 Fixed data-1	
13 (Initialized data)	
14	
15	
16	
17 Fixed data-2	
18 Fixed data-1	
19 (Initialized data)	
1A	
1B	
1C	
1D	
1E	
1F	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
2A 40 40 Pre white balance data input	
2B 40 40	
2C Fixed data-1	
2D 80 80 OFFSET adj.	
2E 80 80	
2F 80 80	
30 Fixed data-1	
31 (Initialized data)	
32	
33	

	Initial	value	
Address	NTSC	PAL	Remark
34			Fixed data-1
35			(Initialized data)
36			•
37			
38			
39			
3A			
3B			
3C			
3D			
3E			
3F			
40			
41			
42			
43			
44			
45			
46			
47			
48	80	80	PSD sensor gain adj.
49	80	80	1 52 Scrisor gain adj.
44 4A	00	30	Fixed data-1
4B			(Initialized data)
4C			(mittanzed data)
4D			
4E			
4F			
50			
51			
52			
53			Fixed data-2
54			Fixed data-2
55			
			Fixed data-1
56			
57			Fixed data-2
58			Einad data 1
59			Fixed data-1
5A			(Initialized data)
5B			
5C			Eined data 2
5D			Fixed data-2
5E			Fixed data-1
5F			(Initialized data)
60			
61	F	F	
62	D5	D5	Color reproduction adj. (2)
63	EC	EC	(ND filter ON)
64	20	20	
65	20	20	
66			Fixed data-1
67			
68			
69			Fixed data-2
6A			Fixed data-1
6B			(Initialized data)

	Initial	value	
Address	NTSC	PAL	Remark
6C			Fixed data-1
6D			(Initialized data)
6E			(
6F			
70			
71			
72			
73			
74			
75			
76			
77			
78			
79			
7A			
7B			
7C			
7D			
7E			
7E 7F			
80			
81			
82			Fixed data-2
83			rixed data-2
84			Fixed data-1
85			(Initialized data)
86			(ilitialized data)
87			
88			
89 8A			Fixed data-2
8B 8C			Fixed data-1
			Fixed data-2
8D 8E			Fixed data-1
8E 8F			
			(Initialized data)
90			
91			
92			
93			
94			
95			
96			
97			
98			
99			
9A			
9B			
9C to FF			

Table. 5-1-2

#### 1-3. CAMERA SYSTEM ADJUSTMENTS

Before perform the camera system adjustments, check that the specified value of "Composite Output Y Level Adjustment" and "Composite Output Chroma Level Adjustment" of "Base band Block Adjustment" of "VIDEO SYSTEM ADJUSTMENT" are satisfied.

#### 1. 27 MHz Origin Oscillation Adjustment (VC-208 board)

Set the frequency of the clock for synchronization.

If deviated, the synchronization will be disrupted and the color will become inconsistent.

Subject	Not required
Measurement Point	Pin ② of IC204 or Pin ② of IC207 or Pin ⑦ of IC300
Measuring Instrument	Frequency counter
Adjustment Page	F
Adjustment Address	1C
Specified Value	f=13500000 ± 68Hz

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: F, address: 1C, change the data and set the clock frequency(f) to the specified value.
- 3) Press the PAUSE button of the adjustment remote commander.
- 4) Select page: 0, address: 01, and set data: 00.

#### 2. IRIS & ND HALL Auto Adjustment

For detecting the position of the lens iris and ND filter, adjust the hall AMP gain and offset.

Subject	Not required
Measurement Point	DDS display data of LCD or TV monitor (Note 5)
Measuring Instrument	
Adjustment Page	F
Adjustment Address	1E, 1F, 48, 49, 4C, 70
Specified Value	IRIS display data: 88 to 8A during IRIS OPEN (Note 1) 14 to 18 during IRIS CLOSE (Note 2) ND display data: 14 to 18 during ND filter OFF (Note 3) 88 to 8A during ND filter ON (Note 4)

**Note 1:** Select page: 6, address: 01, set data: 01, and press the PAUSE button of the adjustment remote commander.

**Note 2:** Select page: 6, address: 01, set data: 03, and press the PAUSE button of the adjustment remote commander.

**Note 3:** Select page: 6, address: 1C, and set data: 02.

Note 4: Select page: 6, address: 1C, and set data: 03.

Note 5: DDS display data of LCD or TV monitor.

CA 00 0000
CA 00 YY XX

IRIS display data
ND display data

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 6, address: 94, and set data: 89.
- 3) Select page: 6, address: 95, and set data: 16.
- 4) Select page: 6, address: 01, set data: 6D, and press the PAUSE button of the adjustment remote commander. (The HALL adjustment is performed and the adjustment data is stored in page: F, address: 1E, 1F, 48, 49, 4C and 70.)
- 5) Select page: 6, address: 02, and check that the data is "01".

#### **Processing after Completing Adjustments**

- 1) Select page: 6, address: 94, and set data: 00.
- 2) Select page: 6, address: 95, and set data: 00.
- 3) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: 0, address: 01, and set data: 00.


#### Checking method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 11, set data: 02, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 6, address: 04, and set data: 03.
- Select page: 6, address: 01, set data: 01, and press the PAUSE button.
- 5) Check the IRIS display data lies within the "88" to "8A" range.
- Select page: 6, address: 01, set data: 03, and press the PAUSE button.
- 7) Check the IRIS display data lies within the "14" to "18" range.


#### **Processing after Completing Check**

- Select page: D, address: 11, and set data: 00, and press the PAUSE button.
- 2) Select page: 0, address: 01, and set data: 00.
- Select page: 6, address: 01, and set data: 00, and press the PAUSE button.
- 4) Select page: 6, address: 1C, and set data: 00.

#### VC-208 board (SIDE A)

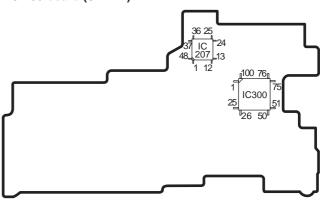

#### VC-208 board (SIDE B)

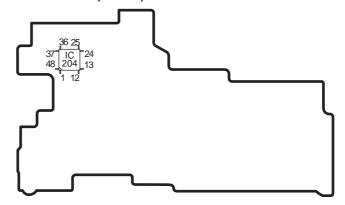

#### 3. Offset Adjustment

Adjust so that the AGC OUT potential lies within the specified value of the digital clamp.

Subject	Not required
Measurement Point	DDS display data of LCD or TV monitor (Note 1)
Measuring Instrument	
Adjustment Page	Е
Adjustment Address	2D, 2E, 2F
Specified Value	50 to B0

**Note 1:** DDS display data of LCD or TV monitor.

CA 00 0000 CA 00 00XX

Object data

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 11, set data: 02, and press the PAUSE button of the adjustment remote commander.
- Select page: 6, address: 01, set data: 07 and press the PAUSE button.
- 4) Select page: 6, address: 04, and set data: 1F.
- Check the DDS display data (Rch OPB) satisfies the specified value. If not perform the Rch offset adjustment.
- 6) Select page: 6, address: 04, and set data: 20.
- 7) Check the DDS display data (Gch OPB) satisfies the specified value. If not perform the Gch offset adjustment.
- 8) Select page: 6, address: 04, and set data: 21.
- 9) Check the DDS display data (Bch OPB) satisfies the specified value. If not perform the Bch offset adjustment.
- Select page: 6, address: 01, and set data: 05 and press the PAUSE button.
- 11) Select page: 6, address: 04, and set data: 1F.
- 12) Check the DDS display data (Rch OPB) satisfies the specified value. If not perform the Rch offset adjustment.
- 13) Select page: 6, address: 04, and set data: 20.
- 14) Check the DDS display data (Gch OPB) satisfies the specified value. If not perform the Gch offset adjustment.
- 15) Select page: 6, address: 04, and set data: 21.
- 16) Check the DDS display data (Bch OPB) satisfies the specified value. If not perform the Gch offset adjustment.

#### Rch offset adjustment

- Select page: E, address: 0C, set data: 02, and press the PAUSE button.
- Select page: E, address: 2D, change the data and adjust the DDS display data to the specified value.

#### Gch offset adjustment

- 1) Select page: E, address: 0C, set data: 02, and press the PAUSE button
- Select page: E, address: 2E, change the data and adjust the DDS display data to the specified value.

#### Bch offset adjustment

- 1) Select page: E, address: 0C, set data: 02, and press the PAUSE button.
- Select page: E, address: 2F, change the data and adjust the DDS display data to the specified value.

- Select page: D, address: 11, set data: 00, and press the PAUSE button.
- Select page: E, address: 0C, set data: 00, and press the PAUSE button.
- 3) Select page: 0, address: 01, and set data: 00.
- Select page: 6, address: 01, and set data: 00, and press the PAUSE button.
- 5) Select page: 6, address: 04, and set data: 00.

#### 4. Flange Back Adjustment

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

#### 4-1. Flange Back Adjustment(1)

Subject	Flange back adjustment chart (2.0 m from the front of the lens) (Luminance: 230 ± 30 lux)	
Measurement Point	Check operation on TV monitor	
Measuring Instrument		
Adjustment Page	F	
Adjustment Address	24 to 29, 36 to 3D	

#### Adjusting method:

- Check that at both the zoom lens TELE end and WIDE end, the center of the chart for the flange back adjustment and center of the exposure screen coincide.
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Check that the data of page: F, address: 24 to 29, 36 to 3D is the initial value (See table below).

Address	Data		Address	Da	ita
Address	NTSC	PAL	Address	NTSC	PAL
24	8E	2C	37	E6	E6
25	1A	17	38	15	23
26	80	78	39	45	00
27	24	1D	3A	3F	19
28	65	FB	3B	3F	00
29	11	12	3C	16	27
36	D6	D6	3D	A8	A8

- 4) Select page: 6, address: 02, and check that the data is "00".
- Select page: 6, address: 01, set data: 13, and press the PAUSE button of the adjustment remote commander.
- Select page: 6, address: 01, set data: 15, and press the PAUSE button of the adjustment remote commander.
   (The adjustment data will be automatically input to page: F, addresses: 24 to 29, 36 to 3D.)
- 7) Select page: 6, address: 02, and check that the data is "01".

#### **Processing after Completing Adjustments**

- Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Perform "Flange Adjustment (2)".

#### 4-2. Flange Back Adjustment (2)

Perform this adjustment after performing "Flange Back Adjustment (1)".

Subject	Subject more than 500m away (Subjects with clear contrast such as buildings, etc.)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	24 to 29, 36 to 3D

#### Adjusting method:

- Set the zoom lens to the TELE end and expose a subject that is more than 500 m away (subject with clear contrast such as building, etc.). (Nearby subjects less than 500 m away should not be in the screen.)
- 2) Select page: 0, address: 01, and set data: 01.
- Select page: 6, address: 02, and check that the data is "00".
- 4) Select page: 6, address: 01, set data: 13, and press the PAUSE button of the adjustment remote commander.
- Place a ND filter on the lens so that the optimum image is obtain.
- Select page: 6, address: 01, set data: 29, and press the PAUSE button of the adjustment remote commander.
   (The adjustment data will be automatically input to page: F, addresses: 24 to 29, 36 to 3D.)
- 7) Select page: 6, address: 02, and check that the data is "01".

- 1) Select page: 0, address: 01, and set data: 00.
- 2) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 3) Perform "Flange Back Check".

#### 5. Flange Back Check

Subject	Siemens star	
	(2.0 m from the front of the lens)	
	(Luminance: 300 ± 50 lux)	
Measurement Point	Check operation on TV monitor	
Measuring Instrument		
Specified Value	Focused at the TELE end and WIDE	
	end.	

#### **Switch setting:**

1) DIGITAL ZOOM (Menu display) ......OFF

#### Checking method:

- 1) Place the Siemens star 2.0m from the front of the lens.
- 3) Shoot the Siemens star with the zoom TELE end.
- 4) Turn on the auto focus.
- 5) Check that the lens is focused (Note).
- 6) Turn off the auto focus.
- While observe the TV monitor, change the zoom to the WIDE end and check that the lens is focused.

**Note:** When the auto focus is ON, the lens can be checked if it is focused or not by observing the data on the page 1 of the adjustment remote commander.

- 1) Select page: 6, address: 04, and set data: 0F.
- 2) Page 1 shows the state of the focus.

1:00: XX Odd: Focused Even: Unfocused

#### **Processing after Completing Adjustments**

1) Select page: 6, address: 04, and set data: 00.

#### 6. Picture Frame Setting


Subject	Color bar chart standard picture frame (95cm from the front of the lens)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor
Specified Value	A=B, C=D, t=0 ± 0.1msec

#### **Setting method:**


- Adjust the zoom and the camera direction, and set to the specified position.
- Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using "Color bar chart standard picture frame".

#### Check on the oscilloscope

#### 1. Horizontal period

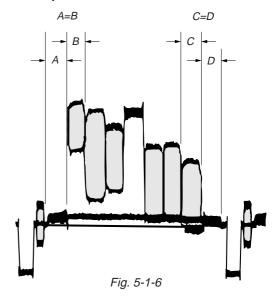

### 2. Vertical period

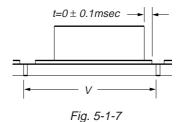

Color on the TV monitor

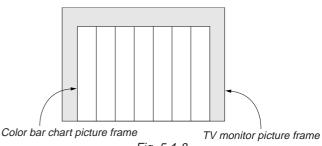


Fig. 5-1-8

#### 7. Pre White Balance Data Input

At 3200k, input the pre white balance standard data.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	Е
Adjustment Address	2A, 2B

#### Switch setting:

1)	ND filter	0	ıΤ	7	F

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 6, address: 1C, and set data: 02.
- 3) Select page: F, address: 20, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: F, address: 21, set data: 28, and press the PAUSE button
- Select page: F, address: 22, set data: 00, and press the PAUSE button.
- Select page: F, address: 23, set data: 50, and press the PAUSE button.
- Select page: 6, address: 01, set data: 7F, and press the PAUSE button
- 8) Select page: 6, address: 01, and set data: 7D, press the PAUSE button.
  - (When the standard data is take in, the data will be automatically input to page: E, address: 2A and 2B.)
- 9) Select page: 6, address: 02, and check that the data is "01".

#### **Processing after Completing Adjustments**

- 1) Select page: 6, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 6, address: 1C, and set data: 00.
- 3) Select page: 0, address: 01, and set data: 00.
- 4) Perform "Auto White Balance Standard Data Input".

#### 8. Auto White Balance Standard Data Input

At 3200K, input the white balance standard data.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	20 to 23

Note 1: Perform "Pre White Balance Data Input" before this adjustment.

**Note 2:** Check that the data of page: 6, address: 02 is 00. If not, turn the power of the unit OFF/ON.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 6, address: 01, and set data: 11, and press the PAUSE button of the adjustment remote commander.
- Select page: 6, address: 01, and set data: 0B, and press the PAUSE button.
  - (When the standard data is take in, the data will be automatically input to page: F, address: 20 to 23.)
- 4) Select page: 6, address: 02, and check that the data is "01".

- Select page: 6, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.

#### 9. MAX GAIN Adjustment

Setting the minimum illumination.

If it is not consistent, the image level required for taking subjects in low illuminance will not be produced (dark).

Subject	Clear chart (Color bar standard picture frame) (95cm from the front of the lens)
Adjustment Page	F
Adjustment Address	2C

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 6, address: 96, and set data: 00.
- 3) Select page: 6, address: 97, and set data: 2C.
- Select page: 6, address: 01, set data: 6F and press the PAUSE button of the adjustment remote commander.
   (When the adjustment data is take in, the data will be automatically input to page: F, address: 2C.)
- 5) Select page: 6, address: 02, and check that the data is changed to "01".

#### **Processing after Completing Adjustments**

- 1) Select page: 6, address: 96, and set data: 00.
- 2) Select page: 6, address: 97, and set data: 00.
- Select page: 6, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: 0, address: 01, and set data: 00.

#### 10. LV Standard Data Input

Adjust the normal coefficient of the light value.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	3E, 3F

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 6, address: 01, and set data: 0D, and press the PAUSE button of the adjustment remote commander. (When the adjustment data is take in, the data will be automatically input to page: F, address: 3E and 3F.)

- 1) Select page: 6, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.

#### 11. White Balance ND Filter Compensation Adjustment

Compensate the white balance deviation when ND filter is ON.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	4A, 4B

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 6, address: 1C, and set data: 03.
- 3) Wait for 2 seconds.
- Select page: 6, address: 01, and set data: 11, and press the PAUSE button of the adjustment remote commander.
- Select page: 6, address: 01, and set data: 09, and press the PAUSE button.
  - (When the adjustment data is take in, the data will be automatically input to page: F, address: 4A and 4B.)
- 6) Select page: 6, address: 02, and check that the data is changed to "01".

#### **Processing after Completing Adjustments**

- 1) Select page: 6, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 6, address: 1C, and set data: 00.
- 3) Select page: 0, address: 01, and set data: 00.

#### 12. Auto White Balance Adjustment

Adjust to the proper auto white balance output data.

If it is not correct, auto white balance and color reproducibility will be poor.

Subject	Clear chart (Color bar standard picture frame)
Filter	Filter C14 for color temperature correction
Adjustment Page	F
Adjustment Address	34, 35

#### Adjusting method:

- Place the C14 filter for color temperature correction on the lens.
- 2) Select page: 0, address: 01, and set data: 01.
- Select page: 6, address: 01, set data: 83, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: 6, address: 01, set data: 81, and press the PAUSE button.
  - (When the adjustment data is take in, the data will be automatically input to page: F, address: 34 and 35.)
- 5) Select page: 6, address: 02, and check that the data is changed to "01".

- 1) Select page: 6, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.

#### 13. Color Reproduction Adjustment (ND Filter OFF)

When the ND filter is off, adjust the color difference matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	44, 45, 46, 47
Specified Value	All color luminance points should settle within each color reproduction frame.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: F, address: 5E, set data: 1C, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 6, address: 01, set data: 61, and press the PAUSE button of the adjustment remote commander.
- Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
- Change the data of page: F, address: 44, 45, 46 and 47, and settle each color luminance point in each color reproduction frame

**Note:** Be sure to press the PAUSE button of the adjustment remote commander before changing the addresses. If not, the new data will not be written to the memory.

#### **Processing after Completing Adjustments**

- Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: F, address: 5E, set data: 25, and press the PAUSE button
- 3) Select page: 0, address: 01, and set data: 00.

PAL burst position

# 

Fig. 5-1-9

#### 14. Color Reproduction Adjustment (ND Filter ON)

When the ND filter is on, adjust the color difference matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	Е
Adjustment Address	62, 63, 64, 65
Specified Value	All color luminance points should settle within each color reproduction frame.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: F, address: 5E, set data: 1C, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 6, address: 1C, set data: 03.
- 4) Wait for 2 seconds.
- 5) Select page: 6, address: 01, set data: 85, and press the PAUSE button of the adjustment remote commander.
- Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
- 7) Change the data of page: E, address: 62, 63, 64 and 65, and settle each color luminance point in each color reproduction frame.

**Note:** Be sure to press the PAUSE button of the adjustment remote commander before changing the addresses. If not, the new data will not be written to the memory.

- 1) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 6, address: 1C, set data: 00.
- 3) Select page: F, address: 5E, set data: 25, and press the PAUSE button.
- 4) Select page: 0, address: 01, and set data: 00.

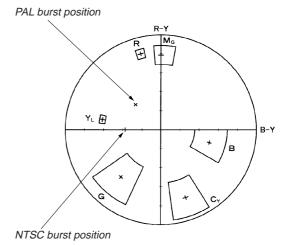


Fig. 5-1-10

#### 15. White Balance Check

Subject	Clear chart	
	(Color bar standard picture frame)	
Filter	Filter C14 for color temperature	
	correction	
	ND filter 1.0 and 0.3	
Measurement Point	Video output terminal	
Measuring Instrument	Vectorscope	
Specified Value	Fig. 5-1-11. A to C	

#### Checking method:

- 1) Check that the lens is not covered with either filter.
- 2) Select page: 6, address: 01, set data: 0F, and press the PAUSE button of the adjustment remote commander.
- 3) Check that the center of the white luminance point is within the circle shown Fig. 5-1-11. A.
- Select page: 6, address: 01, set data: 23, and press the PAUSE button of the adjustment remote commander.
- 5) Place the C14 filter on the lens.
- 6) Check that the center of the white luminance point settles in the circle shown Fig. 5-1-11.B.
- 7) Remove the C14 filter, and place the ND filter  $1.3 \ (1.0 + 0.3)$  on the lens.
- 8) Check that the white luminance point stopped moving, and then remove the ND filter 1.3.
- 9) Check that the center of the white luminance point settles within the circle shown Fig. 5-1-11.C.

#### **Processing after Completing Adjustments**

 Select page: 6, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.

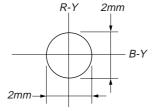


Fig. 5-1-11 (A)

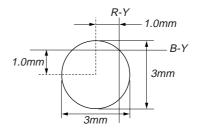


Fig. 5-1-11 (B)

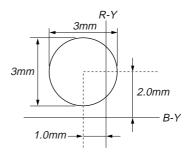



Fig. 5-1-11 (C)

#### 16. PSD Sensor Gain Adjustment

Adjust the gain of the PSD sensor for steady shot operation.

#### 16-1. PSD Sensor Gain Adjustment (1)

Subject	Pattern A
	(1.5m from the front of the lens)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope (V period)
Adjustment Page	Е
Adjustment Address	48

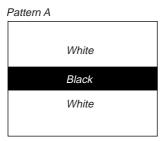

A4 size (297mm × 210mm)

Fig.5-1-12.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: E, address: 48, set data: 80, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 6, address: 01, set data: 8F, and press the PAUSE button of the adjustment remote commander.
- 4) Expose pattern A with the zoom TELE end.
- 5) Adjust the focus.
- Measure the vertical position SV1 (msec) of the falling edge of the waveform. (Oscilloscope is V period)
- 7) Select page: 6, address: 01, set data: 91, and press the PAUSE button.
- 8) Measure the vertical position SV2 (msec) of the falling edge of the waveform. (Oscilloscope is V period)
- Obtain D48' using the following equation (decimal calculation).
   NTSC model

$$D_{48}' = 128 \times (2.88/(SV2 – SV1))$$

PAL model

 $D_{48}' = 128 \times (3.40/(SV2-SV1))$ 

- 10) Convert  $D_{48}$ ' to hexadecimal notation, and obtain  $D_{48}$ . (Round off to one decimal place)
  - (Refer to Table 5-4-1. "Hexadecimal notation-Decimal notation conversion table" of "5-4. Service Mode".)
- 11) Select page: E, address: 48, set data: D48, and press the PAUSE button of the adjustment remote commander.

- 1) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Check that the steady shot operation is performed normally.

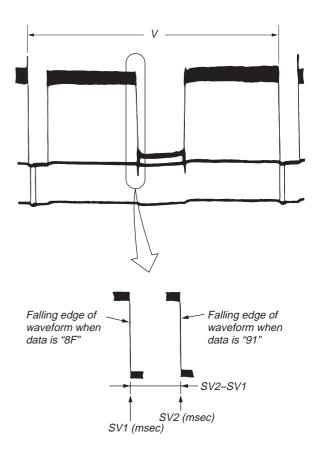


Fig. 5-1-13.

#### 16-2. PSD Sensor Gain Adjustment (2)

Subject	Pattern B	
	(1.5m from the front of the lens)	
Measurement Point	Video output terminal	
Measuring Instrument	Oscilloscope	
	(H period)	
Adjustment Page	Е	
Adjustment Address	49	

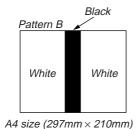


Fig.5-1-14.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: E, address: 49, set data: 80, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 6, address: 01, set data: 8F, and press the PAUSE button of the adjustment remote commander.
- 4) Expose pattern B with the zoom TELE end.
- 5) Adjust the focus.
- Measure the horizontal position SH1 (μ sec) of the falling edge of the waveform. (Oscilloscope is H period)
- Select page: 6, address: 01, set data: 91, and press the PAUSE button.
- 8) Measure the horizontal position SH2 ( $\mu$  sec) of the falling edge of the waveform. (Oscilloscope is H period)
- Obtain D49' using the following equation (decimal calculation).
   D<sub>49</sub>' = 128 × (7.4/(SH2–SH1))
- 10) Convert D<sub>49</sub>' to hexadecimal notation, and obtain D<sub>49</sub>. (Round off to one decimal place) (Refer to Table 5-4-1. "Hexadecimal notation-Decimal notation conversion table" of "5-4. Service Mode".)
- 11) Select page: E, address: 49, set data: D<sub>49</sub>, and press the PAUSE button of the adjustment remote commander.

- 1) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Check that the steady shot operation is performed normally.

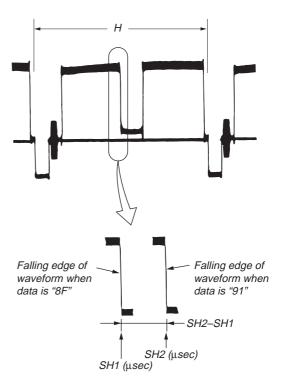


Fig. 5-1-15.

#### 17. Angular Velocity Sensor Sensitivity Adjustment

- This adjustment is performed only when replacing the angular velocity sensor.
  - Although this adjustment need not be performed when the circuit is damaged, etc., check the operations.
- Note down the sensitivity displayed on the angular velocity sensor
  of the repair parts. At this time, note down also to which board it
  was attached to.

Be sure to check because if attached incorrectly, the screen will vibrate up and down or left and right during hand-shake correction operations.

#### **Precautions on the Parts Replacement**

There are two types of repair parts.

Type A ENC03JA Type B ENC03JB

Replace the broken sensor with a same type sensor. If replace with other type parts, the image will vibrate up and down or left and right during hand-shake correction operations. After replacing, readjust according to the adjusting method after replacement.

#### **Precautions on Angular Velocity Sensor**

The sensor incorporates a precision oscillator. Handle it with care as if it dropped, the balance of the oscillator will be disrupted and operations will not be performed properly.

Adjustment Page	F
Adjustment Address	41, 42

**Note:** The sensor sensitivity of SE450 and SE451 of the SE-75 board is written only on the repair parts.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Read the sensor sensitivity written on SE450 of the SE-75 board, and take this as S<sub>450</sub>.
- Read the sensor sensitivity written on SE451 of the SE-75 board, and take this as S<sub>451</sub>.
- Calculate D<sub>41</sub>' and D<sub>42</sub>' using the following equation (decimal calculation).

 $D_{41}' = 80 \times (0.60/S_{451})$ 

 $D_{42}' = 80 \times (0.60/S_{450})$ 

- 5) Convert  $D_{41}$ ' and  $D_{42}$ ' into hexadecimal digits, to obtain  $D_{41}$  and  $D_{42}$ . (Round off decimal points)
- Select page: F, address: 41, set data: D<sub>41</sub>, and press the PAUSE button of the adjustment remote commander.
- Select page: F, address: 42, set data: D<sub>42</sub>, and press the PAUSE button of the adjustment remote commander.

- 1) Select page: 0, address: 01, and set data: 00.
- Check that the steady shot operations have been performed normally.

## 1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT

- **Note 1:** The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.
- **Note 2:** When replacing the LCD unit, be careful to prevent damages caused by static electricity.
- **Note 3:** Set the VF BRIGHT (Menu display) to the center.

#### [Adjusting connector]

Most of the measuring points for adjusting the viewfinder system are concentrated in CN2904 of the VI-151 board.

Connect the Measuring Instruments via the CPC-8 jig (J-6082-388-A)

The following table shows the Pin No. and signal name of CN2904.

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	2	EVF BL +
3	EVF BL –	4	EVF VG
5	EVF VCO	6	GND
7	PD VG	8	PD VCO
9	H START	10	XHD/PSIG
11	PANEL COM	12	TMS
13	TCK	14	TDI
15	TDO	16	GND
17	SWP	18	RF IN/LANC JACK IN
19	GND	20	RF MON

Table 5-1-3.

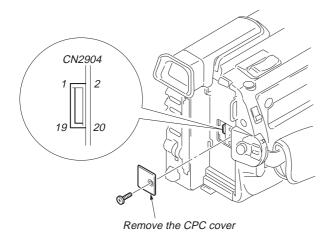


Fig. 5-1-16

#### 1. VCO Adjustment (VF-121 board)

Set the VCO free-run frequency. If deviated, the EVF screen will be blurred.

Mode	VTR stop
Signal	Arbitrary
Measurement Point	Pin ⑤ of CN2904 (EVF VCO) on VI-151 board
Measuring Instrument	Oscilloscope (DC range)
Adjustment Page	D
Adjustment Address	75
Specified Value	$A = 1.7 \pm 0.2V$

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Check the GND level of the oscilloscope.
- 3) Select page: D, address: 75, change the data and set the VCO output voltage (A) to the specified value.
- 4) Press the PAUSE button of the adjustment remote commander.
- 5) Select page: 0, address: 01, and set data: 00.

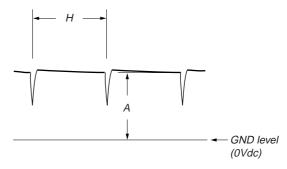


Fig. 5-1-17

#### 2. Bright Adjustment (VF-121 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin 4 of CN2904 (EVF VG) on
	VI-151 board
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	7A
Specified Value	$A = 7.25 \pm 0.05V$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 02, and press the PAUSE button of the adjustment remote commander.
- Select page: D, address: 7A, change the data and set the voltage

   (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.

   (The data of address: 7A should be "54" to "D7".)
- 5) Press the PAUSE button of the adjustment remote commander.
- 6) Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 7) Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

#### 3. Contrast Adjustment (VF-121 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin 4 of CN2904 (EVF VG) on
	VI-151 board
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	7B
Specified Value	$A = 1.81 \pm 0.05V$

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 02, and press the PAUSE button of the adjustment remote commander.
- Select page: D, address: 7B, change the data and set the voltage

   (A) between the 100 IRE and 0 IRE (pedestal) to the specified value.
- 5) Press the PAUSE button of the adjustment remote commander.
- 6) Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.


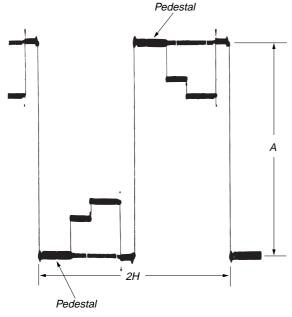


Fig. 5-1-18

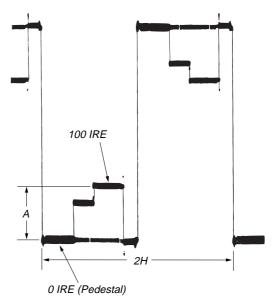

## 4. Backlight Consumption Current Adjustment (VF-121 board)

Set the backlight luminance and color temperature. If deviated, the image may become dark or bright.

	y occome dant or origin.
Mode	Camera
Subject	Arbitrary
Measurement Point	+ Probe: Pin ② of CN2904 (EVF BL +) on VI-151 board - Probe: Pin ③ of CN2904 (EVF BL -) on VI-151 board
Measuring Instrument	Digital voltmeter
Adjustment Page	D
Adjustment Address	76
Specified Value	$A = 17.0 \pm 1.0 \text{mVdc}$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 76, change the data and set the voltage difference (A) between Pin ② of CN2904 (EVF BL +) and Pin ③ of CN2904 (EVF BL -) to the specified value.
- 3) Press the PAUSE button of the adjustment remote commander.
- 4) Select page: 0, address: 01, and set data: 00.

#### 5. White Balance Adjustment (VF-121 board)

Correct the white balance.

If deviated, the reproduction of the EVF screen may degenerate.

Mode	Camera
Subject	Arbitrary
Measurement Point	Check on EVF screen
Measuring Instrument	
Adjustment Page	D
Adjustment Address	71, 72
Specified Value	The EVF screen should not be
	colored.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 0B, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: D, address: 71 and 72, set the data to the initial value.

**Note:** Press the PAUSE button of the adjustment remote commander each time to set the data.

Address	71	72
Data	80	80

 Check that the EVF screen is not colored. If colored, change the data of page: D, address: 71 and 72 so that the EVF screen is not colored.

**Note:** To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjustment remote commander each time to set the data.

- 6) Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 7) Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

#### 1-5. LCD SYSTEM ADJUSTMENT

- **Note 1:** The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.
- **Note 2:** When replacing the LCD unit, be careful to prevent damages caused by static electricity.
- Note 3: Set the LCD BRIGHT to the center. Set the LCD COLOR (Menu display) to the center.

#### [Adjusting connector]

Most of the measuring points for adjusting the LCD system are concentrated in CN2904 of the VI-151 board.

Connect the Measuring Instruments via the CPC-8 jig (J-6082-388-A).

The following table shows the Pin No. and signal name of CN2904.

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	2	EVF BL +
3	EVF BL –	4	EVF VG
5	EVF VCO	6	GND
7	PD VG	8	PD VCO
9	H START	10	XHD/PSIG
11	PANEL COM	12	TMS
13	TCK	14	TDI
15	TDO	16	GND
17	SWP	18	RF IN/LANC JACK IN
19	GND	20	RF MON

Table 5-1-4.

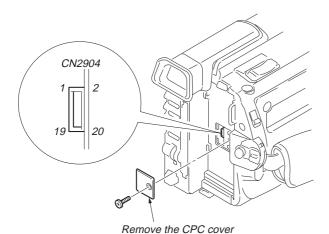


Fig. 5-1-20

#### 1. VCO Adjustment (PD-101 board)

Set the VCO free-run frequency. If deviated, the LCD screen will be blurred.

Mode	VTR stop
Signal	arbitrary
Measurement Point	Pin <b>(9)</b> of CN2904 (H START) on VI-151 board
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	84
Specified Value	$f = 15734 \pm 30$ Hz (NTSC) $f = 15625 \pm 30$ Hz (PAL)

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 03, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: D, address: 84, change the data and set the frequency (f) to the specified value.
- 5) Press the PAUSE button of the adjustment remote commander.
- 6) Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 7) Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

#### 2. D range Adjustment (PD-101 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑦ of CN2904 (PD VG) on
	VI-151 board
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	82
Specified Value	$A = 3.56 \pm 0.05V$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 02, and press the PAUSE button of the adjustment remote commander.
- Select page: D, address: 82, change the data and set the voltage

   (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
- 5) Press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

#### 3. Bright Adjustment (PD-101 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑦ of CN2904 (PD VG) on
	VI-151 board
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	8A
Specified Value	$A = 1.94 \pm 0.05V$

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 22, set data: 02, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: 2, address: 0E, and set data: 40.
- 5) Select page: D, address: 8A, change the data and set the voltage (A) between the pedestal and GAMMA1 limiter level to the specified value. (The data of address: 8A should be "1E" to "A0".)
- 6) Press the PAUSE button of the adjustment remote commander.
- 7) Select page: 2, address: 0E, and set data: 00.
- 8) Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 10) Select page: 0, address: 01, and set data: 00.

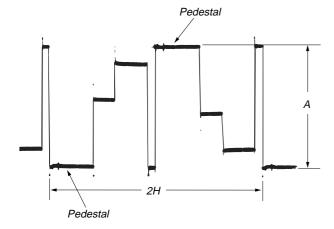


Fig. 5-1-21

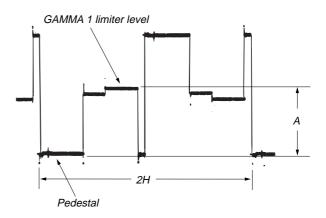


Fig. 5-1-22

#### 4. Contrast Adjustment (PD-101 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑦ of CN2904 (PD VG) on
	VI-151 board
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	8C
Specified Value	$A = 3.04 \pm 0.05V$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 02, and press the PAUSE button of the adjustment remote commander.
- Select page: D, address: 8C, change the data and set the voltage (A) between the 0 IRE (pedestal) and 100 IRE to the specified value.
- 5) Press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

#### 5. V-COM Level Adjustment (PD-101 board)

Set the common electrode drive signal level of LCD to the specified value.

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ① of CN2904 (PANEL COM) on
	VI-151 board
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	83
Specified Value	$A = 6.85 \pm 0.05V$

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 02, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: D, address: 83, change the data and set the PANEL COM signal level (A) to the specified value.
- 5) Press the PAUSE button of the adjustment remote commander.
- 6) Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

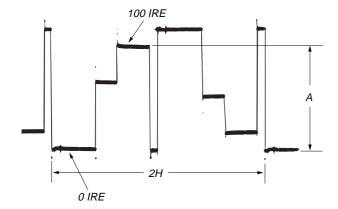


Fig. 5-1-23

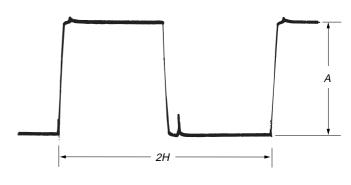


Fig. 5-1-24

#### 6. V-COM Adjustment (PD-101 board)

Set the DC bias of the common electrode drive signal of LCD to the specified value.

If deviated, the LCD display will move, producing flicker and conspicuous vertical lines.

Mode	Camera
Subject	Arbitrary
Measurement Point	Check on LCD display
Measuring Instrument	
Adjustment Page	D
Adjustment Address	85
Specified Value	The brightness difference between the section A and section B is minimum.

**Note1:** Perform "Bright Adjustment" and "Contrast Adjustment" before this adjustment.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 0F, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: 2, address: 0E, and set data: 20.
- 5) Select page: D, address: 85, change the data so that the brightness of the section A and that of the section B is equal.
- 6) Press the PAUSE button of the adjustment remote commander.
- 7) Select page: 2, address: 0E, and set data: 00.
- 8) Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 10) Select page: 0, address: 01, and set data: 00.

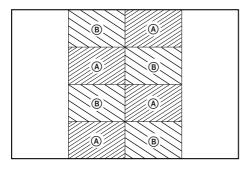


Fig. 5-1-25

#### 7. White Balance Adjustment (PD-101 board)

Correct the white balance.

If deviated, the LCD screen color cannot be reproduced.

	•
Mode	Camera
Subject	Arbitrary
Measurement Point	Check on LCD display
Measuring Instrument	
Adjustment Page	D
Adjustment Address	80, 81
Specified Value	The LCD screen should not be
	colored.

**Note 1:** Check the white balance only when replacing the following parts. If necessary, adjust them.

- 1. LCD panel
- 2. Light induction plate
- 3. IC5502

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 22, set data: 0B, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: D, address: 80 and 81, set the data to the initial value.

**Note:** Press the PAUSE button of the adjustment remote commander each time to set the data.

Address	80	81
Data	A0	70

5) Check that the LCD screen is not colored. If colored, change the data of page: D, address: 80 and 81 so that the LCD screen is not colored.

**Note:** To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjustment remote commander each time to set the data.

- Select page: 3, address: 22, set data: 00, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

## 5-2. MECHANISM SECTION ADJUSTMENT

#### On the mechanism section adjustment

For details of mechanism section adjustments, checks, and replacement of mechanism parts, refer to the separate volume "DV MECHANICAL ADJUSTMENT MANUAL IV [C Mechanism]".

## 2-1. HOW TO ENTER RECORD MODE WITHOUT CASSETTE

- 1) Connect the adjustment remote commander to the LANC jack.
- Turn the HOLD switch of the adjustment remote commander to the ON position.
- 3) Close the cassette compartment without the cassette.
- Select page: 3, address: 01, set data: 0C, and press the PAUSE button of the adjustment remote commander.
   (The mechanism enters the record mode automatically.)
- Note: The function buttons become inoperable.

  5) To quit the record mode, select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander. (Whenever you want to quit the record mode, be

## 2-2. HOW TO ENTER PLAYBACK MODE WITHOUT CASSETTE

sure to quit following this procedure.)

- 1) Connect the adjustment remote commander to the LANC jack.
- Turn the HOLD switch of the adjustment remote commander to the ON position.
- 3) Close the cassette compartment without the cassette.
- 4) Select page: 3, address: 01, set data: 0B, and press the PAUSE button of the adjustment remote commander.
  - (The mechanism enters the record mode automatically.) **Note:** The function buttons become inoperable.
- 5) To quit the playback mode, select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander. (Whenever you want to quit the playback mode, be sure to quit following this procedure.)

#### 2-3. TAPE PATH ADJUSTMENT

#### 1. Preparation for Adjustment

- Clean the tape running side (tape guide, drum, capstan shaft, pinch roller, etc.).
- 2) Connect the adjustment remote commander to the LANC jack.
- 3) Turn the HOLD switch of the adjustment remote commander to the ON position.
- Connect an oscilloscope to VI-151 board CN2904 via the CPC-8 jig (J-6082-388-A).

Channel 1: VI-151 board, CN2904 Pin @ (Note)

External trigger: VI-151 board, CN2904 Pin 1

**Note:** Connect a 75  $\Omega$  resistor between pins 20 of CN2904 and 19 (GND).

75  $\Omega$  resistor (Parts code: 1-247-804-11)

- 5) Playback the alignment tape for tracking. (XH2-1)
- 6) Select page: 3, address: 33, and set data: 08.
- 7) Select page: 3, address: 26, and set data: 31.
- Check that the oscilloscope RF waveform is flat at the entrance and exit.

If not flat, adjust according to the separate volume "DV MECHANICAL ADJUSTMENT MANUAL IV C Mechanism".

#### CN2904 of VI-151 board

Pin No.	Signal Name	Pin No.	Signal Name
1	LACN SIG	2	EVF BL+
3	EVF BL-	4	EVF VG
5	EVF VCO	6	GND
7	PD VG	8	PD VCO
9	H START	10	XHD/PSIG
11	PANEL COM	12	TMS
13	TCK	14	TDI
15	TDO	16	GND
17	SWP	18	RF IN/LANC JACK IN
19	GND	20	RF MON

#### 2. Procedure after operations

- Connect the adjustment remote commander to the LANC jack and set the HOLD switch to the ON position.
- 2) Select page: 3, address: 26, and set data: 00.
- 3) Select page: 3, address: 33, and set data: 00.

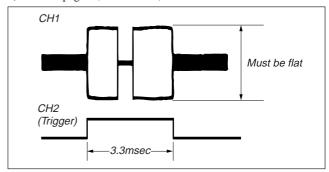


Fig. 5-2-1

#### 5-3. VIDEO SECTION ADJUSTMENTS

NTSC model: DCR-TRV900

PAL model: DCR-TRV890E/TRV900E

#### 3-1. PREPARATIONS BEFORE ADJUSTMENTS

Use the following measuring instruments for video section adjustments.

#### 3-1-1. Equipment Required

- 1) TV monitor
- 2) Oscilloscope (dual-phenomenon, band above 30 MHz with delay mode) (Unless specified otherwise, use a 10:1 probe.)
- 3) Frequency counter
- 4) Pattern generator with video output terminal.
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuator
- 10) Regulated power supply
- 11) Alignment tapes
  - Tracking standard (XH2-1)

Parts code: 8-967-997-01

• SW/OL standard (XH2-3)

Parts code: 8-967-997-11

• Audio operation check for NTSC (XH5-3)

Parts code: 8-967-997-51

• System operation check for NTSC (XH5-5)

Parts code: 8-967-997-61

• BIST check for NTSC (XH5-6)

Parts code: 8-967-997-71

• Audio operation check for PAL (XH5-3P)

Parts code: 8-967-997-55

• System operation check for PAL (XH5-5P)

Parts code: 8-967-997-66

• BIST check for PAL (XH5-6P)

Parts code: 8-967-997-76

- 12) Adjustment remote commander (J-6082-053-B)
- 13) CPC-8 jig (J-6082-388-A)
- 14) IR receiver jig (J-6082-383-A)
- 15) Extension cable (60P, 0.5 mm)

For extension between the VC-208 board (CN761) and the CK-80 board (CN7208) (J-6082-431-A)

16) Extension cable (100P, 0.5 mm)

For extension between the VC-208 board (CN900) and the VI-151 board (CN2901) (J-6082-432-A)

17) Extension cable (39P, 0.3 mm)

For extension between the JK-163 board (CN7102) and the VI-151 board (CN2903) (J-6082-433-A)

#### 3-1-2. Precautions on Adjusting

- The adjustments of this unit are performed in the VTR mode or camera mode.
  - To set to the VTR mode, set the power switch to "VTR" (or "PLAYER") or set the "Forced VTR Power ON mode" using the adjustment remote commander (Note 1).
  - To set to the Camera mode, set the power switch to "CAMERA" or set the "Forced Camera Power ON mode" using the adjustment remote commander (Note 2).
  - After completing adjustments, be sure to exit the "Forced VTR Power ON Mode" or "Forced Camera Power ON Mode". (Note 3)
- 2) The front panel block (MA-333 board, microphone unit, focus ring, focus switch) need not be connected except during "Battery End Adjustment", "IR Transmitter Adjustments" and "Audio adjustments". To remove, disconnect the following connectors.
  - 1. MA-333 board CN7304 (26P, 0.5mm)
- 3) The viewfinder (VF-121 board, LB-55 board) and upper cabinet (LCD window, ED-48 board) are need be connected except during "Battery End Adjustment". To remove them, disconnect the following connectors.
  - 1. VI-151 board CN2905 (20P, 0.5mm)
  - 2. CK-80 board CN7207 (24P, 0.5mm)
  - 3. CK-80 board CN7203 (5P, 0.5mm)
- 4) Cabinet (R) (Camera function switch (CK-80 board), LCD block, memory card slot) need not be connected except during "Battery End Adjustment". But removing the cabinet (R) (removing the VI-151 board CN2906) means removing the lithium 3V power supply (BT7200), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and the data on the history use (data of page: 2, address: A2 to AA). (Refer to "SELF-DIAGNOSIS FUNCTION" for the self-diagnosis data, and to "5-4.Service Mode" for the data on the history use.)

To remove the cabinet (R) and DC IN jack, disconnect the following connectors.

- 1. VI-151 board CN2906 (60P, 0.5mm)
- 2. VC-208 board CN761 (60P, 0.5mm)
- 3. VI-151 board CN3201 (3P, 1.0mm)
- For extension between the memory card slot(CK-80 board CN7208) and VC-208 board (CN761), use the following extension cable.
  - J-6082-431-A (60P, 0.5mm)
- 6) The lens block (CD-202 board) need not be connected except during "Battery End Adjustment". To remove, disconnect the following connectors.
  - 1. VC-208 board CN200 (40P, 0.5mm)
  - 2. VC-208 board CN351 (8P, 0.5mm)
  - 3. VC-208 board CN500 (26P, 0.5mm)
- SE-75 board need not be connected except during "Battery End Adjustment". To remove, disconnect the following connectors. VC-208 board CN400 (6P, 0.5mm)
- When opening the VC-208 board, use the following extension cable between the VC-208 board CN900 and VI-151 board CN2901.

J-6082-432-A (100P, 0.5mm)

9) When opening the cabinet (L), use the following extension cable between the JK-163 board CN7102 and VI-151 board CN2903. J-6082-433-A (39P, 0.3mm)

- **Note 1:** Setting the "Forced VTR Power ON" mode (VTR mode)
  - 1) Select page: 0, address: 01, and set data: 01.
  - 2) Select page: D, address: 10, set data: 02, and press the PAUSE button of the adjustment remote commander.

    The above procedure will enable the VTR power to be turned on with the power switch block (FK-4880) removed.

    After completing adjustments, be sure to exit the "Forced Power ON mode"
- **Note 2:** Setting the "Forced Camera Power ON" mode (Camera mode)
  - 1) Select page: 0, address: 01, and set data: 01.
  - 2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.

    The above procedure will enable the camera power to be turned on with the power switch block (FK-4880) removed.


    After completing adjustments, be sure to exit the "Forced Power ON mode".
- **Note 3:** Setting the "Forced Memory Power ON" mode (Memory mode) 1) Select page: 0, address: 01, and set data: 01.
  - 2) Select page: D, address: 10, set data: 05, and press the PAUSE button of the adjustment remote commander. The above procedure will enable the memory power to be turned on with the power switch block (FK-4880) removed. After completing adjustments, be sure to exit the "Forced Power ON mode"
- Note 4: Exiting the "Forced Power ON" mode
  - 1) Select page: 0, address: 01, and set data: 01.
  - Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
  - 3) Select page: 0, address: 01, and set data: 00.

#### 3-1-3. Adjusting Connectors

Some of the adjusting points of the video section are concentrated at VI-151 board CN2904. Connect the measuring instruments via the CPC-8 jig (J-6082-388-A). The following table lists the pin numbers and signal names of CN2904.

Pin No.	Signal Name	Pin No.	Signal Name
1	LACN SIG	2	EVF BL+
3	EVF BL-	4	EVF VG
5	EVF VCO	6	GND
7	PD VG	8	PD VCO
9	H START	10	XHD/PSIG
11	PANEL COM	12	TMS
13	TCK	14	TDI
15	TDO	16	GND
17	SWP	18	RF IN/LANC JACK IN
19	GND	20	RF MON

Table 5-3-1.

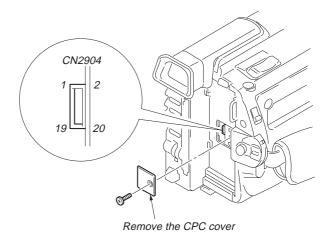

#### 3-1-4. Connecting the Equipment

Connect the measuring instruments as shown in Fig. 5-3-2, and perform the adjustments.

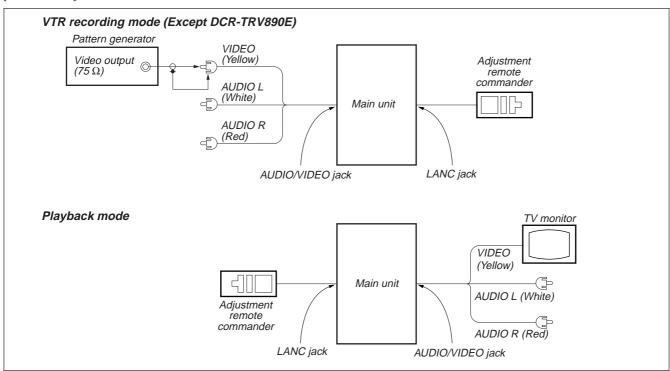


Fig. 5-3-2

## 3-1-5. Checking the Input Signals (Except DCR-TRV890E)

Because the video signal obtained from the pattern generator is used as the adjustment signal for adjusting the VTR section, the video output signal must satisfy the given specifications.

Connect the oscilloscope to the video terminal of the AUDIO/VIDEO jack, and check that the sync signal amplitude of the video signal is approximately  $<\!0.286V\!>[0.30V]$ , the amplitude of the video section is approximately  $<\!0.714\!>[0.70V]$ , the amplitude of the burst signal is approximately  $<\!0.286\!>[0.30V]$  and flat, and that the level ratio of the burst signal to the "red" signal is 0.30:0.60. The video signal used for adjusting the video section is shown in Fig. 5-3-3.

< >: NTSC model
[ ]: PAL model

#### 3-1-6. Alignment Tapes

Use the alignment tapes shown in the following table. Use tapes specified in the signal column of each adjustment.

Name	Use
Tracking standard (XH2-1)	Tape path adjustment
SW/OL standard (XH2-3)	Switching position adjustment
Audio operation check (XH5-3 (NTSC), XH5-3P (PAL))	Audio system adjustment
System operation check (XH5-5 (NTSC), XH5-5P (PAL))	Operation check
BIST check (XH5-6 (NTSC), XH5-6P (PAL))	BIST check

Fig. 5-3-3 shows the 75% color bar signals recorded on the alignment tape for Audio Operation Check.

**Note:** Measure with video terminal (Terminated at 75  $\Omega$ )

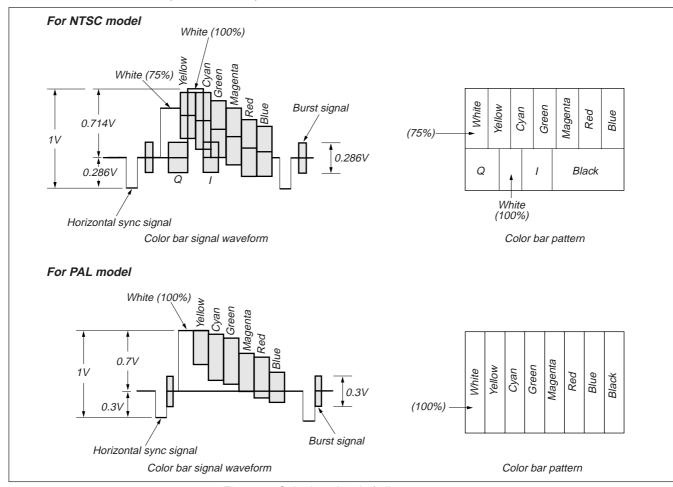


Fig. 5-3-3 Color bar signal of alignment tapes

#### 3-1-7. Input/Output Level and Impedance

Video input/output

Special stereo mini jack

Video signal: 1 Vp-p, 75  $\Omega$  unbalanced,

sync negative

S video input/output

4-pin mini DIN

Luminance signal:  $1 \text{ Vp-p}, 75 \Omega \text{ unbalanced},$ 

sync negative

Chrominance signal: 0.286 Vp-p,  $75 \Omega$  unbalanced (NTSC)

: 0.300 Vp-p, 75  $\Omega$  unbalanced (PAL)

Audio input/output

Special stereo mini jack Input level: 327mV

Input impedance: More than  $47 k\Omega$ 

Output level: 327 mV (at load impedance 47 k $\Omega$ )

Output impedance: Below 2.2 k $\Omega$ 

#### 3-2. INITIALIZATION OF B, C, D PAGE DATA

#### 1. Initializing the C Page Data

**Note:** If the page C data is initialized, the following adjustments must be performed again.

- 1) Modification of C page data
- 2) Servo system, RF system adjustments

Adjusting page	С
Adjusting Address	00 to DF

#### **Initializing Method:**

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 80, set data: 0C, and press the PAUSE button of the adjustment remote commander.
- 3) Check that the data of page: 3, address: 80 is changed to "1C".
- 4) Perform "Modification of C Page Data".

#### 2. Modification of C Page Data

If the C Page data has been initialized, change the data of the "Fixed data-2" address shown in the following table by manual input.

#### **Modifying Method:**

- Before changing the data, select page: 0, address: 01, and set data: 01.
- New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.

**Note:** If copy the data built in the different model, the camcorder may not operate.

- 3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
- 4) Check that the data of adjustment addresses is the initial value. If not, change the data to the initial value.

#### Processing after Completing Modification of C Page data

- 1) Select page: 2, address: 00, and set data: 29.
- Select page: 2, address: 01, and set data: 29, and press the PAUSE button of the adjustment remote commander.
- 3) Perform the "Servo System, RF System Adjustments".

#### 3. C Page Table

Note 1: Fixed data-1: Initialized data. (Refer to "1. Initializing the C Page Data".)

Fixed data-2: Modified data. (Refer to "2. Modification of C PAGE

Data").

Address	Initial value		Remark	
Address	NTSC	PAL	Remark	
00			Fixed data-1	
01	]		(Initialized data)	
02	]			
03	]			
04	1			
05				
06	1			
07	1			
08				
09				
0A				
0B				
0C				
0D	1			

	Initial	value	I
Address	NTSC	<b>value</b> PAL	Remark
0E	NISC	FAL	Fixed data-1
0F			(Initialized data)
10	EE	EE	Switching position adj.
11	00	00	Switching position adj.
12	EE	EE	
13	00	00	
14	00	00	Fixed data-1
15			1 IACG Gata-1
16	E0	E0	Cap FG duty adj.
17	E0	E0	T reel FG duty adj.
18	2A	2A	AEQ adj.
19	2A	2A	1.22 4.33.
1A			Fixed data-1
1B	33	33	AEQ adj.
1C	33	33	
1D			Fixed data-1
1E	25	25	AGC center level adj.
1F	3E	3E	PLL f <sub>0</sub> adj.
20	3E	3E	,
21	DC	DC	APC adj.
22	99	99	LPF fo adj.
23		ļ	Fixed data-1
24			
25	88	88	S VIDEO out Y level adj.
26	E3	E3	S VIDEO out Cr level adj.
27	A1	A1	S VIDEO out Cb level adj.
28	8A	8A	IR video carrier freq. adj.
29	2D	2D	IR video deviation Adj.
2A	52	52	IR audio deviation Adj.
2B	04	04	Chroma BPF adj.
2C			Fixed data-2
2D			Fixed data-1
2E			Fixed data-2
2F			(Modified data, copy the data built in
30			the same model.)
31			
32			Fixed data-1
33			
34			Fixed data-2
35			Fixed data-1
36			
37			
38	00	00	Emergency memory address
39	00	00	
3A	00	00	
3B	00	00	
3C	00	00	
3D	00	00	
3E	00	00	
3F	00	00	
40	00	00	
41	00	00	
42	00	00	
43	00	00	
44			Fixed data-1

	Initial	value	
Address	NTSC	PAL	Remark
45			Fixed data-1
46			
47	20	20	PLL f <sub>0</sub> final adj.
48			Fixed data-1
49			(Initialized data)
4A			
4B			
4C			
4D			
4E			
4F			
50			
51			
52			
53			
54			
55			
56			
57			
58			
59			
5A			
5B			
5C			
5D			
5E			
5F			
60			Fixed data-2
61			
62			Fixed data-1
63			(Initialized data)
64			
65			
66			
67			
68			
69			
6A			
6B			
6C			
6D 6E			
6E 6F			Fixed data-2
70			Fixed data-2
70			(Initialized data)
72			(imitanized data)
73	03	03	APC adj.
74	0.5	0.5	Fixed data-1
75			(Initialized data)
76			(IIIIIIIIIIZOG Guita)
77			Fixed data-2
78			Fixed data-1
79			(Initialized data)
7A			, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
7B			
7C			
, , ,			

	Initial	value	
Address	NTSC	PAL	Remark
7D			Fixed data-1
7E			(Initialized data)
7F			
80			Fixed data-2
81			Fixed data-1
82			(Initialized data)
83			,
84			
85			
86			
87			Fixed data-2
88			
89			
8A			
8B			Fixed data-1
8C			(Initialized data)
8D			Fixed data-2
8E			
8F			Fixed data-1
90			(Initialized data)
91			,
92			
93			
94			
95			
96			
97			
98			
99			
9A			
9B			
9C			
9D			
9E			
9F			
A0			
A1			
A2			
A3			Fixed data-2
A4			Fixed data-1
A5			(Initialized data)
A6			
A7			
A8			
A9			
AA	80	80	PLL adj.
AB		-	Fixed data-1
AC			
AD			Fixed data-2
AE			Fixed data-1
AF			
B0			
B1			Fixed data-2
B2			
B3			
B4			
D-7			

Address	Initial value	Domayle
Address	NTSC PAL	Remark
B5		Fixed data-2
В6		
В7		Fixed data-1
B8		Fixed data-2
В9		Fixed data-1
BA		(Initialized data)
BB		
BC		Fixed data-2
BD		
BE		
BF		Fixed data-1
C0		(Initialized data)
C1		
C2		
C3		
C4		
C5		
C6		
C7		
C8		
C9		
CA		
СВ		
CC		
CD		
CE		
CF		
D0		
D1		
D2		
D3		
D4		
D5		
D6		
D7		
D8		
D9 DA		
DB		
DC		
DD		
DE		
DF		
E0 to FF		
EU 10 FF		

Table. 5-3-2

#### 4. Initializing the D Page Data

**Note:** If the D page data is initialized, the following adjustments must be performed again.

- 1) Modification of D page data
- 2) Video system adjustments
- 3) Color electronic viewfinder system adjustments
- 4) LCD system adjustments
- 5) IR transmitter adjustments
- 6) Battery end adjustment

Adjusting page	D
Adjusting Address	10 to 8F

#### **Initializing Method:**

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 80, set data: 0D, and press the PAUSE button
- 3) Check that the data of page: 3, address: 80 is changed to "1D".
- 4) Perform "Modification of D Page Data".

#### 5. Modification of D Page Data

If the D Page data has been initialized, change the data of the "Fixed data-2" address shown in the following tables by manual input.

#### **Modifying Method:**

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.

**Note:** If copy the data built in the different model, the camcorder may not operate.

- 3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
- Check that the data of adjustment addresses is the initial value.
   If not, change the data to the initial value.

#### Processing after Completing Modification of D Page data

- 1) Select page: 2, address: 00, and set data: 29.
- 2) Select page: 2, address: 01, and set data: 29, and press the PAUSE button of the adjustment remote commander.
- 3) Perform the following adjustments.
  - 1) Video system adjustments
  - 2) Color electronic viewfinder system adjustments
  - 3) LCD system adjustments
  - 4) IR transmitter adjustments
  - 5) Battery end adjustment

#### 6. D Page Table

Note 1: Fixed data-1: Initialized data. ( Refer to "4. Initializing the D Page Data".)

Fixed data-2: Modified data. (Refer to "5. Modification of D PAGE Data")

Address	Initial value		Remark	
Address	NTSC	PAL	Remark	
00 to 0F				
10	00	00	Test mode	
11			Fixed data-1	
12			(Initialized data)	
13			Fixed data-2	
14			(Modified data, copy the data built in	
15			the same model.)	
16			Fixed data-1	
17			(Initialized data)	
18				

	Initial	value	
Address	NTSC	PAL	Remark
19	11100	. / \L	Fixed data-2
1A			Fixed data-1
1B			(Initialized data)
1C			(mittanzed data)
1D			
	1		
1E			
1F			
20			
21			
22			
23			
24			
25			Fixed data-2
26			Fixed data-1
27			Fixed data-2
28			
29			Fixed data-1
2A			Fixed data-2
2B			(Modified data, copy the data built in
2C			the same model.)
2D			Suite model.)
2E			Fixed data-1
2E 2F	1		Fixed data-1
	OD	00	D " 1 1"
30	9D	90	Battery end adj.
31	97	97	
32	A9	A9	
33	AD	AD	
34	B5	B5	
35			Fixed data-2
36			
37			Fixed data-1
38			
39			Fixed data-2
3A			
3B			
3C			Fixed data-1
3D			Fixed data-2
3E			(Modified data, copy the data built in
3F			the same model.)
40			Suite model.)
40			Fixed data-1
42			Fixed data-2
43			Fixed data-1
44			Fixed data-2
45			Fixed data-1
46			
47			
48			
49			Fixed data-2
4A			Fixed data-1
4B			Fixed data-2
4C			Fixed data-1
4D			Fixed data-2
4E			
4F			
50			Fixed data-1
50			1 IAOU Uata-1

NISC   PAL   Fixed data-1		Initial	value	
S2	Address			Remark
S3	51			Fixed data-1
S4	52			
S5	53			
S6	54			
S7	55			
S8	56			
S9	57			
SA	58			
SB   SC   SD   SE   SF   60   61   62   63   64   66   66   67   (Initialized data)   68   69   66   66   66   66   67   (Initialized data)   68   69   66   60   60   60   60   60   60	59			
SC   SD   SE   SF   60   61   62   63   64   65   66   67   (Initialized data-1) (Initialized data)   68   69   66   60   60   60   60   60   60	5A			
SD   SE   SF   60   61   62   63   64   66   66   66   67   68   69   66   66   66   66   66   66	5B			
SE	5C			
SF   60   61   62   63   64   Fixed data-2   65   66   67   (Initialized data)   68   69   6A   6B   6C   6D   Fixed data-2   65   66   6C   6D   Fixed data-2   65   66   6C   6D   Fixed data-2   66   6C   6D   Fixed data-2   66   6C   6D   Fixed data-2   67   70   71   80   80   80   White balance adj.(EVF)   72   80   80   VCO adj.(EVF)   75   80   80   VCO adj.(EVF)   76   80   80   Bo   Backlight consumption current adj. (EVF)   77   Fixed data-1   78   Fixed data-1   78   Fixed data-1   78   Fixed data-1   78   Fixed data-1   79   Fixed data-1   70   70   70   70   70   70   70   7	5D			
60 61 62 63 64 64 65 65 66 67 68 69 6A 6B 6C 6D 71 80 80 80 80 Fixed data-2 Fixed data-2  6F 70 71 80 80 80 White balance adj.(EVF)  72 80 80 80 VCO adj.(EVF)  75 80 80 80 VCO adj.(EVF)  76 80 80 80 Bo Backlight consumption current adj. (EVF)  77 Fixed data-1  78 Fixed data-1  79 Fixed data-1  70 White balance adj.(EVF)  Fixed data-1  70 Fixed data-1  71 Fixed data-1  72 Fixed data-1  73 Fixed data-1  74 Fixed data-1  75 Fixed data-1  76 Fixed data-1  77 Fixed data-1  78 Fixed data-1  79 Fixed data-1	5E			
61 62 63 64 64 65 66 66 67 67 68 69 6A 6A 6B 6C 6D 6D 70 71 80 80 80 80 Fixed data-2  Fixed data-2  6F 70  71 80 80 80 White balance adj.(EVF)  72 80 80 80 VCO adj.(EVF)  75 80 80 80 Rochard data-1  76 80 80 80 Rochard data-1  75 80 80 80 Rochard data-1  75 80 80 80 Rochard data-1  76 80 80 80 Rochard data-1  77 Fixed data-2  Fixed data-1  78 Fixed data-1  79 Fixed data-1  7A 98 98 Bright adj.(EVF)  7C Fixed data-2  7D  7E Fixed data-1  7F  80 A0 A0 White balance adj.(LCD)  81 70 70  82 C8 C8 D range adj.(LCD)  84 90 90 VCO adj.(LCD)  85 SA SA V-COM adj.(LCD)  Fixed data-1	5F			
62 63 64 64 65 66 66 67 67 68 69 6A 6A 6B 6C 6D 6D 70 71 80 80 80 80 White balance adj.(EVF) 72 80 80 80 WCO adj.(EVF) 75 80 80 80 WCO adj.(EVF) 76 80 80 80 Backlight consumption current adj. (EVF) 77 Fixed data-1 78 Fixed data-2 74 Fixed data-1 75 80 80 80 VCO adj.(EVF) 77 Fixed data-1 78 Fixed data-1 78 Fixed data-1 78 Fixed data-1 78 Fixed data-1 79 Fixed data-1 78 Fixed data-1 79 Fixed data-1 79 Fixed data-1 79 Fixed data-1 79 Fixed data-1 70 70 Fixed data-1 71 72 73 Fixed data-1 74 Fixed data-1 75 80 80 80 Fixed data-1 76 80 80 80 Contrast adj.(EVF) 80 80 Fixed data-1 81 Fixed data-1 82 Fixed data-1 83 Fixed data-1	60			
63 64 64 65 66 66 67 68 69 6A 6A 6B 6C 6D 6D Fixed data-1 6E Fixed data-2  6F 70 71 80 80 80 White balance adj.(EVF)  72 80 80 WCO adj.(EVF)  73 Fixed data-1 75 80 80 WCO adj.(EVF)  76 B0 B0 Backlight consumption current adj. (EVF)  77 Fixed data-1  78 Fixed data-1  78 Fixed data-2  79 Fixed data-1  78 Fixed data-1  79 Fixed data-1  70 TE Fixed data-1  71 Fixed data-1  72 Fixed data-1  73 Fixed data-1  74 Fixed data-1  75 Fixed data-1  76 Fixed data-1  77 Fixed data-1  78 Fixed data-1  78 Fixed data-1  79 Fixed data-1  70 Fixed data-1	61			
64         Fixed data-2           65         Fixed data-1 (Initialized data)           67         (Initialized data)           68         69           6A         Fixed data-2           6B         6C           6D         Fixed data-1           6E         Fixed data-2           6F         70           71         80         80           72         80         80           73         Fixed data-2           74         Fixed data-1           75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-2           79         Fixed data-2         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-1         Fixed data-1           7F         Fixed data-1         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70         Fixed data-1           82	62			
65 66 67 68 69 6A 6B 6C 6D 6D Fixed data-1 6E 6F 70 71 80 80 80 White balance adj.(EVF) 72 80 80 WCO adj.(EVF) 75 80 80 WCO adj.(EVF) 76 B0 B0 Backlight consumption current adj. (EVF) 77 Fixed data-1 78 Fixed data-2 79 Fixed data-1 78 Fixed data-1 79 Fixed data-1 71 Fixed data-1 72 Fixed data-1 73 Fixed data-1 74 Fixed data-1 75 Fixed data-1 75 Fixed data-1 76 Fixed data-1 77 Fixed data-1 78 Fixed data-1 79 Fixed data-1	63			
Fixed data-1 (Initialized data)	64			Fixed data-2
G7	65			
68 69 6A 6B 6C 6D Fixed data-1 Fixed data-2  6F 70 71 80 80 80 White balance adj.(EVF)  72 80 80 White balance adj.(EVF)  73 Fixed data-1 75 80 80 VCO adj.(EVF)  76 B0 B0 Backlight consumption current adj. (EVF)  77 Fixed data-1 78 Fixed data-1 78 Fixed data-1 78 Fixed data-1 78 Fixed data-1  7A 98 98 98 Bright adj.(EVF)  7C Fixed data-2  Fixed data-2  Fixed data-1  Fixed data-1  7B 80 A0 A0 White balance adj.(LCD)  Fixed data-1	66			Fixed data-1
69 6A 6B 6C 6D 6D Fixed data-1 Fixed data-2  6F 70 71 80 80 80 White balance adj.(EVF)  72 80 80 80 VCO adj.(EVF)  73 Fixed data-1 75 80 80 VCO adj.(EVF)  76 B0 B0 B0 Backlight consumption current adj. (EVF)  77 Fixed data-1 78 Fixed data-1 78 Fixed data-1 78 Fixed data-1 78 Fixed data-1  78 Fixed data-1  78 Fixed data-1  78 Fixed data-1  78 Fixed data-1  78 Fixed data-1  78 Fixed data-1  79 Fixed data-1  7A 98 98 Bright adj.(EVF)  7C Fixed data-2  7D  7E Fixed data-1  7F  80 A0 A0 White balance adj.(LCD)  81 70 70  82 C8 C8 D range adj.(LCD)  84 90 90 VCO adj.(LCD)  85 5A 5A V-COM level adj.(LCD)  Fixed data-1	67			(Initialized data)
6A         6B           6C         6D         Fixed data-1           6E         Fixed data-2           6F         70           71         80         80           72         80         80           73         Fixed data-2           74         Fixed data-1           75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-1           78         Fixed data-2         Fixed data-1           79         Fixed data-1         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2         Fixed data-2           7D         Fixed data-2         Fixed data-1           7F         Fixed data-1         Fixed data-1           80         A0         A0         White balance adj.(EVF)           81         70         70         Total care care care care care care care care	68			
6B 6C 6D 6D Fixed data-1 Fixed data-2  6F 70 71 80 80 80 White balance adj.(EVF)  72 80 80 White balance adj.(EVF)  73 Fixed data-2  74 Fixed data-1 75 80 80 VCO adj.(EVF)  76 B0 B0 B0 Backlight consumption current adj. (EVF)  77 Fixed data-1  78 Fixed data-1  78 Fixed data-2  79 Fixed data-1  7A 98 98 Bright adj.(EVF)  7B 80 80 Contrast adj.(EVF)  7C Fixed data-2  7D  7E Fixed data-1  Fixed data-1  Fixed data-2  Fixed data-1  7A 98 80 B0 White balance adj.(LCD)  81 70 70  82 C8 C8 C8 D range adj.(LCD)  83 94 94 V-COM level adj.(LCD)  84 90 90 VCO adj.(LCD)  85 5A 5A V-COM adj.(LCD)  Fixed data-1	69			
6C 6D 6D Fixed data-1 6E 6F 70 71 80 80 80 White balance adj.(EVF) 72 80 80 80 Fixed data-2 Fixed data-2 Fixed data-1 75 80 80 VCO adj.(EVF) 76 B0 B0 B0 Backlight consumption current adj. (EVF) 77 Fixed data-1 78 Fixed data-2 Fixed data-1 78 Fixed data-1 78 Fixed data-1 Fixed data-2 Fixed data-1 Fixed data-1 Fixed data-2 Fixed data-1	6A			Fixed data-2
6D Fixed data-1  6E Fixed data-2  70 71 80 80 White balance adj.(EVF)  72 80 80 Fixed data-2  74 Fixed data-1  75 80 80 VCO adj.(EVF)  76 B0 B0 Backlight consumption current adj. (EVF)  77 Fixed data-1  78 Fixed data-1  78 Fixed data-2  79 Fixed data-1  70 Fixed data-1  71 Fixed data-1  72 Fixed data-1  73 Fixed data-1  74 Fixed data-1  75 Fixed data-1  76 Fixed data-1  77 Fixed data-1  78 Fixed data-1  79 Fixed data-1  70 Fixed data-2  70 Fixed data-2  70 Fixed data-2  70 Fixed data-1  71 Fixed data-1  72 Fixed data-1  73 Fixed data-1  74 Fixed data-1  75 Fixed data-1  76 Fixed data-1  77 Fixed data-1  78 Fixed data-1  79 Fixed data-1  70 Fixed data-1  70 Fixed data-1  71 Fixed data-1  72 Fixed data-1  73 Fixed data-1  74 Fixed data-1  75 Fixed data-1  76 Fixed data-1  77 Fixed data-1  78 Fixed data-1  79 Fixed data-1  70 Fixed data-1  70 Fixed data-1	6B			
6E         Fixed data-2           70         80         80         White balance adj.(EVF)           72         80         80         Fixed data-2           74         Fixed data-1         Fixed data-1           75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-2           79         Fixed data-1         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2         Fixed data-2           7D         Fixed data-1         Fixed data-1           7F         Fixed data-1         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70         82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)         84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)         Fixed data-1	6C			
1	6D			Fixed data-1
70         80         80         White balance adj.(EVF)           72         80         80         Fixed data-2           74         Fixed data-1         Fixed data-1           75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-2           79         Fixed data-1         Fixed data-1           7A         98         98         Bright adj.(EVF)           7C         Fixed data-2         Fixed data-2           7D         Fixed data-2         Fixed data-2           7D         Fixed data-1         Fixed data-2           80         A0         A0         White balance adj.(EVF)           81         70         70         White balance adj.(LCD)           82         C8         C8         D range adj.(LCD)           84         90         90         VCOM level adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1         Fixed data-1	6E			Fixed data-2
71         80         80         White balance adj.(EVF)           72         80         80         Fixed data-2           74         Fixed data-1         75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-2           79         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2           7D         Fixed data-1           7F         Fixed data-1           80         A0         A0           81         70         70           82         C8         C8         D range adj.(LCD)           84         90         90         VCOM level adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1	6F			
72         80         80           73         Fixed data-2           74         Fixed data-1           75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-2           79         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2         Fixed data-2           7D         Fixed data-1         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70         82           82         C8         C8         D range adj.(LCD)           84         90         90         VCOM level adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1         Fixed data-1	70			
73         Fixed data-2           74         Fixed data-1           75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-2           79         Fixed data-1         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2         Fixed data-2           7D         Fixed data-1         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70         White balance adj.(LCD)           82         C8         C8         D range adj.(LCD)           84         90         90         VCOM level adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1         Fixed data-1	71	80	80	White balance adj.(EVF)
74         Fixed data-1           75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-2           79         Fixed data-1         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2         Fixed data-2           7D         Fixed data-1         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70         White balance adj.(LCD)           82         C8         C8         D range adj.(LCD)           84         90         90         VCOM level adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1         Fixed data-1		80	80	
75         80         80         VCO adj.(EVF)           76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1         Fixed data-2           79         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2           7D         Fixed data-1           7F         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70           82         C8         C8         D range adj.(LCD)           84         90         90         VCOM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1	73			
76         B0         B0         Backlight consumption current adj. (EVF)           77         Fixed data-1           78         Fixed data-2           79         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2         Fixed data-1           7F         Fixed data-1         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70         Fixed data-1           82         C8         C8         D range adj.(LCD)           84         90         90         VCOM level adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1         Fixed data-1				
77         Fixed data-1           78         Fixed data-2           79         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2           7D         Fixed data-1           7F         80         A0         A0         White balance adj.(LCD)           81         70         70         White balance adj.(LCD)           82         C8         C8         D range adj.(LCD)           84         90         90         VCOM level adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1		80	80	
78         Fixed data-2           79         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2           7D         Fixed data-1           7F         80         A0         A0         White balance adj.(LCD)           81         70         70         White balance adj.(LCD)           82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1		В0	B0	
79         Fixed data-1           7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2           7D         Fixed data-1           7F         80         A0         A0         White balance adj.(LCD)           81         70         70         White balance adj.(LCD)           82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1				
7A         98         98         Bright adj.(EVF)           7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2           7D         Fixed data-1           7E         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70           82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1				
7B         80         80         Contrast adj.(EVF)           7C         Fixed data-2           7D         Fixed data-1           7E         Fixed data-1           80         A0         A0           81         70         70           82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1				
7C         Fixed data-2           7D         Fixed data-1           7E         Fixed data-1           80         A0         A0         White balance adj.(LCD)           81         70         70         White balance adj.(LCD)           82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1				
7D 7E 7E 7F 80 A0 A0 White balance adj.(LCD) 81 70 70 82 C8 C8 C8 D range adj.(LCD) 83 94 94 V-COM level adj.(LCD) 84 90 90 VCO adj.(LCD) 85 5A 5A V-COM adj.(LCD)  86 Fixed data-1		80	80	- 1
7E         Fixed data-1           7F         80         A0         A0         White balance adj.(LCD)           81         70         70         82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1				Fixed data-2
7F  80 A0 A0 White balance adj.(LCD)  81 70 70  82 C8 C8 D range adj.(LCD)  83 94 94 V-COM level adj.(LCD)  84 90 90 VCO adj.(LCD)  85 5A 5A V-COM adj.(LCD)  Fixed data-1				
80         A0         A0         White balance adj.(LCD)           81         70         70           82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         V-COM adj.(LCD)           86         Fixed data-1				Fixed data-1
81       70       70         82       C8       C8       D range adj.(LCD)         83       94       94       V-COM level adj.(LCD)         84       90       90       VCO adj.(LCD)         85       5A       V-COM adj.(LCD)         86       Fixed data-1				
82         C8         C8         D range adj.(LCD)           83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1				White balance adj.(LCD)
83         94         94         V-COM level adj.(LCD)           84         90         90         VCO adj.(LCD)           85         5A         5A         V-COM adj.(LCD)           86         Fixed data-1           87				
84 90 90 VCO adj.(LCD) 85 5A 5A V-COM adj.(LCD) 86 Fixed data-1				
85 5A 5A V-COM adj.(LCD)  86 Fixed data-1  87				
86 Fixed data-1 87				- 1
87		5A	5A	
				Fixed data-1
88				
1	88			

Address	Initial value		Remark
	NTSC	C PAL	Remark
89			Fixed data-1
8A	58	58	Bright adj.(LCD)
8B			Fixed data-2
8C	62	62	Contrast adj.(LCD)
8D			Fixed data-2
8E			Fixed data-1
8F			
90 to FF			

Table. 5-3-3

#### 7. Initializing the B Page Data

**Note:** If the B page data is initialized, the following adjustments must be performed again.

1) Modification of B page data

Adjusting page	В
Adjusting Address	00 to DF

#### **Initializing Method:**

- 1) Set the power switch to the MEMORY position.
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Select page: 2, address: 8F, set data: 03, and press the PAUSE button.
- 4) Select page: 2, address: 8F, set data: 00, and press the PAUSE button.
- Select page: 5, address: 01, set data: F3, and press the PAUSE button.
- Select page: 5, address: 00, set data: 01, and press the PAUSE button.
- 7) Select page: 5, address: 02, and check that the data is "00".
- 8) Perform "Modification of B Page Data".

#### 8. Modification of B Page Data

If the B Page data has been initialized, change the data of the "Fixed data-2" address shown in the following tables by manual input.

#### Processing before Modification of B Page data

- Select page: 2, address: 8F, set data: 03, and press the PAUSE button.
- 2) Select page: 2, address: 8F, set data: 00, and press the PAUSE button .

#### **Modifying Method:**

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.

**Note:** If copy the data built in the different model, the camcorder may not operate.

3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.

#### Processing after Completing Modification of B Page data

- 1) Select page: 2, address: 00, and set data: 29.
- 2) Select page: 2, address: 01, and set data: 29, and press the PAUSE button of the adjustment remote commander.

#### 9. B Page Table

Note 1: Fixed data-1 : Initialized data. ( Refer to "7. Initializing the B Page Data".)

Fixed data-2: Modified data. (Refer to "8. Modification of B PAGE Data").

	ata").
Address	Remark
00	Fixed data-1
01	(Initialized data)
02	
03	
04	
05	
06	
07	
08	
09	
0A	
0B	
0C	
0D	
0E	
0F	
10	
11	
12 13	
13	
15	
16	
17	
18	
19	
1A	
1B	
1C	
1D	
1E	
1F	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
2A	
2B	
2C	
2D	
2E	
2F	
30	
31	
32	

Address	Remark
33	Fixed data-1
34	(Initialized data)
35	
36	
37	
38	
39	
3A	
3B	
3C	
3D	
3E	
3F	
40	
41	
42	
43	
44	
45	
46	
47	
48	
49	
4A	
4B	
4C	
4D	
4E	
4F	
50	
51	
52	
53	
54	
55	
56	
57	
58	Fixed data-2
59	Fixed data-1
5A	
5B	
5C	Fixed data-2
5D	Fixed data-1
5E	Fixed data-2
5F	
60	Fixed data-1
61	(Initialized data)
62	
63	
64	
65	
66	
67	
68	Fixed data-2
69	Fixed data-1
6A	(Initialized data)

Address	Remark
6B	Fixed data-1
6C	(Initialized data)
6D	Fixed data-2
6E	Fixed data-1
6F	Fixed data-2
70	(Modified data, copy the data built in the same
71	model.)
72	Fixed data-1
73	(Initialized data)
74	
75	
76	
77	
78	
79	
7A	
7B	
7C	
7D	
7E	
7F	
80	
81	
82	
83 84	
85	
86	
87	
88	
89	
8A	
8B	
8C	
8D	
8E	
8F	
90	
91	
92	
93	
94	
95	
96	
97	
98	
99	
9A	
9B	
9C	
9D	
9E	
9F A0	
A0 A1	
A1 A2	
A2	

Address	Remark
A3	Fixed data-1
A4	(Initialized data)
A5	
A6	
A7	
A8	
A9	
AA	
AB	
AC AD	
AE	
AF	
B0	
B1	
B2	
B3	
B4	
B5	
В6	
В7	
B8	
В9	
BA	
BB	
BC	
BD	
BE	
BF	
C0 C1	
C1	
C3	
C4	
C5	
C6	
C7	
C8	
C9	
CA	
СВ	
CC	
CD	
CE	
CF	
D0	
D1 D2	
D3	
D3	
D5	
D6	
D7	
D8	
D9	
DA	

Address	Remark
DB	Fixed data-1
DC	(Initialized data)
DD	
DE	
DF	
E0 to FF	

Table. 5-3-4

## 3-3. SYSTEM CONTROL SYSTEM ADJUSTMENT

## 1. Battery End Adjustment (VI-151 board)

Set the battery end voltage.

If the voltage is incorrect, the life of the battery will shorten. The image at the battery end will also lose synchronization.

Mode	Camera recordings
Subject	Arbitrary
Measurement Point	Display data of page: 2, address: 5D
Measuring Instrument	Adjustment remote commander
Adjustment Page	D
Adjustment Address	30 to 34

## Switch setting:

1) AUTO FOCUS .......OFF
2) LCD display ......Closed

# **Connection:**

1) Connect the regulated power supply and the digital voltmeter to the battery terminal as shown in Fig. 5-3-3.

# Adjusting method:

- 1) Adjust the output voltage of the regulated power supply so that the digital voltmeter reading is  $6.1\pm0.1~V$  dc.
- 2) Turn off the power supply.
- Turn on the HOLD switch of the adjustment remote commander.
- 4) Turn on the power supply.
- 5) Load a cassette, and set the recording mode.
- 6) Select page: 0, address: 01, and set data: 01.
- 7) Decrease the output voltage of the regulated power supply so that the digital voltmeter reading is  $5.30 \pm 0.01$  V dc.
- 8) Select page: 2, address: 5D, read the data, and this data is named Dref.
- 9) Set the read-out data (Dref) to page: D. address: 30 and press the PAUSE button.
- Convert Dref to decimal notation, and obtain Dref. (Refer to Table 5-4-1 "Hexadecimal-decimal Conversion Table" of "5-4. Service Mode".)
- 11) Calculate  $D_{31}$ ',  $D_{32}$ ',  $D_{33}$ ',  $D_{34}$ ' and  $D_{49}$ ' using following equations (decimal calculation), convert it to a hexadecimal number, and input each adjustment address.

Address: 31  $D_{31}' = Dref' + 7$ Address: 32  $D_{32}' = Dref' + 25$ 

Address: 33  $D_{33}' = Dref' + 29$ 

Address:  $34 \ D_{34}' = Dref' + 37$ 

**Note:** After setting each data, be sure to press the PAUSE button of the adjustment remote commander.

12) Select page: 0, address: 01, and set data: 00.

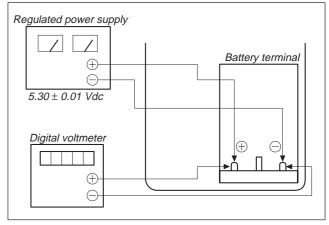


Fig. 5-3-3

## 3-4. SERVO AND RF SYSTEM ADJUSTMENT

Before performing the servo and RF system adjustments, check that the specified value of "27 MHz Master Oscillator Adjustment" of "CAMERA SYSTEM ADJUSTMENT" is satisfied.

## **Adjusting Procedure:**

- 1. Cap FG duty adjustment
- 2. T-reel FG duty adjustment
- 3. PLL fo & LPF fo adjustment
- 4. Switching position adjustment
- 5. AGC center level adjustment
- 6. APC & AEO adjustment
- 7. PLL fo & LPF fo final adjustment

# 1. Cap FG Duty Adjustment (VI-151 board)

Set the Cap FG signal duty cycle to 50% to establish an appropriate capstan servo. If deviated, the uneven rotation of capstan and noise can occur.

Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	С
Adjustment Address	16
Specified Value	00

## **Adjusting Method:**

- 1) Close the cassette compartment without inserting a cassette.
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Select page: 3, address: 01, set data: 1B, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: 3, address: 02, and check that the data changes starting from "1B" to "2B" to "00" in this order.
- Select page: 3, address: 03, and check that the data is "00".
   Note: If the data of page: 3, address: 03 is "02", adjustment has errors or the mechanism deck is defective.
- 6) Select page: 0, address: 01, and set data: 00.

# 2. T-reel FG Duty Adjustment (VI-151 board)

Adjust the take-up reel FG signal duty cycle to an appropriate value so that the correct T-reel FG signal is obtained.

	8
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	С
Adjustment Address	17
Specified Value	00

## **Adjusting Method:**

- 1) Close the cassette compartment without inserting a cassette.
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Select page: 3, address: 01, set data: 1C, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: 3, address: 02, and check that the data changes starting from "1C" to "2C" to "00" in this order.
- 5) Select page: 3, address: 03, and check that the data is "00".
  Note: If the data of page: 3, address: 03 is "02", adjustment has errors or the mechanism deck is defective.
- 6) Select page: 0, address: 01, and set data: 00.

#### 3. PLL fo & LPF fo Adjustment (VI-151 board)

Mode	VTR stop
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	С
Adjustment Address	1F, 20, 22, 47
Specified Value	00

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 01, set data: 30, and press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 02, and check that the data is changed to "00".
- 4) Select page: 3, address: 03, and check that the data is "00".
  Note: If the data of page: 3, address: 03 is other than "00", there are errors. (For the error contents, see the following table. For the bit values, refer to "5-4. SERVICE MODE", "4-3. 3. Bit value discrimination".
- 5) Select page: 0, address: 01, and set data: 00.

Bit value of page: 3, address: 03	Error contents
bit 4 = 1	PLL fo, even channel is defective
bit 5 = 1	PLL fo, odd channel is defective
bit 6 = 1	LPF fo is defective
bit $3 = 1$	PLL fo final adjustment is defective

## 4. Switching Position Adjustment (VI-151 board)

Mode	VTR playback
Signal	SW/OL reference tape (XH2-3)
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	С
Adjustment Address	10, 11, 12, 13
Specified Value	00

#### **Adjusting Method:**

- Insert the SW/OL reference tape and enter the VTR STOP mode.
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Select page: 3, address: 21, and check that the data is "02".
  Note: If the data of page: 3, address: 21 is "72", the tape top is being played. After playing the tape for 1 to 2 seconds, perform step 4 and higher.
- 4) Select page: 3, address: 01, set data: 0D, and press the PAUSE button of the adjustment remote commander.
- 5) Select page: 3, address: 02, and check the data is changed to "00".
- 6) Select page: 3, address: 03, and check that the data is "00".
  Note: If bit 0 of page: 3, address: 03 data is "1", the even channel is defective. If bit 1 is "1", the odd channel is defective. Contents of the defect is written into page: C, addresses: 10 and 12. See the following table. (For the bit value, refer to "5-4. SERVICE MODE", "4-3. 3. Bit value discrimination".)
- 7) Select page: 0, address: 01, and set data: 00.

## When the even channel is defective

Data of page: C, address: 10	Contents of defect
EE	Writing into EEPROM (IC2404) is defective
E8	Adjustment data is out of range
E7	No data is returned from IC1900 (TRX)

#### When the odd channel is defective

Data of page: C, address: 12	Contents of defect
EE	Writing into EEPROM (IC2404) is defective
E8	Adjustment data is out of range
E7	No data is returned from IC1900 (TRX)

## 5. AGC Center Level Adjustment (VI-151 board)

Mode	Camera record and playback
Subject	Arbitrary
Measurement Point	Pin @ of CN2904 (RF MON) (Note 1)
Measuring Instrument	Oscilloscope
Adjustment Page	С
Adjustment Address	1E
Specified Value	The display data of page: 3, address: 03 is "00"

Note 1: Connect a 75 Ω resistor between Pin @ and Pin @ (GND) of CN2904.

75  $\Omega$  resistor (Parts code: 1-247-804-11)

#### **Adjusting Method:**

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 2, address: 30, and set data: 40.
- 3) Record the camera signal for a minute.
- 4) Playback the recorded segment.
- 5) Select page: 3, address: 33, and set data: 08.
- 6) Confirm that the playback RF signal is stable.
- 7) Select page: 3, address: 01, set data: 23, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 3, address: 02, and check that the data is "00".

to the errors referring to the following table.)

- Select page: 3, address: 03, and check that the data is "00".
   Note: If data of page: 3, address: 03 is other than "00", adjustment has errors. (Take an appropriate remedial measures according
- 10) Select page: 3, address: 33, and set data: 00.
- 11) Select page: 2, address: 30, and set data: 00.
- 12) Select page: 0, address: 01, and set data: 00.

Data of page: 3, address: 03	Remedial measures
20	Perform re-adjustment. (Note 2)
30	The machine is defective
40	Perform re-adjustment. (Note 2)
50	The machine is defective

**Note 2:** If this data is displayed twice successively, the machine is defective.

## 6. APC & AEQ Adjustment (VI-151 board)

Mode	Camera record and playback
Subject	Arbitrary
Measurement Point	Pin @ of CN2904 (RF MON) (Note 1)
Measuring Instrument	Oscilloscope
Adjustment Page	С
Adjustment Address	18, 19, 1B, 1C, 21, 73
Specified Value	The display data of page: 3, address: 03 is "00"

Note 1: Connect a 75  $\Omega$  resistor between Pin 20 and Pin 39 (GND) of CN2904.

75 Ω resistor (Parts code: 1-247-804-11)

**Note 2:** The "5. AGC Center Level Adjustment" must have already been completed before starting this adjustment.

# **Adjusting Method:**

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 2, address: 30, and set data: 40.
- 3) Record the camera signal for a minute.
- 4) Playback the recorded segment.
- 5) Select page: 3, address: 33, and set data: 08.
- 6) Check that the playback RF signal is stable.
- Select page: 3, address: 01, set data: 07, and press the PAUSE button of the adjustment remote commander.
- Check that the data of page: 3, address: 02 changes from "07" to "00" in about 15 seconds after pressing the PAUSE button.
- 9) Select page: 3, address: 03, and check that the data is "00".

**Note:** If data of page: 3, address: 03 is other than "00", adjustment has errors. (Take an appropriate remedial measures according to the errors referring to the following table.)

- 10) Select page: 3, address: 33, and set data: 00.
- 11) Select page: 2, address: 30, and set data: 00.
- 12) Select page: 0, address: 01, and set data: 00.

Data of page: 3, address: 03	Remedial measures	
20	Perform re-adjustment. (Note 3)	
30	The machine is defective	
50	Perform re-adjustment. (Note 3)	
60	The machine is defective	
80	The machine is defective	

**Note 3:** If this data is displayed twice successively, the machine is defective.

# 7. PLL fo & LPF fo Final Adjustment (VI-151 board)


Mode	VTR playback
Signal	Arbitrary
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	С
Adjustment Address	1F, 20, 22, 47
Specified Value	00

#### **Adjusting Method:**

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 30, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 3, address: 02, and check that the data changes to "00"
- 4) Select page: 3, address: 03, and check that the data is "00". Note: If the data of page: 3, address: 03 is other than "00", there are errors. (For the error contents, see the following table. For the bit values, refer to "5-4. SERVICE MODE", "4-3. 3. Bit value discrimination".
- 5) Select page: 0, address: 01, and set data: 00.

Bit value of page: 3, address: 03	Error contents	
bit 4 = 1	PLL fo, even channel is defective	
bit 5 = 1	PLL fo, odd channel is defective	
bit 6 = 1	LPF fo is defective	
bit 3 = 1	PLL fo final adjustment is defective	

# VI-151 board (SIDE A)

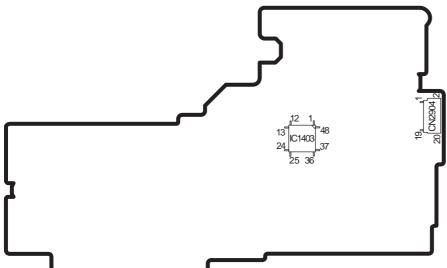

#### 3-5. VIDEO SYSTEM ADJUSTMENTS

Before perform the video system adjustments, check that the specified value of "27 MHz Origin Oscillation Adjustment" of "CAMERA SYSTEM ADJUSTMENT" is satisfied.

#### 3-5-1. Base Band Block Adjustments

#### 1. Chroma BPF fo Adjustment (VI-151 Board)

Set the center frequency of IC1402 chroma band-pass filter.

Mode	VTR stop
Signal	No signal
Measurement Point	CH1: Chroma signal terminal of S VIDEO jack (75 $\Omega$ terminated) CH2: Y signal terminal of S VIDEO jack (75 $\Omega$ terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	С
Adjustment Address	2B
Specified Value	A = 100 mVp-p or less B = 200 mVp-p or more


# Switch setting:

DISPLAY	(Menu display)	 V-OUT/L	CD
DISPLAY	(CK-80 board)	 (	ON


#### Adjusting method:

- 1) Check that the burst signal (B) is output to the chroma signal terminal of S VIDEO jack.
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Select page: 3, address: 0C, set data: 04, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: C, address: 2B, and change the data for minimum amplitude of the burst signal level (A).
- 5) Press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 6) Check that the burst signal level (B) is satisfied the specified value.
- 7) Select page: 0, address: 01, and set data: 00.

## When the data of page: 3, address: 0C, is 04:

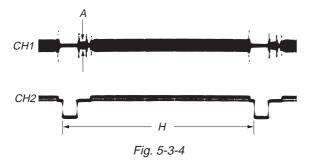

# When the data of page: 3, address: 0C, is 00.

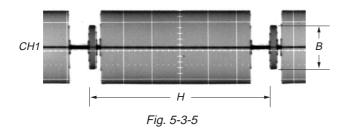

# 2. S VIDEO OUT Y Level Adjustment (VI-151 Board)

Mode	Camera
Subject	Arbitrary
Measurement Point	Y signal terminal of S VIDEO jack (75 $\Omega$ terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	С
Adjustment Address	25
Specified Value	$A = 1000 \pm 14 \text{mV}$

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 2, address: 35. After note down the data of this address, set data: 01 to the address.
- 3) Select page: 3, address: 0C, set data: 02, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: C, address: 25, change the data and set the Y signal level (A) to the specified value.
- 5) Press the PAUSE button of the adjustment remote commander.
- Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 7) Select page: 2, address: 35. and set the data that is noted down at step 2).
- 8) Select page: 0, address: 01, and set data: 00.

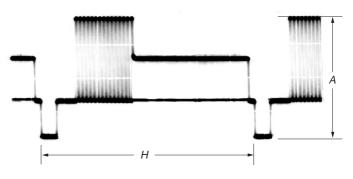


Fig. 5-3-6

# 3. S VIDEO OUT Chroma Level Adjustment (VI-151 Board)

(11 101 20010)			
Mode	Camera		
Subject	Arbitrary		
Measurement Point	Chroma signal terminal of S VIDEO jack (75 Ω terminated) External trigger: Y signal terminal of S VIDEO jack		
Measuring Instrument	Oscilloscop	e	
Adjustment Page	С		
Adjustment Address	26, 27		
Specified Value	Cr level:	$A = 714 \pm 14 \text{mV(NTSC)}$ $A = 700 \pm 14 \text{mV(PAL)}$	
	Cb level:	$B = 714 \pm 14 \text{mV}(\text{NTSC})$	
		$B=700\pm14mV(PAL)$	
	Burst level:	$C = 286 \pm 6 \text{mV}(\text{NTSC})$	
		$C = 300 \pm 6 \text{mV}(PAL)$	

## Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 2, address: 35. After note down the data of this address, set data: 01 to the address.
- 3) Select page: 3, address: 0C, set data: 02, and press the PAUSE button of the adjustment remote commander.
- 4) Select page: C, address: 26, change the data and set the Cr signal level (A) to the specified value.
- 5) Press the PAUSE button of the adjustment remote commander.
- 6) Select page: C, address: 27, change the data and set the Cb signal level (B) to the specified value.
- 7) Press the PAUSE button of the adjustment remote commander.
- Check that the burst signal level (C) is satisfied the specified value.
- 9) Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 10) Select page: 2, address: 35. and set the data that is noted down at step 2).
- 11) Select page: 0, address: 01, and set data: 00.

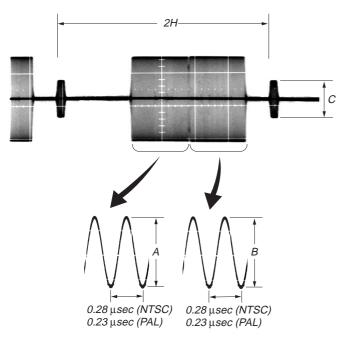


Fig. 5-3-7

# 4. AV OUT Y, Chroma Level Check (VI-151 Board)

Mode	Camera
Subject	Arbitrary
Measurement Point	Video terminal of AUDIO/VIDEO jack (75 $\Omega$ terminated)
Measuring Instrument	Oscilloscope
Specified Value	$\begin{array}{ll} \text{Sync level:} & A = 286 \pm 18 \text{mV(NTSC)} \\ & A = 300 \pm 18 \text{mV(PAL)} \\ \text{Burst level:} & B = 286 \pm 18 \text{mV(NTSC)} \\ & B = 300 \pm 18 \text{mV(PAL)} \end{array}$

- 1) Select page: 2, address: 35. After note down the data of this address, set data: 01 to the address.
- Select page: 3, address: 0C, set data: 02, and press the PAUSE button of the adjusting remote commander.
- 3) Check that the sync signal level (A) satisfies the specified value.
- 4) Check that the burst signal level (B) satisfies the specified value.
- 5) Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 6) Select page: 2, address: 35. and set the data that is noted down at step 1).

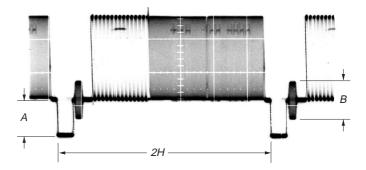


Fig. 5-3-8

# 5. PLL Adjustment (VC-208 Board) (Except DCR-TRV890E)

Set the VCO center level of the video input circuit (IC1200).

Mode	VTR stop
Signal	Color bar (Video terminal of AUDIO/ VIDEO jack input)
Measurement Point	Display data of page: 3, address: 04
Measuring Instrument	Adjustment remote commander
Adjustment Page	С
Adjustment Address	AA
Specified Value	08 or 09

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 0C, set data: 80, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: C, address: AA, and set data: 00, and press the PAUSE button.
- 4) Select page: 3, address: 04, and check. If the data is "08" or "09", proceed to step 7).
- 5) Select page: C, address: AA, add "10" (hexadecimal) to the data and press the PAUSE button.
- 6) Select page: 3, address: 04, and check the data is "08" or "09". If not repeat steps 5) to 6).
- 7) Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

#### 3-5-2. BIST Check

## 1. Playback System Check

# 1-1. Preparation for Playback

- 1) Set the POWER switch to VTR (or PLAYER) position.
- Connect the adjusting remote commander and set the HOLD switch to ON (SERVICE) position.
- Playback the BIST check tape. (XH5-6(NTSC), XH5-6P(PAL))
   Note: Perform the following checks in the playback mode.

# 1-2. IC1814(TRF) BIST(PB) Check

- Select page: 3, address: 12, set data: 04, and press the PAUSE button
- 2) Select page: 3, address: 12, set data: 00, and press the PAUSE button.
- 3) Select page: 3, address: 13, set data: 02, and press the PAUSE button.
- 4) When the playback system of IC1814(TRF) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

## **NTSC** model

Address	Data					
16	63	C5	75	D3	59	FF
17	84	55	07	D6	01	D0

#### PAL model

Address	Data		
16	86	33	90
17	35	AA	В6

#### 1-3. IC1601(TFD) BIST(PB) Check

- Select page: 3, address: 40, set data: 0F, and press the PAUSE button.
- Select page: 3, address: 40, set data: 00, and press the PAUSE button.
- 3) When all playback system of IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 41 and 42 agrees with any combination as shown below.

NTSC model

N15C model		
Address	Data	
41	26	
42	A1	

PAL model

Address	Data
41	69
42	73

- 4) Select page: 3, address: 40, set data: 03, and press the PAUSE button.
- Select page: 3, address: 40, set data: 00, and press the PAUSE button.
- 6) When the video playback system of IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 41 and 42 agrees with any combination as shown below.

NTSC model

14100 IIIOGCI		
Address	Data	
41	7C	
42	01	

PAL model

Address Data			
41	A6		
42	E1		

- Select page: 3, address: 40, set data: 05, and press the PAUSE button.
- 8) Select page: 3, address: 40, set data: 00, and press the PAUSE button.
- 9) When the audio playback system of IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 41 and 42 agrees with any combination as shown below.

NTSC mode

N15C model		
Address	Data	
41	88	
42	A9	

PAL model

I AL IIIOGGI		
Address Data		
41	43	
42	C8	

- Select page: 3, address: 40, set data: 09, and press the PAUSE button.
- 11) Select page: 3, address: 40, set data: 00, and press the PAUSE button.
- 12) When the subcode playback system of IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 41 and 42 agrees with any combination as shown below.

#### NTSC model

NISC model		
Address	Data	
41	72	
42	CD	

PAL model

Address	Data
41	76
42	A9

# 1-4. IC1600(SFD) BIST(PB) Check

- Select page: 0, address: 01, and set data: 01. 1)
- 2) Select page: C, address: AC, set data: 21, and press the PAUSE button.
- Select page: C, address: AD, set data: 01, and press the PAUSE 3) button.
- Select page: 3, address: 11, set data: 04, and press the PAUSE button.
- Select page: 3, address: 12, set data: 08, and press the PAUSE 5) button.
- Select page: 3, address: 12, set data: 00, and press the PAUSE 6) button.
- Select page: 3, address: 13, set data: 03, and press the PAUSE 7)
- When the playback system from IC1600(SFD) to IC2002(ADC&DAC) is normal, the display data (combination data) of page: 3, address: 14 and 15 agrees with any combination as shown below.

#### NTSC model Address Data

14 15

PAL model		
Address	Data	
14	2D	
15	7C	

When the playback system from IC1600(SFD) to IC1602(LIP) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

#### NTSC model

Address	Data	
16	1E	F0
17	B4	31

41

81

PAL model	
Address	Data
16	1C
17	۸6

10) When the playback system from IC1600(SFD) to IC1601(TDF) is normal, the display data (combination data) of page: 3, address: 18 and 19 agrees with any combination as shown below.

# NTSC model

Address	Da	ıta
18	72	16
19	F8	5C

# PAL model

Address	Data
18	A7
19	CC

11) When the playback system from IC1600(SFD) to IC1501(VFD) is normal, the display data (combination data) of page: 3, address: 1A and 1B agrees with any combination as shown below.

## NTSC model

Address	Data
1A	12
1B	43

# PAI model

Address	Data
1A	90
1B	CE

- 12) Select page: C, address: AC, set data: 20, and press the PAUSE button.
- 13) Select page: C, address: AD, set data: 00, and press the PAUSE
- 14) Select page: 0, address: 01, and set data: 00.

# 1-5. IC1501(VFD) BIST(PB) Check

- Select page: 0, address: 01, and set data: 01.
- Select page: C, address: 60, set data: 06, and press the PAUSE button.

## VBUS/EX BIST(PB) Check

- Select page: 3, address: 10, set data: 00, and press the PAUSE
- Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- Select page: 3, address: 12, set data: 00, and press the PAUSE button.
- Select page: 3, address: 13, set data: 04, and press the PAUSE
- When the playback system from IC1600(SFD) to IC1501(VFD) is normal, the display data (combination data) of page: 3, address: 14 and 15 agrees with any combination as shown below.

NTSC model

1413C IIIOGEI	
Address	Data
14	12
15	43

PAL model

Address	Data
14	90
15	CE

When the playback system from IC1501(VFD) to IC756(HONEY) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

NISC model	
Address	Data
16	FB
17	F4

PAL model

Address	Data
16	54
17	ED

## • UPY Y BIST(PB) Check

- Select page: 3, address: 10, set data: 88, and press the PAUSE button.
- 10) Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- 11) Select page: 3, address: 12, set data: 00, and press the PAUSE
- 12) Select page: 3, address: 13, set data: 04, and press the PAUSE button.
- 13) When the playback system from IC1501(VFD) to IC5001,5502 (LCD DRIVER) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

	NISC model	
	Address	Data
ĺ	16	9A
	17	13

PAI model

/ / L IIIO aci	
Address	Data
16	03
17	C9

# • UPY Cr BIST(PB) Check

- 14) Select page: 3, address: 10, set data: 89, and press the PAUSE button.
- 15) Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- 16) Select page: 3, address: 12, set data: 00, and press the PAUSE button.
- 17) Select page: 3, address: 13, set data: 04, and press the PAUSE button.
- 18) When the playback system from IC1501(VFD) to IC5001,5502 (LCD DRIVER) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

# NTSC model

14100 moder	
Address	Data
16	1C
17	60

PAL model	
Address	Data
16	14
17	A7

#### • UPY Cb BIST(PB) Check

- 19) Select page: 3, address: 10, set data: 8A, and press the PAUSE button.
- Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- 21) Select page: 3, address: 12, set data: 00, and press the PAUSE button.
- 22) Select page: 3, address: 13, set data: 04, and press the PAUSE button.
- 23) When the playback system from IC1501(VFD) to IC5001,5502 (LCD DRIVER) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

## NTSC model

Address	Data
16	92
17	5A

DAI	mode	i
PAL	mode	

Address	Data
16	В8
17	67

# • Preparation of ENC BIST(PB) Check

24) Select page: C, address: 51, set data: 0F, and press the PAUSE button.

# • ENC Ya BIST(PB) Check

- 25) Select page: 3, address: 10, set data: 8B, and press the PAUSE button.
- 26) Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- Select page: 3, address: 12, set data: 00, and press the PAUSE button.
- Select page: 3, address: 13, set data: 04, and press the PAUSE button.
- 29) When the playback system from IC1501(VFD) to IC1402 (AOI) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below

#### NTSC model

Address	Data	
16	3C	
17	D2	

PAL model

Address	Data
16	69
17	21

# • ENC Yb BIST(PB) Check

- 30) Select page: 3, address: 10, set data: 8C, and press the PAUSE button.
- 31) Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- 32) Select page: 3, address: 12, set data: 00, and press the PAUSE button
- 33) Select page: 3, address: 13, set data: 04, and press the PAUSE button.
- 34) When the playback system from IC1501(VFD) to IC1402 (AOI) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

NTSC model

N 13C Illouel		
Address	Data	
16	83	
17	9E	

PAL model

Address	Data
16	CC
17	ED

# • ENC Ca BIST(PB) Check

- 35) Select page: 3, address: 10, set data: 8D, and press the PAUSE button.
- 36) Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- 37) Select page: 3, address: 12, set data: 00, and press the PAUSE button.
- 38) Select page: 3, address: 13, set data: 04, and press the PAUSE button.
- 39) When the playback system from IC1501(VFD) to IC1402 (AOI) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

NTSC model

Address	Da	ıta
16	FE	22
17	68	CA

PAL model

Address	Da	ıta
16	70	43
17	D5	E4

# • ENC Cb BIST(PB) Check

- 40) Select page: 3, address: 10, set data: 8E, and press the PAUSE button
- 41) Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- 42) Select page: 3, address: 12, set data: 00, and press the PAUSE button.
- 43) Select page: 3, address: 13, set data: 04, and press the PAUSE button.
- 44) When the playback system from IC1501(VFD) to IC1402 (AOI) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

NTSC model

Address		ıta
16	B2	DE
17	E7	EE

PAL model

Address	Da	ıta
16	ED	9A
17	CB	1E

- 45) Select page: C, address: 51, set data: 03, and press the PAUSE button.
- 46) Select page: C, address: 60, set data: 0E, and press the PAUSE button.
- 47) Select page: 0, address: 01, and set data: 00.

## 2. Recording System Check

#### 2-1. Preparations for recording

- Playback the BIST check tape.(XH5-6(NTSC), XH5-6P(PAL))
- Select page: 3, address: 10, set data: C0, and press the PAUSE 2)
- Select page: 3, address: 11, set data: 07, and press the PAUSE button.
- 4) Enter the stop mode.
- While keep the HOLD switch of the adjusting remote commander at ON(SERVICE) position, eject the BIST check tape and insert a tape for recording in place of the tape.
- Enter the camera recording mode.

**Note:** Perform the following checks in the camera recording mode.

## 2-2. IC1501(VFD) BIST(REC) Check

- Select page: 3, address: 12, set data: 10, and press the PAUSE button.
- 2) Select page: 3, address: 12, set data: 00, and press the PAUSE
- Select page: 3, address: 13, set data: 04, and press the PAUSE 3) button.
- When the recording system from IC1501(VFD) to IC1600(SFD) is normal, the display data (combination data) of page: 3, address: 14 and 15 agrees with any combination as shown below.

NTSC model

14100 model		
Address	Data	
14	D5	
15	0B	

PAL model

Address	Data
14	34
15	8A

## 2-3. IC1600(SFD) BIST(REC) Check

- Select page: 0, address: 01, and set data: 01. 1)
- 2) Select page: C, address: AC, set data: 21, and press the PAUSE
- Select page: C, address: AD, set data: 01, and press the PAUSE 3) button.
- Select page: 3, address: 11, set data: 04, and press the PAUSE 4)
- Select page: 3, address: 12, set data: 08, and press the PAUSE 5) button.
- Select page: 3, address: 12, set data: 00, and press the PAUSE 6) button.
- 7) Select page: 3, address: 13, set data: 03, and press the PAUSE button.
- When the recording system from IC1600(SFD) to IC1602(LIP) is normal, the display data (combination data) of page: 3, address: 16 and 17 agrees with any combination as shown below.

NTSC model

N 3C IIIOGEI		
Address	Da	ıta
16	00	BC
17	15	CE

PAI model

Address	Da	ıta
16	2D	A2
17	F5	7B

When the recording system from IC1600(SFD) to IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 18 and 19 agrees with any combination as shown below.

# NTSC model

Address	Da	ıta
18	F7	4F
19	F6	69

PAL model

Address	Da	ıta
18	6C	23
19	C7	76

10) When the recording system from IC1501(VFD) to IC1600(SFD) is normal, the display data (combination data) of page: 3, address: 1A and 1B agrees with any combination as shown below.

NTSC model	
Address	Data
1A	D5
1B	0B

PAL model	
Address	Data
1A	34
1B	8A

- 11) Select page: C, address: AC, set data: 20, and press the PAUSE button
- 12) Select page: C, address: AD, set data: 00, and press the PAUSE
- 13) Select page: 0, address: 01, and set data: 00.

#### 2-4. IC1601(TFD) BIST(REC) Check

- Select page: 3, address: 40, set data: 0F, and press the PAUSE button.
- Select page: 3, address: 40, set data: 00, and press the PAUSE button.
- When all recording system of IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 41 and 42 agrees with any combination as shown below.

NTSC model

Address	Da	ıta
41	C2	A7
42	42	DD

PAL model

Address	Da	ata
41	55	1A
42	B5	04

- Select page: 3, address: 40, set data: 03, and press the PAUSE button.
- Select page: 3, address: 40, set data: 00, and press the PAUSE
- When the video recording system of IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 41 and 42 agrees with any combination as shown below.

NTSC model	
Address	Data
41	BB
42	4E

PAL model

FAL IIIOUEI		
Address	Data	
41	DC	
42.	ED	

- Select page: 3, address: 40, set data: 05, and press the PAUSE button.
- 8) Select page: 3, address: 40, set data: 00, and press the PAUSE button.
- When the audio recording system of IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 41 and 42 agrees with any combination as shown below.

Į	NTSC model	
	Address	Data
	41	D7
	42	23

PAL model

I AL IIIOGCI	
Address	Data
41	E4
42	38

- 10) Select page: 3, address: 40, set data: 09, and press the PAUSE button.
- 11) Select page: 3, address: 40, set data: 00, and press the PAUSE button.
- 12) When the subcode recording system of IC1601(TFD) is normal, the display data (combination data) of page: 3, address: 41 and 42 agrees with any combination as shown below.

N 13C Illouel		
Address	Data	
41	D9	
42	3C	

PAL model

Address	Data
41	47
42	27

- 13) Select page: 3, address: 40, set data: 01, and press the PAUSE button.
- 14) Select page: 3, address: 40, set data: 00, and press the PAUSE button.
- 15) When the recording system from IC1601 (TFD) to IC1900 (TRX) is normal, the display data (combination data) of page: 3, address: 43 and 44 agrees with any combination as shown below.

## NTSC model

Address	Da	ıta
43	18	C8
44	F0	FB

# PAL model

Address	Da	ıta
43	F6	A2
44	2A	E3

# 2-5. IC1900(TRX) BIST(REC) Check

- 1) Select page: 3, address: 12, set data: 04, and press the PAUSE button.
- 2) Select page: 3, address: 12, set data: 00, and press the PAUSE button.
- 3) Select page: 3, address: 13, set data: 02, and press the PAUSE button
- 4) When all recording system of IC1900 (TRX) is normal, the display data (combination data) of page: 3, address: 14 and 15 agrees with any combination as shown below.

## NTSC model

Address	Da	ıta
14	96	BC
15	D1	0E

# PAL model

Address	Da	ıta
14	27	В5
15	8D	61

## 3-6. IR TRANSMITTER ADJUSTMENTS

Adjust using a IR receiver jig (J-6082-383-A).

#### **Switch setting:**

LASER LINK ...... ON (Red LED is lit)

# 1. IR Video Carrier Frequency Adjustment (VI-151 board)

Mode	VTR stop
Signal	Arbitrary
Measurement Point	Pin (5) of CN003 of IR receiver jig (RF) (Or Pin (6) of IC1403)
Measuring Instrument	Frequency counter
Adjustment Page	С
Adjustment Address	28
Specified Value	$f = 11.85 \pm 0.05 \text{ MHz}$

## **Connection of Equipment**

Connect the measuring device as shown in the following figure, and adjust.

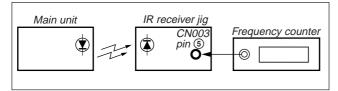


Fig. 5-3-9.

# Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 0C, set data: 08, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: C, address: 28, change the data, and set the video carrier frequency (f) to the specified value.
- 4) Press the PAUSE button of the adjustment remote commander.
- 5) Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

## 2. IR Video Deviation Adjustment (VI-151 board)

Mode	VTR stop
Signal	Arbitrary
Measurement Point	VIDEO OUT terminal of IR receiver jig (Terminated at 75 $\Omega$ )
Measuring Instrument	Oscilloscope
Adjustment Page	С
Adjustment Address	29
Specified Value	$A = 1.00 \pm 0.05 \text{ V}$

## **Connection of Equipment:**

Connect the measuring device as shown in the following figure, and adjust.

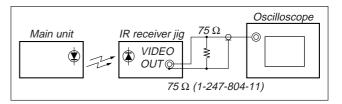


Fig. 5-3-10.

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 0C, set data: 02, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: C, address: 29, and change the data, set the video signal amplitude (A) to the specified value.
- 4) Press the PAUSE button of the adjustment remote commander.
- 5) Select page: 3, address: 0C, set data: 00, and press the PAUSE button of the adjustment remote commander.
- Select page: 0, address: 01, and set data: 00.

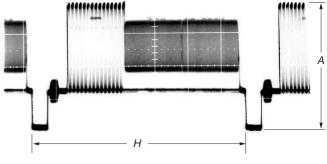


Fig. 5-3-11

# 3. IR Audio Deviation Adjustment (VI-151 board)

Mode	VTR stop
Signal	Video: No signal Audio: -400Hz, -7.5dBs, Audio left and right terminal of AUDIO/VIDEO jack
Measurement Point	AUDIO L terminal and AUDIO R terminal of IR receiver jig (Terminated at $47k\Omega$ )
Measuring Instrument	Audio level meter
Adjustment Page	С
Adjustment Address	2A
Specified Value	Signal level: $-7.5 \pm 1.0 \text{ dBs}$ Level difference of L and R: Below 2dB

# **Connection of Equipment:**

Connect the measuring device as shown in the following figure, and adjust.

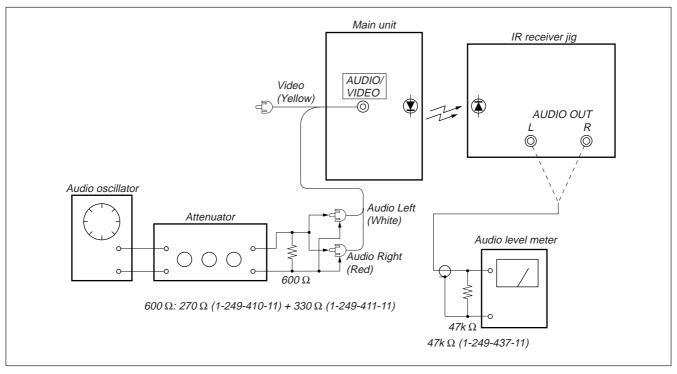


Fig. 5-3-12.

- 1) Select page: 0, address: 01, and set data: 01.
- Connect the audio level meter to the AUDIO L terminal of the IR receiver jig.
- Select page: C, address: 2A, change the data and set the 400Hz audio signal level to the specified value.
- 4) Press the PAUSE button of the adjustment remote commander.
- 5) Connect the audio level meter to the AUDIO R terminal of the IR receiver jig.
- 6) Check that the 400Hz audio signal level is within the specified value. If outside, repeat from step 2).
- 7) Select page: 0, address: 01, and set data: 00.

# 3-7. AUDIO SYSTEM ADJUSTMENTS

# [Connection of Audio System Measuring Devices]

Connect the audio system measuring devices as shown in Fig. 5-3-13.

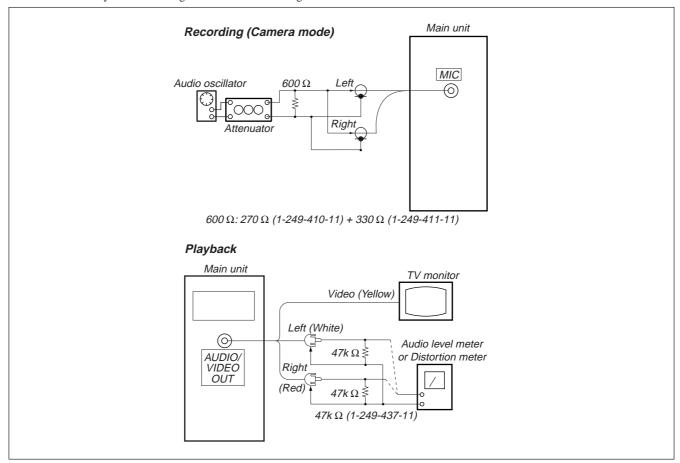


Fig. 5-3-13

# 1. Playback Level Check

Mode	VTR playback
Signal	Alignment tape: For audio operation check (XH5-3 (NTSC)) (XH5-3P (PAL))
Measurement Point	Audio left or right terminal of AUDIO VIDEO jack
Measuring Instrument	Audio level meter and frequency counter
Specified Value	32 kHz mode: 1 kHz, $+3.0 \pm 2.0$ dBs 48 kHz mode: 1 kHz, $+3.0 \pm 2.0$ dBs 44.1 kHz mode: The 7.35kHz signal level during EMP OFF is $+2.0 \pm 2.0$ dBs. The 7.35kHz signal level during EMP ON is $-6 \pm 2$ dB from the signal level during EMP OFF.

## **Checking Method:**

1) Check that the playback signal level is the specified value.

# 2. Overall Level Characteristics Check

Mode	Camera recording and playback
Signal	400Hz, -66 dBs signal: MIC jack left and right
Measurement Point	Audio left or right terminal of AUDIO VIDEO jack
Measuring Instrument	Audio level meter
Specified Value	$-7.5 \pm 3.0$ dBs

# **Checking Method:**

- 1) Input the 400Hz, -66dBs signal in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the 400Hz signal level is the specified value.

## 3. Overall Distortion Check

Mode	Camera recording and playback
Signal	400Hz, –66dBs signal: MIC jack left and right
Measurement Point	Audio left or right terminal of AUDIO VIDEO jack
Measuring Instrument	Audio distortion meter
Specified Value	Below 0.4% (200Hz to 6kHz BPF ON)

## **Checking Method:**

- 1) Input the 400Hz, -66dBs signal in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the distortion is the specified value.

## 4. Overall Noise Level Check

Mode	Camera recording and playback
Signal	No signal: Insert a shorting plug in the MIC jack
Measurement Point	Audio left or right terminal of AUDIO VIDEO jack
Measuring Instrument	Audio level meter
Specified Value	Below –45dBs (IHF-A filter ON, 20kHz LPF ON)

# **Checking Method:**

- 1) Insert a shorting plug in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the noise level is the specified value.

## 5. Overall Separation Check

Mode	Camera recording and playback
Signal	400Hz, -66dBs signal: MIC jack <right> [left] (Connect the MIC jack <left> [right] to GND)</left></right>
Measurement Point	Audio <left> [right] terminal of AUDIO VIDEO jack</left>
Measuring Instrument	Audio level meter
Specified Value	Below –40dBs (IHF-A filter ON)

<>: Left channel check

[ ]: Right channel check

# **Checking Method:**

- 1) Input the 400Hz, -66dBs signal in the <right> [left] terminal of the MIC jack only.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the signal level of the audio <left> [right] terminal is the specified value.

## 5-4. SERVICE MODE

# 4-1. ADJUSTMENT REMOTE COMMANDER

The adjustment remote commander is used for changing the calculation coefficient in signal processing, EVR data, etc. The adjustment remote commander performs bi-directional communication with the unit using the remote commander signal line (LANC). The resultant data of this bi-directional communication is written in the non-volatile memory.

#### 1. Using the adjustment remote commander

- Connect the adjustment remote commander to the LANC terminal.
- Set the HOLD switch of the adjustment remote commander to "HOLD" (SERVICE position). If it has been properly connected, the LCD on the adjustment remote commander will display as shown in Fig. 5-4-1.



Fig. 5-4-1

- 3) Operate the adjustment remote commander as follows.
  - · Changing the page

The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH- button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
	0	1	2	3	Ч	5	5	7	8	9	Я	Ь	С	d	Ε	F
Decimal notation conversion value	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

# · Changing the address

The address increases when the FF (►►) button is pressed, and decreases when the REW (►►) button is pressed. There are altogether 256 addresses, from 00 to FF.

- Changing the data (Data setting)
  The data increases when the PLAY (▶) button is pressed, and decreases when the STOP (■) button is pressed. There are altogether 256 data, from 00 to FF.
- Writing the adjustment data
   The PAUSE button must be pressed to write the adjustment data (B, C, D, F page) in the nonvolatile memory. (The new adjusting data will not be recorded in the nonvolatile memory if this step is not performed.)
- 4) After completing all adjustments, turn off the main power supply (8.4V) once.

# 2. Precautions upon using the adjustment remote commander

Mishandling of the adjustment remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

# 4-2. DATA PROCESS

The calculation of the DDS display and the adjustment remote commander display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Indicates the hexadecimal-decimal conversion table.

He	Hexadecimal-decimal Conversion Table   ②														2		
	Lower digit of hexadecimal	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	E	F
	Upper digit of hexadecimal											(日)	(日)	(_)	(급)	(E)	(F)
	0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
	2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
	3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
	4	64	65	66	67	68	69	70	71	72	73	74	77	76	77	78	79
	5	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
	6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
	7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
	8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
	9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
	A (A)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
1	B (占)	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
	C (_)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
	D (급)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
	E ( <i>E</i> )	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
	F (F)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

**Note:** The characters shown in the parenthesis ( ) shown the display on the adjustment remote commander.

(**Example**) If the DDS display or the adjustment remote commander shows BD (ロロ);

Because the upper digit of the adjustment number is B ( $\frac{1}{2}$ ), and the lower digit is D ( $\frac{1}{2}$ ), the meeting point "189" of ① and ② in the above table is the corresponding decimal number.

Table. 5-4-1.

# 4-3. SERVICE MODE

#### 1. Setting the Test Mode

Page D	Address 10
--------	------------

Data	Function
00	Normal
01	Forced camera power ON
02	Forced VTR power ON
03	Forced camera + VTR power ON
05	Forced memory power ON

- Before setting the data, select page: 0, address: 01, and set data:
   01
- For page D, the data set is recorded in the non-volatile memory by pressing the PAUSE button of the adjustment remote commander. In this case, take note that the test mode will not be exited even when the main power is turned off (8.4Vdc).
- After completing adjustments/repairs, be sure to return the data
  of this address to 00, and press the PAUSE button of the adjustment
  remote commander.

Select page: 0, address: 01, and set data: 00.

# 2. Emergence Memory Address

Page C	Address 38 to 43
--------	------------------

Address	Contents
38	EMG code when first error occurs
	Upper: MSW code when shift starts when first
3A	error occurs
	Lower: MSW code when first error occurs
3B	Lower: MSW code to be moved when first error
ЗБ	occurs
3C	EMG code when second error occurs
	Upper: MSW code when shift starts when second
3E	error occurs
	Lower: MSW code when second error occurs
3F	Lower: MSW code to be moved when second error
ЭГ	occurs
40	EMG code when last error occurs
	Upper: MSW code when shift starts when last error
42	occurs
	Lower: MSW code when last error occurs
43	Lower: MSW code to be moved when last error
43	occurs

When no error occurs in this unit, data "00" is written in the above addresses (38 to 43). when first error occurs in the unit, the data corresponding to the error is written in the first emergency address (38 to 3B). In the same way, when the second error occurs, the data corresponding to the error is written in the second emergency address (3C to 3F). Finally, when the last error occurs, the data corresponding to the error is written in the last emergency address (40 to 43).

**Note:** After completing adjustments, be sure to initialize the data of addresses 38 to 43 to "00".

## **Initializing method:**

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: C, address: 38, set data: 00, and press the PAUSE button
- 3) Select address: 39 to 43 and set data: "00" into them in same way as in address: 38.
- 4) Select page: 0, address: 01, and set data: 00.

## 2-1. EMG Code (Emergency Code)

Codes corresponding to the errors which occur are written in addresses 38, 3C and 40. The type of error indicated by the code are shown in the following table.

Code	Emergency Type
00	No error
10	Loading motor emergency during loading
11	Loading motor emergency during unloading
22	T reel emergency during normal rotation
23	S reel emergency during normal rotation
24	T reel emergency (Short circuit between S reel terminal and T reel terminal)
30	FG emergency at the start up of the capstan
40	FG emergency at the start up of the drum
42	FG emergency during normal rotation of the drum

# 2-2. MSW Code

# MSW when errors occur:

Information on MSW (mode SW) when errors occur

# MSW when movement starts:

Information on MSW when movements starts when the mechanism position is moved (When the L motor is moved)

## MSW of target of movement:

Information on target MSW of movement when the mechanism position is moved

# **Mechanical Position**


$\leftarrow UNLC$	DAD														LOAD -	<b>&gt;</b>
EJECT	BL	ULE	BL	SR	BL	HL	BL	LE	BL	STOP	BL	RP	BL	REW	BL	
	_	_		_				0	_	0	_	1	1	_	_	≺ A (LSB)
<u> </u>	_ ;	0	<u> </u>	0	<u> </u>	0		_		0	_	_	_	_	_	<b>⋖</b> — B
-	<b>-</b>	_	¦ —		¦ —	0	<del></del> -	_	¦ —	_	¦ <b>-</b>	0	<b>-</b>	0	_	<b>←</b> C
0	<b>→</b> ¦	0	¦ —	¦ -	¦ —	¦ <u>~</u>	<del></del>	_	¦ —	_	¦ <b>~</b>	<u> </u>	<b>-</b>	0	_	→ D (MSB)
	H ¦	II	¦ II	l II	¦ II	¦ II	II	II	¦ II	II	H	ll ll	Ш	II	II	1 !
7	п¦	5	П	D	П	9	Ή	П	П	C	Ή	В	П	ယ	П	1
			 		 	! !	! !		! ! !		! !		 		 	1
i i				LS C	hassi	s moveme	ent se	ection				<b>←</b>			<b>─</b>	1
I I													Pinch	roller pre	essing	i I
														<b>←</b>		1 1
Lock released Tension regulator ON Cassette compartment																

Position	Code	Contents
EJECT	7	Position at which the cassette component lock is released, at the farthest unload side mechanically at which the mechanism can move no further in the UNLOAD direction.
BL	F	BLANK code, at the boundary between codes.
USE	5	EJECT completion position. When the cassette is ejected, the mechanism will stop at this position. Cassette IN standby. The guide will start protruding out as the mechanism moves towards the LOAD position.
SR	D	Code during loading.
HL	9	Guide loading are performed here.
LE	Е	Current limiter turned off.
STOP	С	Stop position in the loading state. The pinch roller separates, the tension regulator returns, and the brake is imposed on both reels.
RP	В	PB, REC, CUE, PAUSE positions. When pinch roller is pressed, and the tension regulator is ON, the mechanism is operating at this position in modes in which normal images are shown.
REW	3	REW position. The tension regulator is half on. This position is not used except for the REW mode.

# 3. Bit value discrimination

Bit values must be discriminated using the display data of the adjustment remote commander for following items. Use the table below to discriminate if the bit value is "1" or "0".

Display on the adjustment remote commander

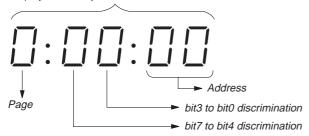

	Display on the		Bit va	alues	
	adjustment	bit3	bit2	bit1	bit0
	remote	or	or	or	or
	commander	bit7	bit6	bit5	bit4
	0	0	0	0	0
	1	0	0	0	1
	2	0	0	1	0
	3	0	0	1	1
	4	0	1	0	0
	5	0	1	0	1
	6	0	1	1	0
	7	0	1	1	1
A	8	1	0	0	0
	9	1	0	0	1
	A (Ħ)	1	0	1	0
	В (Ы)	1	0	1	1
	C ( <u>r</u> )	1	1	0	0
	D (日)	1	1	0	1
$^{f B}$	E ( <b>E</b> )	1	1	1	0
	F(F)	1	1	1	1

**Example:** If "8E" is displayed on the adjustment remote commander, the bit values for bit7 to bit4 are shown in the (a) column, and the bit values for bit3 to bit0 are shown in the (b) column.

# 4. Switch check (1)

1	Page 2	Address 43
---	--------	------------

Bit	Function	When bit value=1	When bit value=0
0	VTR MODE SW	OFF	ON
1	CAM MODE SW	OFF	ON
2	START/STOP SW	OFF	ON
3	EJECT SW	OFF	ON
4	CC DOWN SW	OFF	ON
5	PHOTO FREEZE SW	OFF	ON
6			
7	PHOTO REC SW	OFF	ON

# Using method:

- 1) Select page: 2, address: 43.
- By discriminating the bit value of display data, the state of the switches can be discriminated.

# 5. Switch check (2)

Page 2	Address 60 to 67

# Using method:

- 1) Select page: 2, address: 60 to 67.
- By discriminating the display data, the pressed key can be discriminated

Address				Data			
Address	00 (00 to 0A)	19 (0B to 24)	32 (25 to 44)	59 (45 to 6E)	85 (4F to 9F)	B8 (A0 to D4)	EE (D5 to FF)
60	STOP	REW	PLAY	REC			
(KEY AD0)	(FK4880 block)	(FK4880 block)	(FK4880 block)	(FK4880 block)			No key input
(IC2204 <b>93</b> )	(S800)	(S802)	(S804)	(S807, 808)			
61	PAUSE	FF	PHOTO REC	SELF TIMER	LASER LINK		
(KEY AD1)	(FK4880 block)		No key input				
(IC2204 <b>9</b> 4)	(S801)	(S803)	(S811)	(S805)	(S809)		
62	FADER	BACK LIGHT		EDIT SEARCH –	EDIT SEARCH +		
(KEY AD2)	(ED-48 block)	(ED-48 board)		(ED-48 board)	(ED-48 board)		No key input
(IC2204 95)	(S7000)	(S7001)		(S7002)	(S7003)		
63	EXPOSURE	PROGRAM AE	WHITE BALANCE	SHUTTER	AUTO LOCK HOLD	AUTO LOCK AUTO	AUTO LOCK MANUAL
(KEY AD3)	(FP-18, S103)	(FP-18, S102)	(FP-18,S101)	(FP-18, S100)	(CK-80 board)	(CK-80 board)	(CK-80 board)
(IC2204 <b>96</b> )					(S7214)	(S7214)	(S7214)
64	TITLE	DIGITAL EFFECT	PICTURE EFFECT	EXECUTE	START/STOP MODE	START/STOP MODE	START/STOP MODE
(KEY AD4)	(CK-80 board)	(CK-80 board)	(CK-80 board)	(CK-80 board)	5SEC	PUSH REC	NORMAL
(IC2204 97)	(S7202)	(S7205)	(S7208)	(S7219)	(CK-80 board)	(CK-80 board)	(CK-80 board)
					(S7210)	(S7210)	(S7210)
65	END SEARCH	DISPLAY	MENU	ND FILTER	FOCUS INFINITY	FOCUS AUTO	FOCUS MANUAL
(KEY AD5)	(CK-80 board)	(CK-80 board)	(CK-80 board)	(FP-21, S702)	(FP-21, S700)	(FP-21, S700,701)	(FP-21, S700)
(IC2204 <b>98</b> )	(S7201)	(S7204)	(S7207)				
66	MEMORY +	MEMORY -	MEMORY INDEX	MEMORY DELETE	MEMORY PLAY	PANEL	PANEL NORMAL
(KEY AD6)	(CK-80 board)	REVERSE	(FP-16, S001)				
(IC2204 99)	(S7200)	(S7203)	(S7206)	(S7209)	(S7209)	(FP-16, S001)	
67	PANEL BRIGHT +	PANEL BRIGHT -	VOLUME +	VOLUME –	DATA CODE	PANEL CLOSE	PANEL OPEN
(KEY AD7)	(FP-19, S503)	(FP-19, S502)	(FP-19, S501)	(FP-19, S500)	(CK-80 board)	(FP-16, S002)	(FP-16, S001)
(IC2204 100)					(S7212)		

# 6. Record of Use check

Page 2	Address A2 to AA

Address	Function		Remarks
A2		Minutes	
A3	Drum rotation counted time (BCD code)	Hour (L)	10th place digit and 1st place digit of counted time (decimal digit)
A4		Hour (H)	1000th place digit and 100th place digit of counted time (decimal digit)
A5		Year	
A6	User initial power on date (BCD code)	Month	After setting the clock, set the date of power on next.
A7		Day	
A8	Final condensation occurrence date	Year	
A9	(BCD code)	Month	
AA	(BCD code)	Day	

# Using method:

1) The record of use data is displayed at page: 2, addresses: A2 to AA.

Note: This data will be erased when the coin lithium battery (CK-80 board BT7200) is removed (reset).

# DCR-TRV890E/TRV900/TRV900E

# SECTION 6 REPAIR PARTS LIST

# 6-1. EXPLODED VIEWS

#### NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation


AUS: Australian model
JE: Tourist model
CND: Canadian model
CN: Chinese model
HK: Hong Kong model

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.


Ne les remplacer que par une pièce portant le numéro spécifié.

## 6-1-1.OVERALL SECTION

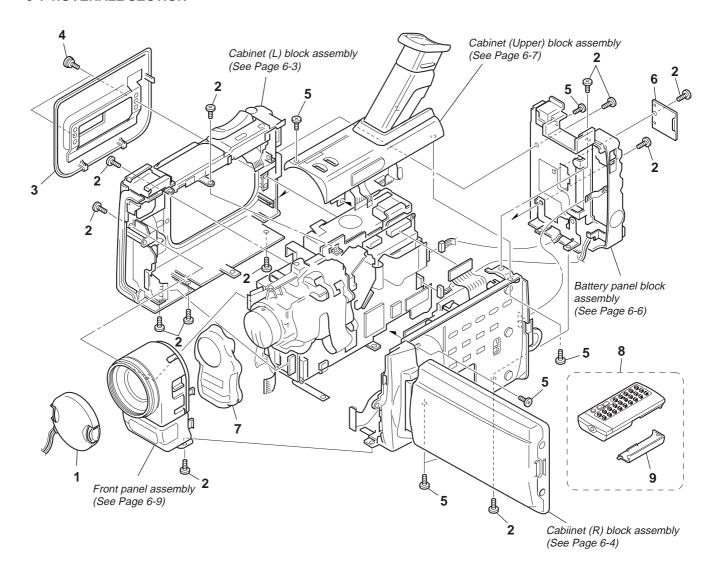


Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
1	X-3948-941-1	CAP ASSY, LENS		6	3-051-885-01	COVER, CPC	
2	3-968-729-01	SCREW (M2), LOCK ACE, P2		7	3-052-033-01	SHEET, ACOUSTIC ISOLATION	
3	X-3948-999-1	LID ASSY, CASSETTE		8	1-475-950-21	REMOTE COMMANDER (RMT-811) (9	00/900E)
4	3-989-746-01	SCREW (M2 STEP)		8	1-475-950-31	REMOTE COMMANDER (RMT-812) (8	90E)
5	3-968-729-71	SCREW (M2), LOCK ACE, P2		9	3-053-056-01	LID, BATTERY CASE	

# 6-1-2. MECHANISM FRAME SECTION

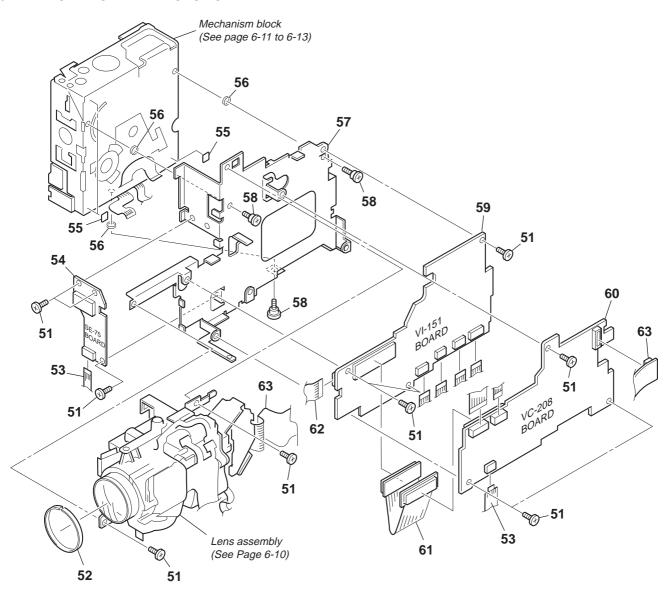


Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
51	3-968-729-51	SCREW (M2), LOCK ACE, P2		59	A-7094-030-A	VI-151 BOARD, COMPLETE (890E)	
52	3-052-621-01	CUSHION, LENS		59	A-7094-068-A	VI-151 BOARD, COMPLETE (900/900E	Ξ)
53	1-670-982-11	FP-14 FLEXIBLE BOARD		60	A-7094-031-A	VC-208 BOARD, COMPLETE (890E)	
54	A-7073-675-A	SE-75 BOARD, COMPLETE		60	A-7094-069-A	VC-208 BOARD, COMPLETE (900)	
55	3-975-921-01	SHEET, VIBRATION PROOF		60	A-7094-071-A	VC-208 BOARD, COMPLETE (900E)	
* 56	3-052-802-01	PIN, MD GROUND		61	1-670-976-21	FP-8 FLEXIBLE BOARD	
57	X-3948-939-1	FRAME ASSY, MD		62	1-670-980-11	FP-12 FLEXIBLE BOARD	
58	3-988-464-01	SCREW (M2), STEP		63	A-7073-676-A	CD-202 BOARD, MOUNT	

# 6-1-3. CABINET (L) SECTION

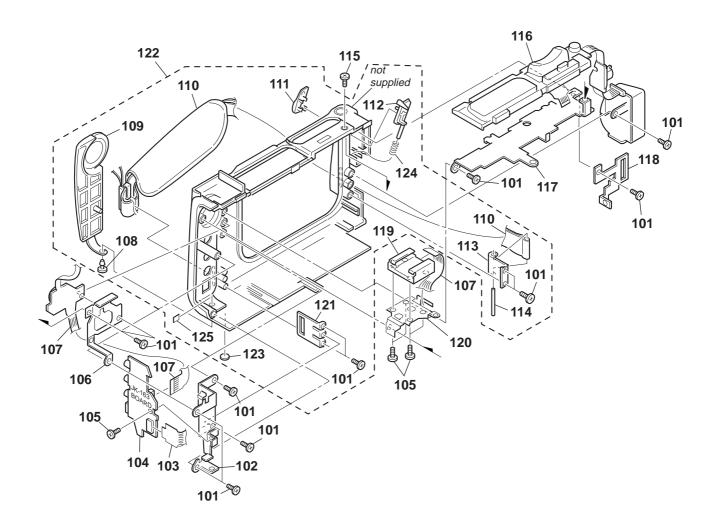


Ref. No.	Part No.	<u>Description</u>	Remarks	Ref. No.	Part No.	<u>Description</u>	Remarks
101	3-948-339-01	SCREW 0-NO. +P2 TAPPING B2		116	1-475-949-21	SWITCH BLOCK, CONTROL (FK48	380)
102	3-051-902-01	SHEET METAL, JK					(900,900E)
103	1-670-979-11	FP-11 FLEXIBLE BOARD		116	1-475-949-31	SWITCH BLOCK, CONTROL (FK48	380)(890E)
104	A-7073-677-A	JK-163 BOARD, COMPLETE		117	3-051-904-01	FRAME, FK	
105	3-968-729-51	SCREW (M2), LOCK ACE, P2		118	3-051-900-01	SHEET METAL (UPPER), STRAP	
				119	1-774-867-31	CONNECTOR, EXTERNAL (HOT SH	OE)8P
106	3-051-901-01	SHEET METAL, S TERMINAL					
107	1-670-990-21	FP-23 FLEXIBLE BOARD		120	3-051-903-01	RETAINER, SHOE	
108	3-051-930-01	PIN, JACK		121	3-051-871-01	BRACKET (FRONT), BELT	
109	3-051-899-01	COVER, JACK		122	X-3949-000-1	CABINET (L) ASSY (900)	
110	3-051-873-01	BELT, GRIP		122	X-3949-045-1	CABINET (L) ASSY (900E)	
				122	X-3949-061-1	CABINET (L) ASSY (890E)	
111	3-051-864-01	BUTTON, EJECT					
112	3-051-865-01	LOCK, EJECT		* 123	3-051-944-01	FOOT, RUBBER	
113	3-051-866-01	BRACKET (REAR), BELT		124	3-302-492-00	SPRING, COMPRESSION	
114	3-703-357-08	PIN (DIA. 1.6 SERISE)		* 125	3-052-738-01	SPACER (JC)	
115	3-968-729-01	SCREW (M2), LOCK ACE, P2					

# 6-1-4. CABINET (R) SECTION

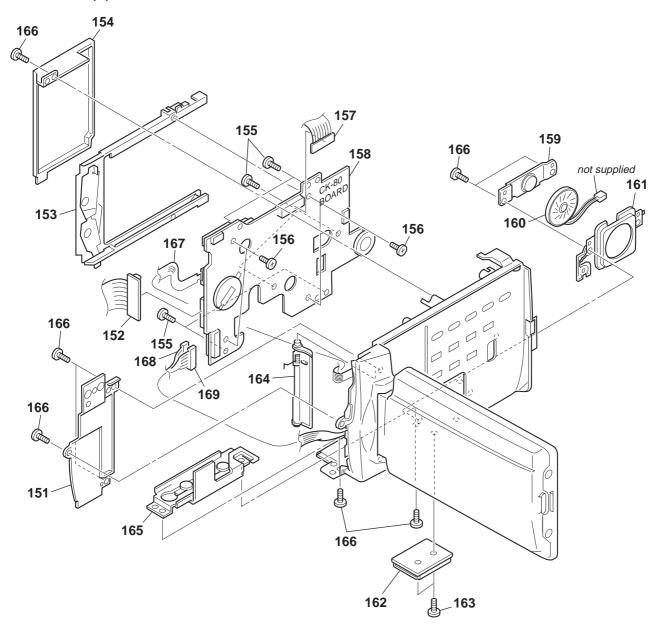

Ref. No.	Part No.	Description	<u>Remarks</u>	Ref. No.	Part No.	Description	Remarks
* 151	3-051-920-01	LID, LCD HINGE		* 161	3-051-906-01	HOLDER, SP	
152	1-670-981-21	FP-13 FLEXIBLE BOARD		162	3-051-913-01	STAND	
153	3-052-482-01	EJECTOR, CARD		163	3-968-729-71	SCREW (M2), LOCK ACE, P2	
* 154	3-051-918-01	COVER, PM		164	X-3948-942-1	PLATE ASSY, BLIND	
155	3-989-735-41	SCREW (M1.7), LOCK ACE, P2		165	X-3948-945-1	SLIDE ASSY, PM	
156	3-051-931-01	SCREW (M2), LOCK ACE		166	3-968-729-51	SCREW (M2), LOCK ACE, P2	
157	1-670-977-21	FP-9 FLEXIBLE BOARD		167	1-670-983-21	FP-16 FLEXIBLE BOARD	
158	A-7073-678-A	CK-80 BOARD, COMPLETE		168	1-958-983-11	HARNESS (CP-81) 12PIN	
* 159	X-3948-943-1	PLATE ASSY, SP FIXED		169	1-958-984-11	HARNESS (CP-82) 13PIN	
160	1-505-619-11	SPEAKER (2.0 CM)					

# 6-1-5.LCD PANEL SECTION

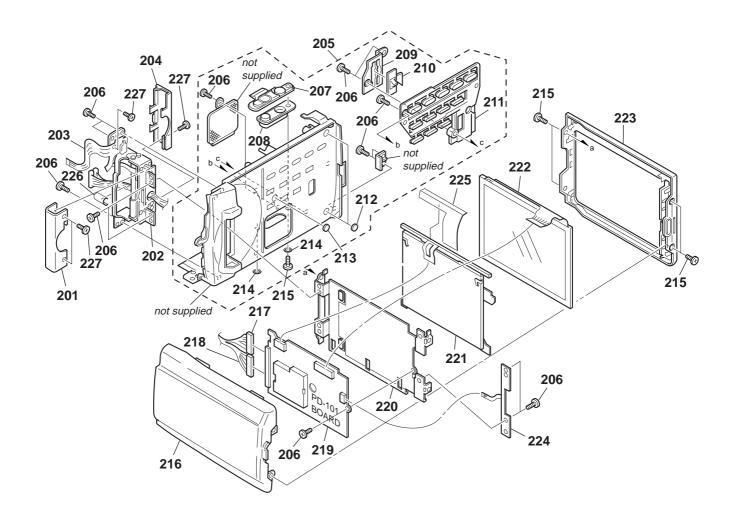

Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
201	3-051-921-01	COVER (FRONT), HINGE		216	X-3949-004-1	CABINET (C) ASSY, P(900)	
202	X-3948-944-1	HINGE ASSY		216	X-3949-046-1	CABINET (C) ASSY, P(900E:AEP,UK)	
203	1-670-983-21	FP-16 FLEXIBLE BOARD		216	X-3949-062-1	CABINET (C) ASSY, P(890E)	
204	3-051-922-01	COVER (REAR), HINGE		216	X-3949-063-1	CABINET (C) ASSY, P(900E:E,HK,AUS	S,JE,CN)
205	X-3948-998-1	CABINET (R) ASSY		217	1-958-983-11	HARNESS (CP-81) 12PIN	
206	3-968-729-51	SCREW (M2), LOCK ACE, P2		218	1-958-984-11	HARNESS (CP-82) 13PIN	
207	3-051-840-01	SCREW, TRIPOD		219	A-7073-679-A	PD-101 BOARD, COMPLETE	
208	3-051-842-01	HOLDER, TRIPOD SCREW		220	X-3948-961-1	FRAME ASSY, PANEL	
209	3-051-839-01	COVER, SS MODE KNOB		<b>1 ∆</b> 221	1-517-754-21	TUBE, FLUORESCENT, COLD CATHOL	)E
210	3-051-835-01	KNOB, SS MODE		222	1-803-274-21	MODULE, CRYSTAL INDICATION	
211	3-051-834-01	BUTTON, R		223	X-3949-003-1	CABINET (M) ASSY, P	
212	3-959-978-02	CUSHION, PANEL		224	1-670-986-21	FP-19 FLEXIBLE BOARD	
213	3-052-521-01	CUSHION (2), PANEL		* 225	3-051-932-01	COVER, LIGHT GUIDE FLEXIBLE	
214	3-051-848-01	WASHER, TRIPOD SCREW		226	3-846-067-21	SPACER (C)	
215	3-968-729-71	SCREW (M2), LOCK ACE, P2		227	3-973-497-91	SCREW (M1.7), 0-NO. +P 2	
				_			

Note: The components identified by


mark riangle or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque riangle sont critiques pour la sécurité.


Ne les remplacer que par une pièce portant le numéro spécifié.

# 6-1-6. BATTERY PANEL SECTION

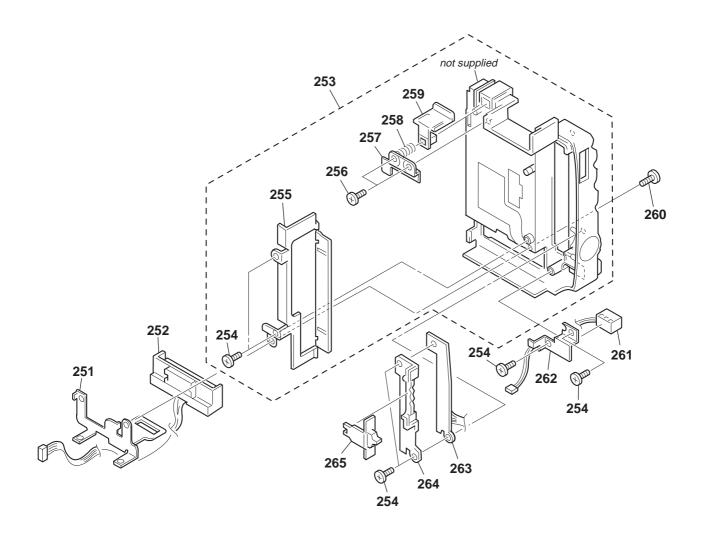


Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
251	3-051-905-01	SHEET METAL (LOWER), STRAP		259	3-051-950-01	CLAW, BT LOCK	
252	1-694-411-11	TERMINAL BOARD, BATTERY		260	3-968-729-71	SCREW (M2), LOCK ACE, P2	
253	X-3949-001-1	PANEL ASSY, BATTERY		261	1-785-247-11	CONNECTOR, DC-IN	
254	3-948-339-01	SCREW, TAPPING B2		262	3-051-915-01	PLATE, DC FIXED	
255	X-3948-957-1	DOOR ASSY, PM		263	1-670-985-21	FP-18 FLEXIBLE BOARD	
256	3-713-791-71	SCREW (M1.7X4)		264	3-051-917-01	HOLDER, AL KNOB	
257	3-051-951-01	COVER, BT LOCK		265	3-051-916-01	KNOB, AL	
258	3-052-017-01	SPRING BT LOCK					

# 6-1-7. CABINET (UPPER) SECTION

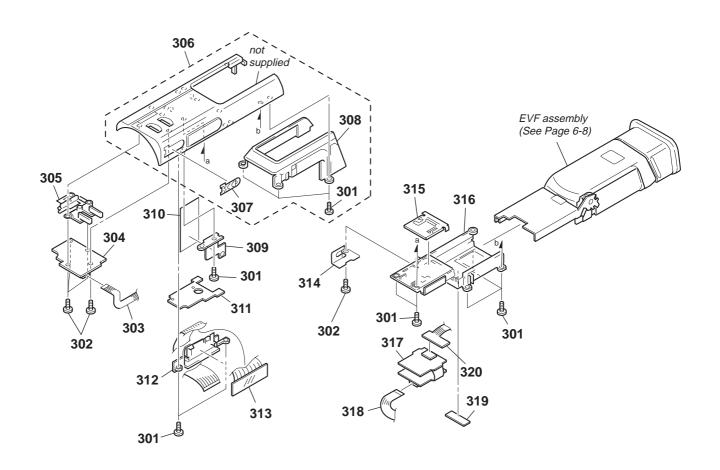


Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
301	3-968-729-01	SCREW (M2), LOCK ACE, P2		* 311	3-051-894-01	RETAINER, SLIDER	
302	3-968-729-51	SCREW (M2), LOCK ACE, P2		* 312	3-051-893-01	RETAINER, LCD	
303	1-670-984-11	FP-17 FLEXIBLE BOARD		313	A-7093-972-A	PANEL BLOCK ASSY, INDICATION	
304	A-7073-684-A	ED-48 BOARD, COMPLETE		* 314	3-051-898-01	PLATE, SLIDER GROUND	
305	3-051-892-01	BUTTON, EDIT		315	3-051-923-01	PLATE, VF CLICK	
306	X-3949-005-1	CABINET (UPPER) ASSY		316	3-051-897-01	BASE, VF SLIDE	
307	3-963-933-01	EMBLEM, CCD		317	A-7073-682-A	VF-121 BOARD, COMPLETE	
* 308	3-051-869-01	COVER, SIDE		318	1-670-978-11	FP-10 FLEXIBLE BOARD	
* 309	3-051-895-01	JOINT, U-R		319	3-831-441-11	CUSHION	
* 310	3-052-917-01	SHEET, U-R (890E/900:CND,E,HK,JE,9	00E)	320	1-670-987-21	FP-20 FLEXIBLE BOARD	

# 6-1-8.EVF SECTION

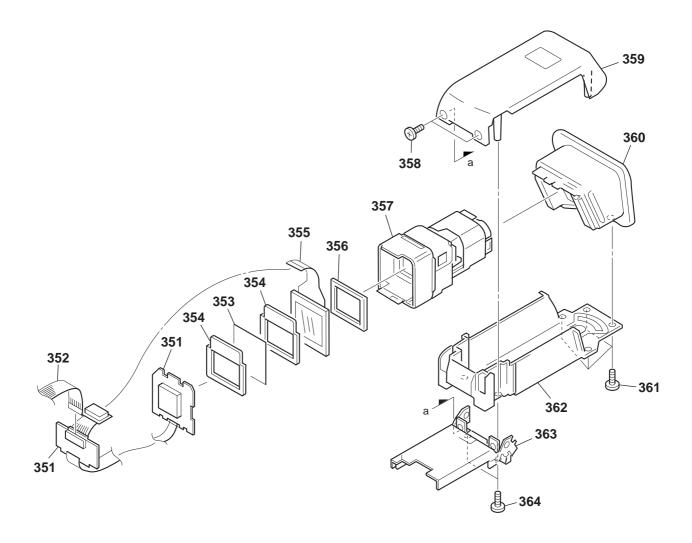


Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	Description	<u>Remarks</u>
351	A-7073-683-A	LB-55 BOARD, COMPLETE		358	3-968-729-01	SCREW (M2), LOCK ACE, P2	
352	1-670-987-21	FP-20 FLEXIBLE BOARD		359	3-051-896-01	CABINET (UPPER), EVF	
* 353	3-988-563-01	ILLUMINATOR (458), BL		360	X-3948-951-1	CUP ASSY, EYE	
354	3-989-416-01	CUSHION (458), LCD		361	3-713-791-01	SCREW (M1.7X5), TAPPING, P2	
355	8-753-023-51	LCX027AK-1		362	X-3948-962-1	CABINET (LOWER) ASSY, EVF	
* 356	3-960-302-11	CUSHION (1), LCD		363	X-3948-963-1	SLIDER ASSY, VF	
357		LENS ASSY (458), VF		364		SCREW (M1.7X8), TAPPING, P2	

# 6-1-9. FRONT PANEL SECTION

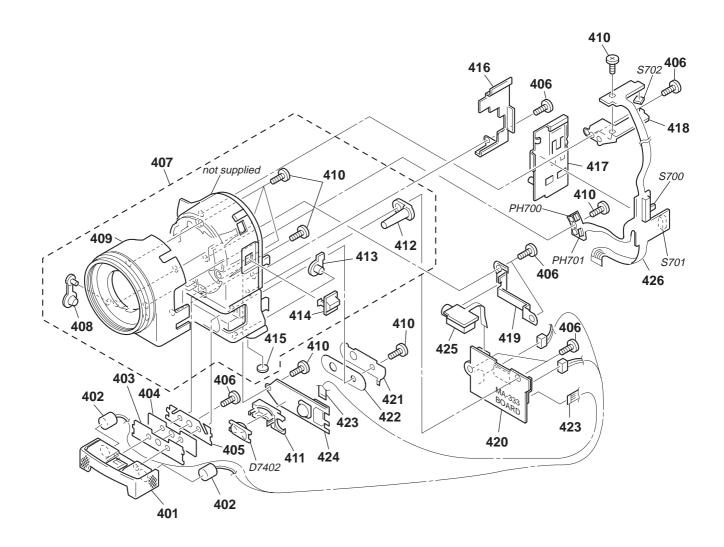


Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
401	X-3948-950-1	GRILLE ASSY, MICROPHONE		417	X-3948-949-1	RETAINER ASSY, MF	
402	1-418-014-11	MICROPHONE UNIT		418	X-3948-954-1	RETAINER ASSY, ND	
403	3-051-926-01	LID, MICROPHONE		* 419	3-051-887-01	RETAINER, JACK	
* 404	3-051-927-01	PLATE, MICROPHONE CLOSE UP		420	A-7073-680-A	MA-333 BOARD, COMPLETE	
405	3-051-928-01	PLATE, VIBRATION PROOF		* 421	3-051-888-01	RETAINER, MICROPHONE	
406	3-948-339-01	SCREW, TAPPING B2		422	3-051-891-01	CUSHION, MICROPHONE RETAINER	
407	X-3949-002-1	PANEL ASSY, FRONT		423	1-670-991-11	FP-37 FLEXIBLE BOARD	
408	3-051-942-01	LID, MICROPHONE JACK		424	A-7073-681-A	RI-10 BOARD, COMPLETE	
409	3-051-907-11	COVER, FRONT		425	1-670-989-21	FP-22 FLEXIBLE BOARD	
410	3-968-729-51	SCREW (M2), LOCK ACE, P2		426	1-670-988-21	FP-21 FLEXIBLE BOARD	
						(INCLUDE S700,S	5701,S702)
411	3-719-845-01	SCREW (B2X4), TAPPING					
* 412	3-051-912-01	TALLY, FRONT		D7402	8-719-061-86	DIODE DCR2810 (R)	
* 413	3-051-940-01	WINDOW, SIDE IR		PH700	8-749-014-54	HIC CNA1312K01S0	
414	3-051-935-01	MF KNOB		PH701	8-749-014-54	HIC CNA1312K01S0	
* 415	3-051-944-01	FOOT, RUBBER		S700	1-771-487-21	SWITCH, SLIDE	
				S701	1-762-851-21	SWITCH, TACT	
* 416	3-051-929-01	REINFORCEMENT, MF					
				S702	1-762-851-21	SWITCH, TACT	

# 6-1-10. LENS BLOCK SECTION

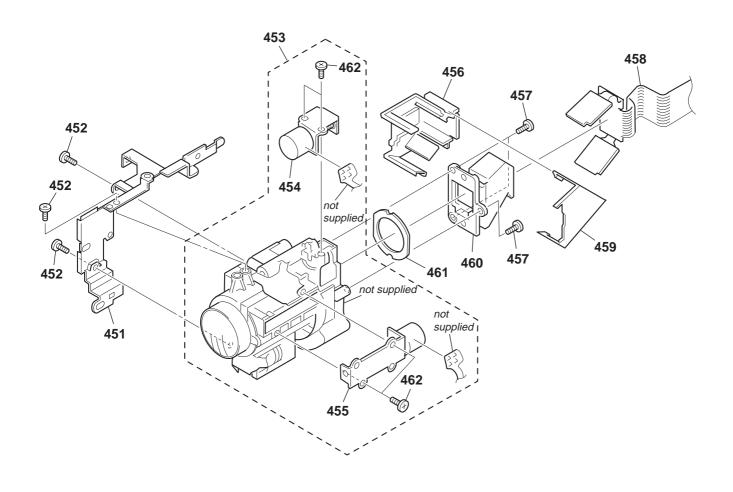


Ref. No.	Part No.	Description	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
451	3-051-924-01	FRAME, LENS		457	3-713-791-61	SCREW (M1.7X7), TAPPING, P2	
452	3-948-339-01	SCREW, TAPPING B2		458	A-7073-676-A	CD-202 BOARD, MOUNT	
453	1-758-174-11	LENS, ZOOM (VCL-4312VA)		459	X-3948-953-1	COVER (R) ASSY, PRISM	
454	3-709-428-01	MOTOR, FOCUS		460	A-7030-948-A	PRISM ASSY (INCLUDE 3CCD)(890E/	900E)
455	3-709-429-01	MOTOR, ZOOM		460	A-7093-999-A	PRISM ASSY (INCLUDE 3CCD)(900)	
456	X-3948-952-1	COVER (L) ASSY, PRISM		461	3-989-731-01	RUBBER, SEAL	

# 6-1-11. CASSETTE COMPARTMENT, DRUM AND REEL TABLE ASSEMBLY

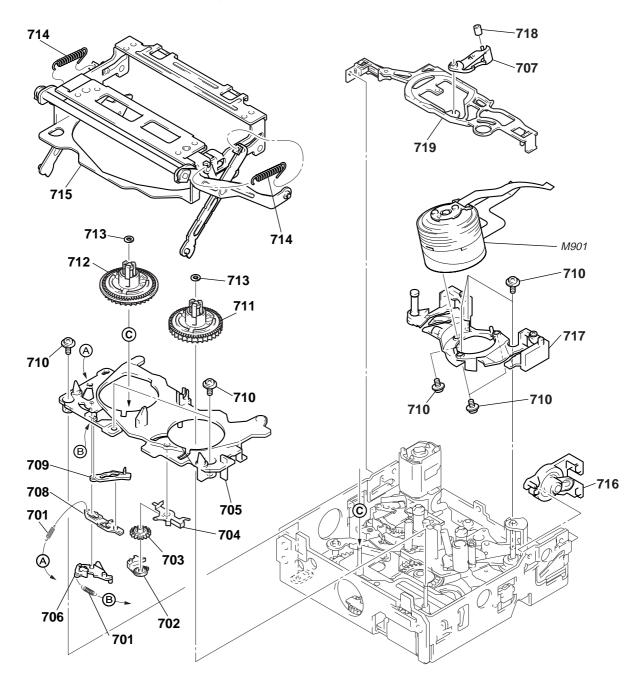


Ref. No.	Part No.	Description	<u>Remarks</u>	Ref. No.	Part No.	Description	<u>Remarks</u>
701	3-988-312-01	SPRING, EXTENSION		711	X-3948-445-1	TABLE (T) ASSY, REEL	
702	3-988-220-01	BRAKE (T)		712	X-3948-444-1	TABLE (S) ASSY, REEL	
703	3-988-221-01	GEAR (T), BRAKE		713	3-989-465-01	WASHER, STOPPER	
704	3-988-222-01	SPRING (T), BRAKE		714	3-988-298-01	SPRING EXTENSION	
705	3-988-215-02	BASE, CASSETTE		715	X-3948-441-2	CASSETTE COMPARTMENT ASSY	
706	3-988-217-01	ARM (S), RESET		716	X-3948-443-2	DAMPER ASSY	
707	3-988-281-02	ARM, HC		717	A-7093-612-A	DRUM BASE BLOCK ASSY	
708	3-988-219-01	RACK (S), BRAKE		718	3-988-282-01	ROLLER, HC	
709	3-988-218-01	BRAKE (S)		719	3-988-283-01	STOPPER, TAPE FALL	
710	3-947-503-01	SCREW (M1.4X2.5)		M901	A-7048-887-A	DRUM ASSY (DEH-11B-R)	

# 6-1-12. TAPE GUIDE, PINCH SLIDER ASSEMBLY AND BRAKE SLIDER ASSEMBLY

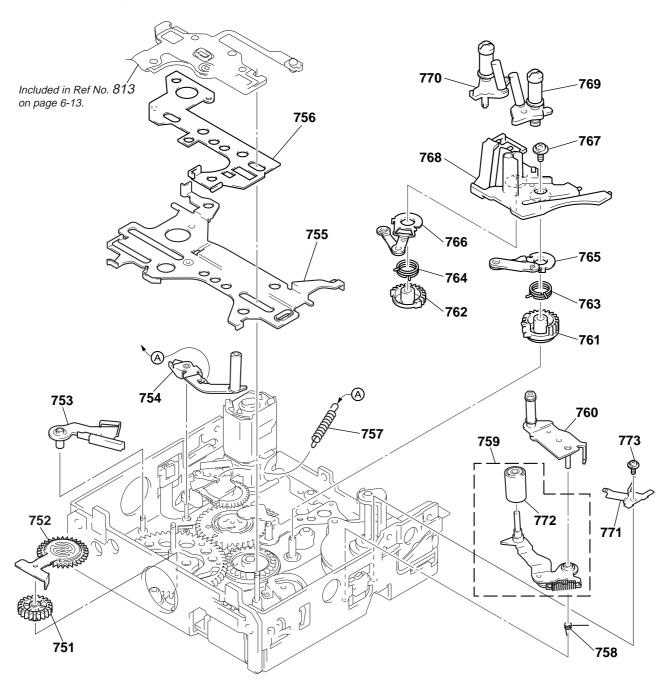

Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
751	3-988-263-01	GEAR, RELAY		763	3-988-258-01	SPRING (GLT), TORSION	
752	X-3948-442-2	GEAR ASSY, GOOSENECK		764	3-988-253-01	SPRING (GLS), TORSION	
753	X-3948-435-2	PLATE ASSY, TG1 ADJUSTMENT		765	X-3948-440-1	ARM (T) ASSY, GL	
754	X-3948-434-1	ARM ASSY, TG1		766	X-3948-439-2	ARM (S) ASSY, GL	
755	X-3948-428-2	SLIDER ASSY, PINCH		767	3-947-503-01	SCREW (M1.4X2.5)	
756	X-3948-766-1	SLIDER ASSY, BRAKE		768	3-988-242-01	RAIL, GUIDE	
757	3-988-270-01	SPRING (TG1), TENSION COIL		769	X-3948-438-3	COASTER (T) ASSY	
758	3-988-233-01	SPRING (TG7LD), TORSION		770	X-3948-437-1	COASTER (S) ASSY	
759	X-3948-433-2	ARM ASSY, PINCH		771	3-988-690-02	SPRING, TG7 RETAINER	
760	A-7093-501-A	ARM BLOCK ASSY, TG7		772	X-3748-630-2	ROLLER ASSY (DIA. 5.6), PINCH	
761 762	3-988-257-01 3-988-252-02			773	3-053-083-01	SCREW (M1.4X5)	

# 6-1-13. EACH GEARS AND LOADING / CAPSTAN MOTOR ASSEMBLY

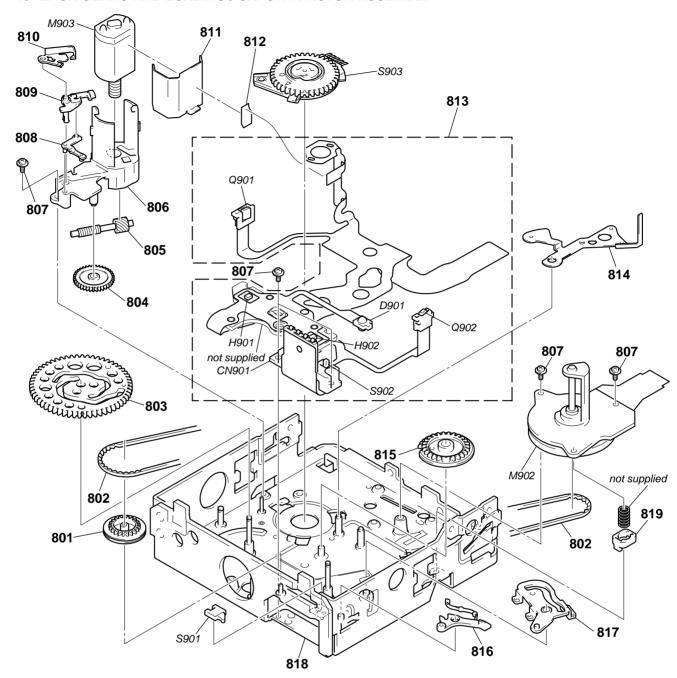

Ref. No.	Part No.	Description	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
801	3-988-274-01	PULLEY, CONVERSION		816	3-988-223-01	ARM, EJECT	
802	3-988-276-02	BELT, TIMING		817	3-988-224-01	ARM, PINCH PRESS	
803	3-988-216-01	GEAR, CAM		818	X-3948-431-2	CHASSIS ASSY	
804	3-988-211-01	GEAR, DECELERATION		819	3-050-170-01	HOLDER	
805	3-988-210-01	SHAFT, WORM		CN901	1-784-723-11	PIN, CONNECTOR 4P	
806	3-988-207-01	HOLDER, MOTOR		D901	8-719-067-13		
807	3-947-503-01	SCREW (M1.4X2.5)		H901	8-719-061-28	DIODE HW-105C-FT-V (S REEL)	
808	3-988-303-01	ARM, SPRING HOOK DRIVING		H902	8-719-061-28	DIODE HW-105C-FT-V (T REEL)	
809	3-988-271-01	BASE, SPRING HOOK FULCRUM		M902	8-835-606-01	MOTOR, DC SCD15A/C-NP (CAPSTAI	V)
810	3-988-302-01	HOOK, TG1 SPRING		M903	X-3948-346-1	MOTOR ASSY, LOADING	
811	3-988-208-01	SHIELD, MOTOR		Q901	8-729-907-25	PHOTO TRANSISTOR PT4850F(TAPE	END)
812	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SENS	OR)	Q902	8-729-907-25	PHOTO TRANSISTOR PT4850F(TAPE	TOP)
813	A-7073-418-A	FP-594 BOARD, COMPLETE		S901	1-771-039-51	SWITCH, PUSH (CASSETTE IN)	
814	3-988-280-03	ARM, HC DRIVING		S902	1-572-719-32	SWITCH, PUSH (1 KEY) (REC PROOF	<del>:</del> )
815	3-988-239-01	GEAR, GL DRIVING		S903	1-771-325-11	ENCODER, ROTARY (SWITCH) (MOD	E)

## CD-202 CK-80

#### 6-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these
- CAPACITORS: uF: μF

• RESISTORS
All resistors are in ohms.

METAL: metal-film resistor

METAL OXIDE: Metal Oxide-film resistor

F: nonflammable

- COILS uH: μH
- SEMICONDUCTORS
  In each case, u: µ, for example:
  uA...: µA..., uPA..., µPA...,
  uPB..., µPB..., uPC..., µPC...,
  uPD..., µPD...

When indicating parts by reference number, please include the board name.

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Ne les remplacer que par une pièce portant le numéro spécifié.

Abbreviation

AUS: Australian model
JE: Tourist model
CND: Canadian model
CN: Chinese model
HK: Hong Kong model

								HK: Hong Kong me	odel	
Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description		<u>Remarks</u>
	A -7073-676-A	CD-202 BOARD, N					A-7073-678-A	CK-80 BOARD, COMPLETE		
			(F	Ref.No.:10,	000Series)			(F	Ref.No.:10,	000Series)
	(IC10	0,101,102 is not in	cluded in	this compl	ete board.)					,
		0.15.10.705					3-051-919-01	SHEET, LI PROTECTION		
		< CAPACITOR >						< BATTERY >		
C100	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V			CDATTERT >		
C101		CERAMIC CHIP	0.1uF	10%	16V	<b>△</b> BT7200	1-528-724-21	BATTERY, V/L RICHARGEA	BLE	
C102	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V					
C103		CERAMIC CHIP	0.1uF	10%	16V			< CAPACITOR >		
C105	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	07000	1 1/0 070 11	OFDAMIO OUID O 01. F	100/	251/
C106	1 107 026 11	CERAMIC CHIP	0.1uF	10%	16V	C7200	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V
C100		TANTALUM CHIP		20%	10V 10V			< CONNECTOR >		
C107		TANTAL. CHIP	6.8uF	20%	16V			CONNECTOR		
C110		CERAMIC CHIP	0.1uF		16V	CN7200	1-779-064-11	PIN, CONNECTOR (PC BOA	RD) 12P	
C111		TANTALUM CHIP	4.7uF	20%	10V			PIN, CONNECTOR (PC BOA		
						CN7202	1-691-370-11	CONNECTOR, FFC/FPC 6P		
C112		CERAMIC CHIP	0.1uF		16V			CONNECTOR, FFC/FPC 6P		
C115		TANTAL CHIP	6.8uF	20%	16V	CN7204	1-784-939-11	CONNECTOR, BOARD TO B	OARD 60P	1
C117		TANTAL CHIP		20%	10V	* ON 700F	1 (05 220 21	DINI CONNECTOD (1 ENAM)	(CMD) OD	
C118 C119		TANTAL. CHIP CERAMIC CHIP	6.8uF 0.1uF	20%	16V 16V		1-695-320-21	PIN, CONNECTOR (1.5MM) CONNECTOR, FFC/FPC 24P		
C119	1-104-300-11	CERAIVIIC CHIP	U. TUF		101			CONNECTOR, FFC/FFC 24F		
		< CONNECTOR >						CONNECTOR, FFC/FPC (ZIF	) 8P	
									, -	
CN100	1-785-433-21	CONNECTOR, BO	ARD TO B	OARD 40P	)			< DIODE >		
		2011				D7000	0.710.0/4./1	DIODE 01D740 0/TE0EL)		
		< COIL >				D7200 D7201		DIODE 01BZA8.2(TE85L) DIODE 01BZA8.2(TE85L)		
L100	1-412-963-11	INDUCTOR 100u	Н			D7201		DIODE MA111-TX		
L101						D7202		DIODE MA8082-TX		
L102						D7204		DIODE 01BZA8.2(TE85L)		
		< TRANSISTOR >				D7206		DIODE 01BZA8.2(TE85L)		
0100	0 700 447 70	TDANICICTOD 20	204470 54	OF4 4 T4		D7207		DIODE 01BZA8.2(TE85L)		
Q100 Q101		TRANSISTOR 25				D7211		DIODE 01BZA8.2(TE85L)		
Q101 Q102		TRANSISTOR 25				D7212 D7214		DIODE 01BZA8.2(TE85L) DIODE 01BZA8.2(TE85L)		
Q102	0-727-117-73	TRANSISTOR 23	004170-1	31 14-11		07214	0-717-004-01	DIODE OTDEA0.2(TEOSE)		
		< RESISTOR >				D7215	8-719-064-61	DIODE 01BZA8.2(TE85L)		
R100	1-216-864-11	METAL CHIP	0	5%	1/16W			< IC >		
R101	1-216-864-11		0	5%	1/16W			107		
R102	1-216-864-11		0	5%	1/16W	IC7200	8-759-494-53	IC BU9729K-E2		
R103	1-216-829-11	METAL CHIP	4.7K	5%	1/16W					
R104	1-216-829-11	METAL CHIP	4.7K	5%	1/16W			< TRANSISTOR >		
R105	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	Q7200	8-720-230.43	TRANSISTOR 2SD1819A-	NT-290	
100	1 210 027-11	WEINE OIII	T. / IX	370	17 10 00	Q7200		TRANSISTOR 2SB1122-S		

## CK-80 FP-21

FP-594

Dof No	Don't No.	Decembries			Damaanka	Dof No	Dowt No	Deceriation	Domonto
Ref. No.	Part No.	<u>Description</u>			<u>Remarks</u>	Ref. No.	Part No.	Description	<u>Remarks</u>
		< RESISTOR >					A-7073-684-A	ED-48 BOARD, COMPLETE ***********	
R7200	1-216-809-11	METAL CHIP	100	5%	1/16W				ef.No.:10,000Series)
R7201	1-216-864-11	METAL CHIP	0	5%	1/16W				, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
R7202	1-216-833-11	METAL CHIP	10K	5%	1/16W			< CONNECTOR >	
R7203	1-216-833-11	METAL CHIP	10K	5%	1/16W				
R7204	1-216-833-11	METAL CHIP	10K	5%	1/16W	CN7000	1-573-346-21	CONNECTOR, FFC/FPC 6P	
R7205	1-216-833-11	METAL CHIP	10K	5%	1/16W			< DIODE >	
R7206	1-216-833-11	METAL CHIP	10K	5%	1/16W				
R7207	1-216-833-11	METAL CHIP	10K	5%	1/16W	D7000	8-719-404-49	DIODE MA111-TX	
R7208	1-216-855-11	METAL CHIP	680K	5%	1/16W	D7001	8-719-420-14	DIODE MA8082-TX	
R7209	1-216-864-11	METAL CHIP	0	5%	1/16W			< RESISTOR >	
R7210	1-216-822-11	METAL CHIP	1.2K	5%	1/16W				
R7211	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R7000	1-216-833-11	METAL CHIP 10K	5% 1/16W
R7212	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R7001	1-216-822-11		5% 1/16W
R7213	1-216-841-11	METAL CHIP	47K	5%	1/16W	R7002	1-216-823-11		5% 1/16W
R7214	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R7003	1-216-827-11		5% 1/16W
11,7211	1 210 027 11	WEINE OIM	1.710	070	171011	R7004	1-216-831-11		5% 1/16W
R7215	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	1001	1 210 001 11	WEINE OIM 0.0K	070 171011
R7216	1-216-823-11	METAL CHIP	1.5K	5%	1/16W			< SWITCH >	
R7217	1-216-823-11	METAL CHIP	1.5K	5%	1/16W				
R7218	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	S7000	1-762-851-21	SWITCH, KEY BOARD (POW	FR 700M)
R7219	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	S7001		SWITCH, KEY BOARD (BACK	,
1(7217	1-210-027-11	WETAL CITI	3.310	370	171000	S7001		SWITCH, KEY BOARD (EDIT	
R7220	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	S7002 S7003		SWITCH, KEY BOARD (EDIT	
R7221	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	87000	1 702 001 21	OWITOH, KET BONKB (EBIT	OLF II COLF TY
R7222	1-216-831-11	METAL CHIP	6.8K	5%	1/16W				
R7223	1-216-837-11	METAL CHIP	22K	5%	1/16W		1-670-988-21	FP-21 FLEXIBLE BOARD	
R7224	1-216-837-11		22K	5%	1/16W		1 070 700 21	******	
R7225	1-216-837-11	METAL CHIP	22K	5%	1/16W			< PHOTO INTERUPTER >	
R7227	1-216-809-11	METAL CHIP	100	5%	1/16W				
R7228	1-216-833-11	METAL CHIP	10K	5%	1/16W	PH700		HIC CNA1312K01S0	
R7229	1-216-837-11	METAL CHIP	22K	5%	1/16W	PH701	8-749-014-54	HIC CNA1312K01S0	
R7230	1-216-831-11	METAL CHIP	6.8K	5%	1/16W				
R7231	1-216-827-11	METAL CHIP	3.3K	5%	1/16W		A-7073-418-A	FP-594 FLEXIBLE BOARD	
R7232	1-216-823-11	METAL CHIP	1.5K	5%	1/16W			*******	
R7233	1-216-822-11	METAL CHIP	1.2K	5%	1/16W			(F	Ref.No.:9,000Series)
R7234	1-216-809-11	METAL CHIP	100	5%	1/16W				•
R7236	1-216-864-11	METAL CHIP	0	5%	1/16W			< CONNECTOR >	
		< SWITCH >				CN901	1-784-723-11	PIN,CONNECTOR 4P	
07000	. 7/0 054 04		100 (115)			011701	70172011		
S7200 S7201		SWITCH, KEY BO SWITCH, KEY BO	•	,				< DIODE >	
S7202 S7203		SWITCH, KEY BO SWITCH, KEY BO	•	,		D901	8-719-067-13	DIODE GL453K	
S7204		SWITCH, KEY BO						< HOLE ELEMENT >	
S7205	1-762-851-21	SWITCH, KEY BO	ARD (DIGI	TAL EFFE(	CT)	H901	8-719-061-28	DIODE HW-105-FT-V (S REE	L)
S7206		SWITCH, KEY BO	•		,	H902		DIODE HW-105-FT-V (T REE	•
S7207		SWITCH, KEY BO			/				_/
S7208		SWITCH, KEY BO	`	,	CT)			< TRANSISTOR >	
S7209		SWITCH, KEY BO	•		•				
			,		•	Q901		PHOTO TRANSISTOR PT485	,
S7210		SWITCH KEY BO	•			Q902	0-129-901-25	PHOTO TRANSISTOR PT485	OUI (TAPE TUP)
S7211		SWITCH, KEY BO	•		1)			, CMITCU .	
S7212		SWITCH, KEY BO	•	,				< SWITCH >	
S7213		SWITCH, KEY BO	•	•		0001	1 771 000 51	CMITCH DUCH (C IN CM)	
S7214	1-771-487-21	SWITCH, SLIDE (	AUTU LUC	K)		S901		SWITCH, PUSH (C IN SW)	C DDOOE)
C7010	1 7/2 / 40 24	CIVITALI DATAD	V (CONTOR	OI DIVI V		S902		SWITCH, PUSH (1 KEY) (REC	,
S7219	1-702-049-21	SWITCH, ROTAR	i (CONTOR	KUL DIAL)		S903	1-771-325-11	ENCODER, ROTARY (SWITC	n) (IVIUDE)

#### JK-163 LB-55 **MA-333**

Ref. No.	Part No.	Description		Remarks	Ref. No.	Part No.	Description			Remarks		
		JK-163 BOARD, COMPLETE					LB-55 BOARD, C	OMPLETE				
		**********					*******					
		(Ref.	.No.:10,0	000Series)				(Re	f.No.:10	,000Series)		
		< CAPACITOR >					< CAPACITOR >					
C7100			10%	50V	C5201		CERAMIC CHIP	0.01uF	10%	25V		
C7101			10%	50V	C5202		TANTAL. CHIP CERAMIC CHIP	47uF	20%	10V		
C7102 C7103			10% 10%	50V 50V	C5203 C5205		CERAMIC CHIP	4.7uF 1uF	10% 10%	10V 16V		
C7104			10%	50V	△ C5206		CERAMIC CHIP	0.0082uF	10%	50V		
		< CONNECTOR >			<b>△</b> C5207		CERAMIC CHIP	0.0082uF	10%	50V		
CN7100	1-779-369-11	CONNECTOR, SQUARE TYPE(I	INDI)4P		<u></u>	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V		
		CONNECTOR, FFC/FPC 14P					< CONNECTOR >					
CN7102	1-784-423-21	CONNECTOR, FFC/FPC (ZIF) 39	9P		CN5201	1_78/1_/121_11	CONNECTOR, FF	C/FDC (7IF)	27P			
		< DIODE >			1		CONNECTOR, FF	, ,				
D7100 D7102		DIODE 01BZA8.2(TE85L) DIODE 01BZA8.2(TE85L)					< DIODE >					
D7103	8-719-064-61	DIODE 01BZA8.2(TE85L)			△ D5201	8-719-056-49	DIODE 1SS370					
D7104 D7105		DIODE 01BZA8.2(TE85L) DIODE 01BZA8.2(TE85L)					< COIL >					
D7106	8-719-064-61	DIODE 01BZA8.2(TE85L)			L5201	1-412-031-11	INDUCTOR CHIP	47uH				
		< FERRITE BEAD >			L5202	1-412-029-11	INDUCTOR CHIP					
							< FLUORECENT I	< FLUORECENT INDICATOR >				
FB710 FB711	1-500-444-11 1-500-444-11				↑ ND5201	1 517 750 11	TIIDE ELIIODES	CENT (O EE I	NCU)			
FB712	1-500-444-11				ZE ND3201	△ ND5201 1-517-758-11 TUBE, FLUORESCENT (0.55 INCH)						
FB713	1-500-444-11						< TRANSISTOR >	>				
FB714	1-500-444-11	FERRITE OUH				8-729-039-24	TRANSISTOR F	X216₋TI 1				
FB715	1-500-444-11				20201	0 727 007 21		7,210 TET				
FB716 FB717	1-500-444-11 1-500-444-11						< RESISTOR >					
FB717	1-500-444-11				R5201	1-216-839-11	METAL CHIP	33K	5%	1/16W		
					R5202	1-216-809-11		100	5%	1/16W		
		< JACK >					< TRANSFORME	R >				
J7100 J7101		JACK, ULTRA SMALL 1P (LAN JACK, SMALL TYPE (HEADPH)	,			1 176 010 51	TRANSFORMER,	INIVEDTED				
J7101 J7102		JACK, SMALL TYPE (AUDIO/V	,		13201	1-420-040-01	TRANSFURIVIER,	INVERTER				
		< COIL >				A 7072 600 A	MA-333 BOARD	COMPLETE	:			
		COIL				A-7073-000-A	*******					
L7100		INDUCTOR 100uH						(Re	f.No.:10	,000Series)		
L7101		INDUCTOR 100uH					CADACITOD					
L7102 L7103		INDUCTOR 100uH INDUCTOR 100uH					< CAPACITOR >					
L7103		INDUCTOR 1uH			C7300	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V		
					C7301		CERAMIC CHIP	0.0022uF	10%	50V		
		< RESISTOR >			C7305		CERAMIC CHIP	0.01uF	10%	25V		
R7102	1-216-864-11	METAL CHIP 0	5%	1/16W	C7306 C7307		CERAMIC CHIP CERAMIC CHIP	100PF 100PF	5% 5%	50V 50V		
		VADISTOD >			C7200	1 125 250 11	TANITAL CLID	10uE	20%	6 21/		
		< VARISTOR >			C7308 C7309		TANTAL. CHIP TANTAL. CHIP	10uF 10uF	20% 20%	6.3V 6.3V		
VDR711	1-801-862-11	VARISTOR, CHIP			C7310		CERAMIC CHIP	0.0047uF	10%	50V		
		VARISTOR, CHIP			C7312		CERAMIC CHIP	0.1uF	10%	16V		
		VARISTOR, CHIP			C7313	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V		
		VARISTOR, CHIP VARISTOR, CHIP										
751(710	1 001 002-11	attorony orm										

Note:
The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.
Replace only with part number specified.

Note:

Les composants identifiés par une marque ∆ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

D.C.N.	D 111	5				l D ( N	D	D			Б
Ref. No.	Part No.	<u>Description</u>			<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>			Remarks
C7314	1-162-967-11		0.0033uF	10%	50V			< IC >			
C7315 C7316	1-162-964-11 1-162-964-11	CERAMIC CHIP CERAMIC CHIP	0.001uF 0.001uF	10% 10%	50V 50V	IC7301	8-759-248-31	IC BA7780KV	/ E2		
C7310	1-102-904-11		0.00 Tul 0.1uF	10%	16V	IC7301	8-759-633-55	IC M5222FP-			
C7317	1-107-826-11		0.1uF	10%	16V	IC7302	8-759-111-56	IC uPC45720			
C7319	1-107-826-11		0.1uF	10%	16V			< TRANSISTO	R >		
C7320	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	07200	0 700 140 75	TDANICICTOD	2CD000 T	1 01 01/	
C7321 C7322	1-162-927-11 1-107-826-11		100PF 0.1uF	5% 10%	50V 16V	Q7300 Q7301	8-729-140-75 8-729-141-48	TRANSISTOR TRANSISTOR			
C7322	1-107-826-11	TANTAL. CHIP	10uF	20%	16V 16V	Q7301 Q7302		TRANSISTOR			
0/323	1-104-913-11	IANTAL. CITIF	Toul	2070	10 V	Q7302		TRANSISTOR			
C7324	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	Q7303		TRANSISTOR			
C7325	1-107-826-11		0.1uF	10%	16V	2,001	0 .2, 00, 00		202.1025	4.1(1.0).00	
C7326	1-107-826-11		0.1uF	10%	16V			< RESISTOR >			
C7327	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V						
C7328	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R7302	1-216-864-11	METAL CHIP	0	5%	1/16W
						R7303	1-216-805-11	METAL CHIP	47	5%	1/16W
C7329	1-164-245-11		0.015uF	10%	25V	R7304	1-216-821-11	METAL CHIP	1K	5%	1/16W
C7330	1-162-966-11		0.0022uF	10%	50V	R7305	1-216-837-11	METAL CHIP	22K	5%	1/16W
C7331	1-107-826-11		0.1uF	10%	16V	R7306	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
C7332	1-162-966-11		0.0022uF	10%	50V	D7200	1 01/ 005 11	METAL OLUB	4.51/	F0/	1/1/11/
C7333	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V	R7309	1-216-835-11	METAL CHIP	15K	5%	1/16W
C7220	1 144 227 11	CEDAMIC CHID	0 022HE	100/	251/	R7310	1-216-835-11	METAL CHIP METAL CHIP	15K	5% 5%	1/16W
C7338 C7339	1-164-227-11	CERAMIC CHIP CERAMIC CHIP	0.022uF 0.022uF	10% 10%	25V 25V	R7311 R7312	1-216-839-11 1-216-836-11	METAL CHIP	33K 18K	5% 5%	1/16W 1/16W
C7339	1-164-245-11		0.022ui 0.015uF	10%	25V 25V	R7312	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
C7340	1-164-245-11		0.015uF	10%	25V	107515	1-210-025-11	WEIZE OIIII	2.21	370	17 10 00
C7342	1-162-962-11		470PF	10%	50V	R7314	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
0.0.2	02 /02	02.0.000		.070		R7315	1-216-831-11		6.8K	5%	1/16W
C7343	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	R7316	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
C7344	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R7317	1-216-821-11	METAL CHIP	1K	5%	1/16W
C7345	1-115-156-11	CERAMIC CHIP	1uF		10V	R7318	1-216-821-11	METAL CHIP	1K	5%	1/16W
C7346	1-115-156-11		1uF		10V						
C7347	1-164-156-11	CERAMIC CHIP	0.1uF		25V	R7319	1-216-835-11	METAL CHIP	15K	5%	1/16W
						R7320	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
C7350	1-135-259-11		10uF	20%	6.3V	R7321	1-216-833-11	METAL CHIP	10K	5%	1/16W
C7351 C7352	1-109-982-11	CERAMIC CHIP	1uF	10%	10V 10V	R7322 R7323	1-216-835-11	METAL CHIP	15K	5%	1/16W
C7352 C7353	1-109-982-11 1-104-852-11		1uF 22uF	10% 20%	6.3V	K/323	1-216-800-11	RES,CHIP	18	5%	1/16W
C7353	1-104-052-11	TANTAL. CHIP	10uF	20%	6.3V	R7324	1-216-835-11	METAL CHIP	15K	5%	1/16W
07334	1-133-237-11	IANTAL. CITI	Toul	2070	0.5 V	R7324	1-216-829-11		4.7K	5%	1/16W
C7355	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	R7327	1-216-833-11		10K	5%	1/16W
C7356		CERAMIC CHIP	0.01uF	10%	25V	R7328	1-216-839-11		33K	5%	1/16W
C7357	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R7329	1-216-001-00		10	5%	1/10W
		0011150705				57004			4514	=0.	
		< CONNECTOR >				R7331	1-216-835-11		15K	5%	1/16W
* CN7200	1 405 220 21	PIN, CONNECTOR	) /1 ENANA)/(	SMD) 3D		R7332 R7335	1-216-839-11 1-216-841-11		33K	5% 5%	1/16W 1/16W
		PIN, CONNECTOR	. , .	SIVID) ZP		R7337	1-216-795-11		47K 6.8	5% 5%	1/16W
		CONNECTOR, FF				R7337	1-216-821-11		1K	5%	1/16W
		CONNECTOR, FFO				117007	1 210 021 11	WEINE OIM	110	070	17 1011
		CONNECTOR, FFO				R7342	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
						R7344	1-216-839-11		33K	5%	1/16W
CN7305	1-779-327-11	CONNECTOR, FFO	C/FPC 6P			R7345	1-216-834-11	METAL CHIP	12K	5%	1/16W
						R7347	1-216-839-11	METAL CHIP	33K	5%	1/16W
		< DIODE >				R7348	1-216-818-11	METAL CHIP	560	5%	1/16W
D7200	0.710.0/1.00	DIODE TICUAC	))/TDV4 00	VI/V		D7050	1 21/ 027 11	METAL OLUB	2214	F0/	1/1/\\
D7300		DIODE 01P749		INY)		R7350	1-216-837-11		22K	5% 5%	1/16W
D7304 D7305		DIODE 01BZA8. DIODE MA8082				R7351 R7352	1-216-849-11 1-216-833-11		220K 10K	5% 5%	1/16W 1/16W
נטנוע	U-117-4ZU-14	PIODE INIHOUSZ	- 1 /\			R7352	1-216-833-11		10K 10K	5% 5%	1/16W
		< FERRITE BEAD	>			R7354	1-216-845-11		10K 100K	5% 5%	1/16W
		. LEMMIE DEAD	-			117,554	1 210 0:10-11	.VIE INE OHII	1001	570	1, 10 VV
FB730	1-500-444-11	FERRITE OUI	4			R7355	1-216-837-11	METAL CHIP	22K	5%	1/16W
FB731	1-500-444-11	FERRITE OUI	4			R7356	1-216-837-11	METAL CHIP	22K	5%	1/16W
						R7357	1-216-821-11		1K	5%	1/16W
						R7358	1-216-821-11		1K	5%	1/16W
						R7359	1-216-841-11	IVIETAL CHIP	47K	5%	1/16W

## **MA-333**

## PD-101

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			<u>Remarks</u>
R7360	1-216-841-11	METAL CHIP	47K	5%	1/16W			< DIODE >			
R7361	1-216-815-11		330	5%	1/16W						
R7363	1-216-848-11	METAL CHIP	180K	5%	1/16W	D5602		DIODE 1T369			
						D5604 ⚠ D5704		DIODE MA80 DIODE MA11			
	A-7073-679-A	PD-101 BOARD,	COMPLETE			D5801		DIODE WATT			
		******	******			D5802		DIODE 01ZA8			
			(Re	f.No.:10,	000Series	)					
		< CAPACITOR >						< IC >			
		< CAFACITOR >				IC550	1 8-759-530-19	IC MB40D00	1PFV-G-BND-	ER	
C5501	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	IC550	2 8-759-539-27	IC IR3Y37A4			
C5502		CERAMIC CHIP	0.1uF	10%	16V	IC560		IC LZ9GH204			
C5503 C5504		CERAMIC CHIP CERAMIC CHIP	0.01uF 0.01uF	10% 10%	16V 16V		2 8-759-327-01 1 8-759-075-70				
C5504 C5505		CERAMIC CHIP	0.01uF 0.01uF	10%	16V	10370	1 0-739-075-70	IC 1A/55595	r-1EOJK		
00000		02.4.4.1.0	0.0.4.	1070				< COIL >			
C5506		CERAMIC CHIP	0.1uF	10%	16V						
C5507		TANTAL. CHIP	33uF	20%	6.3V	L5500		INDUCTOR 10			
C5508 C5509		CERAMIC CHIP TANTAL. CHIP	0.1uF 3.3uF	10% 20%	16V 4V	L5501 L5502		INDUCTOR 47 INDUCTOR 10			
C5510		TANTAL. CHIP	22uF	20%	10V	L5502		INDUCTOR 10			
						L5603	1-414-754-11	INDUCTOR 10	)uH		
C5512	1-104-851-11		10uF	20%	10V	15/04	4 444 754 44	INDUSTOR 46			
C5513 C5514		CERAMIC CHIP CERAMIC CHIP	0.1uF 0.33uF	10% 10%	16V 16V	L5604 L5605		INDUCTOR 10 INDUCTOR 3.			
C5514		CERAMIC CHIP	0.33uF	10%	16V	L5701		INDUCTOR 3.			
C5516		CERAMIC CHIP	0.33uF	10%	16V						
								< TRANSISTOI	₹>		
C5517 C5520		CERAMIC CHIP CERAMIC CHIP	0.1uF 220PF	10% 10%	16V 16V	Q5605	0 720 027 52	TRANSISTOR	250221417	ND/N0) CO	
C5520 C5521		CERAMIC CHIP	220PF 220PF	10%	16V	Q5606		TRANSISTOR			
C5522		CERAMIC CHIP	220PF	10%	16V	Q5607		TRANSISTOR			
C5602	1-113-985-11	TANTAL. CHIP	10uF	20%	20V	Q5608		TRANSISTOR		R(K8).SO	
05/02	1 107 705 11	CEDAMIC CLUD	0.1	100/	1/\/	△ Q5701	8-729-039-43	TRANSISTOR	FP216-TL		
C5603 C5604		CERAMIC CHIP CERAMIC CHIP	0.1uF 0.1uF	10% 10%	16V 16V	Q5702	8-729-042-59	TRANSISTOR	I IN 9112 I-(K	8) SO	
C5605		CERAMIC CHIP	0.1uF	10%	16V	23702	0-727-042-37	TRANSISTOR	01471125-(10	0).50	
C5607		CERAMIC CHIP	0.1uF	10%	25V			< RESISTOR >			
C5608	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	DEFO	4 040 000 44	CLIODT	•		
C5610	1_16/1_872_11	CERAMIC CHIP	82PF	5%	16V	R5500 R5501			0 39K	5%	1/16W
C5611		CERAMIC CHIP	0.1uF	10%	25V	R5505			47K	5%	1/16W
C5612		CERAMIC CHIP	82PF	5%	16V	R5508			33K	0.50%	1/16W
C5613	1-164-739-11		560PF	5%	50V	R5509	1-208-711-11	RES,CHIP	15K	0.50%	1/16W
C5616	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	R5510	1-218-969-11	DEC CHID	22K	5%	1/16W
C5618	1-104-916-11	TANTAL. CHIP	6.8uF	20%	20V	R5511			12K	5%	1/16W
C5619	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R5512		RES,CHIP	22K	5%	1/16W
C5620	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R5513			12K	5%	1/16W
C5621 C5622		TANTAL. CHIP CERAMIC CHIP	10uF 1uF	20% 10%	20V 16V	R5514	1-218-965-11	RES,CHIP	10K	5%	1/16W
C3022	1-107-002-11	CLRAIVIIC CHIP	Tui	10 /0	100	R5515	1-218-972-11	RES,CHIP	39K	5%	1/16W
C5624	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	R5516			22K	5%	1/16W
C5701	1-113-991-11	TANTAL. CHIP	33uF	20%	16V	R5517			15K	5%	1/16W
C5702	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	R5518			33K	5%	1/16W
C5703 C5704		CERAMIC CHIP CERAMIC CHIP	0.018uF 0.1uF	10% 10%	50V 25V	R5520	1-218-984-11	RES,CHIP	390K	5%	1/16W
03704	1 104 004 11	OLIVIIVIIO OTIII	o. rui	1070	25 V	R5521	1-208-709-11	RES,CHIP	12K	0.50%	1/16W
<b>△</b> C5705	1-113-521-11		12PF	10%	3KV	R5522			39K	0.50%	1/16W
C5706	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	R5528			100K	5%	1/16W
		- COMMECTOD >				R5532 R5540			100	E0/.	1/16\//
		< CONNECTOR >				K3540	1-218-941-11	ALS,UNIP	100	5%	1/16W
CN5601	1-573-364-11	CONNECTOR, FFO	C/FPC 24P								
		CONNECTOR, FFO									
		PIN, CONNECTOR	•	•							
		PIN, CONNECTOR CONNECTOR, FFG	•	13P (ע							
0140000	. 0.0 070-21	SOMMEOTOR, TI	J, 1 1 0 01			I	Note:	idon###:=:!	Note:	ont- !!	166 a
							The components mark $\triangle$ or dotted		Les compos une marque		
							$\triangle$ are critical for	safety.	pour la sécu	ırité.	,
						2.40	Replace only wit specified.	n part number	Ne les remp pièce portan		
					(	6-18	•				

D	$\Box$	4	n	4
	ı ,-		.,	

RI-10

SE-75

**VC-208** 

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description			Remarks
				400	=0.				•	401/	=0.	
R5541 R5542	1-218-941-11			100 100	5% 5%	1/16W	R5805 R5807	1-218-965-11		10K	5%	1/16W
R5601	1-218-941-11 1-218-990-11		0	100	5%	1/16W	K3807	1-218-990-11	SHORT (	)		
R5603	1-218-990-11		0						< TRANSFORM	IFR >		
R5604	1-218-990-11		0						v monor onto	iLiv,		
							<b> ∆</b> T5701	1-431-754-21	TRANSFORME	R, INVERTER		
R5607	1-218-990-11		0									
R5608	1-218-990-11		0									
R5610	1-218-977-11			100K	5%	1/16W		A-7073-681-A	RI-10 BOARD,			
R5614	1-218-987-11			680K	5%	1/16W			** ** ** ** ** ** ** ** ** *			
R5615	1-218-980-11	RES,CHIP		180K	5%	1/16W				(R	er.ivo.: iu	),000Series)
R5620	1-218-965-11	RES,CHIP		10K	5%	1/16W	*	3-052-742-01	HOLDER, LED			
R5621	1-218-989-11			1M	5%	1/16W						
R5622	1-218-989-11	RES,CHIP		1M	5%	1/16W			< CONNECTOR	>		
R5623	1-218-975-11	RES,CHIP		68K	5%	1/16W						
R5624	1-218-969-11	RES,CHIP		22K	5%	1/16W	CN740	1 1-750-333-11	CONNECTOR, I	FFC/FPC (ZIF)	6P	
DE / 27	1 200 027 11	DEC CLIID		471/	0.500/	1/1////			, DIODE ,			
R5627 R5628	1-208-927-11 1-218-990-11		0	47K	0.50%	1/16W			< DIODE >			
R5629	1-218-975-11		U	68K	5%	1/16W	D7401	8-719-404-49	DIODE MA11	1-TX		
R5630	1-218-973-11			47K	5%	1/16W	D7402		DIODE DCR28			
R5634	1-218-961-11			4.7K	5%	1/16W	D7403		DIODE CL-31			
R5640	1-208-935-11			100K	0.50%	1/16W			< IC >			
R5641	1-208-719-11			33K	0.50%	1/16W	107404	0.740.040.40	10 00 70 711			
R5643	1-218-974-11			56K 33K	5%	1/16W 1/16W	IC/401	8-749-013-13	IC RS-70-10			
R5644 R5649	1-218-971-11 1-218-990-11		0	33K	5%	1/1000						
K3049	1-210-990-11	SHUKI	U					A-7073-675-A	SE-75 BOARD,	COMPLETE		
R5651	1-208-719-11	RES,CHIP		33K	0.50%	1/16W			*******			
R5652	1-208-715-11			22K	0.50%	1/16W				(R	ef.No.:10	,000Series)
R5653	1-208-721-11			39K	0.50%	1/16W				,		,
R5654	1-208-719-11	RES,CHIP		33K	0.50%	1/16W			< CAPACITOR	>		
R5657	1-218-990-11	SHORT	0									
DE / E0	4 040 000 44	CHODE	_				C450		CERAMIC CHIF		000/	16V
R5658 R5659	1-218-990-11 1-218-990-11		0				C451	1-135-201-11	TANTALUM CH	IP TOUF	20%	4V
R5660	1-218-990-11		0						< CONNECTOR			
R5661	1-218-990-11		0						COMMEDION			
R5669	1-218-990-11		0				CN450	1-774-631-21	CONNECTOR, I	FFC/FPC 6P		
	1-218-990-11		0						< COIL >			
R5671	1-218-990-11		0				1.450	1 414 754 11	INDUCTOR 10			
R5674 R5676	1-218-990-11 1-218-990-11	SHORT SHORT	0				L450	1-414-754-11	INDUCTOR TO	uп		
R5679	1-218-937-11		U	47	5%	1/16W			< SENSOR >			
		.,.										
R5680	1-218-937-11			47	5%	1/16W	SE450	1-803-042-31			•	,
R5681	1-218-937-11	RES,CHIP		47	5%	1/16W	SE451	1-803-042-41	SENSOR, ANG	ULAR VELOC	ITY (PIT	CH)
R5685	1-218-973-11	RES,CHIP		47K	5%	1/16W						
R5686	1-218-973-11	RES,CHIP		47K	5%	1/16W		A 7004 021 A	VC 200 DOAD!	COMPLETE	(0005)	
R5687	1-218-961-11	RES,CHIP		4.7K	5%	1/16W		A-7094-031-A	VC-208 BOARI			
R5688	1-216-864-11	METAL CHIP		0	5%	1/16W		A-7094-069-A	VC-208 BOARI	), COMPLETE	(900)	
R5695	1-218-990-11	SHORT	0		-				*****		` '	
R5699	1-218-969-11	RES,CHIP		22K	5%	1/16W		A-7094-071-A	VC-208 BOAR			
R5703	1-216-055-00	METAL CHIP		1.8K	5%	1/10W			*********	*******	*****	
R5704	1-216-055-00	METAL CHIP		1.8K	5%	1/10W				(R	.ef.No.:10	),000Series)
R5705	1-218-977-11	RES,CHIP		100K	5%	1/16W			< CAPACITOR	_		
R5705	1-218-977-11	RES,CHIP		6.8K	5% 5%	1/16W			· CAFACITUR			
R5700	1-218-969-11	RES,CHIP		22K	5%	1/16W	C201	1-107-622-11	CERAMIC CHIE	2 1uF	10%	16V
R5707	1-218-942-11	RES,CHIP		120	5%	1/16W	C201	1-107-682-11			10%	16V
R5709	1-218-949-11			470	5%	1/16W	C203		CERAMIC CHIE		10%	16V
	,,,,	,					C204		CERAMIC CHIE		10%	16V
R5710	1-218-990-11	SHORT	0				C205	1-107-682-11			10%	16V
R5801	1-218-954-11	RES,CHIP		1.2K	5%	1/16W						
R5802	1-218-955-11	RES,CHIP		1.5K	5%	1/16W	Г	Note :	T	Note :		
R5803	1-218-959-11	RES,CHIP		3.3K	5%	1/16W		The components	s identified by	Les compos	sants ide	ntifiés par
R5804	1-218-963-11	RES,CHIP		6.8K	5%	1/16W		mark ⚠ or dotted  ⚠ are critical for	l line with mark	une marque	e 🛆 son	

pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

## **VC-208**

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
C206	1-107-682-11	CERAMIC CHIP	1uF	10%	16V	C359	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C200	1-107-002-11	CERAMIC CHIP	0.1uF	10%	10V 10V	C360	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
C207		CERAMIC CHIP	0.1uF	10%	10V	C361	1-164-942-11		0.0068uF	10%	16V
C209	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C368	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C211	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C370	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
OZII	1 107 702 11	OLIVIIVIIO OIIII	Tui	1070	101	0370	1 104 740 11	OLIVIIVIIO OIIII	0.003341	1070	101
C212	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C371	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C213	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C372	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C214	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C373	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C215	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C374	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C217	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C375	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
0040	4 407 000 44		04.5		4.04	007/	4 405 050 44	TANTAL OLUB	40 5	000/	( 0) (
C218	1-107-820-11	CERAMIC CHIP	0.1uF	100/	16V	C376	1-135-259-11	TANTAL UM CUID	10uF	20%	6.3V
C219 C220	1-125-777-11	CERAMIC CHIP CERAMIC CHIP	0.1uF 0.1uF	10% 10%	10V 10V	C377 C379	1-135-151-21 1-107-820-11	TANTALUM CHIP CERAMIC CHIP	4.7uF 0.1uF	20%	4V 16V
C220	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V 10V	C400	1-107-820-11	TANTAL. CHIP	22uF	20%	4V
C221	1-113-988-11	TANTAL. CHIP	68uF	20%	4V	C400	1-104-847-11	TANTAL. CHIP	22uF	20%	4 V
GZZZ	1-113-700-11	TANTAL. CITII	ooui	2070	4 V	0401	1-104-047-11	TANTAL. CITII	ZZUI	2070	4 V
C227	1-115-156-11	CERAMIC CHIP	1uF		10V	C402	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C228	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V	C403	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C229	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	C404	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C230	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	C405	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C231	1-164-846-11	CERAMIC CHIP	6PF	0.5PF	16V	C406	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
0000	4 407 000 44		04.5		401	0.407	4 407 040 44	OED ANALO OLUB	0.000 5	400/	4.04
C232	1-107-820-11 1-135-201-11	CERAMIC CHIP TANTALUM CHIP	0.1uF 10uF	20%	16V 4V	C407	1-107-819-11 1-104-908-11	CERAMIC CHIP TANTAL. CHIP	0.022uF 47uF	10% 20%	16V 4V
C233 C234	1-135-201-11	TANTAL. CHIP	22uF	20%	4 V 4 V	C408 C409	1-104-908-11	TANTAL. CHIP	47uF 47uF	20%	4 V 4 V
C234	1-104-847-11	CERAMIC CHIP	0.1uF	2070	16V	C409 C410	1-104-908-11	TANTAL. CHIP	47uF	20%	4 V 4 V
C236	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C410	1-104-908-11	TANTAL. CHIP	47uF	20%	4 V
0230	1-133-201-11	TANTALOW CITII	Toul	2070	4 V	0411	1-104-700-11	TANTAL. CITII	47ui	2070	4 V
C237	1-115-156-11	CERAMIC CHIP	1uF		10V	C414	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C238	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V	C415	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C239	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V	C500	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C240	1-164-346-11	CERAMIC CHIP	1uF		16V	C501	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C247	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C502	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C248	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C503	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C240	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C503	1-104-743-11	CERAMIC CHIP	0.01uF	10%	10V
C250	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V	C505	1-125-777-11		0.1uF	10%	10V
C252	1-115-156-11	CERAMIC CHIP	1uF	0.0.	10V	C506	1-164-935-11	CERAMIC CHIP	470PF	10%	16V
C253	1-115-156-11	CERAMIC CHIP	1uF		10V	C507	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
						_					
C254		CERAMIC CHIP	1uF		10V	C506		CERAMIC CHIP	0.0022uF		16V
C255		TANTALUM CHIP		20%	4V	C508	1-164-943-11		0.01uF	10%	16V
C256		TANTALUM CHIP		20%	4V	C509	1-107-823-11		0.47uF	10%	16V
C257		TANTALUM CHIP		20%	4V	C510		CERAMIC CHIP	0.001uF	10%	16V
C258	1-135-201-11	TANTALUM CHIP	TOUF	20%	4V	C511	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C259	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C512	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V
C260	1-135-201-11	TANTALUM CHIP		20%	4V	C514	1-115-156-11	CERAMIC CHIP	1uF		10V
C262	1-104-852-11	TANTAL. CHIP	22uF	20%	10V	C515	1-104-847-11		22uF	20%	4V
C300	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C516	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C301	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C517	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
Cana	1 107 020 11	CEDAMIC CHID	0.1uE		14\/	CE10	1 115 154 11	CEDAMIC CUID	1E		101/
C302 C303	1-107-820-11	CERAMIC CHIP TANTALUM CHIP	0.1uF 10uF	20%	16V 4V	C518 C519	1-115-156-11	CERAMIC CHIP CERAMIC CHIP	1uF 0.01uF	10%	10V 16V
C305		CERAMIC CHIP	0.1uF	10%	4 v 10 V	C519 C520		CERAMIC CHIP	0.01uF 0.0047uF	10%	16V
C305	1-164-943-11	CERAMIC CHIP	0.1ul 0.01uF	10%	16V	C520		CERAMIC CHIP	0.0047ui 0.1uF	10%	10V
C307		CERAMIC CHIP	0.01uF	10%	16V	C521		CERAMIC CHIP	0.1uF	10%	10V
0007	1 101 710 11	oziwwio orm	0.0141	1070	101	0022	1 120 777 11	OLIV WITO OTHE	0.141	1070	100
C308	1-104-847-11		22uF	20%	4V	C523		CERAMIC CHIP	470PF	10%	16V
C309	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C523	1-164-939-11		0.0022uF	10%	16V
C310		CERAMIC CHIP	0.1uF		16V	C524		CERAMIC CHIP	0.33uF	10%	16V
C311	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C525		CERAMIC CHIP	0.47uF	10%	16V
C351	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V	C526	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C353	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	C527	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C354	1-107-725-11	CERAMIC CHIP	0.1ur 0.33uF	10%	16V 16V	C527	1-164-943-11		0.0022uF	10%	16V
C355		CERAMIC CHIP	0.33ui 0.1uF	10%	16V	C520		CERAMIC CHIP	1uF	1070	10V
C357		TANTAL. CHIP	10uF	20%	6.3V	C531	1-104-847-11		22uF	20%	4V
C358		CERAMIC CHIP	270PF	5%	50V	C701	1-135-259-11		10uF	20%	6.3V
						•					

Ref. No.	Part No.	<u>Description</u>			<u>Remarks</u>	Ref. No.	Part No.	<b>Description</b>			<u>Remarks</u>
C702	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C1216	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C703	1-104-851-11	TANTAL. CHIP	10uF	20%	10V	C1217	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C705	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C1218	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C721	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	C1219		TANTAL. CHIP	10uF	20%	6.3V
C722	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	C1220	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
0700		0554440 0145		100/		0.1001		0554440 0145		400/	
C723	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V	C1221		CERAMIC CHIP	0.01uF	10%	16V
C724	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V	C1222	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C725	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	C1223		TANTAL. CHIP	10uF	20%	6.3V
C726	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	C1224		CERAMIC CHIP	100PF	5% 0.25PF	16V
C727	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1225	1-104-842-11	CERAMIC CHIP	2PF	U.25PF	16V
C728	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1226	1-164-854-11	CERAMIC CHIP	15PF	5%	16V
C729	1-218-990-11	SHORT 0	(900/		101	C1227	1-164-874-11		100PF	5%	16V
C730	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1228		CERAMIC CHIP	18PF	5%	16V
C731	1-164-878-11	CERAMIC CHIP	150PF	5%	16V	C1229		CERAMIC CHIP	18PF	5%	16V
C732	1-164-878-11	CERAMIC CHIP	150PF	5%	16V	C1230		CERAMIC CHIP	0.01uF	10%	16V
C733	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	C1231		CERAMIC CHIP	0.1uF	10%	10V
C734	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	C1232		CERAMIC CHIP	0.1uF	10%	10V
C735	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	C1233		CERAMIC CHIP	0.1uF	10%	10V
C736	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	C1234		CERAMIC CHIP	100PF	5%	16V
C738	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	C1235	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C740	1 104 051 11	TANTAL CUID	10uE	200/	10V			COMMECTOR			
C740 C742	1-104-851-11 1-135-259-11	TANTAL. CHIP TANTAL. CHIP	10uF 10uF	20% 20%	6.3V			< CONNECTOR	>		
C742	1-135-259-11	CERAMIC CHIP	4.7uF	10%	10V	CN200	1-785-432-21	CONNECTOR, B	OVDD TO I		
C743	1-113-300-11	CERAMIC CHIP	0.1uF	10 /0	16V	CN200 CN351	1-691-346-11			DUAND 40F	
C751	1-107-820-11	CERAMIC CHIP	0.1uF		16V	CN351		CONNECTOR, FI			
0732	1-107-020-11	CERAIVIIC CHIF	U. Tui		10 V	CN400 CN500	1-766-687-21				
C753	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	CN900		CONNECTOR, B			)
C754	1-107-820-11	CERAMIC CHIP	0.1uF	2070	16V	011700	1 777 010 11	oomiteoron, b	OTHED TO E	3071112 1001	
C755	1-107-820-11	CERAMIC CHIP	0.1uF		16V			< DIODE >			
C756	1-164-935-11	CERAMIC CHIP	470PF	10%	16V						
C757	1-107-820-11	CERAMIC CHIP	0.1uF		16V	D204	8-713-103-84	DIODE 1T379-	01-T8A		
						D500	8-719-056-23			)	
C758	1-107-820-11	CERAMIC CHIP	0.1uF		16V	D501	8-719-056-23	DIODE MA2S1			
C759	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	D721	8-719-066-16	DIODE RB491I	D-T146		
C760	1-107-820-11	CERAMIC CHIP	0.1uF		16V	D722	8-719-066-34	DIODE RB461	-T106		
C761	1-107-820-11	CERAMIC CHIP	0.1uF		16V						
C762	1-107-820-11	CERAMIC CHIP	0.1uF		16V	D723		DIODE 1SS388			
						D724	8-719-056-48	DIODE 1SS388	3(TPL3)		
C763	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	D1200		DIODE HVC350		(900/900	
C764	1-107-820-11	CERAMIC CHIP	0.1uF		16V	D1201	8-719-071-32	DIODE HVC350	OBTRF	(900/900	E)
C765	1-107-820-11	CERAMIC CHIP	0.1uF		16V				_		
C766	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V			< FERRITE BEAI	) >		
C767	1-107-820-11	CERAMIC CHIP	0.1uF		16V	FD200	1-414-445-11	CEDDITE OI			
C768	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	FB200 FB201	1-414-445-11		JH JH	(890E)	
C770	1-107-820-11	CERAMIC CHIP	0.1uF	2070	16V	FB201	1-469-311-22			(090L) (900/900E)	
C770	1-107-020-11	TANTAL, CHIP	10uF	20%	6.3V	FB202	1-414-445-11		JH (	700/700L)	
C772	1-107-820-11	CERAMIC CHIP	0.1uF	2070	16V	FB203	1-414-445-11		JH		
C1200	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	1 5200	1 111 110 11	TERRITE OF	<b>711</b>		
			-			FB204	1-414-445-11	FERRITE OL	JH		
C1201	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	FB300	1-414-445-11		JH		
C1202		TANTAL. CHIP	10uF	20%	6.3V	FB301	1-414-445-11		JH		
C1203	1-104-851-11	TANTAL. CHIP	10uF	20%	10V	FB501	1-414-445-11	FERRITE OL	JH		
C1204	1-135-210-11	TANTALUM CHIP	4.7uF	20%	10V	FB752	1-543-955-11	FERRITE OU	JH (	900/900E)	
C1205	1-135-210-11	TANTALUM CHIP	4.7uF	20%	10V						
						FB752	1-543-955-22		JH 	(890E)	
C1206		CERAMIC CHIP	0.01uF	10%	16V	FB754	1-543-955-11			900/900E)	
C1207	1-135-259-11		10uF	20%	6.3V	FB754	1-543-955-22	FERRITE OL	JH	(890E)	
C1208	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V			10			
C1209	1-109-982-11	CERAMIC CHIP	1uF	10%	10V			< IC >			
C1210	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	IC2O2	Q 752 A02 11	IC CXA2107R-	TΛ		
C1211	1-16/1-0/12 11	CERAMIC CHIP	0.01uF	10%	16V	IC203 IC204		IC CXA2107R-IC CXD2462R-			
C1211		TANTAL. CHIP	10uF	20%	6.3V	IC204		IC ADS933Y/2			
C1212	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	IC203		IC ADS933Y/2			
C1213	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	IC200		IC ADS933Y/2			
C1215		CERAMIC CHIP	0.001uF	10%	16V			, <u></u>			
-	•	-									

## VC-208

Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>	Ref. No.	Part No.	Description			<u>Remarks</u>
IC208	8-759-387-31	IC TC75S55F(TE85R)				< TRANSISTO	R >		
IC300		IC CXD3116R-T6							
IC301		IC AK6440AM-E2		Q200	8-729-037-74				
IC302		IC CXP912032-078R	(890E)	Q201	8-729-042-58				
IC302	8-752-897-31	IC CXP912032-089R-T6	(900/900E)	Q301 Q351	8-729-037-72 8-729-037-53				
IC305	8-759-426-25	IC MB88346LPFV-G-BND-E	R	Q351	8-729-037-33				
IC351		IC NJM3414AV(TE2)	IX.	Q332	0-127-031-14	TRANSISTOR	01172133-(10	).50	
IC352		IC NJM3414AV(TE2)		Q353	8-729-037-76	TRANSISTOR	UN9215J-(K8	).SO	
IC354		IC NJM3403AV(TE2)		Q354	8-729-013-31	TRANSISTOR	2SA1588-0Y-	TE85L	
IC355	8-759-050-51	IC SN74HCT04APW-E20		Q500	8-729-037-53				
				Q501	8-729-037-52				
IC356		IC NJM3403AV(TE2)		Q502	8-729-037-52	TRANSISTOR	2SD2216J-QF	R(K8).SO	
IC357 IC400		IC TA75S01F(TE85R) IC uPC6756GR-8JG-E2		Q503	8-729-037-52	TDANISISTOD	25D22161 0E	)(V0) SU	1
IC500		IC MPC17A134VMEL		Q504	8-729-037-52			. ,	
IC501		IC NJM324V(TE2)		Q505	8-729-037-53				
		,		Q701	8-729-046-00			( )	
IC502		IC NJM324V(TE2)		Q702	8-729-037-74	TRANSISTOR	UN9213J-(K8	).SO	
IC701		IC HG71C112TE							
IC721		IC MB3817PFV-G-BND		Q721	8-729-043-94				
IC722 IC751		IC MB3817PFV-G-BND	(000E)	Q722 Q727	8-729-043-94 8-729-024-48				
10/51	8-759-564-79	IC HD6437042AP07XSZ	(890E)	Q727 Q751	8-729-024-48				
IC751	8-759-567-99	IC HD6437042AP10XSZ	(900/900E)	Q752	8-729-037-74				
IC752		IC KM416V1204CT-L6T	(70077002)	2.02	0 127 001 7 1		01172100 (110	,	
IC753	8-759-234-20	IC TC7S08F(TE85R)		Q753	8-729-037-74	TRANSISTOR	UN9213J-(K8	).SO	
IC754		IC TC7W125FU-TE12R		Q754	8-729-037-61	TRANSISTOR	UN9113J-(K8	).SO	
IC755	8-759-196-96	IC TC7SH08FU-TE85R		Q1200	8-729-807-86				
10757	0.750.000.07	10 0//004000		Q1201	8-729-037-52	TRANSISTOR	2SD2216J-QF		
IC756 IC757		IC CXD3133R IC RL5V834/E2H		Q1202	8-729-037-52	TDANICICTOD	2002214   00		(900/900E)
IC757		IC MB81V4260S-70LPFTN-	G-FR	Q1202	0-729-037-32	TRANSISTOR	23D2210J-QF		(900/900E)
IC759		IC MSM9831-SGX4880MA						,	(700/7002)
IC760		IC AK6440AM-E2		Q1203	8-729-037-52	TRANSISTOR	2SD2216J-QF	R(K8).SO	)
									(900/900E)
IC1200	8-759-553-76	IC SC371053FTAEB	(900/900E)	Q1204	8-729-037-52	TRANSISTOR	2SD2216J-QF		
		0011		01205	0 700 007 50	TDANICICTOD	200221/100		(900/900E)
		< COIL >		Q1205	8-729-037-52	TRANSISTOR	25D2216J-QF		(900/900E)
L200	1-414-754-11	INDUCTOR 10uH		Q1206	8-729-037-53	TRANSISTOR	2SB1462 I-0F		
L201		INDUCTOR 10uH		Q1200	0 727 007 00	110.00010101	20011023 @1		(900/900E)
L300	1-414-754-11	INDUCTOR 10uH		Q1207	8-729-037-53	TRANSISTOR	2SB1462J-QF	R(K8).SO	,
L301		INDUCTOR 10uH						(	(900/900E)
L351	1-414-754-11	INDUCTOR 10uH		04000	/	TD 444010T0D			0 (0 0 0 5)
1.252	1 412 042 11	INDUCTOR 100		Q1208	8-729-037-76		•		,
L352 L400	1-412-963-11 1-414-754-11	INDUCTOR 100uH INDUCTOR 10uH		Q1209	8-729-807-86	TRANSISTOR	23D1293-UL3	)-1D (900	J/900E)
L500	1-414-754-11					< RESISTOR >			
L501	1-414-754-11	INDUCTOR 10uH							
L503	1-414-754-11	INDUCTOR 10uH		R200	1-218-977-11		100K	5%	1/16W
				R201	1-218-935-11		33	5%	1/16W
L721	1-416-344-11	INDUCTOR Out		R202	1-218-985-11		470K	5%	1/16W
L722 L723	1-416-344-11 1-416-345-11	INDUCTOR OuH INDUCTOR OuH		R203 R204	1-218-934-11 1-218-935-11		27 33	5% 5%	1/16W 1/16W
L723 L724	1-416-345-11	INDUCTOR Out		K204	1-210-935-11	KL3,CITIF	33	370	1/1000
L725	1-414-396-21	INDUCTOR 4.7uH		R205	1-218-935-11	RES.CHIP	33	5%	1/16W
				R207	1-218-990-11		0		
L726	1-216-296-91	SHORT 0 (900	/900E)	R208	1-218-990-11	SHORT	0		
L727	1-414-396-21	INDUCTOR 4.7uH		R209	1-218-990-11		0		
L751	1-414-754-11			R210	1-218-990-11	SHURI	0		
L752 L754	1-414-754-11 1-414-754-11	INDUCTOR 10uH INDUCTOR 10uH		R211	1-218-990-11	SHODT	0		
L/34	1-414-704-11	INDUCTOR TOUT		R211	1-218-990-11		0		
L1200	1-414-754-11	INDUCTOR 10uH	(900/900E)	R213	1-218-989-11		1M	5%	1/16W
L1201	1-414-754-11		900/900E)	R214	1-218-989-11		1M	5%	1/16W
L1202	1-412-942-21		900/900E)	R215	1-218-989-11	RES,CHIP	1M	5%	1/16W
L1203	1-412-957-11		(900/900E)						
L1204	1-412-957-11	INDUCTOR 33uH (	(900/900E)						
L1205	1-414-754-11	INDUCTOR 10uH (	900/900E)						
LIZUJ	1 -11-134-11	TOUR TOUR	7501760L)						

Ref. No.	Part No.	<u>Description</u>				<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>				<u>Remarks</u>
R216	1-218-957-11	RES,CHIP		2.2K	5%	1/16W	R373	1-218-977-11	RES,CHIP		100K	5%	1/16W
R217	1-208-712-11			16K	0.50%	1/16W	R374	1-208-939-11	RES,CHIP		150K	0.50%	1/16W
R218	1-208-683-11			1K	0.50%	1/16W	R375	1-208-939-11			150K	0.50%	1/16W
R220	1-208-947-11			330K	0.50%	1/16W	R376	1-218-977-11			100K	5%	1/16W
R221	1-218-985-11			470K	0.50%	1/16W	R377	1-208-715-11	RES,CHIP		22K	0.50%	1/16W
11221	1 210 700 11	REO, OTH		17010	0.0070	17 1011	11077	1 200 710 11	KEO,OIIII		2210	0.0070	171011
R222	1-208-713-11	RES.CHIP		18K	0.50%	1/16W	R378	1-208-715-11	RES,CHIP		22K	0.50%	1/16W
R223	1-208-713-11			18K	0.50%	1/16W	R379	1-208-707-11	RES,CHIP		10K	0.50%	1/16W
R224	1-208-713-11	- , -		18K	0.50%	1/16W	R380	1-208-707-11			10K	0.50%	1/16W
R225	1-208-713-11			18K	0.50%	1/16W	R381	1-218-975-11			68K	5%	1/16W
R226	1-208-713-11			18K	0.50%	1/16W	R382	1-218-975-11	RES,CHIP		68K	5%	1/16W
RZZO	1 200 7 10 11	REO,01111		1010	0.0070	17 1011	11002	1 210 770 11	ILEO, OT III		OOK	070	171011
R227	1-208-713-11	RES.CHIP		18K	0.50%	1/16W	R383	1-218-975-11	RES,CHIP		68K	5%	1/16W
R236	1-218-990-11		0				R384	1-218-975-11	RES,CHIP		68K	5%	1/16W
R237	1-218-965-11			10K	5%	1/16W	R385	1-218-975-11			68K	5%	1/16W
R300	1-218-977-11			100K	5%	1/16W	R386	1-218-975-11			68K	5%	1/16W
R301	1-218-973-11			47K	5%	1/16W	R387	1-218-953-11	RES,CHIP		1K	5%	1/16W
		,							,				
R302	1-218-953-11	RES,CHIP		1K	5%	1/16W	R388	1-218-973-11	RES,CHIP		47K	5%	1/16W
R303	1-218-973-11			47K	5%	1/16W	R389	1-218-953-11	RES,CHIP		1K	5%	1/16W
R304	1-218-977-11			100K	5%	1/16W	R390	1-218-965-11	RES,CHIP		10K	5%	1/16W
R305	1-218-953-11			1K	5%	1/16W	R391	1-218-985-11			470K	0.50%	1/16W
R306	1-218-977-11			100K	5%	1/16W	R392	1-208-715-11	RES,CHIP		22K	0.50%	1/16W
		,							,				
R307	1-218-977-11	RES,CHIP		100K	5%	1/16W	R393	1-208-931-11	RES,CHIP		68K	0.50%	1/16W
R308	1-218-977-11			100K	5%	1/16W	R394	1-208-935-11			100K	0.50%	1/16W
R309	1-218-953-11			1K	5%	1/16W	R395	1-208-931-11			68K	0.50%	1/16W
R311	1-218-989-11	RES,CHIP		1M	5%	1/16W	R396	1-208-935-11	RES,CHIP		100K	0.50%	1/16W
R314	1-218-957-11			2.2K	5%	1/16W	R400	1-218-969-11	RES,CHIP		22K	5%	1/16W
		·											
R316	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R401	1-218-969-11	RES,CHIP		22K	5%	1/16W
R317	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R402	1-218-969-11	RES,CHIP		22K	5%	1/16W
R318	1-218-977-11	RES,CHIP		100K	5%	1/16W	R403	1-218-969-11	RES,CHIP		22K	5%	1/16W
R320	1-218-957-11	RES,CHIP		2.2K	5%	1/16W	R404	1-218-965-11	RES,CHIP		10K	5%	1/16W
R325	1-218-973-11	RES,CHIP		47K	5%	1/16W	R405	1-218-965-11	RES,CHIP		10K	5%	1/16W
		·											
R326	1-218-973-11	RES,CHIP		47K	5%	1/16W	R406	1-218-989-11	RES,CHIP		1M	5%	1/16W
R327	1-218-953-11	RES,CHIP		1K	5%	1/16W	R409	1-218-989-11	RES,CHIP		1M	5%	1/16W
R328	1-218-953-11	RES,CHIP		1K	5%	1/16W	R500	1-218-975-11	RES,CHIP		68K	5%	1/16W
R329	1-218-977-11	RES,CHIP		100K	5%	1/16W	R501	1-218-961-11	RES,CHIP		4.7K	5%	1/16W
R330	1-218-977-11	RES,CHIP		100K	5%	1/16W	R502	1-216-295-91	SHORT	0			
R331	1-218-977-11	RES,CHIP		100K	5%	1/16W	R503	1-218-975-11	RES,CHIP		68K	5%	1/16W
R332	1-218-989-11	RES,CHIP		1M	5%	1/16W	R505	1-218-953-11	RES,CHIP		1K	5%	1/16W
R333	1-218-989-11	RES,CHIP		1M	5%	1/16W	R506	1-218-989-11	RES,CHIP		1M	5%	1/16W
R334	1-218-953-11	RES,CHIP		1K	5%	1/16W	R507	1-218-957-11	RES,CHIP		2.2K	5%	1/16W
R336	1-218-990-11	SHORT	0				R508	1-218-965-11	RES,CHIP		10K	5%	1/16W
R337	1-218-990-11	SHORT	0		(890E)		R509	1-218-981-11	RES,CHIP		220K	5%	1/16W
R353	1-208-675-11	RES,CHIP		470	0.50%	1/16W	R510	1-218-985-11	RES,CHIP		470K	5%	1/16W
R354	1-208-927-11	RES,CHIP		47K	0.50%	1/16W	R511	1-218-985-11	RES,CHIP		470K	5%	1/16W
R355	1-208-713-11	RES,CHIP		18K	0.50%	1/16W	R512	1-218-957-11	RES,CHIP		2.2K	5%	1/16W
R357	1-208-719-11	RES,CHIP		33K	0.50%	1/16W	R513	1-218-967-11	RES,CHIP		15K	5%	1/16W
R358	1-218-985-11	RES,CHIP		470K	0.50%	1/16W	R514	1-218-969-11	RES,CHIP		22K	5%	1/16W
R359	1-208-719-11	RES,CHIP		33K	0.50%	1/16W	R515	1-218-985-11	RES,CHIP		470K	5%	1/16W
R360	1-208-927-11	RES,CHIP		47K	0.50%	1/16W	R516	1-218-953-11	RES,CHIP		1K	5%	1/16W
R361	1-208-683-11	RES,CHIP		1K	0.50%	1/16W	R517	1-218-953-11	RES,CHIP		1K	5%	1/16W
R362	1-208-719-11	RES,CHIP		33K	0.50%	1/16W	R518	1-218-947-11	RES,CHIP		330	5%	1/16W
R363	1-208-715-11			22K		1/16W	R519	1-218-969-11			22K	5%	1/16W
R364	1-208-719-11			33K		1/16W	R520	1-218-953-11			1K	5%	1/16W
R365	1-208-927-11			47K	0.50%	1/16W	R521	1-218-965-11			10K	5%	1/16W
R366	1-208-683-11	RES,CHIP		1K	0.50%	1/16W	R522	1-218-973-11	RES,CHIP		47K	5%	1/16W
R367	1-218-977-11	RES,CHIP		100K	5%	1/16W	R523	1-216-295-91	SHORT	0			
R368	1-218-979-11			150K	5%	1/16W	R525	1-218-953-11			1K	5%	1/16W
R369	1-218-977-11			100K	5%	1/16W	R526	1-218-989-11			1M	5%	1/16W
R370	1-218-979-11			150K	5%	1/16W	R527	1-218-957-11			2.2K	5%	1/16W
R371	1-208-927-11			47K	0.50%	1/16W	R528	1-218-965-11			10K	5%	1/16W
R372	1-208-927-11	RES,CHIP		47K	0.50%	1/16W	R529	1-218-981-11	RES,CHIP		220K	5%	1/16W

## **VC-208**

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description			Remarks
		•			=0.4				•	4001/	=0.	
R530	1-218-985-11	RES,CHIP		470K	5%	1/16W	R775	1-218-977-11	•	100K	5%	1/16W
R531	1-218-985-11 1-218-957-11	,		470K 2.2K	5%	1/16W	R776	1-218-977-11 1-218-977-11	,	100K	5%	1/16W
R532 R533	1-218-957-11			2.2K 15K	5% 5%	1/16W 1/16W	R777 R778	1-218-977-11	•	100K 100K	5% 5%	1/16W 1/16W
R534	1-218-969-11			22K	5%	1/16W	R779	1-218-977-11	•	100K 100K	5%	1/16W
K354	1-210-909-11	RES,UNIP		ZZN	376	1/1000	K//9	1-210-9//-11	KE3,UNIP	TOOK	370	1/1000
R535	1-218-985-11	RES,CHIP		470K	5%	1/16W	R780	1-218-977-11	RES.CHIP	100K	5%	1/16W
R536	1-218-953-11			1K	5%	1/16W	R781	1-218-977-11	•	100K	5%	1/16W
R537	1-218-953-11	,		1K	5%	1/16W	R782	1-218-977-11	,	100K	5%	1/16W
R538	1-218-947-11			330	5%	1/16W	R783	1-218-977-11	•	100K	5%	1/16W
R539	1-218-969-11			22K	5%	1/16W	R784	1-218-977-11		100K	5%	1/16W
R540	1-218-953-11			1K	5%	1/16W	R785	1-218-977-11	•	100K	5%	1/16W
R541	1-218-965-11			10K	5%	1/16W	R786	1-218-977-11		100K	5%	1/16W
R542	1-218-973-11			47K	5%	1/16W	R787	1-218-977-11		100K	5%	1/16W
R543	1-218-973-11		0	47K	5%	1/16W	R788	1-218-990-11		101/	E0/	1/1/11/
R544	1-218-990-11	SHURI	0				R789	1-218-965-11	RES,CHIP	10K	5%	1/16W
R545	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R790	1-218-965-11	RES,CHIP	10K	5%	1/16W
R701	1-218-989-11	RES,CHIP		1M	5%	1/16W	R791	1-218-977-11	RES,CHIP	100K	5%	1/16W
R702	1-218-977-11	RES,CHIP		100K	5%	1/16W	R792	1-218-965-11	RES,CHIP	10K	5%	1/16W
R703	1-218-977-11			100K	5%	1/16W	R793	1-218-977-11	RES,CHIP	100K	5%	1/16W
R704	1-216-295-91		0				R794	1-218-953-11		1K	5%	1/16W
R705	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R795	1-107-820-11	CERAMIC CHIP	0.1MF		16V
R721	1-218-937-11	RES,CHIP		47	5%	1/16W	R797	1-218-977-11	RES,CHIP	100K	5%	1/16W
R722	1-218-943-11	RES,CHIP		150	5%	1/16W	R800	1-218-990-11	SHORT 0			
R723	1-218-965-11	RES,CHIP		10K	5%	1/16W	R801	1-218-990-11	SHORT 0			
R724	1-218-965-11	RES,CHIP		10K	5%	1/16W	R802	1-218-990-11	SHORT 0			
R725	1-218-967-11	DES CHID		15K	5%	1/16W	R804	1-218-977-11	DEC CHID	100K	5%	1/16W
R723	1-218-967-11			15K	5%	1/16W	R806	1-218-977-11	•	100K	5%	1/16W
R727	1-208-715-11			22K	0.50%	1/16W	R807	1-218-990-11		TOOK	370	1/1000
R720	1-208-719-11			33K	0.50%	1/16W	R808	1-218-990-11				
R730	1-208-927-11			47K	0.50%	1/16W	R809	1-216-809-11		100	5%	1/16W
K/30	1-200-927-11	KL3,CITIF		4/K	0.5076	1/1000	1 1009	1-210-009-11	WILTAL CITIF	100	370	1/1000
R731	1-208-697-11	RES,CHIP		3.9K	0.50%	1/16W	R810	1-218-990-11	SHORT 0			
R732	1-208-927-11	RES,CHIP		47K	0.50%	1/16W	R920	1-218-990-11	SHORT 0			
R733	1-208-927-11	RES,CHIP		47K	0.50%	1/16W	R1202	1-218-977-11	RES,CHIP	100K	5%	1/16W
R740	1-218-990-11	SHORT	0				R1203	1-218-977-11	RES,CHIP	100K	5%	1/16W
R741	1-208-927-11	RES,CHIP		47K	0.50%	1/16W	R1204	1-218-973-11	RES,CHIP	47K	5%	1/16W
R742	1-218-977-11	RES CHIP		100K	5%	1/16W	R1205	1-218-950-11	DES CHID	560	5%	1/16W
R743	1-218-989-11			100K	5%	1/16W	R1206	1-218-977-11		100K	5%	1/16W
R744	1-218-977-11			100K	5%	1/16W	R1207	1-218-953-11		1K	5%	1/16W
R745	1-218-990-11		0		0,0		R1208	1-218-959-11		3.3K	5%	1/16W
R751	1-218-977-11		Ü	100K	5%	1/16W	R1209	1-218-979-11		150K	5%	1/16W
		,				.,						.,
R754	1-218-977-11			100K	5%	1/16W	R1210	1-218-953-11		1K	5%	1/16W
R755	1-218-977-11	RES,CHIP		100K	5%	1/16W	R1211	1-218-965-11		10K	5%	1/16W
R756	1-218-958-11	RES,CHIP		2.7K	5%	1/16W	R1212	1-218-953-11	RES,CHIP	1K	5%	1/16W
R757	1-218-946-11			270	5%	1/16W	R1213	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R758	1-218-944-11	RES,CHIP		180	5%	1/16W	R1214	1-218-953-11	RES,CHIP	1K	5%	1/16W
R759	1-218-932-11	RES CHIP		18	5%	1/16W	R1215	1-218-953-11	RES.CHIP	1K	5%	1/16W
R760	1-218-990-11		0		570	1, 10 11	R1216	1-218-959-11		3.3K	5%	1/16W
R761	1-218-990-11		0				R1217	1-218-952-11		820	5%	1/16W
R763	1-218-973-11		O	47K	5%	1/16W	R1217	1-218-965-11	•	10K	5%	1/16W
R764	1-218-973-11			47K	5%	1/16W	R1219	1-218-965-11		10K	5%	1/16W
R765	1-218-977-11			100K	5%	1/16W	R1266	1-216-864-11		0	5%	1/16W
R766	1-218-977-11			100K	5%	1/16W	R1267	1-218-965-11		10K	5%	1/16W
R767	1-218-977-11			100K	5%	1/16W	R1268	1-218-965-11		10K	5%	1/16W
R768	1-218-977-11			100K	5%	1/16W	R1269	1-218-941-11		100	5%	1/16W
R769	1-218-977-11	RES,CHIP		100K	5%	1/16W	R1270	1-218-989-11	RES,CHIP	1M	5%	1/16W
R770	1-218-977-11	RES.CHIP		100K	5%	1/16W	R1271	1-218-977-11	RES,CHIP	100K	5%	1/16W
R771	1-218-977-11			100K	5%	1/16W			• *		-	
R772	1-218-977-11			100K	5%	1/16W						
R773	1-218-977-11			100K	5%	1/16W						
R774	1-218-977-11			100K	5%	1/16W						
		•										

								L				
Ref. No.	Part No.	<u>Description</u>			<u>Remarks</u>	Ref. No.	Part No.	Description				<u>Remarks</u>
		< VIBRATOR >						< DIODE >				
V200	1 7/7 50/ 21	VIDDATOD CDVC	TAL /27N/II	٦)		DE101	0 710 042 70	DIODE MAG	C10	1 (TV)		
X200 X300		VIBRATOR, CRYS VIBRATOR, CERA	•	<i>L</i> )		D5101 D5102	8-719-043-70 8-713-102-80			. ,		
X751		VIBRATOR,LITHIU		E (6.875N	ЛHz)							
X1200	1-781-068-21	VIBRATOR, CRYS	TAL (40,5M	Hz) (900	/900E)			< IC >				
						IC5001	8-759-546-65	IC CXA8115	AR-	T4		
	A-7073-682-A	VF-121 BOARD, C	OMPLETE			IC5002	8-759-530-19				R	
		*********		CN- 10/	2000		8-759-097-75					
			(Re	T.NO.: 1U,0	000Series)	105102	8-752-392-33	IC CXD2458	AK-	14		
		< CAPACITOR >						< COIL >				
C5001	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	L5001	1-414-754-11	INDUCTOR 1	ОпЕ	I		
C5002		CERAMIC CHIP	0.01uF	10%	16V	L5002	1-414-754-11					
C5003	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V	L5101	1-412-033-11	INDUCTOR CI	HIP	220uH		
C5004	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	L5102	1-414-756-11	INDUCTOR 4	7ul	l		
C5005	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	L5103	1-412-947-11	INDUCTOR 4	.7ul	Н		
C5006	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V			< TRANSISTO	)R >			
C5007	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V							
C5008	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	Q5101	8-729-013-72	TRANSISTOR	R	N2105-TE85	5L	
C5009	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	Q5102	8-729-037-61	TRANSISTOR	U	N9113J-(K8	).SO	
C5010	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V	Q5103	8-729-037-74	TRANSISTOR	U	N9213J-(K8	).SO	
C5011	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V			< RESISTOR :	>			
C5012	1-164-505-11	CERAMIC CHIP	2.2uF		16V							
C5013	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	R5001	1-218-990-11	SHORT	0			
C5015	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	R5003	1-218-990-11	SHORT	0			
C5016	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	R5005	1-218-971-11	RES,CHIP		33K	5%	1/16W
						R5008	1-218-969-11			22K	5%	1/16W
C5017		CERAMIC CHIP	220PF	10%	16V	R5016	1-218-990-11	SHORT	0			
C5018		CERAMIC CHIP	220PF	10%	16V							
C5019		CERAMIC CHIP	220PF	10%	16V	R5018	1-218-990-11		0			
C5020		CERAMIC CHIP	0.1uF	10%	10V	R5020	1-218-975-11			68K	5%	1/16W
C5101	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	R5021	1-218-971-11			33K	5%	1/16W
05400	4 4 / 4 0 4 0 4 4	OFDANAIO OLUB	0.04 5	400/	4.04	R5022	1-218-985-11	- 1 -		470K	5%	1/16W
C5102 C5103		CERAMIC CHIP	0.01uF	10%	16V	R5023	1-218-972-11	RES,CHIP		39K	5%	1/16W
C5103 C5104		TANTAL. CHIP CERAMIC CHIP	10uF	20%	10V 16V	DEO24	1-218-972-11	DEC CLUD		201/	E0/	1/1/\\
C5104 C5105		TANTAL. CHIP	0.1uF 6.8uF	10% 20%	20V	R5024 R5025	1-218-972-11	- 1		39K 68K	5% 5%	1/16W 1/16W
C5105		CERAMIC CHIP	0.0022uF		20V 16V	R5025	1-218-971-11			33K	5%	1/16W
C3100	1-104-737-11	CEIVAIVIIC CITII	0.002241	1070	100	R5027	1-218-973-11			47K	5%	1/16W
C5108	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	R5028	1-218-972-11			39K	5%	1/16W
C5109		CERAMIC CHIP	0.022uF	10%	16V			,				
C5110	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	R5029	1-218-990-11	SHORT	0			
C5111	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	R5030	1-218-941-11	RES,CHIP		100	5%	1/16W
C5112	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	R5031	1-218-941-11	RES,CHIP		100	5%	1/16W
						R5035	1-218-941-11	RES,CHIP		100	5%	1/16W
C5113		CERAMIC CHIP	150PF	5%	16V	R5038	1-218-990-11	SHORT	0			
C5114		CERAMIC CHIP	0.01uF	10%	16V							
C5115		CERAMIC CHIP	4.7uF	10%	10V	R5039	1-218-990-11		0			
C5116	1-164-943-11		0.01uF	10%	16V	R5040	1-216-861-11			2.2M	5%	1/16W
C5117	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V	R5041	1-216-839-11		_	33K	5%	1/16W
CE110	1 1/4 050 11	CEDAMIC CLUD	2205	E0/	177	R5043	1-218-990-11		0	100	E0/	1/1/\\
C5118 C5119	1-164-858-11	CERAMIC CHIP CERAMIC CHIP	22PF 0.001uF	5% 10%	16V 50V	R5045	1-218-941-11	RES,CHIP		100	5%	1/16W
						DEO44	1 210 0/1 11	DEC CHID		100	E0/	1/14\\\
C5120 C5121	1-135-259-11	TANTAL. CHIP CERAMIC CHIP	10uF 0.01uF	20% 10%	6.3V 16V	R5046 R5047	1-218-941-11 1-218-941-11			100 100	5% 5%	1/16W 1/16W
C5121	1-164-945-11		0.0033uF	10%	16V	R5101	1-216-941-11			0	5%	1/16W
00122	. 10-7 /-11	CERTAINIO OTTI	J.00JJul	1070	100	R5101	1-218-901-11			180K	0.50%	1/16W
C5123	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R5103	1-218-975-11			68K	5%	1/16W
		< CONNECTOD				DE104	1 210 07/ 11	DEC CHID		54V	E0/	1/14\\\
		< CONNECTOR >				R5104	1-218-974-11			56K	5% 0.50%	1/16W
CNEOO1	1 70/ /20 11	CONNECTOR, FFC	/EDC /7IE\ '	01D		R5105 R5106	1-218-887-11 1-218-975-11			47K 68K	0.50% 5%	1/16W 1/16W
		CONNECTOR, FFC	` '			R5100	1-218-970-11			27K	5%	1/16W
CINDIUI	1 110-370-21	JOININE CTOIN, DOI	ייטם טו טייי	אטנ שיוי		R5107	1-218-982-11			27K 270K	5%	1/16W
						110100	1 210 702-11	. LO,OIIII		2,010	570	1, 1000

VF-121 VI-151

Ref. No.	Part No.	<u>Description</u>			<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>			<u>Remarks</u>
R5109	1-218-973-11	RES,CHIP	47K	5%	1/16W	C1436	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
R5110	1-218-974-11	RES,CHIP	56K	5%	1/16W	C1437	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
R5111	1-218-965-11	RES,CHIP	10K	5%	1/16W	C1438	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5113	1-218-979-11	RES,CHIP	150K	5%	1/16W	C1439	1-128-829-91	TANTAL. CHIP	220uF	20%	6.3V
R5114	1-218-954-11	RES,CHIP	1.2K	5%	1/16W	C1440	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
R5115	1-218-980-11	RES,CHIP	180K	5%	1/16W	C1441	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
R5116	1-218-969-11	RES,CHIP	22K	5%	1/16W	C1442	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5117	1-218-985-11	RES,CHIP	470K	5%	1/16W	C1444	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
R5118	1-218-983-11	RES,CHIP	330K	5%	1/16W	C1445	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5119	1-218-971-11	RES,CHIP	33K	5%	1/16W	C1446	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5120	1-218-989-11	RES,CHIP	1M	5%	1/16W	C1447	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5121	1-218-974-11	RES,CHIP	56K	5%	1/16W	C1449	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5123	1-218-965-11	RES,CHIP	10K	5%	1/16W	C1450	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
R5125	1-218-971-11	RES,CHIP	33K	5%	1/16W	C1451	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5127	1-218-990-11	SHORT 0				C1452	1-164-858-11	CERAMIC CHIP	22PF	5%	16V
R5128	1-218-953-11	RES,CHIP	1K	5%	1/16W	C1503	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5134	1-218-990-11	SHORT 0				C1505	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
R5136	1-218-990-11	SHORT 0				C1506	1-164-943-11	CERAMIC CHIP CERAMIC CHIP	0.01uF	10%	16V
						C1507 C1512	1-164-943-11		0.01uF	10% 20%	16V 4V
	A-7094-030-A	VI-151 BOARD, C	OMPLETE (	(890E)		01312	1-104-847-11	TANTAL. CHIP	22uF	20%	4 V
		********	*******	****		C1513	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
	A-7094-068-A	VI-151 BOARD, C				C1600	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
		******				C1601	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
			(Re	ef.No.:10,0	000Series)	C1602	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
		< CAPACITOR >				C1603	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
		(0/11/10/10/17				C1604	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1400	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1606	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C1401	1-109-994-11	CERAMIC CHIP	2.2uF	10%	10V	C1607	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C1402	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1609	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1403	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1610	1-164-933-11	CERAMIC CHIP	220PF	10%	16V
C1404	1-104-851-11	TANTAL. CHIP	10uF	20%	10V						
						C1611	1-164-858-11	CERAMIC CHIP	22PF	5%	16V
C1405	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1612	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1406	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1613	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1407	1-104-851-11	TANTAL. CHIP	10uF	20%	10V	C1614	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1409	1-109-982-11	CERAMIC CHIP	1uF	10%	10V 16V	C1615	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1410	1-164-943-11	CERAMIC CHIP	0.01uF	10%	100	C1617	1-135-149-21	TANTALUM CHIP	2 2uF	20%	10V
C1412	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1618		CERAMIC CHIP	220PF	5%	16V
C1413	1-104-851-11	TANTAL. CHIP	10uF	20%	10V	C1619	1-109-982-11		1uF	10%	10V
C1414	1-104-851-11	TANTAL. CHIP	10uF	20%	10V	C1620		TANTAL. CHIP	10uF	20%	6.3V
C1415	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C1621		TANTAL. CHIP	10uF	20%	6.3V
C1416	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V						
						C1622		TANTAL. CHIP	10uF	20%	6.3V
C1417	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C1623	1-135-259-11		10uF	20%	6.3V
C1418	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C1804	1-164-943-11		0.01uF	10%	16V
C1419	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1833		CERAMIC CHIP	0.01uF	10%	16V
C1420	1-135-181-21	TANTALUM CHIP		20%	6.3V	C1834	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1421	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1837	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1422	1-135-149-21	TANTALUM CHIP	2 2uF	20%	10V	C1838		CERAMIC CHIP	0.01uF 0.01uF	10%	16V 16V
C1422	1-133-149-21	TANTAL CHIP	2.2ur 220uF	20%	6.3V	C1840	1-164-943-11		0.01uF 0.01uF	10%	16V 16V
C1424	1-120-023-31	TANTAL. CHIP	10uF	20%	10V	C1844		CERAMIC CHIP	0.01uF	10%	16V
C1424	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	C1845	1-135-259-11		10uF	20%	6.3V
C1425	1-164-668-11	CERAMIC CHIP	510PF	5%	50V	01010	1 100 200 11	manne. Om	Tour	2070	0.0 V
	4 404 045 41	OED 44410 0:	0.04 =	4007	40) (	C1846	1-164-943-11		0.01uF	10%	16V
C1426	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1847	1-104-851-11		10uF	20%	10V
C1427	1-164-864-11	CERAMIC CHIP	39PF	5%	16V	C1850	1-164-866-11	CERAMIC CHIP	47PF	5%	16V
C1428	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C1852		CERAMIC CHIP	0.033uF	10%	16V
C1429	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C1854	1-164-866-11	CERAMIC CHIP	47PF	5%	16V
C1430	1-164-862-11	CERAMIC CHIP	33PF	5%	16V	C1856	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1431	1-164-844-11	CERAMIC CHIP	4PF	0.25PF	16V	C1860		CERAMIC CHIP	0.01uF	10%	16V
C1432	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C1869	1-164-943-11		0.01uF	10%	16V
C1433	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C1875		TANTAL. CHIP	10uF	20%	10V
C1434	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1878		CERAMIC CHIP	0.1uF	10%	10V
C1435	1-109-982-11	CERAMIC CHIP	1uF	10%	10V						

Ref. No.	Part No.	<u>Description</u>			<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>			<u>Remarks</u>
C1881	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	C2056	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1884	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2206	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C1885	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2210	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C1886	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2211	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C1887	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2212	1-119-749-11	TANTAL. CHIP	33uF	20%	4V
01000	1 1/4 042 11	CEDAMIC CUID	0.015	100/	1/1/	00010	1 104 051 11	TANITAL CLUD	10	200/	101/
C1888	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2213	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1889	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2215	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1890	1-164-935-11 1-164-943-11	CERAMIC CHIP	470PF	10%	16V	C2216	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1891 C1901	1-164-943-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.01uF	10% 10%	16V 16V	C2217 C2218	1-164-943-11 1-164-943-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.01uF	10% 10%	16V 16V
C1901	1-104-945-11	CERAIVIIC CHIP	U.UTUF	10%	100	G2210	1-104-945-11	CERAIVIIC CHIP	U.UTUF	1076	101
C1903	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2219	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1904	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2220	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1909	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2221	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1910	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2222	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1914	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2223	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1915	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2224	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1933	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V	C2225	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C2001	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2226	1-107-820-11	CERAMIC CHIP	0.1uF	100/	16V
C2002	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2227	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C2003	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2232	1-164-858-11	CERAMIC CHIP	22PF	5%	16V
C2004	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2233	1-164-854-11	CERAMIC CHIP	15PF	5%	16V
C2004	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2234	1-104-834-11	CERAMIC CHIP	0.1uF	J 70	16V
C2007	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2237	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C2009	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V	C2238	1-135-091-00	TANTALUM CHIP		20%	16V
C2010	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V	C2239	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
020.0		.,,	.,	2070	0.01	02207		0214 41110 01111	0.00000.	.070	
C2012	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2400	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C2014	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2402	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C2015	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2403	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C2016	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2405	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2017	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	C2408	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
00010	1 105 050 11	TANITAL OLUD	10	200/	( 2) (	00400	1 1/4 042 11	OEDANAIO OLIID	0.01	100/	1/1/
C2018	1-135-259-11	TANTAL CHIP	10uF	20%	6.3V	C2409	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2022 C2024	1-107-686-11 1-135-091-00	TANTAL. CHIP TANTALUM CHIP	4.7uF 1uF	20% 20%	16V 16V	C2410 C2500	1-109-982-11 1-164-941-11	CERAMIC CHIP	1uF 0.0047uF	10% 10%	10V 16V
C2024 C2025	1-135-091-00	TANTAL. CHIP	10uF	20%	6.3V	C2500	1-164-937-11	CERAMIC CHIP	0.0047uF	10%	16V 16V
C2023	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2507	1-164-943-11	CERAMIC CHIP	0.001uF	10%	16V 16V
62027	1-104-743-11	CERAIVIIC CHIF	0.0 Tul	10 /0	10 V	02340	1-104-743-11	CERAIVIIC CHIF	0.0 Tul	10 /0	100
C2028	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2550	1-164-739-11	CERAMIC CHIP	560PF	5%	50V
C2029	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C2551		CERAMIC CHIP	0.1uF	10%	10V
C2030	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	C2552	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2031	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2553	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C2032	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2554	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C2033	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C2555		CERAMIC CHIP	0.1uF	10%	10V
C2034	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2556		CERAMIC CHIP	0.001uF	10%	16V
C2035	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2557		CERAMIC CHIP	0.1uF	10%	10V
C2036	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2558		CERAMIC CHIP	0.1uF	10%	10V
C2037	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2559	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2038	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2561	1-107-686-11	TANTAL CHIP	4.7uF	20%	16V
C2039	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2562		CERAMIC CHIP	0.01uF	10%	16V
C2040	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2563		CERAMIC CHIP	0.01uF	10%	16V
C2041	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2564		CERAMIC CHIP	0.01uF	10%	16V
C2042	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2565		CERAMIC CHIP	330PF	5%	50V
C2044	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2566		CERAMIC CHIP	0.1uF	10%	10V
C2045	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2567	1-107-686-11		4.7uF	20%	16V
C2046	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2569		CERAMIC CHIP	0.1uF	10%	10V
C2047	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2570		CERAMIC CHIP	0.047uF	10%	16V
C2048	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2572	ı-125- <i>/ /</i> 7-11	CERAMIC CHIP	0.1uF	10%	10V
C2049	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2573	1-107-686-11	TANTAL CHIP	4.7uF	20%	16V
C2047	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2573		CERAMIC CHIP	4.7uF	10%	16V
C2053	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2575		CERAMIC CHIP	0.047ui 0.1uF	10%	10V
C2054	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V	C2576		CERAMIC CHIP	0.1uF	10%	10V
C2055		CERAMIC CHIP	0.015uF	10%	25V	C2577	1-107-686-11		4.7uF	20%	16V

Ref. No.	Part No.	Description			<u>Remarks</u>	Ref. No.	Part No.	Description			Remarks
			0.1uF	100/				TANTAL, CHIP	10	200/	
C2579 C2582	1-125-777-11 1-125-777-11	CERAMIC CHIP CERAMIC CHIP	0.1uF 0.1uF	10% 10%	10V 10V	C3251 C3252		TANTAL. CHIP	10uF 10uF	20% 20%	6.3V 6.3V
C2582	1-123-777-11		4.7uF	20%	16V	C3252		TANTAL. CHIP	10uF 10uF	20%	10V
C2585	1-125-777-11		0.1uF	10%	10V	C3254		CERAMIC CHIP	0.022uF	10%	16V
C2586	1-125-777-11		0.1uF	10%	10V	C3255		CERAMIC CHIP	0.022uF	10%	16V
C2587	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3256		TANTAL. CHIP	10uF	20%	10V
C2588	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3257		TANTAL. CHIP	10uF	20%	10V
C2589	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3258		TANTAL. CHIP	10uF	20%	10V
C2590	1-164-874-11	CERAMIC CHIP	100PF 100PF	5% 5%	16V 16V	C3259		TANTAL. CHIP	4.7uF 2.2uF	20%	20V
C2591	1-164-874-11	CERAMIC CHIP	TOUPF	5%	101	C3260	1-104-303-11	CERAMIC CHIP	Z.ZUF		16V
C3200	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	C3261	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C3201	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3262		CERAMIC CHIP	2.2uF		16V
C3202	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	C3263	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C3203	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3264		TANTAL. CHIP	10uF	20%	20V
C3204	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	C3265	1-164-505-11	CERAMIC CHIP	2.2uF		16V
CSONE	1-107-819-11	CERAMIC CHIP	0.022uF	100/	16V	C2244	1 115 147 11	CEDAMIC CHID	0.22uE	100/	10V
C3205 C3206	1-107-819-11	TANTAL. CHIP	0.022ur 10uF	10% 20%	16V 16V	C3266 C3267		CERAMIC CHIP TANTAL. CHIP	0.22uF 10uF	10% 20%	6.3V
C3200	1-104-913-11	CERAMIC CHIP	0.1uF	10%	16V 16V	C3267		CERAMIC CHIP	0.1uF	10%	25V
C3208	1-104-913-11	TANTAL. CHIP	10uF	20%	16V	C3270		TANTAL. CHIP	22uF	20%	16V
C3209	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	C3271		CERAMIC CHIP	1uF	10%	10V
C3210	1-119-751-11	TANTAL. CHIP	22uF	20%	16V			< CONNECTOR >			
C3211	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V						
C3212	1-162-966-11		0.0022uF	10%	50V			CONNECTOR, FFO			_
C3213	1-104-913-11		10uF	20%	16V			CONNECTOR, BO			Р
C3215	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		1-784-421-11	CONNECTOR, FFO			
C3216	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V			CONNECTOR, BO			
C3217	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	0112701	1 700 000 11	001111201011, 00	71110 10 00	711110 201	
C3218	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	CN2905	1-779-334-11	CONNECTOR, FFO	C/FPC 20P		
C3219	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	CN2906	1-774-602-41	CONNECTOR, BO	ARD TO BO	ARD 60P	
C3220	1-164-874-11	CERAMIC CHIP	100PF	5%	16V			CONNECTOR, FFO			
								CONNECTOR, FFO			
C3221	1-164-505-11	CERAMIC CHIP	2.2uF	100/	16V	CN2912	1-784-421-11	CONNECTOR, FFO	C/FPC (ZIF)	27P	
C3222 C3223	1-115-566-11 1-115-566-11	CERAMIC CHIP CERAMIC CHIP	4.7uF 4.7uF	10% 10%	10V 10V	CN2012	1 701 121 11	CONNECTOR, FFO	C/EDC (7IE)	27D	
C3223	1-113-300-11	CERAMIC CHIP	4.7ur 0.0022uF	10%	16V			PIN, CONNECTOR		2/1	
C3225	1-164-940-11	CERAMIC CHIP	0.0022ui	10%	16V			PIN, CONNECTOR		SMD) 3P	
								,	, , , ,	, -	
C3226		CERAMIC CHIP	0.0022uF	10%	16V			< DIODE >			
C3227	1-164-939-11		0.0022uF	10%	16V						
C3228	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V	D1600		DIODE KV14701			
C3229	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V	D2200		DIODE MA728-1			
C3230	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V	D2201 D2203		DIODE MA728-1 DIODE MA2S11			
C3231	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D2203 D2206		DIODE MA2S11	` '		
C3232	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D2200	0 717 000 20	D1002 1VII/2011	1 (110).00		
C3233	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D2207	8-719-421-27	DIODE MA728-1	ГХ		
C3234	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D2208	8-719-421-27	DIODE MA728-1	ГХ		
C3235	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D2500		DIODE MA2S11			
22221		0554440 0445		100/	0.517	D3200		DIODE MA728-1			
C3236		CERAMIC CHIP	0.01uF	10%	25V	D3201	8-719-420-14	DIODE MA8082	-1X		
C3237		TANTAL. CHIP	10uF	20%	10V	רטינים	0 710 420 14	DIODE MAGOOS	TV		
C3238 C3239	1-115-566-11 1-115-566-11	CERAMIC CHIP CERAMIC CHIP	4.7uF 4.7uF	10% 10%	10V 10V	D3202 D3203		DIODE MA8082			
C3240	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V 10V	D3203		DIODE 1SS388(			
00210	1 110 000 11	OLIU WIIIO OI III	1.7 01	1070	101	D3205		DIODE RB461F-			
C3241	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D3206		DIODE RB461F-			
C3242	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V						
C3243	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D3207		DIODE RB461F-			
C3244	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	D3208		DIODE 1SS388(			
C3245	1-164-505-11	CERAMIC CHIP	2.2uF		16V	D3209		DIODE RB461F-			
C3246	1-164-505-11	CERAMIC CHIP	2 211E		16V	D3210		DIODE RB461F- DIODE RB461F-			
C3246 C3247	1-164-505-11	TANTAL. CHIP	2.2uF 10uF	20%	6.3V	D3211	0-119-000-34	טוטטב אט4011-	1100		
C3247	1-155-259-11	CERAMIC CHIP	2.2uF	2070	0.3V 16V						
C3249	1-165-319-11	CERAMIC CHIP	0.1uF		50V						
C3250		TANTAL. CHIP	10uF	20%	6.3V						

Ref. No.	Part No.	Description	<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remarks</u>
D3212	8-719-066-16	DIODE RB491D-T146		L1811	1-414-754-11	INDUCTOR 10	)uH
D3213		DIODE MA796-TX		L2004		INDUCTOR 10	
D3214	8-719-066-34	DIODE RB461F-T106		L2005	1-414-754-11	INDUCTOR 10	)uH
D3215	8-719-066-34	DIODE RB461F-T106		L2201	1-414-754-11	INDUCTOR 10	)uH
D3216	8-719-056-48	DIODE 1SS388(TPL3)		L2202	1-414-751-11	INDUCTOR 1	ıH
D3217	8-719-056-48	DIODE 1SS388(TPL3)		L2400	1-414-754-11	INDUCTOR 10	ЭυΗ
		DIODE 1SS388(TPL3)		L2511	1-414-754-11		
D3221		DIODE 1SS388(TPL3)		L2512	1-414-754-11		
D3223	8-719-056-48	DIODE 1SS388(TPL3)		L3204	1-416-345-11	INDUCTOR OU	ıH
D3224	8-719-056-48	DIODE 1SS388(TPL3)		L3205	1-416-346-11	INDUCTOR OL	ıH
D3226	8-719-056-23	DIODE MA2S111-(K8).SO		L3206	1-416-345-11	INDUCTOR OL	ıH
		DIODE MA2S111-(K8).SO		L3207	1-416-345-11	INDUCTOR OL	ıH
				L3208	1-416-345-11	INDUCTOR OL	ıH
		< IC >		L3209	1-416-345-11	INDUCTOR OL	ıН
				L3210	1-414-396-21	INDUCTOR 4.	7uH
		IC M62367GP-75ED		10044	4 44 4 00 / 04	INDUSTOR 4	
		IC AN2222FBQ-EB IC LA9511W-TBM		L3211 L3212	1-414-396-21		
		IC LA9511W-1BM IC M65511WG-600D		L3212 L3213	1-414-396-21	INDUCTOR 4.	
		IC MB90097PFV-G-110-BND-ER		L3213	1-414-396-21		
101302	0-737-347-23	IC WID7007711 V-G-110-DIND-ER		L3214		INDUCTOR 4.	
IC1600	8-759-545-03	IC HG73C037BPTL		L3213	1 414 370 21	INDUCTOR 4.	7411
		IC CXD3129R-T6		L3216	1-414-396-21	INDUCTOR 4.	7uH
IC1602	8-752-392-25	IC CXD3200R-T6		1	1-414-396-21		
IC1814	8-752-086-52	IC CXA2071R-T4		L3218	1-414-396-21	INDUCTOR 4.	7uH
IC1816	8-752-086-53	IC CXA2072R-T4					
IC1900	8-759-534-27	IC F712504BPM-TEB				< LINE FILTER	>
		IC AN2902FHQ-EB		LF3200	1-411-957-11	FILTER, COMM	ION MODE
IC2002	8-759-557-16	IC PCM3006T/T2				•	
IC2200	8-759-398-90	IC S-81236PG-P7-T1				< IC LINK >	
IC2201	8-759-424-79	IC S-8423YFS-T2					
100000		10 71 450 (00) (10		1	1-576-122-21		,
		IC TL1596CPWR			1-533-760-21		
		IC S579286GGB-TEB IC MB91191LGA-G-120-BND-ER		1	1-533-760-21 1-533-760-21	, ,	
		IC AK6480AM-E2			1-533-760-21		
		IC CXA8062R-EB		21 33203	1-333-700-21	TOSE (SIVID) T	·TA
				⚠ PS3204	1-533-760-21	FUSE (SMD) 1	.4A
IC2504	8-759-385-94	IC CXA8053Q-TE-B		⚠ PS3205	1-533-760-21	FUSE (SMD) 1	.4A
		IC TA8486F(EL)		⚠ PS3206	1-533-760-21	FUSE (SMD) 1	.4A
IC3200	8-759-491-09	IC MB4488PFV-G-BND-ER				TDANGICTO	
		< COIL >				< TRANSISTOI	K >
				Q1400	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
L1400		INDUCTOR 10uH		04:00	0.700.007.6	TD ANG: CTC =	(900/900E)
L1401		INDUCTOR 5 4 JUL		Q1402			UN9113J-(K8).SO (900/900E)
L1402 L1403		INDUCTOR 5.6uH INDUCTOR 33uH		Q1403 Q1404			2SC5376-B(TE85L) (900/900E) 2SB1462J-QR(K8).SO
L1403		INDUCTOR 33ulf		Q1404 Q1405			2SC5376-B(TE85L) (900/900E)
LITOT	1-414-754-11	INDUCTOR TOUT		21403	0-727-040-77	TRANSISTOR	2303370-B(12032) (700/7002)
L1405	1-414-755-11	INDUCTOR 22uH (890E/900:U	S)	Q1406			2SC5376-B(TE85L)(900/900E)
L1500	1-414-757-11	INDUCTOR 100uH		Q1407			2SA1226-T1E3E4
L1501		INDUCTOR 100uH		Q1500			2SD2216J-QR(K8).SO
L1601		INDUCTOR 1.5uH		Q1501			2SD2216J-QR(K8).SO
L1602	1-414-/54-11	INDUCTOR 10uH		Q1502	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
L1603	1-414-754-11	INDUCTOR 10uH		Q1810	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
L1604		INDUCTOR 10uH		Q2003			UN9113J-(K8).SO
L1605		INDUCTOR 10uH		Q2004			UN9210J-(K8).SO
L1803		INDUCTOR 10uH		Q2005			UN9210J-(K8).SO
L1808	1-414-754-11	INDUCTOR 10uH		Q2006	8-729-037-52	<b>TRANSISTOR</b>	2SD2216J-QR(K8).SO

#### Note:

Note:
The components identified by mark ∆ or dotted line with mark ∆ are critical for safety.
Replace only with part number specified.

#### Note:

Les composants identifiés par une marque ∆ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description		Remarks	Ref. No.	Part No.	Description			Remarks
			2002217   007(00) 00	rtornarto			•	200221/10	)D(K0) CO	
Q2007			2SD2216J-QR(K8).SO		Q3234		TRANSISTOR			
Q2008			2SD2216J-QR(K8).SO		Q3235		TRANSISTOR		` '	
Q2009			2SD2216J-QR(K8).SO		Q3236		TRANSISTOR			
Q2011			UN9115J-(K8).SO		Q3237		TRANSISTOR			
Q2012	8-729-037-63	TRANSISTOR	UN9115J-(K8).SO		Q3238	8-729-037-52	TRANSISTOR	2SD2216J-0	2R(K8).SO	
00040	0.700.007.74	TRANSISTOR	111100401 (1/0) 00		00000	0.700.007.50	TRANSICTOR	000444016	ND (WA) AA	
Q2013			UN9213J-(K8).SO		Q3239		TRANSISTOR			
Q2014			2SD1511-R/S(TX)		Q3240		TRANSISTOR		` '	
Q2200			UN9213J-(K8).SO		Q3241		TRANSISTOR			
Q2201			UN9213J-(K8).SO		Q3242		TRANSISTOR		. ,	
Q2202	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO		Q3243	8-729-037-52	TRANSISTOR	2SD2216J-0	2R(K8).SO	
Q2203			2SD2216J-QR(K8).SO		Q3244		TRANSISTOR			
Q2206			HN1L02FU(TE85R)		Q3245		TRANSISTOR		` '	
Q2211			UN9111J-(K8).SO		Q3246		TRANSISTOR			
Q2212	8-729-028-27	TRANSISTOR	2SK2009(TE85L)		Q3247	8-729-037-53	TRANSISTOR	2SB1462J-0	2R(K8).SO	
Q2213	8-729-427-70	TRANSISTOR	XP4401-TXE		Q3248	8-729-037-74	TRANSISTOR	UN9213J-(K	(8).SO	
Q2214			UN9113J-(K8).SO		Q3249		TRANSISTOR		2R(K8).SO	
Q2216	8-729-141-48	TRANSISTOR	2SB624-T1BV4		Q3250		TRANSISTOR			
Q2217	8-729-037-72	TRANSISTOR	UN9211J-(K8).SO		Q3251	8-729-037-52	TRANSISTOR	2SD2216J-0	2R(K8).SO	
Q2218	8-729-037-72	TRANSISTOR	UN9211J-(K8).SO		Q3252	8-729-037-74	TRANSISTOR	UN9213J-(K	(8).SO	
Q2219			UN9211J-(K8).SO		Q3253		TRANSISTOR			
			• •							
Q2220	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO		Q3254	8-729-037-74	TRANSISTOR	UN9213J-(K	(8).SO	
Q2221	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO							
Q2505	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO				< RESISTOR >			
Q2506	8-729-141-48	TRANSISTOR	2SB624-T1BV4							
Q2507	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO		R1400	1-218-981-11	RES,CHIP	220K	5%	1/16W
					R1401	1-218-941-11	RES,CHIP	100	5%	1/16W
Q2901	8-729-037-72	TRANSISTOR	UN9211J-(K8).SO		R1403	1-218-961-11	RES,CHIP	4.7K	5%	1/16W
Q3200			2SK1830-TE85L		R1404	1-218-973-11		47K	5%	1/16W
<b>△</b> Q3201		TRANSISTOR			R1405	1-218-973-11		47K	5%	1/16W
<b>△</b> Q3202		TRANSISTOR				1 210 770 11	1120701111		0,0	.,
Q3203			2SB1122-ST-TD		R1406	1-218-969-11	RES CHIP	22K	5%	1/16W
20200	0 727 001 11	110 110 10 10 10 10 10 10 10 10 10 10 10	2001122 01 10		R1407			4.7K	5%	1/16W
Q3204	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO		R1408	1-218-961-11		4.7K	5%	1/16W
Q3205			2SK1830-TE85L		R1409	1-218-965-11		10K	5%	1/16W
Q3205			2SD1622-ST-TD		R1410			4.7K	5%	1/16W
Q3200			2SB1462J-QR(K8).SO		K1410	1-210-901-11	KL3,CITIF	4.7K	370	1/1000
Q3207			2SB1122-ST-TD		D1/11	1-218-953-11	DEC CUID	1K	5%	1/16W
Q3208	8-729-804-41	TRANSISTUR	23B1122-31-1D		R1411			15K	5% 5%	
02200	0.720.042.04	TDANCICTOD	CDU210/ DM TI		R1412					1/16W
Q3209			CPH3106-PM-TL		R1413			10K	5%	1/16W
Q3210			CPH3106-PM-TL		R1414	1-218-969-11		22K	5%	1/16W
Q3211			CPH3106-PM-TL		R1415	1-218-949-11	RES,CHIP	470	5%	1/16W
Q3212			CPH3106-PM-TL							
Q3213	8-729-043-94	TRANSISTOR	CPH3106-PM-TL		R1416	1-218-989-11		1M	5%	1/16W
					R1417	1-218-965-11		10K	5%	1/16W
Q3214			CPH3106-PM-TL		R1418	1-218-969-11		22K	5%	1/16W
Q3215			2SD2216J-QR(K8).SO		R1419			1K	5%	1/16W
Q3216		TRANSISTOR			R1420	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
Q3217			2SB1462J-QR(K8).SO							
Q3218	8-729-041-24	TRANSISTOR	NDS355AN		R1421	1-218-953-11		1K	5%	1/16W
					R1422	1-218-947-11		330	5%	1/16W
Q3219	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO		R1423	1-218-953-11		1K	5%	1/16W
Q3220	8-729-041-24	TRANSISTOR	NDS355AN		R1424	1-218-971-11	RES,CHIP	33K	5%	1/16W
Q3221	8-729-041-24	TRANSISTOR	NDS355AN		R1425	1-218-935-11	RES,CHIP	33	5%	1/16W
Q3222	8-729-041-24	TRANSISTOR	NDS355AN							
Q3223	8-729-041-24	TRANSISTOR	NDS355AN		R1426	1-218-965-11	RES,CHIP	10K	5%	1/16W
					R1427	1-218-949-11		470	5%	1/16W
Q3224	8-729-041-24	TRANSISTOR	NDS355AN		R1429			150K	5%	1/16W
Q3225			UN9213J-(K8).SO		R1430			1K	5%	1/16W
Q3226			MGSF3455VT1		R1431	1-218-979-11		150K	5%	1/16W
Q3227			UN9113J-(K8).SO				- / =			•
Q3228			UN9213J-(K8).SO							
			, ,							
Q3229			UN9213J-(K8).SO							
Q3230		TRANSISTOR								
Q3231		TRANSISTOR			[	Note :		Note :		
03232			2SD2216J-QR(K8).SO			The components		Les compos		
Q3233	0-127-031-33	NUICICHANI	2SB1462J-QR(K8).SO		·	mark $\triangle$ or dotted		une marqu		critiques
						⚠ are critical for		pour la sécu		par upa
						Replace only wit specified.	n part number	Ne les rem pièce portan		
				6-	30 L			F. Soo Portain		y <sub>F</sub> 200.

Ref. No.	Part No.	<u>Description</u>				<u>Remarks</u>	Ref. No.	Part No.	<u>Description</u>				<u>Remarks</u>
R1432	1-218-965-11	RES,CHIP		10K	5%	1/16W	R1695	1-218-938-11	RES,CHIP		56	0.50%	1/16W
R1433	1-218-953-11	RES,CHIP		1K	5%	1/16W	R1696	1-208-707-11	RES,CHIP		10K	0.50%	1/16W
R1434	1-218-965-11	RES,CHIP		10K	5%	1/16W	R1697	1-208-707-11	RES,CHIP		10K		1/16W
R1435	1-218-950-11	RES,CHIP		560	5%	1/16W	R1698	1-218-938-11	RES,CHIP		56	0.50%	1/16W
R1436	1-218-963-11	RES,CHIP		6.8K	5%	1/16W	R1699	1-218-938-11	RES,CHIP		56	0.50%	1/16W
		.,.							.,.				
R1437	1-218-949-11	RES,CHIP		470	5%	1/16W	R1826	1-218-979-11	RES,CHIP		150K	5%	1/16W
R1438	1-218-935-11	RES,CHIP		33	5%	1/16W	R1828	1-218-949-11	RES,CHIP		470	5%	1/16W
R1439	1-218-935-11	RES,CHIP		33	5%	1/16W	R1834	1-218-969-11	RES,CHIP		22K	5%	1/16W
R1440	1-218-965-11	RES,CHIP		10K	5%	1/16W	R1836	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1444	1-218-947-11	RES,CHIP		330	5%	1/16W	R1837	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1445	1-218-935-11	RES,CHIP		33	5%	1/16W	R1838	1-218-969-11	RES,CHIP		22K	5%	1/16W
R1446	1-218-935-11	RES,CHIP		33	5%	1/16W	R1843	1-218-831-11	RES,CHIP		220	0.50%	1/16W
R1447	1-218-935-11	RES,CHIP		33	5%	1/16W	R1848	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1452	1-218-955-11	RES,CHIP		1.5K	5%	1/16W	R1852	1-218-961-11	RES,CHIP		4.7K	5%	1/16W
R1453	1-218-939-11	RES,CHIP		68	5%	1/16W	R1855	1-218-831-11	RES,CHIP		220	0.50%	1/16W
R1454	1-218-989-11	RES,CHIP		1M	5%	1/16W	R1857	1-218-831-11	RES,CHIP		220	0.50%	1/16W
R1455	1-218-957-11	RES,CHIP		2.2K	5%	1/16W	R1859	1-218-831-11	RES,CHIP		220	0.50%	1/16W
R1456	1-218-935-11	RES,CHIP		33	5%	1/16W	R1869	1-218-966-11	RES,CHIP		12K	5%	1/16W
R1507	1-218-949-11	RES,CHIP		470	5%	1/16W	R1870	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1507	1-218-959-11	RES,CHIP		3.3K	5%	1/16W	R1871	1-218-939-11	RES,CHIP		68	5%	1/16W
K 1300	1-210-939-11	KES,UNIP		3.3N	370	1/1000	KIO/I	1-210-939-11	KES,UNIP		00	376	1/1000
R1509	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R1872	1-218-990-11	SHORT	0			
R1510	1-218-949-11	RES,CHIP		470	5%	1/16W	R1874	1-218-989-11	RES,CHIP		1M	5%	1/16W
R1511	1-218-959-11	RES,CHIP		3.3K	5%	1/16W	R1875	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1512	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R1876	1-218-963-11	RES,CHIP		6.8K	5%	1/16W
R1513	1-218-955-11	RES,CHIP		1.5K	5%	1/16W	R1879	1-218-966-11	RES,CHIP		12K	5%	1/16W
R1514	1-218-949-11	RES,CHIP		470	5%	1/16W	R1909	1-218-931-11	RES,CHIP		15	5%	1/16W
R1515	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R1938	1-218-977-11	RES,CHIP		100K	5%	1/16W
R1516	1-218-951-11	RES,CHIP		680	5%	1/16W	R1939	1-218-990-11	SHORT	0			
R1517	1-218-990-11	SHORT	0				R1940	1-218-990-11	SHORT	0			
R1519	1-218-990-11	SHORT	0				R1941	1-218-990-11	SHORT	0			
D1E01	1 210 047 11	DEC CLUD		220	F0/	1/1////	D1040	1 010 000 11	CHODT	0			
R1521	1-218-947-11	RES,CHIP		330	5%	1/16W	R1942	1-218-990-11	SHORT	0			
R1522	1-216-864-11	METAL CHIP		0	5%	1/16W	R1943	1-218-990-11	SHORT	0			
R1618	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R1945	1-218-990-11	SHORT	0	20	F0/	1/1////
R1619	1-218-947-11	RES,CHIP		330	5%	1/16W	R2017	1-218-936-11	RES,CHIP		39	5%	1/16W
R1621	1-218-965-11	RES,CHIP		10K	5%	1/16W	R2018	1-218-935-11	RES,CHIP		33	5%	1/16W
R1622	1-218-965-11	RES.CHIP		10K	5%	1/16W	R2019	1-218-953-11	RES,CHIP		1K	5%	1/16W
R1623	1-218-990-11	SHORT	0		070	.,	R2021	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1624	1-218-990-11	SHORT	0				R2022	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1625	1-218-990-11	SHORT	0				R2023	1-218-953-11	RES,CHIP		1K	5%	1/16W
R1626	1-218-990-11		0				R2028	1-218-973-11	RES,CHIP		47K	5%	1/16W
111020	1 210 770 11	31101(1	U				112020	1 210 773 11	IXLO,OTIII		7710	370	17 10 11
R1627	1-218-990-11	SHORT	0				R2029	1-218-973-11	RES,CHIP		47K	5%	1/16W
R1628	1-218-990-11	SHORT	0				R2031	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1629	1-218-990-11	SHORT	0				R2032	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1630	1-218-990-11	SHORT	0				R2038	1-218-973-11	RES,CHIP		47K	5%	1/16W
R1632	1-218-849-11	RES,CHIP		1.2K	0.50%	1/16W	R2040	1-218-969-11	RES,CHIP		22K	5%	1/16W
R1633	1-208-703-11			6.8K		1/16W	R2041	1-218-965-11	RES,CHIP		10K	5%	1/16W
R1635	1-218-849-11	RES,CHIP		1.2K	0.50%	1/16W	R2052	1-218-990-11	SHORT	0			
R1638	1-218-990-11	SHORT	0				R2053	1-218-990-11	SHORT	0			
R1639	1-218-990-11	SHORT	0				R2054	1-218-960-11	RES,CHIP		3.9K	5%	1/16W
R1641	1-218-990-11	SHORT	0				R2055	1-218-971-11	RES,CHIP		33K	5%	1/16W
R1642	1-218-990-11	SHORT	0				R2056	1-218-936-11	RES,CHIP		39	5%	1/16W
R1642 R1644	1-218-990-11		0				R2056 R2057	1-218-935-11	RES,CHIP		33	5% 5%	1/16W
R1647		SHORT					R2057	1-218-957-11	RES,CHIP		2.2K	5%	1/16W
R1647 R1649	1-218-990-11 1-218-990-11	SHORT	0				R2058 R2059	1-218-957-11	RES,CHIP		2.2K 2.2K	5% 5%	1/16W 1/16W
R1651	1-218-990-11	SHUKI	0				R2060	1-218-957-11	RES,CHIP		2.2K	5%	1/16W
R1652	1-218-990-11	SHORT	0				R2061	1-218-957-11	RES,CHIP		2.2K	5%	1/16W
R1653	1-218-990-11	SHORT	0				R2062	1-218-949-11	RES,CHIP		470	5%	1/16W
R1654	1-218-990-11	SHORT	0				R2063	1-218-949-11	RES,CHIP		470	5%	1/16W
R1689	1-218-937-11	RES,CHIP	-	47	5%	1/16W	R2064	1-218-953-11	RES,CHIP		1K	5%	1/16W
R1694	1-218-938-11			56		1/16W	R2065	1-218-951-11			680	5%	1/16W
		. ,					,		. ,		<del>-</del>	- / -	

Dof No	Dowt No.	Decemention			Damania	Dof No	Don't No	Decementar				Domonico
Ref. No.	Part No.	<u>Description</u>			Remarks	Ref. No.	Part No.	<u>Description</u>				<u>Remarks</u>
R2066	1-218-965-11	,	10K	5%	1/16W	R2271	1-216-791-11	METAL CHIP		3.3	5%	1/16W
R2201	1-218-953-11	,	1K	5%	1/16W	R2272	1-218-961-11	RES,CHIP		4.7K	5%	1/16W
R2203	1-218-953-11		1K	5%	1/16W	R2273	1-218-959-11	RES,CHIP		3.3K	5%	1/16W
R2204	1-218-953-11		1K	5%	1/16W	R2274	1-218-959-11	RES,CHIP		3.3K	5%	1/16W
R2205	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2275	1-218-959-11	RES,CHIP		3.3K	5%	1/16W
R2206	1-218-945-11	RES,CHIP	220	5%	1/16W	R2276	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2207	1-218-957-11	RES,CHIP	2.2K	5%	1/16W	R2277	1-218-941-11	RES,CHIP		100	5%	1/16W
R2208	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R2278	1-218-941-11	RES,CHIP		100	5%	1/16W
R2209	1-218-973-11		47K	5%	1/16W	R2279	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2210	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2280	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2213	1-218-953-11	DES CHID	1K	5%	1/16W	R2281	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2214	1-218-953-11		1K	5%	1/16W	R2282	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2215	1-218-985-11		470K	5%	1/16W	R2283	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2221	1-218-985-11		470K	5%	1/16W	R2284	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2222	1-218-985-11		470K 470K	5%	1/16W	R2285	1-218-953-11	RES,CHIP		1K	5%	1/16W
NZZZZ	1-210-900-11	KL3,CHIF	470K	370	1/1000	K2203	1-210-700-11	KL3,UIIIF		IK	370	1/1000
R2223	1-218-985-11		470K	5%	1/16W	R2286	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2224	1-218-985-11	- / -	470K	5%	1/16W	R2287	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2225	1-218-985-11		470K	5%	1/16W	R2288	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2226	1-218-985-11		470K	5%	1/16W	R2289	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2227	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2290	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2229	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2291	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2230	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2292	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2231	1-218-973-11	RES,CHIP	47K	5%	1/16W	R2293	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2232	1-218-965-11	RES,CHIP	10K	5%	1/16W	R2294	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2233	1-218-958-11	RES,CHIP	2.7K	5%	1/16W	R2295	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2234	1-218-934-11	RES CHIP	27	5%	1/16W	R2296	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2235	1-218-989-11	,	1M	5%	1/16W	R2297	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2236	1-218-985-11	,	470K	0.50%	1/16W	R2298	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2237	1-218-985-11		470K	0.50%	1/16W	R2299	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2238	1-218-989-11		1M	0.50%	1/16W	R2300	1-218-989-11	RES,CHIP		1M	5%	1/16W
NZZ30	1-210-707-11	RES,OTH	TIVI	0.3070	1/1000	112300	1-210-707-11	IXES,OTHI		1101	370	171000
R2239	1-218-989-11		1M	0.50%	1/16W	R2301	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2240	1-218-977-11		100K	5%	1/16W	R2302	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2241	1-218-977-11		100K	5%	1/16W	R2303	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2242	1-218-977-11		100K	5%	1/16W	R2304	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2245	1-218-953-11	RES,CHIP	1K	5%	1/16W	R2401	1-218-985-11	RES,CHIP		470K	5%	1/16W
R2246	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2405	1-218-977-11	RES,CHIP		100K	5%	1/16W
R2247	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2406	1-218-977-11	RES,CHIP		100K	5%	1/16W
R2248	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2407	1-218-977-11	RES,CHIP		100K	5%	1/16W
R2249	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2408	1-218-977-11	RES,CHIP		100K	5%	1/16W
R2250	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2409	1-218-985-11	RES,CHIP		470K	5%	1/16W
R2251	1-218-989-11	RES CHIP	1M	5%	1/16W	R2410	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2252	1-218-989-11		1M	5%	1/16W	R2411	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2253	1-218-989-11		1M	5%	1/16W	R2415	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2254	1-218-989-11		1M	5%	1/16W	R2416	1-218-985-11	RES,CHIP		470K	5%	1/16W
R2255	1-218-989-11		1M	5%	1/16W	R2417	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2256	1-218-953-11	DEC CHID	11/	5%	1/16W	D2/10	1-218-985-11	RES,CHIP		470Y	E0/	1/16W
			1K			R2418				470K	5% 5%	
R2257	1-218-973-11 1-218-985-11		47K	5% 5%	1/16W	R2419	1-218-953-11	RES,CHIP RES,CHIP		1K	5% 5%	1/16W
R2258		,	470K	5%	1/16W	R2420	1-218-985-11			470K	5%	1/16W
R2259	1-218-985-11		470K	5% 5%	1/16W	R2421	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2260	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2422	1-218-985-11	RES,CHIP		470K	5%	1/16W
R2261	1-218-989-11		1M	5%	1/16W	R2423	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2262	1-219-570-11		10M	5%	1/16W	R2424	1-218-985-11	RES,CHIP		470K	5%	1/16W
R2263	1-218-962-11	,	5.6K	5%	1/16W	R2425	1-218-990-11	SHORT	0			
R2264	1-218-957-11		2.2K	5%	1/16W	R2426	1-218-990-11	SHORT	0			
R2265	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2427	1-218-990-11	SHORT	0			
R2266	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2428	1-218-990-11	SHORT	0			
R2267	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2429	1-208-943-11	RES,CHIP		220K	0.50%	1/16W
R2268	1-218-949-11	RES,CHIP	470	5%	1/16W	R2430	1-208-927-11	RES,CHIP		47K	0.50%	1/16W
R2269	1-218-955-11	RES,CHIP	1.5K	5%	1/16W	R2432	1-218-977-11	RES,CHIP		100K	5%	1/16W
R2270	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2433	1-218-977-11	RES,CHIP		100K	5%	1/16W

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
R2434	1-218-977-11	RES,CHIP		100K	5%	1/16W	R2905	1-218-961-11	RES,CHIP	_	4.7K	5%	1/16W
R2436	1-218-977-11	RES,CHIP		100K	5%	1/16W	R2906	1-218-990-11	SHORT	0			
R2439 R2440	1-218-977-11	RES,CHIP RES,CHIP		100K	5% 5%	1/16W 1/16W	R2907 R3200	1-218-990-11	SHORT RES,CHIP	0	11/	E0/	1/1/\\
R2440 R2441	1-218-977-11 1-218-985-11	RES,CHIP		100K 470K	5% 5%	1/16W	R3200	1-218-989-11 1-218-989-11	RES,CHIP		1M 1M	5% 5%	1/16W 1/16W
K2441	1-218-985-11	RES,CHIP		470K	5%	1/1000	K3201	1-218-989-11	RES,CHIP		TIVI	5%	1/1000
R2442	1-218-990-11	SHORT 0	١				R3202	1-218-849-11	RES,CHIP		3.3K	0.50%	1/16W
R2445	1-218-961-11	RES,CHIP	,	4.7K	5%	1/16W	R3202	1-216-150-91	RES,CHIP		10	5%	1/10W
R2505	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3204	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2506	1-208-707-11	RES,CHIP		10K	0.50%	1/16W	R3205	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2507	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3206	1-218-961-11	RES,CHIP		4.7K	5%	1/16W
						.,			,				.,
R2508	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3207	1-218-849-11	RES,CHIP		3.3K	0.50%	1/16W
R2510	1-218-959-11	RES,CHIP		3.3K	5%	1/16W	R3208	1-218-973-11	RES,CHIP		47K	5%	1/16W
R2511	1-208-935-11	RES,CHIP		100K	0.50%	1/16W	R3209	1-208-715-11	RES,CHIP		22K	0.50%	1/16W
R2512	1-218-990-11	SHORT 0	)				R3210	1-218-981-11	RES,CHIP		220K	5%	1/16W
R2517	1-218-989-11	RES,CHIP		1M	5%	1/16W	R3211	1-216-296-91	SHORT	0			
R2530	1-218-971-11	RES,CHIP		33K	5%	1/16W	R3212	1-208-707-11	RES,CHIP		10K		1/16W
R2531	1-217-671-11	METAL CHIP		1	5%	1/10W	R3213	1-208-935-11	RES,CHIP		100K	0.50%	1/16W
R2532	1-217-671-11	METAL CHIP		1	5%	1/10W	R3214	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2533	1-217-671-11	METAL CHIP		1	5%	1/10W	R3215	1-216-296-91	SHORT	0			
R2534	1-218-940-11	RES,CHIP		82	5%	1/16W	R3216	1-216-296-91	SHORT	0			
DOE 47	4 040 070 44	DEC OLUB		4501/	F0/	4/4/14/	D0047	4 040 050 44	DEC 0111D		414	F0/	4/4/11/
R2546	1-218-979-11	RES,CHIP		150K	5%	1/16W	R3217	1-218-953-11	RES,CHIP		1K	5%	1/16W
R2547	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3218	1-208-715-11	RES,CHIP		22K	0.50%	1/16W
R2549 R2550	1-218-961-11	RES,CHIP RES,CHIP		4.7K 4.7K	5% 5%	1/16W 1/16W	R3219 R3220	1-218-849-11	RES,CHIP RES,CHIP		1.2K	0.50% 0.50%	1/16W 1/16W
R2550 R2551	1-218-961-11 1-208-675-11	RES,CHIP		4.7K 470	0.50%	1/16W	R3220 R3221	1-208-715-11 1-218-969-11	RES,CHIP		22K 22K	0.50% 5%	1/16W
K2331	1-200-073-11	RES,CHIP		470	0.30%	1/1000	KSZZI	1-210-909-11	RES,CHIP		ZZN	376	1/1000
R2552	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3222	1-218-965-11	RES,CHIP		10K	5%	1/16W
R2553	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3223	1-208-707-11	RES,CHIP		10K	0.50%	1/16W
R2554	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3224	1-208-931-11	RES,CHIP		68K	0.50%	1/16W
R2556	1-218-978-11	RES,CHIP		120K	5%	1/16W	R3225	1-218-970-11	RES,CHIP		27K	5%	1/16W
R2557	1-218-986-11	RES,CHIP		560K	5%	1/16W	R3226	1-218-973-11	RES,CHIP		47K	5%	1/16W
									,				
R2558	1-218-953-11	RES,CHIP		1K	5%	1/16W	R3227	1-218-977-11	RES,CHIP		100K	5%	1/16W
R2559	1-218-969-11	RES,CHIP		22K	5%	1/16W	R3228	1-218-969-11	RES,CHIP		22K	5%	1/16W
R2560	1-218-969-11	RES,CHIP		22K	5%	1/16W	R3230	1-218-965-11	RES,CHIP		10K	5%	1/16W
R2564	1-217-671-11	METAL CHIP		1	5%	1/10W	R3231	1-208-927-11	RES,CHIP		47K	0.50%	1/16W
R2565	1-217-671-11	METAL CHIP		1	5%	1/10W	R3232	1-218-969-11	RES,CHIP		22K	5%	1/16W
R2566	1-218-941-11			100	5%	1/16W	R3233	1-208-927-11			47K	0.50%	1/16W
R2567	1-218-941-11	,		100	5%	1/16W	R3234	1-218-971-11	RES,CHIP		33K	5%	1/16W
R2568	1-218-941-11			100	5%	1/16W	R3235	1-208-715-11	RES,CHIP		22K	0.50%	1/16W
R2569	1-218-957-11			2.2K	5%	1/16W	R3236	1-218-965-11	RES,CHIP		10K	5%	1/16W
R2570	1-218-977-11	RES,CHIP		100K	5%	1/16W	R3237	1-208-927-11	RES,CHIP		47K	0.50%	1/16W
R2571	1-218-970-11	RES,CHIP		27K	5%	1/16W	R3238	1-218-974-11	RES,CHIP		56K	0.50%	1/16W
R2571 R2572	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3239	1-218-974-11	RES,CHIP		22K	0.50%	1/16W
R2572 R2573	1-218-949-11	RES,CHIP		470	5%	1/16W	R3240	1-208-935-11	RES,CHIP		100K	0.50%	1/16W
R2573	1-217-671-11			1	5%	1/10W	R3240	1-218-945-11	RES,CHIP		220	5%	1/16W
R2574	1-217-671-11	METAL CHIP		1	5%	1/10W	R3242	1-208-709-11	RES,CHIP		12K		1/16W
112575	1 217 071 11	WEINE OIT			370	17 10 00	113242	1 200 707 11	KLS,OIIII		1210	0.5070	17 10 00
R2576	1-217-671-11	METAL CHIP		1	5%	1/10W	R3243	1-208-697-11	RES,CHIP		3.9K	0.50%	1/16W
R2577	1-217-671-11	METAL CHIP		1	5%	1/10W	R3244	1-208-697-11	RES,CHIP		3.9K	0.50%	1/16W
R2578	1-218-973-11	RES,CHIP		47K	5%	1/16W	R3245	1-208-691-11	RES,CHIP		2.2K	0.50%	1/16W
R2579	1-218-965-11	,		10K	5%	1/16W	R3246	1-216-296-91	SHORT	0			
R2580	1-218-935-11			33	5%	1/16W	R3247	1-218-965-11	RES,CHIP		10K	5%	1/16W
R2581	1-218-935-11	RES,CHIP		33	5%	1/16W	R3248	1-218-945-11	RES,CHIP		220	5%	1/16W
R2582	1-218-961-11	RES,CHIP		4.7K	5%	1/16W	R3249	1-218-945-11	RES,CHIP		220	5%	1/16W
R2583	1-218-965-11	RES,CHIP		10K	5%	1/16W	R3250	1-218-969-11	RES,CHIP		22K	5%	1/16W
R2585	1-218-959-11	RES,CHIP		3.3K	5%	1/16W	R3251	1-218-973-11	RES,CHIP		47K	5%	1/16W
R2586	1-218-944-11	RES,CHIP		180	5%	1/16W	R3252	1-218-941-11	RES,CHIP		100	5%	1/16W
P.05	4.040.015	DE0 01115		0011	F0.	a /a		4.042.0:::	DEC 21		400	FC:	a la
R2587	1-218-969-11			22K	5%	1/16W	R3253	1-218-941-11	RES,CHIP		100	5%	1/16W
R2599	1-217-671-11	METAL CHIP		1	5%	1/10W	R3254	1-208-927-11	RES,CHIP		47K	0.50%	1/16W
R2901	1-217-671-11	METAL CHIP		1	5%	1/10W	R3255	1-218-945-11	RES,CHIP		220	5%	1/16W
R2902	1-217-671-11	METAL CHIP	,	1	5%	1/10W	R3256	1-218-947-11	RES,CHIP		330	5% 5%	1/16W
R2903	1-218-990-11	SHORT 0	,				R3257	1-218-973-11	KES,UHIP		47K	5%	1/16W

Section   Color   Co	Ref. No.	Dart No.	Description			Domarko	Dof No	Dart No.	Description Demarks
1-208-719-11   RESCHIP   22K   0.50%   1/16W   61   1-670-962-11   FP-14   FEXIBLE BOARD   1-670-962-11   RESCHIP   10K   5%   1/16W   61   1-670-962-11   FP-14   FEXIBLE BOARD   1-670-962-11   RESCHIP   10K   5%   1/16W   10K   1-670-962-11   FP-14   FEXIBLE BOARD   1-670-962-11   RESCHIP   10K   5%   1/16W   10K   1-670-962-11   FP-14   FEXIBLE BOARD   1-670-962-11   RESCHIP   10K   5%   1/16W   10K   1-670-962-11   FP-14   FEXIBLE BOARD   1-670-962-11   RESCHIP   10K   5%   1/16W   10K   1-670-962-11   FP-14   FEXIBLE BOARD   1-670-962-11   FP-14   FEXI		Part No.	<u>Description</u>			Remarks	Ref. No.	Part No.	<u>Description</u> Remarks
1-269-715-11 RES.CHIP			,						
1-218-96-511   RESCHIP   10K   5%   176W   53   1-670-982-11   FP-14 FLEXIBLE BOARD			,						*******
1-200-99-011   RESCHIP   0							F0	4 (70 000 44	ED 44 EL EVIDI E DOADD
23266   1-216-864-11   METAL CHIP   0   5%   1/16W   107   1-570-990-21   FP-11 FERRIE BOARD   1-670-990-21   FP-23 FERRIE BOARD   1-670-990-21   FP-24 FERRIE BOARD   1-670-990-21   FP-24 FERRIE BOARD   1-670-990-21   FP-24 FERRIE BOARD   1-670-990-21   FP-24 FERRIE BOARD   1-670									
1-26-89-6-11   RESCHIP   20K   5%   116W   103   1-670-979-11   P1-11 FEXIBLE BOARD   1-873-61   1-85CHIP   20K   5%   116W   107   1-670-990-21   P2-23 EXBIBE BOARD   1-873-61   1-85CHIP   20K   5%   116W   160   1-475-949-21   SWITCH BLOCK, CONTROL (FK480) (909-0000   1-873-81   1-85CHIP   20K   5%   116W   160   1-475-949-31   SWITCH BLOCK, CONTROL (FK480) (909-0000   1-873-949-11   RESCHIP   10KK   5%   116W   119   1-774-867-31   0-0MICCTOR EXTERNAL(IOT SHOL)99   1-873-949-31   RESCHIP   10KK   5%   116W   157   1-670-977-21   P7-9 FLEXBLE BOARD   1-873-71   RESCHIP   10KK   5%   116W   157   1-670-977-21   P7-9 FLEXBLE BOARD   1-873-71   RESCHIP   10KK   5%   116W   160   1-506-191-1   SPARKE (2.0 CM)   1-670-982-21   P7-31 EXBIBE BOARD   1-873-71   RESCHIP   10KK   5%   116W   160   1-506-983-81   HARNESS (07-81) 12PIN   1-873-71   RESCHIP   10KK   5%   116W   1-670-983-21   P7-16 FLEXBLE BOARD   1-670-983-21   P7-10 FLEXBLE BOARD   1-670-983-21   P7	R3262	1-218-989-11	RES,CHIP	TIVI	5%	1/16W			
1-218-981-11   RES.CHIP   220K   5%   1/16W   10   1-275-999-21   FP-23 (IEXRIBLE BOARD   1675-999-21   FP-23 (IEXRIBLE DOARD   1675-999-21   FP-23 (IEXRIBLE BOARD   1675-999-21   1675-999-21   1675-999-21   1675-999-21   1675-999-21   1675-999-21   1675-999-21   1675-999-21   1675-999-21   1675-999-21   1675-999-21   1677-999-21   1679-999-21   16	D22/2	1 01/ 0/4 11	METAL CLUD	0	Ε0/	1/1/\\/			
1-218-973-11   RES.CHIP   276   576   11/16W   116   1-475-949-21   SWITCH BLOCK, CONTROL (FK4880) (0009000E)   1-218-989-11   RES.CHIP   100K   5%   11/16W   116   1-475-949-21   SWITCH BLOCK, CONTROL (FK4880) (900900E)   1-218-997-11   RES.CHIP   100K   5%   11/16W   116   1-475-949-21   SWITCH BLOCK, CONTROL (FK4880) (900900E)   1-218-997-11   RES.CHIP   100K   5%   11/16W   116   1-475-949-21   SWITCH BLOCK, CONTROL (FK4880) (900900E)   1-218-997-11   RES.CHIP   100K   5%   11/16W   152   1-670-991-21   PF-13 ELXBIE BLOARD   1-218-997-11   RES.CHIP   100K   5%   11/16W   152   1-670-991-21   PF-13 ELXBIE BLOARD   1-218-997-11   RES.CHIP   100K   5%   11/16W   160   1-305-619-11   SPF-AKER (2.D.CM)   167   1-670-977-21   PF-9 ELXBIE BLOARD   167   1-670-977-21   PF-9 ELXBIE BLOARD   167   1-670-977-21   PF-9 ELXBIE BOARD   167   1670-977-21   PF-9 ELXBIE BOARD   167   1670-977-21									
R3266   1-218-99-11   RES.CHIP   22K   5%   1716W   16			,				107	1-670-990-21	FP-23 FLEXIBLE BUARD
RESCHIP   MIM   5%   176W			,				116	1 475 040 21	SWITCH DLOCK CONTDOL (EK 1000)
1.218-98-11   RES.CHIP   20K   5%   176W   119   1748-86-31   CONDICTO SCONTROL (KASBO)(800F)							110	1-4/3-949-21	
R3269   1-218 991-11   RES.CHIP   10K 5% 11/16W   152   1-670-991-2   PT-15   ELEMBLE BOARD   1-78-99-11   RES.CHIP   10K 5% 11/16W   152   1-670-991-2   PT-15   ELEMBLE BOARD   1-78-99-11   RES.CHIP   10K 5% 11/16W   167   1-670-991-2   PT-15   ELEMBLE BOARD   167   1-670-993-2   PT-16   ELEMBLE BOARD   167   1-670-993-2   PT	K3207	1-210-707-11	KL3,CITIF	TIVI	370	1/1000	116	1 475 040 31	,
1-218-977-11   RES.CHIP   100K   5%   176W   152   1-670-981-21   FP-13   EXIBLE BOARD	P3268	1_218_081_11	RES CHIP	220K	5%	1/16\//			
1-218-99-11   RES.CHIP   10K   5%   176W   157   1-279-77-21   FP-9-FLEXBILE BOARD									
R3271   1-218-973-11   RES.CHIP   100K   5%   1/16W   160   1-506-619-11   SPEAKER (2.0 CM)   167   1-679-983-21   FP-16 FEEXIBLE BOARD   167   1-679-983-21   FP-16 FEEXIBLE BOARD   168   1-569-983-11   RES.CHIP   100K   5%   1/16W   168   1-596-983-11   RES.CHIP   100K   5%   1/16W   168   1-596-983-11   RES.CHIP   100K   5%   1/16W   168   1-596-983-11   RES.CHIP   100K   5%   1/16W   169   1-596-983-11   HARNIESS (CP-32) 13FIN   1697-983-27   FP-16 FEEXIBLE BOARD   1697-983-27   FP-									
R3272   1-218-973-11   RES.CHIP							107	1 070 777 21	TI TELNIBLE BOTTO
167							160	1-505-619-11	SPEAKER (2.0 CM)
R3274   1-218-965-11   RES_CHIP   10K   5%   1716W   168   1-958-983-11   HARRESS (CP.81) IPIN   R3275   1-218-98-11   RS_CHIP   E30K   5%   1716W   203   1-670-983-21   FP-16 FLEXIBLE BOARD   R3276   1-218-977-11   RES_CHIP   20K   5%   1716W   217   1-958-983-11   HARRESS (CP.81)   R3276   1-218-977-11   RES_CHIP   20K   5%   1716W   217   1-958-983-11   HARRESS (CP.81)   R3276   1-208-949-11   RES_CHIP   390K   0.50%   1716W   4.221   1-575-943-11   HARRESS (CP.81)   1-958-983-11   HAR	110272	1 210 770 11	KLO,01111	1710	070	17 1000			
R3275   1-218-977-11   RES.CHIP   100K   5%   1716W   217   1-958-984-11   HARNESS (CP.87) 13PIN   R23276   1-218-978-11   RES.CHIP   20K   5%   1716W   217   1-958-983-11   HARNESS (CP.87) 13PIN   R23277   1-218-969-11   RES.CHIP   20K   5%   1716W   217   1-958-983-11   HARNESS (CP.81)   1-218-979-11   RES.CHIP   20K   0.50%   1716W   222   1-003-274-21   MDULLE, CRYSTAL INDICATION   1716W   1-218-978-11   RES.CHIP   100K   0.50%   1716W   222   1-003-274-21   MDULLE, CRYSTAL INDICATION   1-767-98-21   TERMINAL BOARD   R3280   1-218-978-11   RES.CHIP   100K   0.50%   1716W   303   1-670-983-21   TERMINAL BOARD   R3281   1-208-935-11   RES.CHIP   30K   0.50%   1716W   320   1-670-981-21   TERMINAL BOARD   R3286   1-208-943-11   RES.CHIP   220K   0.50%   1716W   320   1-670-981-21   TP-10 FLIXIBLE BOARD   R3286   1-208-943-11   RES.CHIP   30K   0.50%   1716W   320   1-670-981-21   TP-10 FLIXIBLE BOARD   R3286   1-208-943-11   RES.CHIP   30K   0.50%   1716W   320   1-670-981-21   TP-20 FLIXIBLE BOARD   R3286   1-208-943-11   RES.CHIP   30K   0.50%   1716W   320   1-670-981-21   TP-20 FLIXIBLE BOARD   R3286   1-208-943-11   RES.CHIP   30K   0.50%   1716W   320   1-670-981-21   TP-20 FLIXIBLE BOARD   R3286   1-208-943-11   RES.CHIP   100K   5%   1716W   402   1-480-14-11   MICROPHONE UNIT   R3299   1-218-971-11   RES.CHIP   20K   5%   1716W   426   1-670-989-21   TP-22 FLIXIBLE BOARD   R3290   1-218-989-11   RES.CHIP   20K   0.50%   1716W   426   1-670-989-21   TP-22 FLIXIBLE BOARD   R3290   1-218-989-11   RES.CHIP   20K   0.50%   1716W   426   1-670-989-21   TP-22 FLIXIBLE BOARD   R3290   1-218-989-11   RES.CHIP   20K   0.50%   1716W   426   1-670-989-21   TP-22 FLIXIBLE BOARD   R3290   1-218-989-11   RES.CHIP   20K   0.50%   1716W   426   1-670-989-21   TP-22 FLIXIBLE BOARD   R3290   1-318-989-11   RES.CHIP   20K   0.50%   1716W   426   1-670-989-21   TP-22 FLIXIBLE BOARD   R3290-11   1-889-11   RES.CHIP   20K   0.50%   1716W   426   1-670-989-21   TP-22 FLIXIBLE BOARD   R3290-11   1-889-11   RES.CHIP   39K	R3273	1-218-965-11	RES.CHIP	10K	5%	1/16W			
R3275   1-218-98-11   RES.CHIP   820K   5%   1/16W   R3277   1-218-96-11   RES.CHIP   22K   5%   1/16W   217   1-98-98-31   HARNESS (CP-21)   RES.CHIP   22K   5%   1/16W   217   1-98-98-31   HARNESS (CP-21)   RES.CHIP   22K   5%   1/16W   221   1-517-754-21   TUBE FLUORESCENT.COLD CATHODE   R3279   1-208-9427-11   RES.CHIP   47K   0.50%   1/16W   222   1-517-754-21   TUBE FLUORESCENT.COLD CATHODE   R3281   1-208-939-11   RES.CHIP   150K   0.50%   1/16W   224   1-670-986-21   FI-97ELRIBLE BOARD   R3281   1-208-939-11   RES.CHIP   100K   0.50%   1/16W   318   1-670-978-11   FI-07ELRIBLE BOARD   R3284   1-208-935-11   RES.CHIP   33K   0.50%   1/16W   318   1-670-978-11   FI-07ELRIBLE BOARD   R3286   1-208-935-11   RES.CHIP   33K   0.50%   1/16W   318   1-670-978-11   FI-07ELRIBLE BOARD   R3286   1-208-943-11   RES.CHIP   33K   0.50%   1/16W   352   1-670-987-21   FI-20FELRIBLE BOARD   R3286   1-208-943-11   RES.CHIP   33K   0.50%   1/16W   352   1-670-987-21   FI-20FELRIBLE BOARD   R3288   1-218-977-11   RES.CHIP   100K   5%   1/16W   425   1-670-989-21   FI-20FELRIBLE BOARD   R3290   1-218-963-11   RES.CHIP   20K   5%   1/16W   425   1-670-989-21   FI-22FELRIBLE BOARD   R3290   1-218-990-11   RES.CHIP   20K   0.50%   1/16W   425   1-670-989-21   FI-22FELRIBLE BOARD   R3290   1-218-990-11   RES.CHIP   20K   0.50%   1/16W   426   1-670-989-21   FI-22FELRIBLE BOARD   R3290   1-218-990-11   RES.CHIP   20K   0.50%   1/16W   426   1-670-989-21   FI-22FELRIBLE BOARD   R3290   1-218-990-11   RES.CHIP   20K   0.50%   1/16W   426   1-670-989-21   FI-22FELRIBLE BOARD   R3290-11   RES.CHIP   20K   0.50%   1/16W   426   1-670-989-21   FI-22FELRIBLE BOARD   R3290-11   RES.CHIP   20K   0.50%   1/16W   426   1-670-989-21   FI-22FELRIBLE BOARD   R3290-11   R3290-11   R3201   R3290-11									, ,
R3276   1-218-977-11   RES,CHIP   100K   5%   1716W   218   1-958-983-11   HARNESS (CP-81)   1-878-984-11   HARNESS (CP-81)   1-878-984-11   HARNESS (CP-81)   1-878-984-11   HARNESS (CP-82)   1-87			,						
R3277   1-218-969-11   RES,CHIP   22K   5%   1/16W   217   1-988-983-11   HARNESS (CP-81)						1/16W			
R3278   1-208-949-11   RES_CHIP   390K   0.50%   1/16W   222   1-903-274-21   MODULE_CRYSTAL INDICATION							217	1-958-983-11	HARNESS (CP-81)
R3288   1-208-949-11   RES,CHIP   30K   0.50%   1/16W   222   1-637-754-21   TUBE, FLUDRESCENT/COLD CATHODE			,			.,			
R3299   1-288-99.11   RES,CHIP   47K   0.50%   1/16W   222   1-803-2274-21   MODULE, CRYSTAL INDICATION   R3281   1-208-939-11   RES,CHIP   150K   0.50%   1/16W   224   1-670-986-21   FP-19 FLEXIBLE BOARD   R3282   1-208-939-11   RES,CHIP   150K   0.50%   1/16W   251   1-670-987-21   TERMINAL BOARD, BATTERY   R3284   1-208-719-11   RES,CHIP   20K   0.50%   1/16W   303   1-670-984-11   FP-17 FLEXIBLE BOARD   R3285   1-208-943-11   RES,CHIP   20K   0.50%   1/16W   320   1-670-987-21   FP-20 FLEXIBLE BOARD   R3286   1-208-943-11   RES,CHIP   330K   0.50%   1/16W   352   1-670-987-21   FP-20 FLEXIBLE BOARD   R3286   1-208-943-11   RES,CHIP   100K   0.50%   1/16W   352   1-670-987-21   FP-20 FLEXIBLE BOARD   R3289   1-218-977-11   RES,CHIP   100K   55%   1/16W   423   1-670-987-21   FP-20 FLEXIBLE BOARD   R3290   1-218-99-11   RES,CHIP   100K   55%   1/16W   425   1-670-987-21   FP-22 FLEXIBLE BOARD   R3290   1-218-99-11   RES,CHIP   100K   55%   1/16W   425   1-670-989-21   FP-22 FLEXIBLE BOARD   R3290   1-218-991-11   RES,CHIP   100K   55%   1/16W   426   1-670-989-21   FP-22 FLEXIBLE BOARD   R3290   1-218-991-11   RES,CHIP   20K   0.50%   1/16W   R3290   1-218-991-11   RES,CHIP   0.00K   0.50%   1/16W   R3290   1-218-991-11   RES,CHIP   0.00K	R3278	1-208-949-11	RES,CHIP	390K	0.50%	1/16W			
R3280   1-218-978-11   RES,CHIP   120K   0.50%   1/16W   R3281   1-208-939-11   RES,CHIP   47K   0.50%   1/16W   252   1-694-411-11   TERMINAL BOARD, BATTERY   17-78-247-11   1-785-247			,						
R3282   1-208-939-11   RES,CHIP   150K   0.50%   1/16W   252   1-694-411-11   TERMINAL BOARD, BATTERY   261   1-785-247-11   CONNECTOR, DC-IN   261   1-785-247-11			,						
R3282   1-208-927-11   RES,CHIP   47K   0.50%   1/16W   252   1-694-411-11   TERMINAL BOARD, BATTERY								. 0,0 ,00 2.	The state of the s
R3283   1-208-935-11   RES,CHIP   100K   0.50%   1/16W   303   1-670-984-11   FP-10 FLEXIBLE BOARD							252	1-694-411-11	TERMINAL BOARD, BATTERY
R3283 1-208-935-11 RES_CHIP 30K 0.50% 1/16W 33B 1-670-988-11 FP-17 FLEXIBLE BOARD R3286 1-208-943-11 RES_CHIP 220K 0.50% 1/16W 320 1-670-987-21 FP-20 FLEXIBLE BOARD R3286 1-208-943-11 RES_CHIP 330K 0.50% 1/16W 320 1-670-987-21 FP-20 FLEXIBLE BOARD R3286 1-208-943-11 RES_CHIP 300K 0.50% 1/16W 352 1-670-987-21 FP-20 FLEXIBLE BOARD R3287 1-208-935-11 RES_CHIP 100K 5% 1/16W 355 8-753-023-51 LCX027AK-1 R3289 1-218-977-11 RES_CHIP 100K 5% 1/16W 423 1-670-987-21 FP-20 FLEXIBLE BOARD R3290 1-218-977-11 RES_CHIP 220K 5% 1/16W 425 1-670-987-21 FP-22 FLEXIBLE BOARD R3290 1-218-989-11 RES_CHIP 100K 5% 1/16W 425 1-670-987-21 FP-22 FLEXIBLE BOARD R3290 1-218-989-11 RES_CHIP 20K 5% 1/16W 426 1-670-987-21 FP-22 FLEXIBLE BOARD R3290 1-218-989-11 RES_CHIP 20K 0.50% 1/16W 8290 1-218-981-11 RES_CHIP 20K 0.50% 1/16W R3290 1-218-981-11 RES_CHIP 20K 0.50% 1/16W 245 1-670-988-21 FP-21 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3294 1-208-943-11 RES_CHIP 20K 0.50% 1/16W 245 1-670-988-21 FP-22 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3290 1-218-981-11 RES_CHIP 20K 0.50% 1/16W 245 1-670-988-21 FP-21 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3290 1-218-981-11 RES_CHIP 20K 0.50% 1/16W 245 1-670-988-21 FP-21 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3290 1-218-981-11 RES_CHIP 20K 0.50% 1/16W 245 1-670-988-21 FP-22 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3301 1-218-991-11 RES_CHIP 30K 0.50% 1/16W 245 1-670-988-21 FP-20 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3301 1-218-995-11 RES_CHIP 30K 0.50% 1/16W 245 1-670-989-21 FP-20 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3301 1-218-995-11 RES_CHIP 30K 0.50% 1/16W 245 1-670-989-21 FP-20 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3301 1-218-995-11 RES_CHIP 30K 0.50% 1/16W 245 1-670-989-21 FP-20 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3301 1-218-995-11 R5S_CHIP 30K 0.50% 1/16W 245 1-670-989-21 FP-20 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3301 1-218-995-11 R5S_CHIP 30K 0.50% 1/16W 245 1-670-989-21 FP-20 FLEXIBLE BOARD (INCLUDE S700,S701,S702) R3301 R3	110202	. 200 /2/		****	0.0070	.,			
R3284   1-208-719-11   RES, CHIP   330K   0.50%   1/16W   320   1-670-978-11   FP-10 FLEXIBLE BOARD	R3283	1-208-935-11	RES.CHIP	100K	0.50%	1/16W			
R3285 1-208-943-11 RES,CHIP 20K 0.50% 1/16W R3287 1-208-935-11 RES,CHIP 100K 0.50% 1/16W 352 1-670-987-21 FP-20 FLEXIBLE BOARD 355 8-753-023-51 LCX027AK-1 RES,CHIP 100K 5% 1/16W 422 1-418-014-11 MICROPHONE UNIT R3289 1-218-977-11 RES,CHIP 100K 5% 1/16W 423 1-670-997-11 FP-37 FLEXIBLE BOARD 425 1-670-989-21 FP-22 FLEXIBLE BOARD 425 1-6									
R3286   1-208-947-11   RES,CHIP   330K   0.50%   1/16W   352   1-670-987-21   FP-20 FLEXIBLE BOARD   355   8-753-023-51   LCX027AK-1   RES,CHIP   100K   5%   1/16W   402   1-418-014-11   MICROPHONE UNIT   RES,CHIP   100K   5%   1/16W   425   1-670-989-21   FP-27 FLEXIBLE BOARD   RES,CHIP   100K   5%   1/16W   425   1-670-989-21   FP-27 FLEXIBLE BOARD   RES,CHIP   100K   5%   1/16W   425   1-670-989-21   FP-27 FLEXIBLE BOARD   RES,CHIP   100K   5%   1/16W   425   1-670-989-21   FP-27 FLEXIBLE BOARD   RES,CHIP   100K   5%   1/16W   426   1-670-988-21   FP-21 FLEXIBLE BOARD   RES,CHIP   100K   5%   1/16W   426   1-670-988-21   FP-21 FLEXIBLE BOARD   RES,CHIP   20K   0.50%   1/16W   1-784-723-11   PIN, CONNECTOR 4P   PIN-20 FLEXIBLE BOARD   RES,CHIP   10K   0.50%   1/16W   D7402   8-719-061-36   DIODE DCR2810 (R)   D									
R3287   1-208-935-11   RES,CHIP   100K   0.50%   1/16W   352   1-670-987-21   FP-20 FLEXIBLE BOARD   355   8-753-023-51   LCX027AK-1   355   RCX047AK-1   355   1/16W   425   1-670-989-21   FP-22 FLEXIBLE BOARD   425   1-670-989-21   FP-22 FLE							020	. 0,0 ,0, 2.	20122/1822 30/11/3
R3288   1-218-977-11   RES,CHIP   100K   5%   1/16W   420							352	1-670-987-21	FP-20 FI FXIBI F BOARD
R3288   1-218-977-11   RES,CHIP   100K   5%   1/16W   402   1-418-014-11   MICROPHONE UNIT   RES,CHIP   100K   5%   1/16W   423   1-670-991-11   FP-37 FLEXIBLE BOARD   R3290   1-218-989-11   RES,CHIP   2ZK   5%   1/16W   425   1-670-989-21   FP-32 FLEXIBLE BOARD   R3291   1-218-989-11   RES,CHIP   100K   5%   1/16W   426   1-670-988-21   FP-22 FLEXIBLE BOARD   (INCLUDE S700,S701,S702)   R3293   1-218-981-11   RES,CHIP   220K   5%   1/16W   426   1-670-988-21   FP-21 FLEXIBLE BOARD   (INCLUDE S700,S701,S702)   R3294   1-208-943-11   RES,CHIP   220K   0.50%   1/16W   CN901   1-784-723-11   PIN, CONNECTOR 4P   PIN, CONN			,			.,			
R3299   1-218-977-11   RES,CHIP   100K   5%   1/16W   423   1-670-981-11   FP-37 FLEXIBLE BOARD	R3288	1-218-977-11	RES.CHIP	100K	5%	1/16W			
R3290			,						
R3291   1-218-989-11   RES,CHIP   1M   5%   1/16W   R3292   1-218-977-11   RES,CHIP   100K   5%   1/16W   426   1-670-988-21   FP-21 FLEXIBLE BOARD (INCLUDE S700,S701,S702)									
R3292   1-218-977-11   RES,CHIP   100K   5%   1/16W   426   1-670-988-21   FP-21 FLEXIBLE BOARD ((INCLUDE S700,S701,S702))									
R3293 1-218-981-11 RES,CHIP 220K 5% 1/16W R3294 1-208-943-11 RES,CHIP 120K 0.50% 1/16W R3295 1-218-978-11 RES,CHIP 120K 0.50% 1/16W R3296 1-208-943-11 RES,CHIP 180K 0.50% 1/16W R3296 1-208-943-11 RES,CHIP 180K 0.50% 1/16W R3297 1-218-990-11 SHORT 0 H901 8-719-061-28 DIODE DCR2810 (R) 8-719-061-28 DIODE DCR281							426	1-670-988-21	FP-21 FLEXIBLE BOARD
R3294 1-208-943-11 RES,CHIP 220K 0.50% 1/16W R3295 1-218-978-11 RES,CHIP 120K 0.50% 1/16W R3296 1-208-941-11 RES,CHIP 180K 0.50% 1/16W R3297 1-218-990-11 SHORT 0  R3298 1-208-943-11 RES,CHIP 220K 0.50% 1/16W R3299 1-208-721-11 RES,CHIP 39K 0.50% 1/16W R3300 1-218-965-11 RES,CHIP 10K 5% 1/16W R3300 1-218-965-11 RES,CHIP 10K 5% 1/16W R3300 1-218-953-11 RES,CHIP 10K									(INCLUDE S700,S701,S702)
R3294 1-208-943-11 RES,CHIP 220K 0.50% 1/16W R3295 1-218-978-11 RES,CHIP 120K 0.50% 1/16W R3296 1-208-941-11 RES,CHIP 180K 0.50% 1/16W R3297 1-218-990-11 SHORT 0  R3298 1-208-943-11 RES,CHIP 220K 0.50% 1/16W R3299 1-208-721-11 RES,CHIP 39K 0.50% 1/16W R3300 1-218-965-11 RES,CHIP 10K 5% 1/16W R3300 1-218-965-11 RES,CHIP 10K 5% 1/16W R3300 1-218-953-11 RES,CHIP 10K	R3293	1-218-981-11	RES,CHIP	220K	5%	1/16W	453	1-758-174-11	LENS, ZOOM (VCL-4312VA)
R3296   1-208-941-11   RES,CHIP   180K   0.50%   1/16W   R3297   1-218-990-11   RES,CHIP   220K   0.50%   1/16W   R3298   1-208-943-11   RES,CHIP   220K   0.50%   1/16W   R3299   1-208-721-11   RES,CHIP   39K   0.50%   1/16W   M901   A-7048-887-A   DRUM ASSY (DEH-11B-R)   R3300   1-218-965-11   RES,CHIP   10K   5%   1/16W   M902   8-835-606-01   MOTOR, DC SCD15A/C-NP (CAPSTAN)   M903   X-3948-346-1   MOTOR ASSY, LOADING   R3301   1-218-953-11   RES,CHIP   1K   5%   1/16W   PH701   8-749-014-54   HIC CNA1312K01SO   PH701   8-729-907-25   PHOTO TRANSISTOR PT4850F(TAPE END)   Q901   8-729-907-25   PHOTO TRANSISTOR PT4850F(TAPE END)   Q902   8-729-907-25   S700   1-771-487-21   SWITCH, SLIDE   S701   1-762-851-21   SWITCH, TACT   S702   1-762-851-21   SWITCH, PUSH (CASSETTE IN)   S902   1-572-719-32   SWITCH, PUSH (CASSETTE IN)   S903   1-771-325-11   ENCODER, ROTARY (SWITCH) (MODE)   S903   1-771-325-11   SWITCH,									
R3297   1-218-990-11   SHORT   O	R3295	1-218-978-11	RES,CHIP	120K	0.50%	1/16W	D7402	8-719-061-86	DIODE DCR2810 (R)
R3298   1-208-943-11   RES,CHIP   220K   0.50%   1/16W   R3299   1-208-721-11   RES,CHIP   39K   0.50%   1/16W   M901   A-7048-887-A   DRUM ASSY (DEH-11B-R)   R3300   1-218-965-11   RES,CHIP   1K   5%   1/16W   M901   A-7048-887-A   DRUM ASSY (DEH-11B-R)   M902   8-835-606-01   MOTOR, DC SCD15A/C-NP (CAPSTAN)   M903   X-3948-346-1   MOTOR ASSY, LOADING	R3296	1-208-941-11	RES,CHIP	180K	0.50%	1/16W	D901	8-719-067-13	DIODE GL453K
R3298 1-208-943-11 RES,CHIP 220K 0.50% 1/16W R3299 1-208-721-11 RES,CHIP 39K 0.50% 1/16W R3300 1-218-965-11 RES,CHIP 10K 5% 1/16W R3301 1-218-990-11 SHORT 0 M903 X-3948-346-1 MOTOR, DC SCD15A/C-NP (CAPSTAN) M903 X-3948-346-1 MOTOR ASSY, LOADING M903 X-3948-346	R3297	1-218-990-11	SHORT 0						
R3299 1-208-721-11 RES,CHIP 39K 0.50% 1/16W R3300 1-218-965-11 RES,CHIP 10K 5% 1/16W R3301 1-218-990-11 SHORT 0 M902 8-835-606-01 MOTOR, DC SCD15A/C-NP (CAPSTAN) M903 X-3948-346-1 MOTOR ASSY, LOADING M905 X-3948-346-1 MOTOR ASSY, LOADING M903 X-3948-346-1 MOTOR ASSY, LOADING M903 X-3948-346-1 MOTOR ASSY, LOADING M903 X-3948-346-1 MOTOR ASSY, LOADING M905 X-3948-346-1 MOTOR ASSY, LOADING M905 X-3948-346-1 MOTOR ASSY, LOADING M903 X-3948-346-1 MOTOR ASSY, LOADING M905 X-3948-346-1 MOTO							H901	8-719-061-28	DIODE HW-105C-FT-V (S REEL)
R3300 1-218-965-11 RES,CHIP 10K 5% 1/16W R3301 1-218-990-11 SHORT 0 M902 8-835-606-01 MOTOR, DC SCD15A/C-NP (CAPSTAN) R3301 1-218-953-11 RES,CHIP 1K 5% 1/16W PH700 8-749-014-54 HIC CNA1312K01S0 R3303 1-218-953-11 RES,CHIP 1K 5% 1/16W PH701 8-749-014-54 HIC CNA1312K01S0 Q901 8-729-907-25 PHOTO TRANSISTOR PT4850F(TAPE END) Q902 8-729-907-25 PHOTO TRANSISTOR PT4850F(TAPE END) Q902 8-729-907-25 STON 1-771-487-21 SWITCH, SLIDE  T3200 1-433-417-21 TRANSFORMER, DC-DC CONVERTER T3201 1-429-565-21 TRANSFORMER, CONVERTER CONVERTEN	R3298	1-208-943-11	RES,CHIP	220K	0.50%	1/16W	H902	8-719-061-28	DIODE HW-105C-FT-V (T REEL)
R3301 1-218-990-11 SHORT 0 R3302 1-218-953-11 RES,CHIP 1K 5% 1/16W R3303 1-218-953-11 RES,CHIP 1K 5% 1/16W PH700 8-749-014-54 HIC CNA1312K01SO PH701 8-749-014-54 HIC CNA1312K01SO	R3299	1-208-721-11	RES,CHIP	39K	0.50%	1/16W	M901	A-7048-887-A	DRUM ASSY (DEH-11B-R)
R3302 1-218-953-11 RES,CHIP 1K 5% 1/16W R3303 1-218-953-11 RES,CHIP 1K 5% 1/16W PH700 8-749-014-54 HIC CNA1312K01SO Q901 8-729-907-25 PHOTO TRANSISTOR PT4850F(TAPE END) Q902 8-729-907-25 PHOTO TRANSISTOR PT4850F(TAPE TOP) S700 1-771-487-21 SWITCH, SLIDE S701 1-762-851-21 SWITCH, TACT S702 1-762-851-21 SWITCH, TACT S702 1-762-851-21 SWITCH, PUSH (CASSETTE IN) S902 1-572-719-32 SWITCH, PUSH (1 KEY) (REC PROOF) S903 1-771-325-11 ENCODER, ROTARY (SWITCH) (MODE) X2200 1-760-458-21 VIBRATOR, CRYSTAL (32.768KHz)	R3300	1-218-965-11	RES,CHIP	10K	5%	1/16W	M902	8-835-606-01	MOTOR, DC SCD15A/C-NP (CAPSTAN)
R3303 1-218-953-11 RES,CHIP 1K 5% 1/16W PH701 8-749-014-54 HIC CNA1312K01S0 PH701 8-749-014-54 HIC CNA1312K01SO PH701 8-749-014-54 HIC CNA	R3301	1-218-990-11	SHORT 0				M903	X-3948-346-1	MOTOR ASSY, LOADING
R3303 1-218-953-11 RES,CHIP 1K 5% 1/16W PH701 8-749-014-54 HIC CNA1312K01SO Q901 8-729-907-25 PH0TO TRANSISTOR PT4850F(TAPE END) Q902 8-729-907-25 PH0TO TRANSISTOR PT4850F(TAPE END) Q902 8-729-907-25 PH0TO TRANSISTOR PT4850F(TAPE TOP) S700 1-771-487-21 SWITCH, SLIDE  T3201 1-429-565-21 TRANSFORMER, CONVERTER T3201 1-429-565-21 TRANSFORMER, CONVERTER S701 1-762-851-21 SWITCH, TACT S702 1-762-851-21 SWITCH, TACT S702 1-762-851-21 SWITCH, PUSH (CASSETTE IN) S902 1-572-719-32 SWITCH, PUSH (1 KEY) (REC PROOF) S903 1-771-325-11 ENCODER, ROTARY (SWITCH) (MODE)  X2200 1-760-458-21 VIBRATOR, CRYSTAL (32.768KHz)	R3302	1-218-953-11	RES,CHIP	1K	5%	1/16W			
Q901   8-729-907-25   PHOTO TRANSISTOR PT4850F(TAPE END)     Q902   8-729-907-25   PHOTO TRANSISTOR PT4850F(TAPE END)     Q903   8-729-907-25   PHOTO TRANSISTOR PT4850F(TAPE TOP)     S700   1-771-487-21   SWITCH, SLIDE     T3201   1-429-565-21   TRANSFORMER, CONVERTER     T3201   1-429-565-21   TRANSFORMER, CONVERTER     C							PH700	8-749-014-54	HIC CNA1312K01S0
T3200       1-433-417-21       TRANSFORMER, DC-DC CONVERTER         T3201       1-429-565-21       TRANSFORMER, CONVERTER         T3201       1-767-399-11       VIBRATOR, CRYSTAL (24.576MHz)         X2200       1-767-450-11       VIBRATOR, CRYSTAL (32.768KHz)             Q902       8-729-907-25       PHOTO TRANSISTOR PT4850F(TAPE TOP)         S700       1-771-487-21       SWITCH, SLIDE         1-762-851-21       SWITCH, TACT         S901       1-771-039-51       SWITCH, PUSH (CASSETTE IN)         S902       1-572-719-32       SWITCH, PUSH (1 KEY) (REC PROOF)         S903       1-771-325-11       ENCODER, ROTARY (SWITCH) (MODE)	R3303	1-218-953-11	RES,CHIP	1K	5%	1/16W	PH701	8-749-014-54	HIC CNA1312K01S0
T3200 1-433-417-21 TRANSFORMER, DC-DC CONVERTER T3201 1-429-565-21 TRANSFORMER, CONVERTER							Q901	8-729-907-25	PHOTO TRANSISTOR PT4850F(TAPE END)
T3200 1-433-417-21 TRANSFORMER, DC-DC CONVERTER T3201 1-429-565-21 TRANSFORMER, CONVERTER			< TRANSFORMER	₹ >				8-729-907-25	PHOTO TRANSISTOR PT4850F(TAPE TOP)
T3201 1-429-565-21 TRANSFORMER, CONVERTER    1-429-565-21 TRANSFORMER, CONVERTER   S701 1-762-851-21 SWITCH, TACT   S702 1-762-851-21 SWITCH, TACT   S702 1-762-851-21 SWITCH, TACT   S702 1-771-039-51 SWITCH, PUSH (CASSETTE IN)   S902 1-572-719-32 SWITCH, PUSH (1 KEY) (REC PROOF)   S703 1-771-325-11 ENCODER, ROTARY (SWITCH) (MODE)   S703 1-771-325-11 ENCODER, ROTARY (SWITCH) (MODE							S700	1-771-487-21	SWITCH, SLIDE
S702   1-762-851-21   SWITCH, TACT   S901   1-771-039-51   SWITCH, PUSH (CASSETTE IN)   S902   1-572-719-32   SWITCH, PUSH (CASSETTE IN)   S902   1-572-719-32   SWITCH, PUSH (1 KEY) (REC PROOF)   S903   1-771-325-11   ENCODER, ROTARY (SWITCH) (MODE)   S201   1-760-458-21   VIBRATOR, CRYSTAL (32.768KHz)   S702   1-762-851-21   SWITCH, PUSH (1 KEY) (REC PROOF)   S903   1-771-325-11   ENCODER, ROTARY (SWITCH) (MODE)   S702   1-762-851-21   SWITCH, TACT   S901   1-771-325-11   ENCODER, ROTARY (SWITCH) (MODE)   S903   1-771-325-11   ENCODER, ROTARY (SWITCH) (MODE)   S702   1-760-458-21   VIBRATOR, CRYSTAL (32.768KHz)	T3200	1-433-417-21	TRANSFORMER,	DC-DC CON	IVERTER				
X1600       1-767-399-11       VIBRATOR, CRYSTAL (24.576MHz)       S901       1-771-039-51       SWITCH, PUSH (CASSETTE IN)         X2200       1-767-450-11       VIBRATOR, CRYSTAL (24.576MHz)       S903       1-771-325-11       ENCODER, ROTARY (SWITCH) (MODE)         X2201       1-760-458-21       VIBRATOR, CRYSTAL (32.768KHz)	T3201	1-429-565-21	TRANSFORMER,	CONVERTE	R		S701	1-762-851-21	SWITCH, TACT
S902   1-572-719-32   SWITCH, PUSH (1 KEY) (REC PROOF)							S702	1-762-851-21	SWITCH, TACT
X1600 1-767-399-11 VIBRATOR, CRYSTAL (24.576MHz) S903 1-771-325-11 ENCODER, ROTARY (SWITCH) (MODE) X2200 1-767-450-11 VIBRATOR, CERAMIC (20MHz) X2201 1-760-458-21 VIBRATOR, CRYSTAL (32.768KHz)			< VIBRATOR >				S901	1-771-039-51	SWITCH, PUSH (CASSETTE IN)
X2200 1-767-450-11 VIBRATOR, CERAMIC (20MHz) X2201 1-760-458-21 VIBRATOR, CRYSTAL (32.768KHz)									. , , , , , , , , , , , , , , , , , , ,
X2201 1-760-458-21 VIBRATOR, CRYSTAL (32.768KHz)				•			S903	1-771-325-11	ENCODER, ROTARY (SWITCH) (MODE)
		1-767-450-11	VIBRATOR, CERA	MIC (20MH	z)				
X2400 1-760-655-41 VIBRATOR, CRYSTAL (20MHz)				•	,				
	X2400	1-760-655-41	VIBRATOR, CRYS	STAL (20MH	z)				

#### Note:

The components identified by mark △ or dotted line with mark 

#### Note:

Les composants identifiés par une marque ∆ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description ACCESSORIES	
<u>^</u>	1-475-599-11 1-475-950-21 1-475-950-31 1-569-007-11 1-569-008-21	REMOTE COM	MANDER (RMT-811) (900,900E) MANDER (RMT-812) (890E) NVERSION 2P (900:JE/900E:JE)
	1-573-291-11	CONNECTOR,	CONVERSION 21-PIN (890E/900E:AEP,UK)
$\triangle$	1-690-827-12	CORD SET, PO	(890E/900E:AEP,UK) WER (INCLUDE NOISE FILTER) (890E:AEP/900E:AEP)
<u> </u>	1-696-819-11 1-759-671-11 1-765-080-11	CORD, POWER ADAPTOR, FLO AV CONNECTION	R (900E:AUS)
* <u>^</u>	1-769-322-11 1-769-608-11 1-775-549-21 1-775-843-21 1-777-433-21	CORD, POWER CORD, POWER CORD, POWER	R 2P (900:JE/900E:JE) R (900:E/900E:E) R (900:US,CND) R (WITH FILTER) (UK) NG CABLE (1.5M) (890E/900E:AEP,UK)
<u>^</u>	1-782-476-11 1-783-374-11 3-864-632-11		R (900E:CN) R (900:HK/900E:HK) TRUCTION (ENGLISH) (900:US,CND)
	3-864-632-21 3-864-632-31		TRUCTION (FRENCH) (900:CND) TRUCTION (ENGLISH/RUSSIAN) (890E/900E:AEP,UK)
	3-864-632-41	MANUAL, INS	TRUCTION (GERMAN/ITALIAN) (890E:AEP/900E:AEP)
	3-864-632-51	MANUAL, INS	TRUCTION (FRENCH/DUTCH) (890E:AEP/900E:AEP)
	3-864-632-61 3-864-632-71 3-865-177-11	MANUAL, INS	TRUCTION RTUGUESE) (890E:AEP/900E:AEP) TRUCTION (KOREAN) (900:JE) TRUCTION (ENGLISH/RUSSIAN) (900E:E,HK,AUS,JE,CN)
	3-865-177-21	MANUAL, INS	TRUCTION (FRENCH/GERMAN) (900E:E,HK,JE,CN)
	3-865-177-31	MANUAL, INS	TRUCTION (ARABIC/PERSIAN) (900E:E,CN)
	3-865-177-41	MANUAL, INST	TRUCTION RADITIONAL CHINESE) (900E:HK)
	3-865-177-51		PLIFIED CHINESE)(900E:E,JE,CN)
	3-865-177-61	MANUAL, INS	TRUCTION (ENGLISH) (900:E,HK,JE)
	3-865-177-71	MANUAL, INS	Truction Ish/portuguese) (900:e,hk,je)
	3-865-177-81	MANUAL, INS	
	3-865-177-91		TRUCTION (KOREAN) (900:E)
	3-987-015-01	BELT (S), SHO	
	X-3948-940-1	HOOD ASSY, L	
	A-7093-731-A	NP-F330 BATT	ERY PACK (900:US,CND)
	A-7093-731-A A-7093-732-A		ERY PACK (500.03,CND)
	Note: The components	identified by	Note: Les composants identifiés par
	mark /\ or dotted		une marque $\triangle$ sont critiques


 $\mathsf{mark} \, \triangle \, \mathsf{or} \, \mathsf{dotted} \, \mathsf{line} \, \mathsf{with} \, \mathsf{mark}$  $\ensuremath{\Delta}$  are critical for safety. Replace only with part number specified. une marque riangle sont critiques pour la sécurité. Ne les remplacer que par une

pièce portant le numéro spécifié.

#### **⟨PARTS REFERENCE SHEET⟩**

You can find the parts position of location of mount locations applying to VC-208 board of a set.

VC-208 DCR-TRV890E/TRV900/TRV900E SIDE A

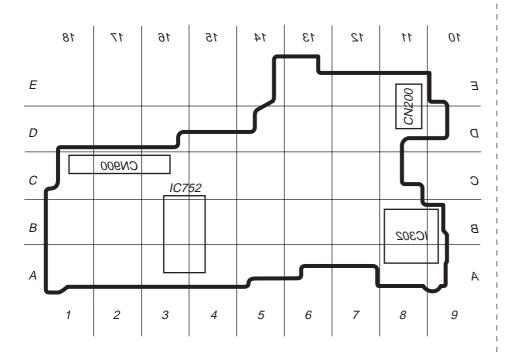


SIDE B DCR-TRV890E/TRV900/TRV900E VC-208

### **⟨PARTS REFERENCE SHEET⟩**

You can find the parts position of location of mount locations applying to VI-151 board of a set.


VI-151 DCR-TRV890E/TRV900/TRV900E SIDE A

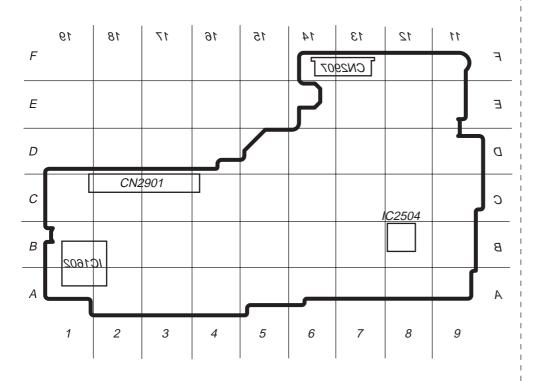

SIDE B DCR-TRV890E/TRV900/TRV900E VI-151

## **(FOR CAMERA COLOR REPRODUCTION ADJUSTMENT)**

Take a copy of CAMERA COLOR REPRODUCTION FRAME and Parts referencesheets with a clear sheet for use.

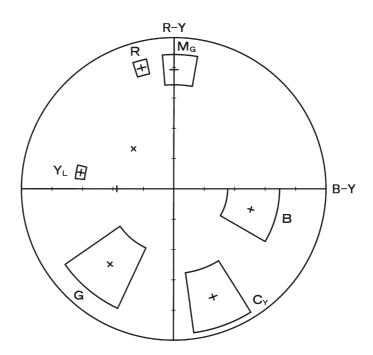

DCR-TRV890E/TRV900/TRV900E



## DCR-TRV890E/TRV900/TRV900E

# DCR-TRV890E/TRV900/TRV900E

RMT-811/812

SONY®

**SERVICE MANUAL** 

1999.04

US Model Canadian Model DCR-TRV900

AEP Model
UK Model

E Model Hong Kong Model Tourist Model

Australian Model Chinese Model

DCR-TRV900E

**SUPPLEMENT-1** 

File this supplement-1 with the Service Manual. (EVB00374, EVB00827, EVB01385)

- 1. The video head (SLD) circuit should be deleted from the schematic diagram. ..... (page 1)
- 2. The DC IN circuit is separated from the VI-151 board. A new independent printed wiring board PS-422 is newly added solely for the DC IN board. Refer to attached applicable serial Nos. list for serial Nos. (pages 2 to 16)
- 3. Part number change of IC1602 on the VI-151 board. IC1602 : CXD3200R-T6 → SN104266PN-TEB

..... (pages 17 and 18)


- 4. Addition of MF ring assy ...... (page 19)
- · Add and correct your service manual.

#### Applicable serial Nos. (for the item 2.)

	· · · · · · · · · · · · · · · · · · ·		
Models	Serial Nos.	Models	Serial Nos.
DCR-TRV890E : AEP	1003922 and higher	DCR-TRV900E : AEP	1020501 and higher
-TRV890E : UK	1004001 and higher	-TRV900E : UK	1020751 and higher
-TRV900 : US	1045771 and higher	-TRV900E : E	1020701 and higher
-TRV900 : CND	1000401 and higher	-TRV900E : HK	1020651 and higher
-TRV900 : E	1046021 and higher	-TRV900E : JE	1015001 and higher
-TRV900 : HK	1021831 and higher	-TRV900E : AUS	1022451 and higher
-TRV900 : JE	1031181 and higher	-TRV900E : CN	1020601 and higher


Abbreviation
 CND: Canadian model
 HK: Hong Kong model
 JE: Tourist model
 AUS: Australian model
 CN: Chinese model


- : Deleted portion.

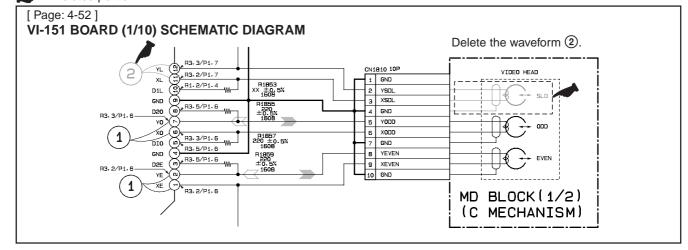


- < > : Page No. shown in < > indicates the page to refer on this Supplement-1.
- []: Page No. shown in [] indicates the page to refer on the original Service Manual DCR-TRV890E/TRV900/TRV900E.

: Added portion.

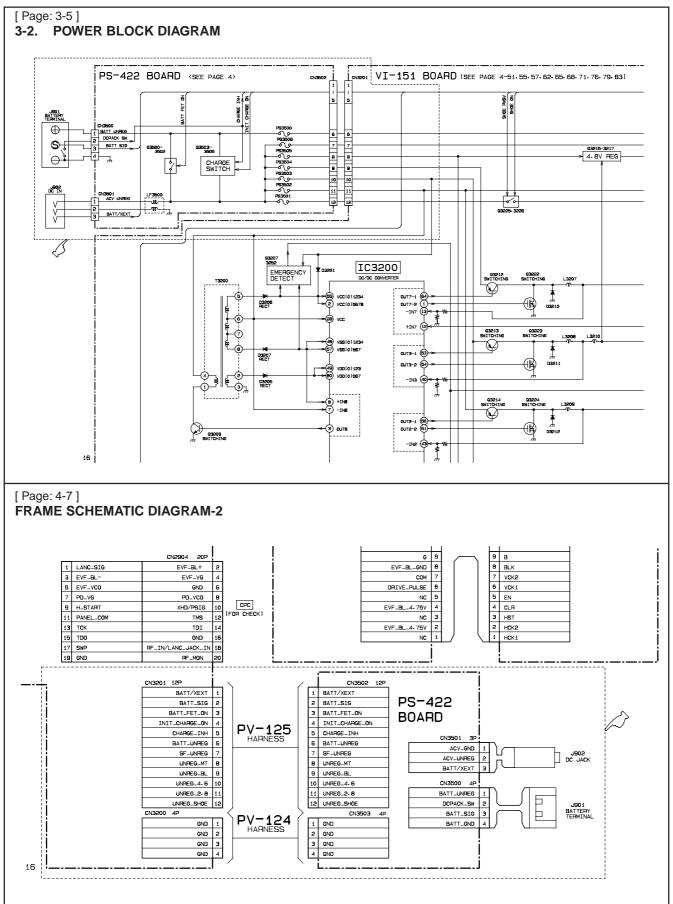

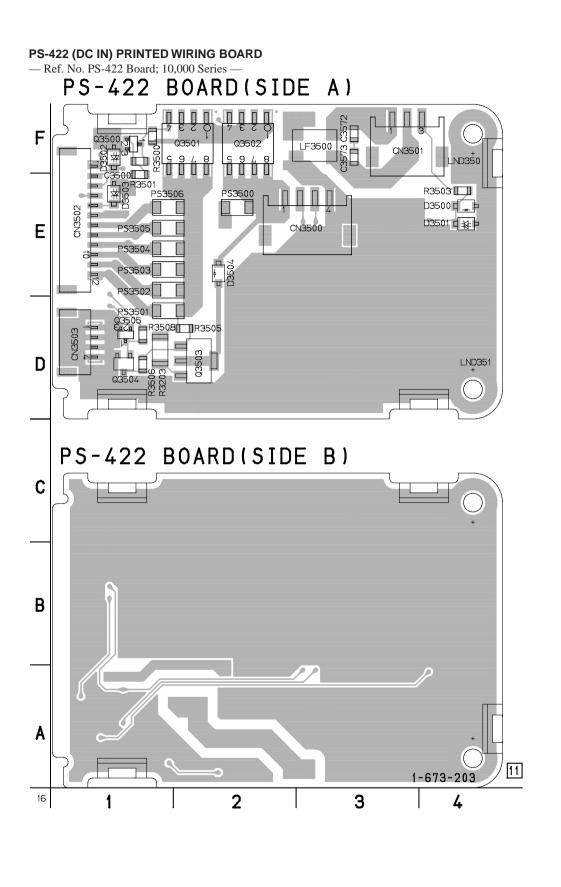

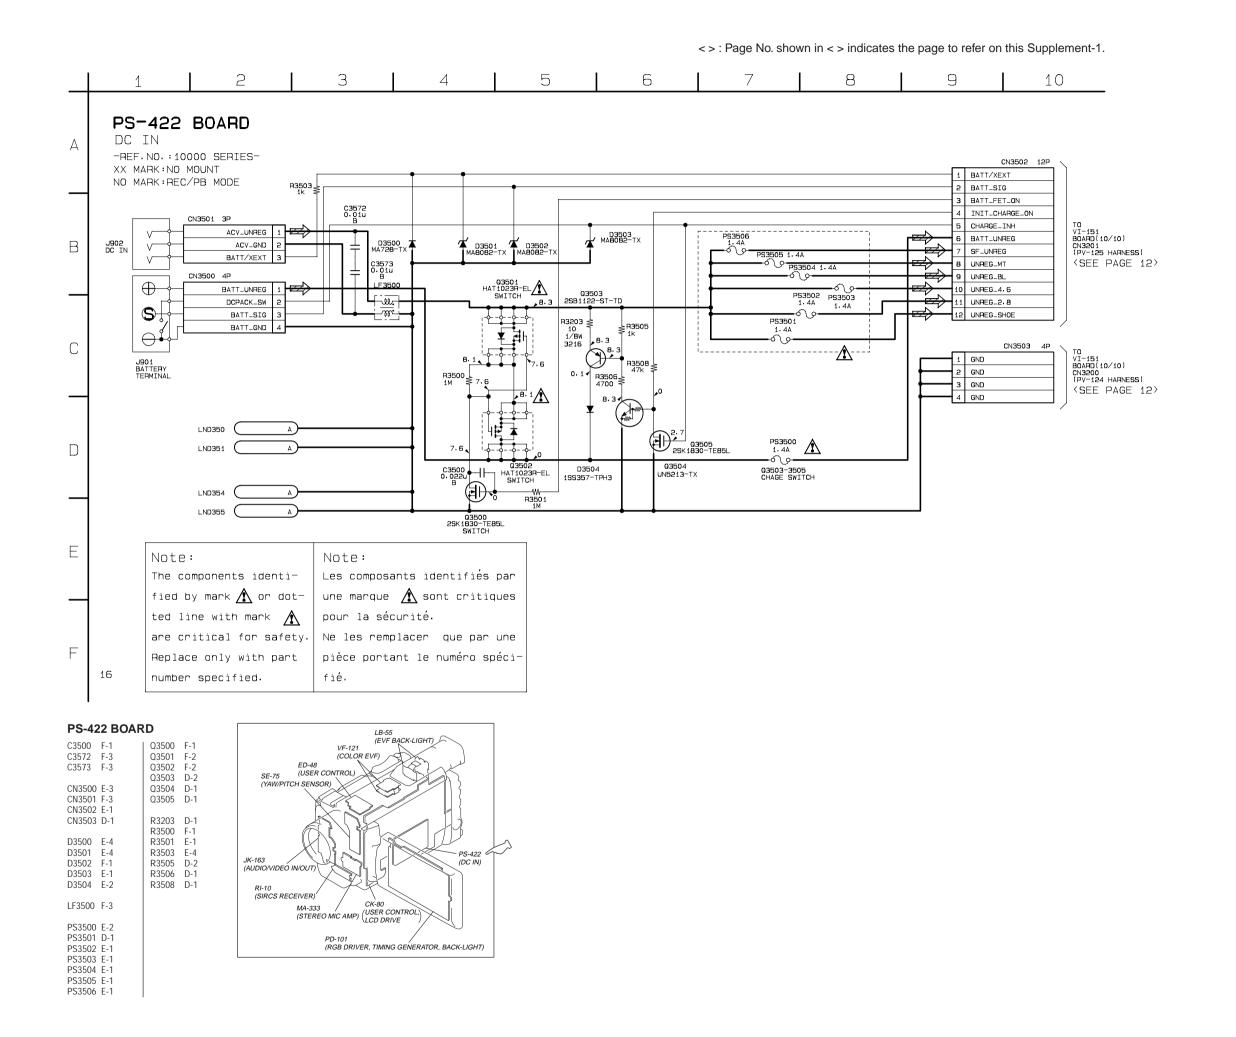

[]: Page No. shown in [] indicates the page to refer on the original Service Manual DCR-TRV890E/TRV900/TRV900E.

[ Page: 4-90 ]

#### PRINTED WIRING BOARD

#### C1422 B-2 C3246 E-7 R2427 C-6 03239 D-7 C1423 B-1 C3248 E-8 Q3240 D-7 R2428 C-6 C1433 C3249 E-8 Q3241 D-7 R2429 D-6 C1434 A-1 C3255 E-9 R2430 D-6 R1414 B-2 C1436 A-2 C3260 D-7 R2432 D-6 C1438 B-2 C3262 D-7 R1418 Δ-2 R2433 C-5 C1439 A-2 R1419 B-2 R2434 D-6 C3269 D-7 C1449 B-2 R2436 D-6 R1421 B-2 CN1810 A-5 R2439 C-6 C1450 A-3 R1425 B-1 C1451 A-3 CN2901 C-2 R1426 B-1 R2440 C-6 C1452 A-1 CN2903 A-1 R1430 A-1 R2441 C-6 C1503 B-2 CN2904 D-9 R1432 B-2 R2442 D-6 C1506 B-3 R1433 A-1 R2445 D-6 CN2905 F-6 C1507 C-2 R2505 B-9 CN2906 F-8 R1434 B-1 C1512 B-2 CN2911 A-6 R1438 A-1 R2506 B-8 C1513 B-2 CN2912 A-8 R1439 B-1 R2507 B-8 C1600 A-4 CN2913 A-7 R1440 A-1 R2508 B-8 C1601 A-4 CN3200 B-9 R1445 A-1 R2511 B-8 C1602 A-4 R2517 B-7 CN3201 C-9 R1446 R-1 R2530 B-8 C1603 A-4 R1447 R-1 C1606 A-3 D1600 A-4 R2531 A-7 R1453 B-2 D3205 C-8 C1607 A-3 R1454 B-2 R2532 A-7 C1612 A-1 D3208 E-7 R1455 A-2 R2533 A-8 C1613 A-4 D3213 E-1 R1507 B-1 R2534 B-8 C1614 B-3 D3216 F-8 R1508 B-2 R2569 B-8 C1615 A-4 D3217 F-8 R1509 B-1 R2572 B-8 C1617 A-4 R2574 A-7 D3225 C-7 R1510 B-2 C1621 A-4 R1511 B-2 R2575 B-7 D3226 C-7 C1623 A-1 D3227 C-7 R1512 B-2 R2576 A-7 C1901 C-6 R2577 B-7 C1902 A-6 IC1402 A-2 R1514 B-2 R2579 B-8 C1903 B-6 IC1501 B-3 R1515 B-2 R2582 B-8 C1904 C-5 IC1600 A-3 R1516 B-3 R2583 B-8 IC1601 B-4 C1908 A-6 R1517 B-2 R2585 B-8 R2587 B-8 C1909 A-5 IC1900 B-6 R1518 B-2 IC2002 C-2 C1910 A-6 R1519 C-2 R2599 A-8 C1914 B-5 IC2401 C-6 R1521 B-2 R2903 F-7 C1915 IC2404 C-4 R1522 B-3 R2904 F-7 C1933 B-5 IC2504 B-8 R1618 A-4 R2906 F-7 C2018 C-1 R2907 F-7 IC2505 B-7 R1619 A-4 C2029 C-1 R1620 A-3 R3210 F-9 C2033 L1400 A-2 R1621 A-4 R3211 D-9 C2042 L1500 C-2 R1622 A-4 R3215 E-9 C2043 L1501 B-2 R1623 B-3 R3216 E-7 C2044 L1601 A-4 R1624 A-4 R3246 D-9 C2045 B-1 C2046 C-1 C2047 B-1 L1602 A-1 R1625 A-4 R3257 C-7 L1603 A-4 R3258 C-7 R1626 A-3 L2400 C-5 R1627 A-3 R3259 C-7 C2048 L2512 B-7 R1628 B-3 R3260 C-7 C2049 L3200 D-9 R1629 C-5 R3261 C-7 C2050 B-1 L3201 E-9 R1689 A-4 R3262 C-7 C2051 B-1 L3202 E-7 R1909 A-5 R3264 E-9 C2053 C-2 L3203 D-9 R1938 B-6 R3268 E-9 C2400 C-5 L3204 D-8 R1939 B-5 R3270 F-9 C2402 D-5 L3205 D-8 R1940 B-5 R3272 D-7 C2403 D-6 L3206 E-8 R1941 B-5 R3274 E-7 C2405 D-6 L3207 D-7 R1942 A-6 R3276 D-7 C2408 C-5 L3208 E-8 R1943 A-5 R3277 E-7 C2409 D-6 L3209 D-8 R1944 A-6 R3283 D-7 C2410 D-6 C2500 B-9 R3284 D-7 R3285 D-7 L3214 F-8 R1945 C-6 L3215 E-8 R1946 A-6 C2507 B-8 L3216 E-8 R2050 C-1 R3286 D-7 C2565 B-8 L3217 E-8 R2051 C-1 R3287 D-7 C2566 B-8 R3299 D-7 C2569 B-6 Q1402 A-1 R2053 C-1 R3300 C-7 C2570 B-8 Q1403 A-1 R2401 C-5 R3302 C-7 C2572 B-8 C2573 B-9 01405 B-1 R2402 C-4 T3200 D-8 T3201 E-7 01406 A-2 R2405 C-5 C2574 B-7 Q1500 B-1 R2406 D-5 C2575 B-8 Q1501 B-2 R2407 C-5 C2576 B-6 Q1502 B-2 R2408 C-5 X1600 A-3 C2577 B-7 Q1503 B-2 R2409 C-5 C2579 B-6 Q2507 B-8 R2410 C-5

VI-151 BOARD (SIDE A)

C1404 A-2

C1405 A-2

C1409 B-3

C1418 A-2

C2582 B-8

C2583 B-8

C2585 B-8

C2586 B-8

C2587 B-8

C2589 B-7

O3206 C-8

Q3215 C-7

Q3216 C-7

Q3217 C-7

Q3219 C-7

Q3225 C-7

Q3226 C-7

R2411 C-5

R2415 C-6

R2416 C-6

R2417 C-6

R2418 C-6

R2419 C-6

R2420 C-6

C3221 C-7

C3236 E-8

C3237 C-7

C3244 C-7

C3245 F-7

| R2421 C-6

R2422 C-6

R2423 C-6

R2424 C-6

R2425 D-6

R2426 D-6

Q3227 E-9

Q3231 E-9

Q3234 C-7


03235 F-7

03236 D-7


03238 F-7

## For printed wiring boards

- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

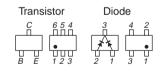


There are few cases that the part printed on this diagram isn't mounted in this model.

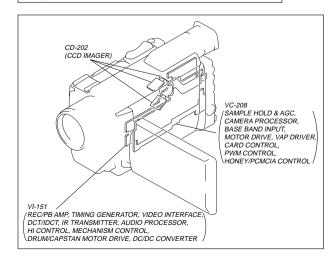


VI-151 (REC/PB AMP, TIMING GENERATOR, VIDEO INTERFACE, DCT/IDCT, IR TRANSMITTER, AUDIO PROCESSOR, HI CONTROL, MECHANISM CONTROL, DRUM/CAPSTAN MOTOR DRIVE, DC/DC CONVERTER) PRINTED WIRING BOARD

— Ref. No. VI-151 Board; 10,000 Series —

# VI-151 BOARD(SIDE A)

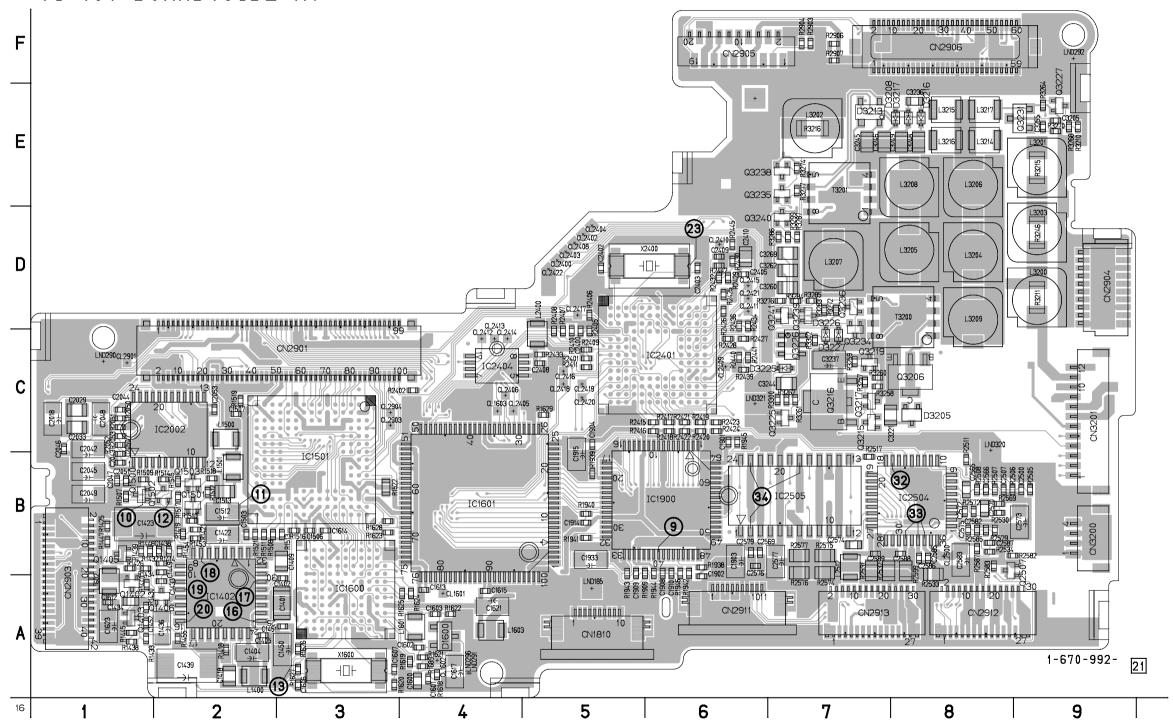

**—8—** 

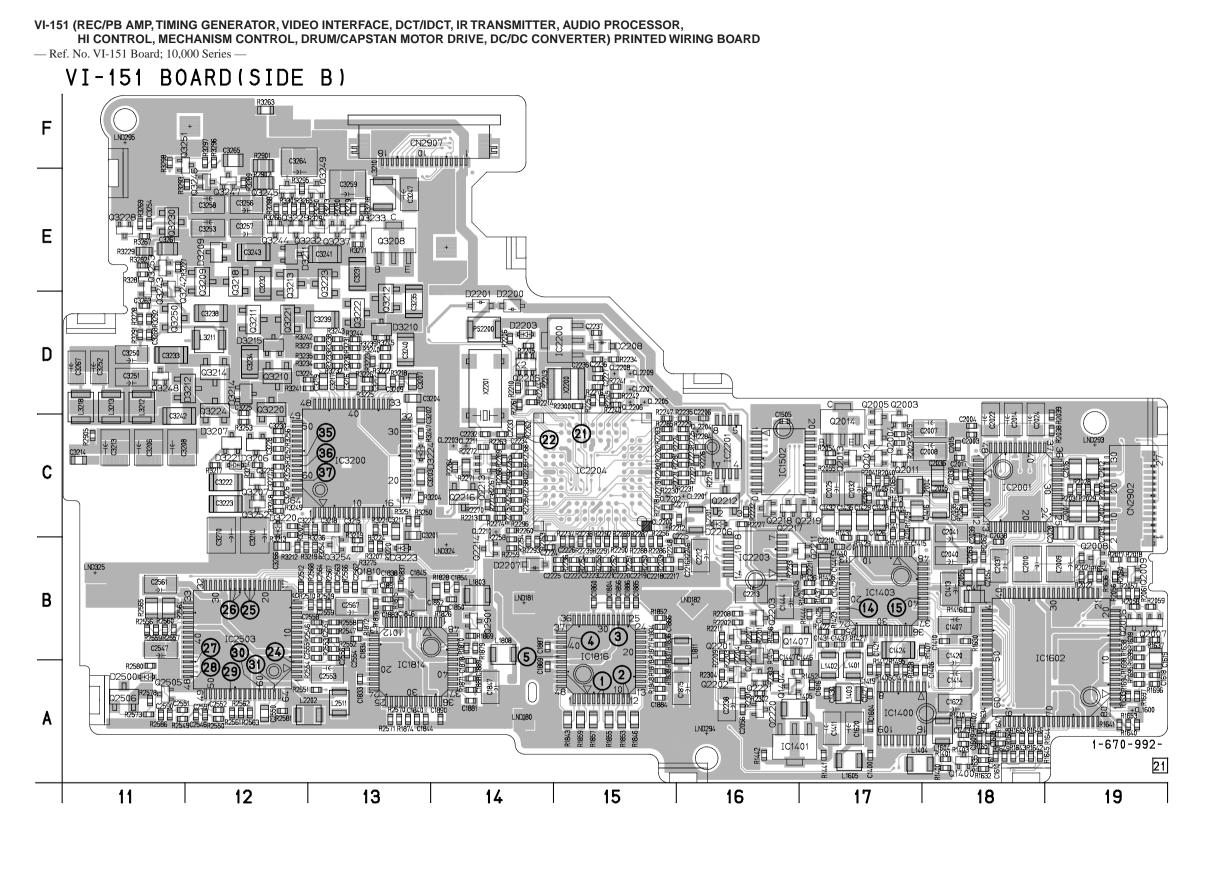



#### VI-151 BOARD (SIDE B)

VI-151 BOA	RD (SIDE B)						
C1400 A-17	C2016 C-19	C3220 C-12	L1605 A-17	R1400 A-18	R1877 B-15	R2262 C-14	R3217 C-12
C1403 A-18	C2017 C-18	C3222 C-12	L1803 B-14	R1401 A-18	R1878 A-15	R2263 C-14	R3218 D-13
C1406 A-18	C2022 C-18	C3223 C-12	L1808 B-14	R1402 A-18	R1879 B-14	R2264 C-14	R3219 B-12
C1407 B-18	C2024 C-18	C3224 D-13	L1811 B-16	R1403 A-18	R2017 B-19	R2265 C-14	R3220 B-13
C1410 B-18	C2025 C-17	C3225 D-12	L2004 C-17	R1404 C-17	R2018 B-19	R2266 C-14	R3221 C-13
C1411 A-17	C2027 C-18	C3226 C-12	L2005 C-18	R1405 C-17	R2019 C-17	R2267 C-14	R3222 D-13
C1412 A-17 C1413 B-18	C2028 C-19 C2030 C-18	C3227 C-12 C3228 C-12	L2201 C-16 L2202 A-13	R1406 A-17 R1407 B-18	R2021 B-19 R2022 B-19	R2268 C-14 R2269 C-14	R3223 D-13 R3224 C-13
C1413 B-18	C2030 C-18	C3229 C-12	L2511 A-13	R1407 B-18	R2022 B-19	R2270 C-14	R3225 D-13
C1415 C-17	C2032 C-17	C3230 C-12	L3210 E-13	R1409 C-17	R2028 C-19	R2271 C-14	R3226 D-13
C1416 C-17	C2034 C-18	C3231 E-13	L3211 D-12	R1410 A-18	R2029 C-19	R2272 C-14	R3227 E-11
C1417 B-18	C2035 C-18	C3232 E-12	L3212 D-11	R1411 C-17	R2031 C-19	R2273 C-14	R3228 D-11
C1419 A-17	C2036 C-18	C3233 D-11	L3213 D-11	R1412 A-17	R2032 C-19	R2274 C-14	R3229 E-11
C1420 B-18	C2037 B-18	C3234 D-12	L3218 D-11	R1413 C-17	R2038 C-19	R2275 C-14	R3230 D-13
C1421 B-17 C1424 B-17	C2038 B-18 C2039 B-18	C3235 D-13 C3238 D-12	PS2200 D-14	R1415 B-16 R1416 B-18	R2039 C-19 R2040 C-17	R2276 D-15 R2277 C-15	R3231 D-13 R3232 D-13
C1424 B-17	C2039 B-18	C3239 D-13	F 32200 D-14	R1417 C-17	R2040 C-17	R2277 C-15	R3233 D-13
C1426 B-17	C2041 C-18	C3240 D-13	Q1400 A-18	R1420 C-17	R2054 C-17	R2279 C-15	R3234 D-13
C1427 A-17	C2054 B-18	C3241 E-13	Q1404 A-16	R1422 B-17	R2055 C-17	R2280 C-15	R3235 D-13
C1428 C-17	C2055 B-18	C3242 C-11	Q1407 B-16	R1423 B-17	R2056 B-19	R2281 C-15	R3236 C-13
C1429 C-17	C2056 A-16	C3243 E-12	Q1810 B-13	R1424 B-17	R2057 B-19	R2282 C-15	R3237 D-13
C1430 A-17	C2206 C-16	C3247 E-13	Q2003 C-17	R1427 B-17	R2058 B-19	R2283 C-15	R3238 D-13
C1431 B-17 C1432 C-17	C2210 B-17 C2211 B-17	C3250 D-11 C3251 D-11	Q2004 C-17 Q2005 C-17	R1429 B-17 R1431 B-17	R2059 B-19 R2060 B-19	R2284 C-16 R2285 C-15	R3239 D-13 R3240 D-13
C1432 C-17	C2211 B-17	C3252 D-11	Q2006 B-19	R1435 B-17	R2061 B-19	R2286 B-15	R3241 D-13
C1437 B-17	C2213 B-16	C3253 E-12	Q2007 B-19	R1436 B-17	R2062 B-18	R2287 B-15	R3242 D-13
C1440 B-17	C2215 B-16	C3254 E-11	Q2008 B-19	R1437 B-17	R2063 B-18	R2288 B-15	R3243 D-13
C1441 B-17	C2216 B-16	C3256 E-12	Q2009 B-19	R1441 A-17	R2064 C-18	R2289 B-15	R3244 D-13
C1442 B-17	C2217 B-15	C3257 E-12	Q2011 C-17	R1442 A-16	R2065 C-17	R2290 B-15	R3245 D-13
C1444 B-16	C2218 B-15	C3258 E-12	Q2012 C-17	R1444 B-17	R2066 C-17	R2291 B-15	R3247 C-13
C1445 B-17 C1446 A-17	C2219 B-15 C2220 B-15	C3259 E-13 C3261 E-11	Q2013 C-17 Q2014 C-17	R1452 A-16 R1456 B-16	R2201 B-16 R2202 B-16	R2292 B-15 R2293 B-14	R3248 C-12 R3249 C-12
C1440 A-17	C2220 B-15	C3263 D-11	Q2200 B-16	R1495 A-17	R2202 B-10	R2294 B-14	R3250 C-13
C1505 C-16	C2222 B-15	C3264 F-12	Q2201 B-16	R1630 B-18	R2204 B-16	R2295 C-14	R3251 C-13
C1604 A-17	C2223 B-15	C3265 F-12	Q2202 A-16	R1632 A-18	R2205 D-14	R2296 C-14	R3252 C-12
C1608 A-18	C2224 B-14	C3266 B-12	Q2203 B-16	R1633 A-19	R2206 D-14	R2297 C-14	R3253 C-12
C1609 A-18	C2225 B-15	C3267 D-11	Q2206 D-14	R1634 A-18	R2207 B-16	R2298 C-14	R3254 B-13
C1610 A-18	C2226 B-15	C3268 D-11	Q2211 B-17	R1635 A-18	R2208 B-16	R2299 C-14	R3255 C-12
C1611 A-18 C1616 A-17	C2227 D-15 C2232 C-14	C3270 C-12	Q2212 C-16 Q2213 C-14	R1636 B-19 R1637 B-19	R2209 B-16 R2210 D-14	R2300 D-15 R2301 A-16	R3256 C-12 R3263 F-12
C1618 A-19	C2232 C-14	CN2902 C-19	Q2213 C-14 Q2214 B-14	R1638 B-19	R2210 B-14	R2302 A-16	R3265 E-12
C1619 A-19	C2234 C-14	CN2907 F-13	Q2216 C-14	R1639 B-19	R2212 C-16	R2303 A-16	R3266 E-12
C1620 A-17	C2235 D-15		Q2217 C-16	R1640 A-19	R2213 C-14	R2304 A-16	R3267 E-11
C1622 A-18	C2236 D-15	D2200 D-14	Q2218 C-16	R1641 A-19	R2214 D-14	R2509 B-13	R3269 E-11
C1804 B-15	C2237 D-15	D2201 D-14	Q2219 C-17	R1642 A-18	R2215 C-16	R2510 B-13	R3271 E-13
C1833 A-13	C2238 A-16	D2203 D-14	Q2220 A-16	R1643 A-18	R2221 C-16	R2512 B-12	R3273 E-13
C1834 B-13 C1837 B-13	C2239 C-14 C2546 A-12	D2206 C-16 D2207 B-14	Q2221 A-16 Q2505 A-11	R1644 A-18 R1645 A-18	R2222 C-16 R2223 C-16	R2546 B-13 R2547 B-13	R3275 B-13 R3278 E-13
C1838 B-13	C2547 B-11	D2207 B-14 D2208 D-15	Q2506 A-11	R1646 A-18	R2224 C-16	R2549 A-11	R3279 E-13
C1840 A-13	C2550 A-12	D2500 A-11	Q2901 B-14	R1647 A-18	R2225 C-16	R2550 A-12	R3280 E-13
C1844 A-13	C2551 A-11	D3206 C-12	Q3207 C-12	R1648 A-18	R2226 C-16	R2551 A-13	R3281 E-11
C1845 B-13	C2552 A-12	D3207 C-12	Q3208 E-13	R1649 A-18	R2227 C-16	R2552 B-13	R3282 E-11
C1846 B-13	C2553 A-13	D3209 E-12	Q3209 E-12	R1650 A-18	R2229 C-16	R2553 B-13	R3288 E-12
C1847 A-14 C1850 B-14	C2554 B-13 C2555 B-13	D3210 D-13 D3211 E-12	Q3210 D-12 Q3211 D-12	R1651 A-18 R1652 A-18	R2230 C-15 R2231 C-16	R2554 B-13 R2556 B-11	R3289 E-12 R3290 E-13
C1852 B-14	C2556 B-13	D3211 E-12	Q3211 D-12	R1653 A-19	R2232 C-16	R2557 B-11	R3291 D-11
C1854 B-14	C2557 B-13	D3214 D-12	Q3213 E-12	R1654 B-19	R2233 B-16	R2558 B-13	R3292 D-11
C1856 B-15	C2558 B-13	D3215 D-12	Q3214 D-12	R1694 A-19	R2234 D-15	R2559 B-11	R3293 E-12
C1860 B-15	C2559 B-13	D3220 C-12	Q3218 E-12	R1695 A-19	R2235 C-16	R2560 B-11	R3294 E-13
C1866 B-15	C2561 B-11	D3221 C-12	Q3220 D-12	R1696 A-19	R2236 B-15	R2561 A-12	R3295 E-12
C1869 A-14	C2562 B-13	D3223 B-13	Q3221 D-12	R1697 A-19	R2237 B-15	R2562 A-12	R3296 F-12
C1875 A-16 C1878 A-14	C2563 B-13 C2564 B-13	D3224 C-13	Q3222 D-13 Q3223 E-13	R1698 A-19 R1699 B-19	R2238 B-15 R2239 B-15	R2563 A-12 R2564 B-11	R3297 F-12 R3298 F-11
C1881 A-14	C2567 B-13	IC1400 A-17	Q3224 D-12	R1826 B-14	R2240 D-15	R2565 B-11	R3301 E-12
C1883 B-13	C2590 A-11	IC1401 A-16	Q3228 E-11	R1828 B-14	R2241 D-15	R2566 B-13	
C1884 A-15	C2591 A-12	IC1403 B-17	Q3229 E-12	R1834 B-15	R2242 D-15	R2567 B-13	X2200 D-15
C1885 B-15	C3201 C-13	IC1502 C-16	Q3230 E-11	R1836 B-15	R2243 D-14	R2568 B-13	X2201 D-14
C1886 B-15	C3202 C-13	IC1602 B-19	Q3232 E-13	R1837 A-15	R2244 D-14	R2570 A-13	
C1887 B-14	C3203 C-13	IC1814 A-13	Q3233 E-13	R1838 A-15	R2245 D-15	R2571 A-13	
C1888 A-14 C1889 A-14	C3204 D-13 C3206 C-11	IC1816 B-15 IC2001 C-18	Q3237 E-13 Q3242 E-11	R1843 A-15 R1846 A-15	R2246 B-16 R2247 C-15	R2573 A-11 R2578 A-11	
C1890 A-14	C3207 D-13	IC2200 D-15	Q3242 E-11	R1848 A-15	R2247 C-13	R2580 A-11	
C1891 B-13	C3208 C-11	IC2201 C-16	Q3244 E-12	R1852 B-15	R2249 B-15	R2581 A-12	
C2001 C-19	C3209 D-13	IC2203 B-16	Q3245 E-12	R1853 A-15	R2250 B-15	R2586 A-11	
C2002 C-19	C3210 C-12	IC2204 C-15	Q3246 E-12	R1855 A-15	R2251 B-15	R2901 F-12	
C2003 C-18	C3211 C-13	IC2503 B-12	Q3247 E-12	R1857 A-15	R2252 B-15	R2902 E-12	
C2004 C-18	C3212 D-13	IC3200 C-13	Q3248 D-11	R1859 A-15	R2253 B-14	R2905 C-11	
C2007 C-18 C2008 C-18	C3213 C-11 C3214 C-11	L1401 A-17	Q3249 E-13 Q3250 D-11	R1869 B-14 R1870 B-14	R2254 B-15 R2255 B-15	R3202 C-12 R3204 C-13	
C2008 C-18	C3214 C-11	L1401 A-17	Q3251 F-11	R1871 A-14	R2257 D-15	R3207 B-13	
C2010 B-18	C3216 D-13	L1403 A-17	Q3252 C-12	R1872 B-13	R2258 B-14	R3209 B-13	
C2012 C-19	C3217 D-13	L1404 A-17	Q3253 E-11	R1874 A-13	R2259 B-14	R3212 B-12	
C2014 C-18	C3218 C-13	L1405 A-16	Q3254 B-13	R1875 B-13	R2260 C-14	R3213 C-12	
C2015 C-18	C3219 D-13	l L1604 A-18	1	R1876 B-13	R2261 D-14	R3214 C-12	1


<>: Page No. shown in <> indicates the page to refer on this Supplement-1.

[]: Page No. shown in [] indicates the page to refer on the original Service Manual DCR-TRV890E/TRV900/TRV900E.

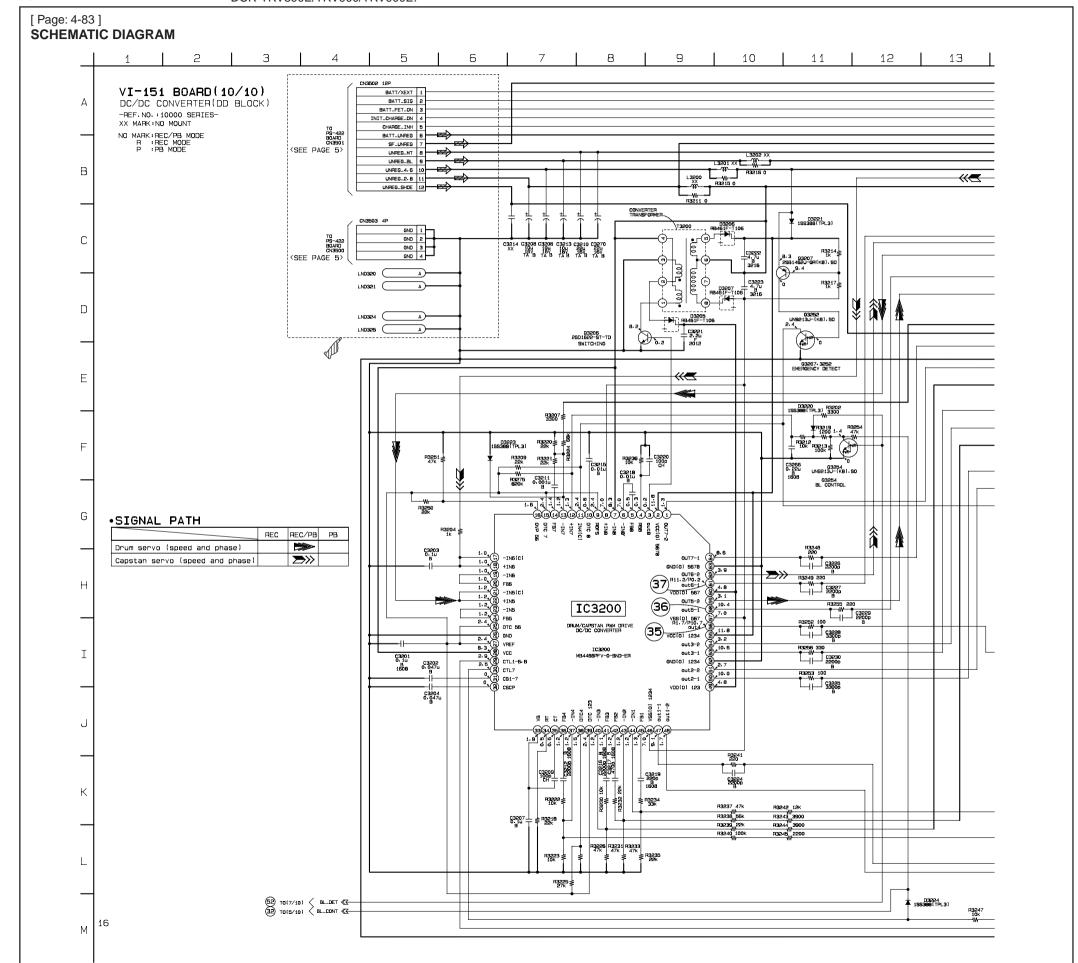

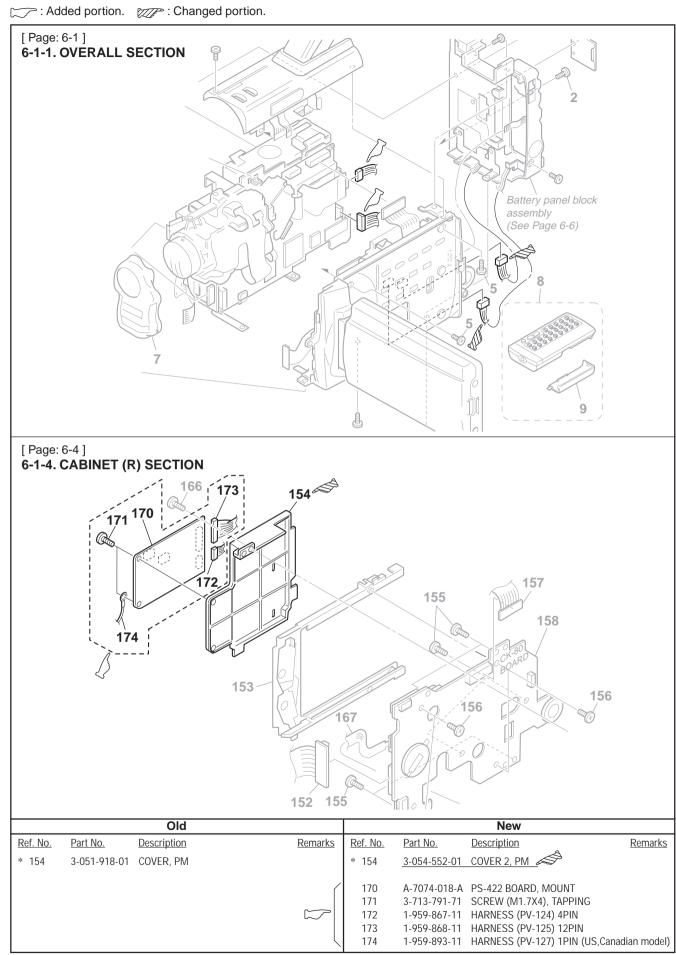

Changed portion.

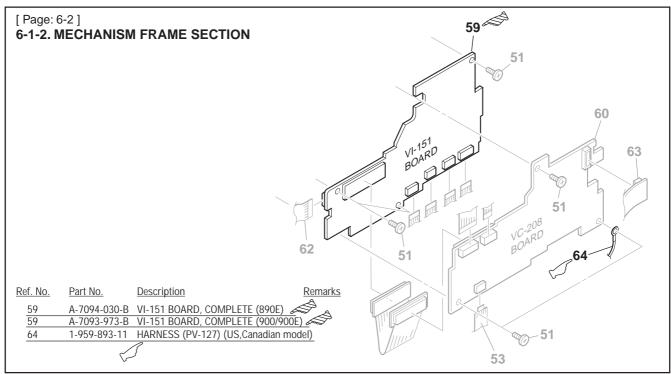


#### 6-2. ELECTRICAL PARTS LIST

: Chenged portion. : Deleted portion.


Page			Old							New
	Ref. No.	Part No.	Description			<u>Remarks</u>	Re	ef. No.	Part No.	<u>Description</u> <u>Remarks</u>
0.00		A-7094-030-A	VI-151 BOARD						<u>A-7094-030-B</u>	VI-151 BOARD, COMPLETE (890E)
6-26		A-7094-068-A	VI-151 BOARD	, COMPLETE	(900 ****	/900E) ****			<u>A-7093-973-B</u>	VI-151 BOARD, COMPLETE (900/900E)
				(Ref.N	o.:10,0	000Series)				(Ref.No.:10,000Series)
	C3200	1-107-819-11	CERAMIC CHIE	P 0.022uF	10%	16V	7			
		1-580-057-11 1-691-550-11	PIN, CONNECT PIN, CONNECT		(SMD	) 3P		CN3200 CN3201	1-778-507-21 1-779-064-11	PIN, CONNECTOR 4P PIN, CONNECTOR 12P
6-28	D3200 D3201	8-719-421-27 8-719-420-14								
	D3201	8-719-420-14	DIODE MASO							
	D3203 D3204	8-719-420-14	DIODE MA80 DIODE 1SS38							
		1-411-957-11					$\  \ $			
		1-533-760-21								
		1-533-760-21	( - ,							
6-29		1-533-760-21								
0-29		1-533-760-21 1-533-760-21	FUSE (SMD) 1							
		1-533-760-21 1-533-760-21								
	Q3200		TRANSISTOR		TOE!		$\  \ $			
	∆ Q3200		TRANSISTOR							
	<b>△</b> Q3202		TRANSISTOR							
6-30	Q3203 Q3204	8-729-804-41 8-729-037-74	TRANSISTOR TRANSISTOR			)				
	Q3205	8-729-024-48	TRANSISTOR	2SK1830-T	E85L					
	R3200	1-218-989-11	- / -		5%	1/16W				
	R3201 R3203	1-218-989-11 1-216-150-91			5% 5%	1/16W 1/8W				
6-33	R3205	1-218-953-11	RES,CHIP	1K	5%	1/16W				
	R3206	1-218-961-11	RES,CHIP	4.7K	5%	1/16W				
	R3208	1-218-973-11	RES,CHIP	47K	5%	1/16W				
6-34	R3303	1-218-953-11	RES,CHIP	1K	5%	1/16W				

#### Added portion

Page					Ne	ew						
	Ref. No.	Part No.	<u>Description</u>		Remarks	Ref. No.	Part No.	Descript	<u>ion</u>			Remarks
		A-7074-018-A	PS-422 BOARD, COMPLET					< TRANS	SISTO	R >		
			(Ref	.No.:10	0,000Series)	Q3500	8-729-024-48					
			< CAPACITOR >			Q3501 Q3502	8-729-036-43 8-729-036-43					
			< CAPACITOR >			Q3502	8-729-804-41					
	C3500	1-164-227-11	CERAMIC CHIP 0.022uF	10%	16V	Q3504	8-729-402-42					
	C3572			10%	16V							
	C3573	1-162-970-11	CERAMIC CHIP 0.01uF	10%	16V	Q3505	8-729-024-48	TRANSIS	STOR	2SK1830	0-TE85L	
			< CONNECTOR >					< RESIS	TOR >	•		
	CN3500	1-580-057-11	PIN, CONNECTOR 4P			R3203	1-216-150-00	RES,CHI	Р	10	5%	1/16W
	CN3501	1-580-056-21	PIN, CONNECTOR 3P			R3500	1-216-857-11			1M	5%	1/16W
			PIN, CONNECTOR 12P			R3501	1-216-857-11			1M	5%	1/16W
	CN3503	1-778-507-21	PIN, CONNECTOR 4P			R3503	1-216-821-11			1K	5%	1/16W
			< DIODE >			R3505	1-216-821-11	RES,CHI	Р	1K	5%	1/16W
						R3506	1-216-829-11	RES,CHI	Р	4.7K	5%	1/16W
6-36	1		DIODE MA728			R3508	1-216-841-11	RES,CHI	Р	47K	5%	1/16W
	D3501		DIODE MA8082									
	D3502		DIODE MA8082			Note:			Note	e: composa	-4- !-!4	:e: 4
	D3503		DIODE MA8082				omponents ident			marque 2		
	D3504	8-719-027-76	DIODE 1SS357-TPH3				critical for safety.		pour	· la sécurit	é.	.
			< LINE FILTER >			Replac specifi	ce only with part ed.	number	Ne I pièc	es rempla e portant le	acer que e numéro	par une spécifié.
	LF3500	1-411-957-11	FILTER, COMMON MODE									
			< FUSE >									
	△PS3500	1-533-760-21	FUSE (SMD) 1.4A									
			FUSE (SMD) 1.4A									
			FUSE (SMD) 1.4A									
			FUSE (SMD) 1.4A									
	\_PS3504	1-533-760-21	FUSE (SMD) 1.4A									
			FUSE (SMD) 1.4A									
	△PS3506	1-533-760-21	FUSE (SMD) 1.4A									

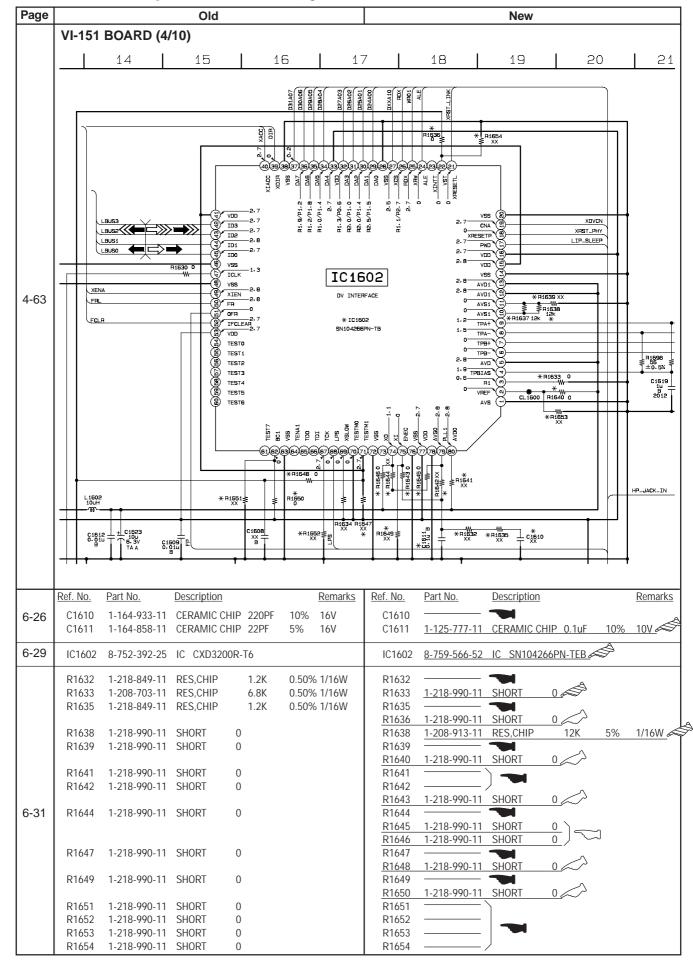

Page	New
	3. C Page Table
5-35	Address   Initial value   NTSC   PAL
5-49	3-5-2. BIST Check 1-4. IC1600(SFD) BIST(PB) Check 1) Select page: 0, address: 01, and set data: 01. 2) Select page: C, address: AC, set data: 21, and press the PAUSE button. 3) Select page: C, address: AD, and note down the data. When the data is "00", change it to "01" and press the PAUSE button. When the data is "02", change it to "03" and press the PAUSE button.  4) Select page: 3, address: 11, set data: 04, and press the PAUSE button. 12) Select page: C, address: AC, set data: 20, and press the PAUSE button. 13) Select page: C, address: AD, set the data noted down at step 3), and press the PAUSE button. 14) Select page: 0, address: 01, and set data: 00.
5-51	2-3. IC1600(SFD) BIST(REC) Check  1) Select page: 0, address: 01, and set data: 01.  2) Select page: C, address: AC, set data: 21, and press the PAUSE button.  3) Select page: C, address: AD, and note down the data. When the data is "00", change it to "01" and press the PAUSE button.  When the data is "02", change it to "03" and press the PAUSE button.  4) Select page: 3, address: 11, set data: 04, and press the PAUSE button.  11) Select page: C, address: AC, set data: 20, and press the PAUSE button.  12) Select page: C, address: AD, set the data noted down at step 3), and press the PAUSE button.  13) Select page: 0, address: 01, and set data: 00.

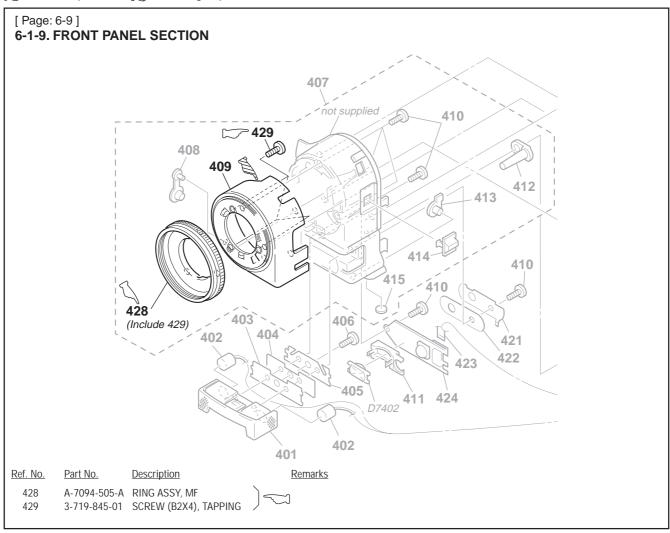

RMT-811/812

SONY

**SERVICE MANUAL** 

1999.06

US Model Canadian Model Korea Model

AEP Model
UK Model
DCR-TRV890E/TRV900E

E Model Hong Kong Model Tourist Model DCR-TRV900/TRV900E

Australian Model Chinese Model

DCR-TRV900E

**SUPPLEMENT-2** 

File this supplement-2 with the Service Manual.

Subject: Korea Model Addition. (For DCR-TRV900 Model)

The model DCR-TRV900 (Korea model) is the same as the model DCR-TRV900 (E model) except for the following parts.

Page		DCR	-TRV900 (E model)	DCR-TRV900 (Korea model)				
			ACCESSORIES **********		ACCESSORIES **********			
6-35E	1-7/ 3-8/ 3-8/	69-008-21 69-608-11 65-177-61 65-177-71 65-177-81	ADAPTOR, CONVERSION 2P CORD, POWER (900:E/900E:E) MANUAL, INSTRUCTION (ENGLISH) (900:E,HK,JE) MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) (900:E,HK,JE) MANUAL, INSTRUCTION					
		65-177-91	(TRADITIONAL CHINESE) (900:E,HK) MANUAL, INSTRUCTION (KOREAN) (900:E)	3-865-177-91	MANUAL, INSTRUCTION (KOREAN) (900:E,KO	REA)		

 Note :
 Note :

 The components identified by mark ♠ or dotted line with mark ♠ are critical for safety.
 Les composants identifiés par une marque ♠ sont critiques pour la sécurité.

 Replace only with part number specified.
 Ne les remplacer que par une pièce portant le numéro spécifié.

RMT-811/812

SONY

## **SERVICE MANUAL**

2000.10

US Model Canadian Model Korea Model

AEP Model
UK Model
DCR-TRV890E/TRV900E

E Model Hong Kong Model Tourist Model

Australian Model
Chinese Model

### **CORRECTION-2**

Correct your service manual as shown below. (PV00-010)

· Deleting of adjustment Items.

### 5. ADJUSTMENTS

: Deleted portion.

_		
Page	INCORRECT	CORRECT
	2. IRIS & ND HALL Auto Adjustment	2. IRIS & ND HALL Auto Adjustment
5-10	<ol> <li>Checking method:         <ol> <li>Select page: 0, address: 01, and set data: 01.</li> <li>Select page: D, address: 11, set data: 02, and press the PAUSE button of the adjustment remote commander.</li> <li>Select page: 6, address: 04, and set data: 03.</li> <li>Select page: 6, address: 01, set data: 01, and press the PAUSE button.</li> <li>Check the IRIS display data lies within the "88" to "8A" range.</li> <li>Select page: 6, address: 01, set data: 03, and press the PAUSE button.</li> <li>Check the IRIS display data lies within the "14" to "18" range.</li> <li>Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.</li> </ol> </li> <li>Select page: 6, address: 1C, and set data: 02.</li> <li>Check the ND display data lies within the "14" to "18" range.</li> <li>Select page: 6, address: 1C, and set data: 03.</li> <li>Check the ND display data lies within the "88" to "8A" range.</li> </ol>	<ol> <li>Checking method:         <ol> <li>Select page: 0, address: 01, and set data: 01.</li> <li>Select page: D, address: 11, set data: 02, and press the PAUSE button of the adjustment remote commander.</li> <li>Select page: 6, address: 04, and set data: 03.</li> </ol> </li> <li>Select page: 6, address: 01, set data: 01, and press the PAUSE button.</li> <li>Check the IRIS display data lies within the "88" to "8A" range.</li> <li>Select page: 6, address: 01, set data: 03, and press the PAUSE button.</li> <li>Check the IRIS display data lies within the "14" to "18" range.</li> </ol>

RMT-811/812

SONY

## **SERVICE MANUAL**

2001.02

US Model Canadian Model Korea Model

AEP Model
UK Model
DCR-TRV890E/TRV900E

E Model Hong Kong Model Tourist Model

Australian Model Chinese Model

### **SUPPLEMENT-3**

File this supplement-3 with the Service Manual. (PV01-002)

Subject:

Change of EMG code (Emergency code)

### **SECTION 5. ADJUSTMENTS**

4-3. SERVICE MODE

: Added portion.

Page		Old		New			
	Codes cor addresses 3	Code (Emergency Code) responding to the errors which occur are written in 8, 3C and 40. The type of error indicated by the code are ne following table.	<b>2-1. EMG Code (Emergency Code)</b> Codes corresponding to the errors which occur are written addresses 38, 3C and 40. The type of error indicated by the code shown in the following table.				
	Code	Emergency Type	Code	Emergency Type			
	00	No error	00	No error			
	10	Loading motor emergency during loading	10	Loading motor emergency during loading			
	11	Loading motor emergency during unloading	11	Loading motor emergency during unloading			
r ro	22	T reel emergency during normal rotation	20	T reel side tape slacking during loading/unloading			
5-59	23	S reel emergency during normal rotation		T reel emergency during normal rotation			
	24	T reel emergency (Short circuit between S reel	23	S reel emergency during normal rotation			
	24	terminal and T reel terminal)	24	T reel emergency (Short circuit between S reel			
	30	FG emergency at the start up of the capstan	24	terminal and T reel terminal)			
	40	FG emergency at the start up of the drum	30	FG emergency at the start up of the capstan			
	42	FG emergency during normal rotation of the drum	40	FG emergency at the start up of the drum			
		·	42	FG emergency during normal rotation of the drum			
			50	T reel side tape slacking during loading/unloading			
			<u></u>				

### **Revision History**

Date	History	Contents	S.M. Rev.
1998.08	Official Release	_	_
1998.12	Correction-1	Parts Number Correction.	Yes
		S.M. correction: Page 6-11, 6-34	
1999.04	Supplement-1	The video head (SLD) circuit should be deleted from the schematic diagram.  The DC IN circuit is separated from the VI-151 board. A new independent printed wiring board PS-422 is newly added solely for the DC IN board. Refer to attached applicable serial Nos. Part number change of IC1602 on the VI-151 board.  Addition of MF ring assy	No
1999.06	Supplement-2	Korea Model Addition. (For DCR-TRV900 Model)	No
2000.10	Correction-2	Deleting of adjustment Items.	Yes
		S.M. correction: Page 5-10	
2001.02	Supplement-3	Change of EMG code (Emergency code)	No
2003.06	Correction-3	Change of the parts S.M. correction: Page 4-65, 6-13, 6-26	Yes
	1998.08 1998.12 1999.04 1999.06 2000.10	1998.08 Official Release 1998.12 Correction-1 1999.04 Supplement-1 1999.06 Supplement-2 2000.10 Correction-2 2001.02 Supplement-3	1998.08 Official Release —  1998.12 Correction-1 Parts Number Correction. S.M. correction: Page 6-11, 6-34  1999.04 Supplement-1 The video head (SLD) circuit should be deleted from the schematic diagram. The DC IN circuit is separated from the VI-151 board. A new independent printed wiring board PS-422 is newly added solely for the DC IN board. Refer to attached applicable serial Nos. Part number change of IC1602 on the VI-151 board. Addition of MF ring assy  1999.06 Supplement-2 Korea Model Addition. (For DCR-TRV900 Model)  2000.10 Correction-2 Deleting of adjustment Items. S.M. correction: Page 5-10  2001.02 Supplement-3 Change of EMG code (Emergency code)  2003.06 Correction-3 Change of the parts

# DV MECHANICAL ADJUSTMENT MANUAL ${ m IV}$


Ver 1.0 1998.04

### **C MECHANISM**



File with the SERVICE MANUAL.

For details on schematic diagram, printed circuit boards diagram, and electric parts list regarding this mechanism deck, refer to the service manual for the unit mounting the C mechanism.

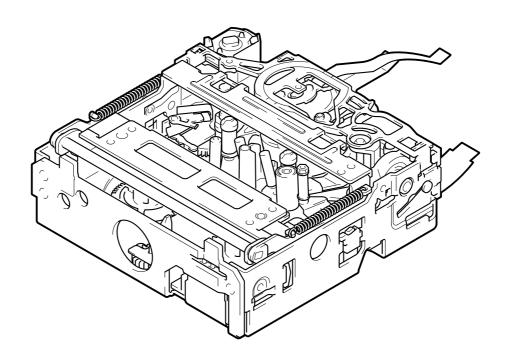

Digital MECHANISM



### TABLE OF CONTENTS


1. EXPLODED VIEWS	4. CHECK AND ADJUSTMENT
1-1. Cassette Compartment, Drum and Reel Table Assembly 3 1-2. Tape Guide, Pinch Slider Assembly and Brake Slider Assembly 4 1-3. Each Gears and Loading / Capstan Motor Assembly 5 2. PARTS REPLACEMENT AND PREPARATION FOR ADJUSTMENT  • About Mode Selector II 2-1. Outline 6 2-2. Mechanism Condition (Position) Shifting Order List 6 2-3. Mode Selector II (J-6082-282-A) Connection 6 2-4. Service Jigs List 6	Adjustment Order (Flowchart) 18 4    4-1. FWD Position Checking and Adjustment 19 5    4-2. FWD Back Tension Checking and Adjustment 19 4-3. Reel Table (S) / (T) Torque Check 20 4-4. Preparation for Tape Path Checking and Adjustment 20 4-5. Track Checking and Adjustment 21 4-6. TG7 Slack Checking and Adjustment 22 4-7. Curl Checking and Adjustment 22 4-8. CUE and REV Check 22 4-9. Rising Check 22 5
3. PARTS REPLACEMENT	5. PERIODIC CHECK
3-1. Tape Fall Stopper, HC Roller and HC Arm	5-2. Cleaning of Tape Path System
Deceleration Gear and Motor Holder	

### 1. EXPLODED VIEWS

#### NOTE:


- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

### 1-1. CASSETTE COMPARTMENT, DRUM AND REEL TABLE ASSEMBLY

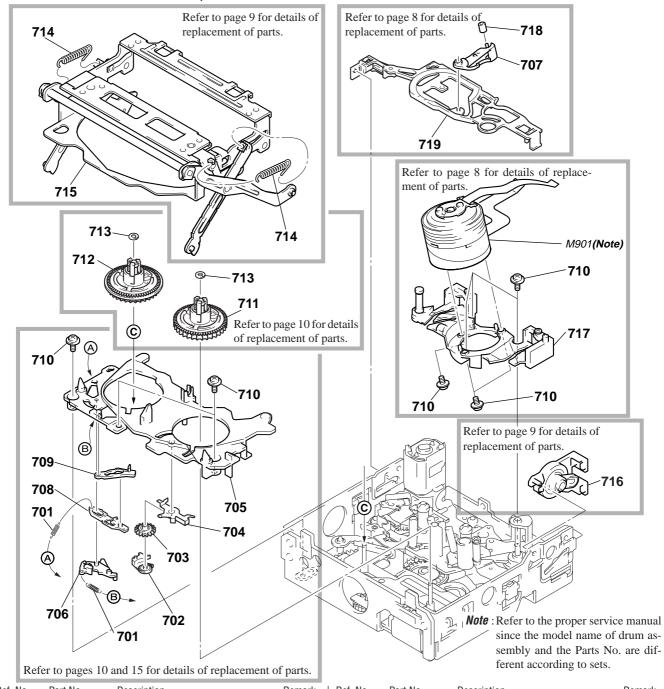


				-	-				
Re	f. No.	Part No.	<u>Description</u>		Remark	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
70	1	3-988-312-01	SPRING, EXTENSION			711	X-3948-445-1	TABLE (T) ASSY, REEL	
70	2	3-988-220-01	BRAKE (T)			712	X-3948-444-1	TABLE (S) ASSY, REEL	
70	3	3-988-221-01	GEAR (T), BRAKE			713	3-989-465-01	WASHER, STOPPER	
70	4	3-988-222-01	SPRING (T), BRAKE			714	3-988-298-01	SPRING EXTENSION	
70	5	3-988-215-02	BASE, CASSETTE			715	X-3948-441-2	CASSETTE COMPARTMENT ASSY	
70	6	3-988-217-01	ARM (S), RESET			716	X-3948-443-2	DAMPER ASSY	
70	7	3-988-281-02	ARM, HC			717	A-7093-612-A	DRUM BASE BLOCK ASSY	
70	8	3-988-219-01	RACK (S), BRAKE			718	3-988-282-01	ROLLER, HC	
70	9	3-988-218-01	BRAKE (S)			719	3-988-283-01	STOPPER, TAPE FALL	
71	0	3-947-503-01	SCREW (M1.4X2.5)			M901	Note	DRUM ASSY	

### 1-2. TAPE GUIDE, PINCH SLIDER ASSEMBLY AND BRAKE SLIDER ASSEMBLY

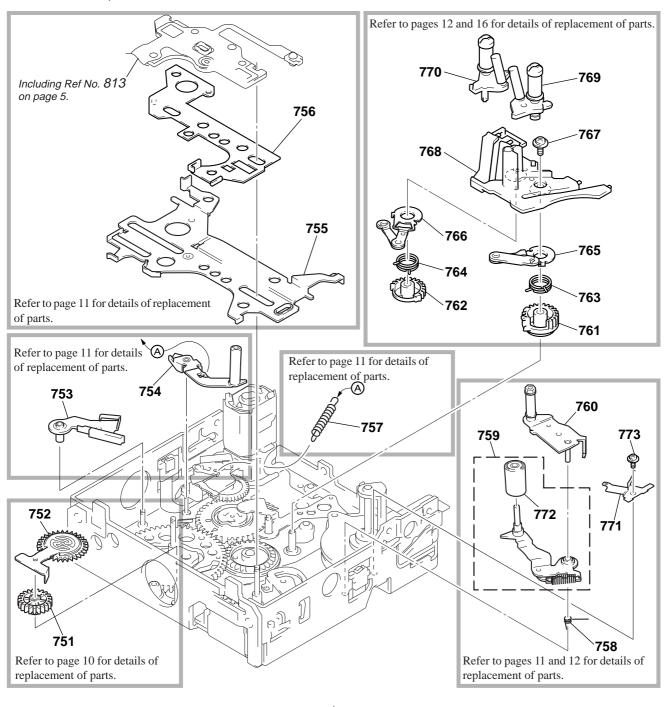

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
751	3-988-263-01	GEAR, RELAY		763	3-988-258-01	SPRING (GLT), TORSION	
752	X-3948-442-2	GEAR ASSY, GOOSENECK		764	3-988-253-01	SPRING (GLS), TORSION	
753	X-3948-435-2	PLATE ASSY, TG1 ADJUSTMENT		765	X-3948-440-1	ARM (T) ASSY, GL	
754	X-3948-434-1	ARM ASSY, TG1					
755	X-3948-428-4	SLIDER ASSY, PINCH		766	X-3948-439-3	ARM (S) ASSY, GL	
				767	3-947-503-01	SCREW (M1.4X2.5)	
756	X-3948-766-1	SLIDER ASSY, BRAKE		768	3-988-242-01	RAIL, GUIDE	
757	3-988-270-01	SPRING (TG1), TENSION COIL		769	X-3948-438-3	COASTER (T) ASSY	
758	3-988-233-01	SPRING (TG7LD), TORSION		770	X-3948-437-1	COASTER (S) ASSY	
759	X-3948-433-2	ARM ASSY, PINCH					
760	A-7093-501-A	ARM BLOCK ASSY, TG7		771	3-988-690-02	SPRING, TG7 RETAINER	
				772	X-3748-630-2	ROLLER ASSY (DIA. 5.6), PINCH	
761	3-988-257-02	GEAR (T), GL		773	3-050-334-01	SCREW (M1.4X5)	
762	3-988-252-03	GEAR (S), GL					

### 1-3. EACH GEARS AND LOADING / CAPSTAN MOTOR ASSEMBLY

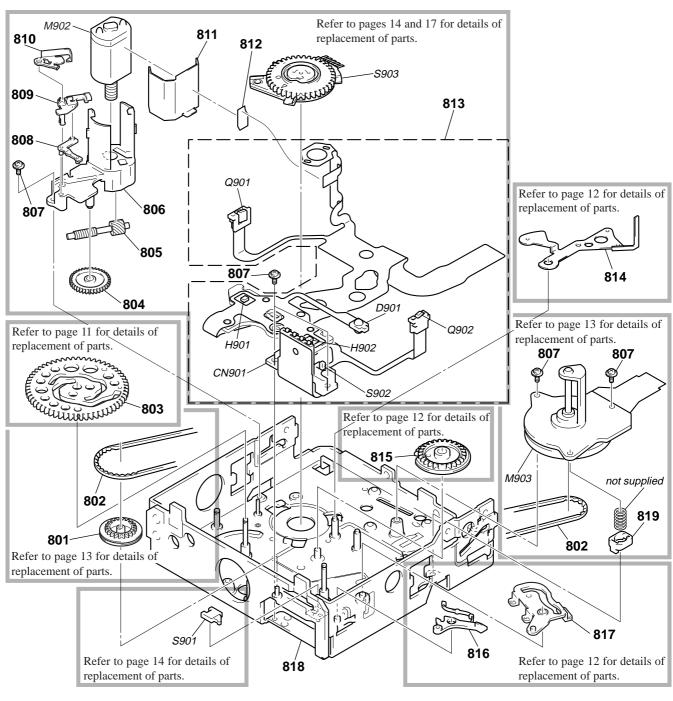

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	Description	<u>Remark</u>
801	3-988-274-01	PULLEY, CONVERSION		816	3-988-223-01	ARM, EJECT	
802	3-988-276-02	BELT, TIMING		817	3-988-224-01	ARM, PINCH PRESS	
803	3-988-216-01	GEAR, CAM		818	X-3948-431-4	CHASSIS ASSY	
804	3-988-211-01	GEAR, DECELERATION		819	3-050-170-01	HOLDER	
805	3-988-210-01	SHAFT, WORM		CN901	1-784-723-11	PIN, CONNECTOR 4P	
806	3-988-207-01	HOLDER, MOTOR		D901	8-719-067-13	DIODE GL453K	
807	3-947-503-01	SCREW (M1.4X2.5)		H901	8-719-061-28	DIODE HW-105C-FT-V (S REEL SENS	SOR)
808	3-988-303-01	ARM, SPRING HOOK DRIVING		H902	8-719-061-28	DIODE HW-105C-FT-V (T REEL SENS	SOR)
809	3-988-271-01	BASE, SPRING HOOK FULCRUM		M901	X-3948-346-1	MOTOR ASSY, L (LOADING)	,
810	3-988-302-01	HOOK, TG1 SPRING		M903	8-835-606-01	MOTOR, DC SCD15A/C-NP (CAPSTA	N)
811	3-988-208-01	SHIELD, MOTOR		Q901	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAP	E END)
812	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SENS	SOR)	Q902		PHOTO TRANSISTOR PT4850F (TAP	,
813	A-7073-418-A	FP-594 BOARD, COMPLETE	,	S901	1-771-039-51	SWITCH, PUSH (C IN SW)	,
814	3-988-280-03	ARM, HC DRIVING		S902	1-572-719-32	SWITCH, PUSH (1 KEY) (REC PROO	F)
815	3-988-239-01	GEAR, GL DRIVING		S903	1-771-325-11	ENCODER, ROTARY (SWITCH) (MOD	DE)

### 2. PARTS REPLACEMENT AND PREPARATION FOR ADJUSTMENT

### • About Mode Selector II

### 2-1. OUTLINE

This unit is a mechanism drive tool which supplements the maintenance of each mechanism deck. Its functions are described below.

### 1. Manual test

A mode which drives the motor only while the switch is ON. It enables the operator to control the motor as desired.

### 2. Step test

A mode which drives the motor until the current condition detected by the sensor changes to another condition. It enables the movements made by the motor in each operation to be controlled while being checked.

### 3. Auto test

A mode that checks if the mechanism operates normally according to the condition shift table recorded in the unit for each mechanism deck. All the conditions of the decks are checked through a series of operations.


An error message is displayed if incorrect shifts and conditions are detected and operations are stopped.

### 2-2. MECHANISM CONDITION (POSITION) SHIFTING ORDER LIST

After selecting the mechanism deck, select one of the two test modes other than the auto test, and press the RVS and FF button to specify the mechanism state (position).

		MD n	ame		C manakamiana
Code					C mechanism
Α	В	С	D		
1	1	1	0	1	EJECT
1	0	1	0	2	ULE
1	0	1	1	3	SR
1	0	0	1	4	HL
0	1	1	1	5	LE
0	0	1	1	6	STOP
1	1	0	1	7	RP
1	1	0	0	8	REW

### 2-3. MODE SELECTOR II (A-6082-282-A) CONNECTION

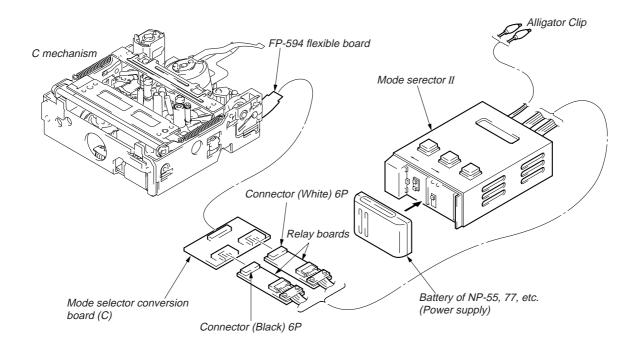

### 2-4. SERVICE JIGS LIST


J-1. Cleaning fluid (Y-2031-001-0)




J-4. Mirror (Small oval type) (J-6082-840-A)



J-7. TG1 adjustment jig (FWD position adjustment) (J-6082-420-A)

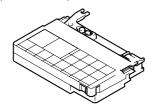

J-10. Mini DV torque cassette (J-6082-360-A)

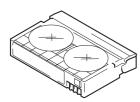

J-13. Mode selector II ROM (Corresponds to C mechanism: Note 2) (J-6082-314-D)




J-2. Wiping cloth (7-741-900-53)



J-5. Screwdriver for tape path (J-6082-026-A)



J-8. Mode selector conversion board (C) (J-6082-417-A)

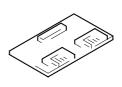

J-11. Adjusting remote commander (RM-95 remodeled partly: Note 1) (J-6082-053-B)



J-14. Bending stick (J-6082-419-A)




J-3. Super fine applicator (Made by NIPPONAPPLICATOR(P752D))




J-6. Torque driver (J-9049-330-A)



J-9. Tracking tape (XH2-1) (NTSC/PAL) (8-967-997-01)

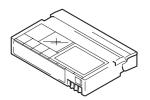

J-12. Mode selector II (J-6082-282-A)

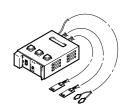

Note 1: If the micro processor IC in the adjusting remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new micro processor (8-759-148-35).

**Note 2**: ROM for version upgrading to allow use of the mode selector II with the C mechanism.

### 3. PARTS REPLACEMENT

#### Precautions

For details on removing the cabinet and board, refer to "DISASSEMBLY" in the respective service manuals. For details on the replacement of mechanism parts (removal or attaching), refer to the respective flowcharts, and perform the procedure given.


### 3-1. TAPE FALL STOPPER, HC ROLLER AND HC ARM

**Removing method**: Spread out the left and right attaching parts


and remove them upwards.


**Attaching method**: Refer to the Details diagram.

### Details diagram on attachment of Tape Fall Stopper

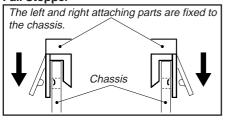

### Details diagram on removal and attachment of HC Arm and HC Roller

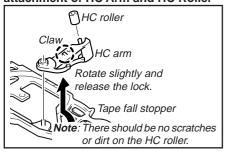

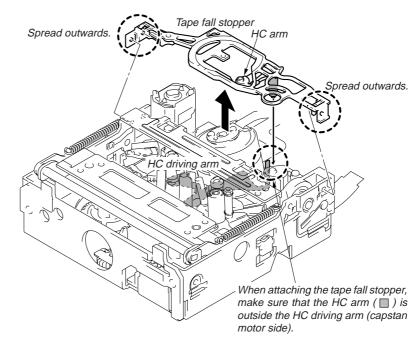

### 3-2. DRUM ASSEMBLY AND DRUM BASE BLOCK ASSEMBLY

### Remove the




Removing method: Remove in the order of ①→②→③→④.

Attaching method: Attach in the order of ④→③→②→①.


(Note: Tighten the screws in the order of (A), (B), and (C).)


After attaching all the parts, refer to the flowchart on page 18, and perform the adjustments from Starting adjustments-2.

### **Holding the Drum Assembly**

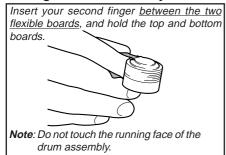


### Details diagram on attachment of Drum Assembly (Positioning pins)

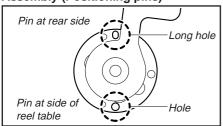

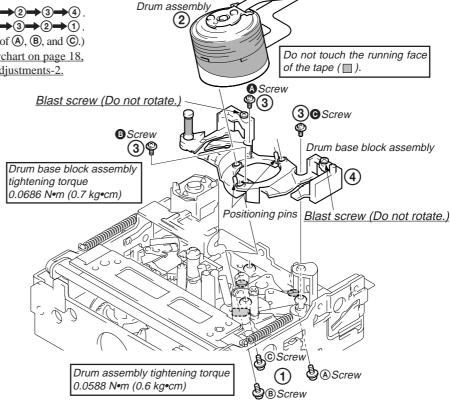

### 3-3. DAMPER ASSEMBLY, CASSETTE COMPARTMENT ASSEMBLY AND EXTENSION SPRING

chassis side).

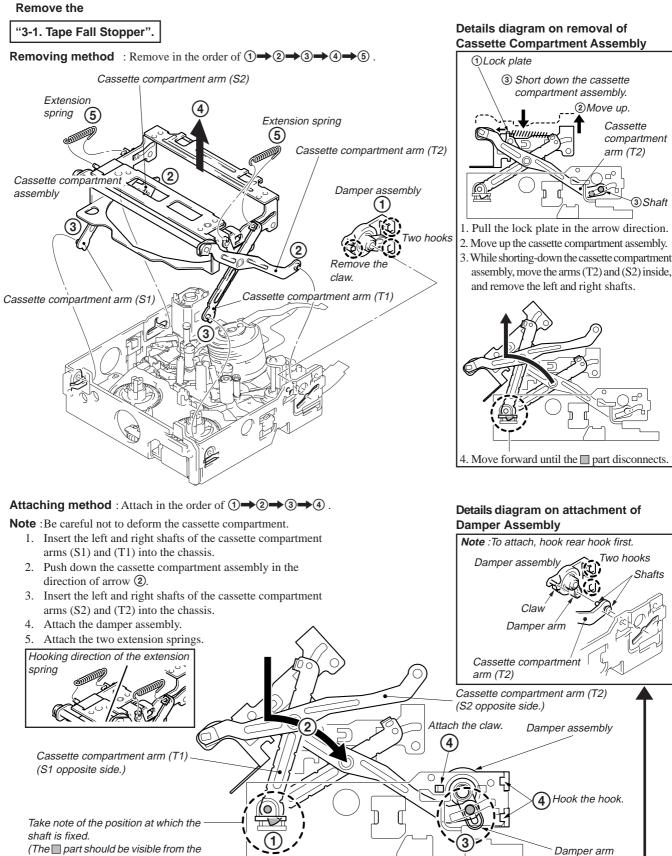


Take note of the position at which the shaft is fixed.


(The damper arm should also be fixed to the same shaft.)

### 3-4. REEL TABLE (S) / REEL TABLE (T) ASSEMBLY


#### Remove the

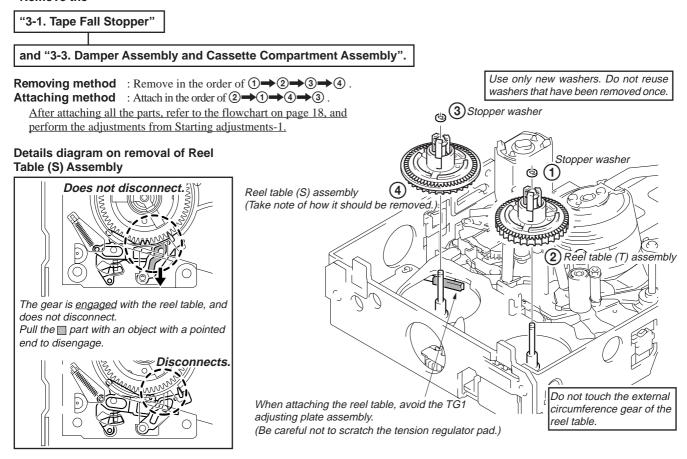


### 3-5. CASSETTE BASE BLOCK ASSEMBLY, GOOSENECK GEAR ASSEMBLY AND RELAY GEAR Remove the

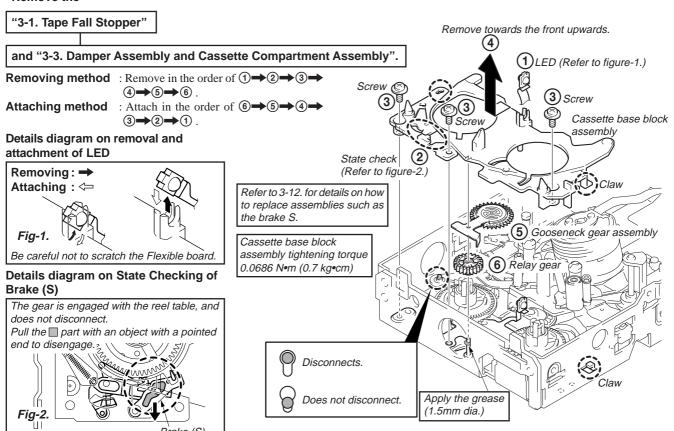


### 3-6. TG1 ADJUSTMENT PLATE ASSEMBLY, TENSION COIL SPRING (TG1), TG1 ARM ASSEMBLY, TG7 RETAINER SPRING AND TG7 ARM BLOCK ASSEMBLY

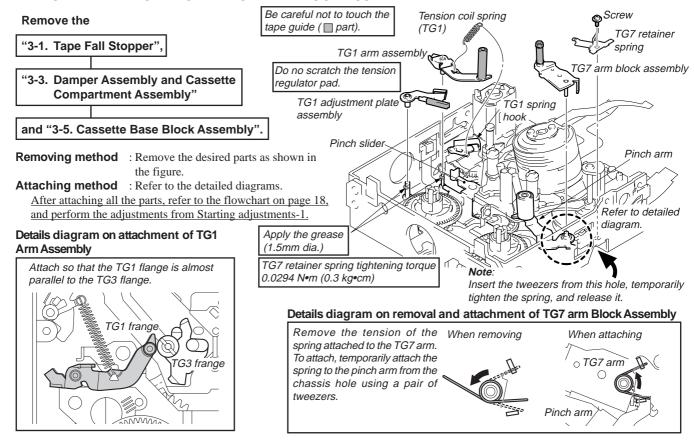


### 3-7. BRAKE SLIDER ASSEMBLY, PINCH SLIDER ASSEMBLY AND CAM GEAR

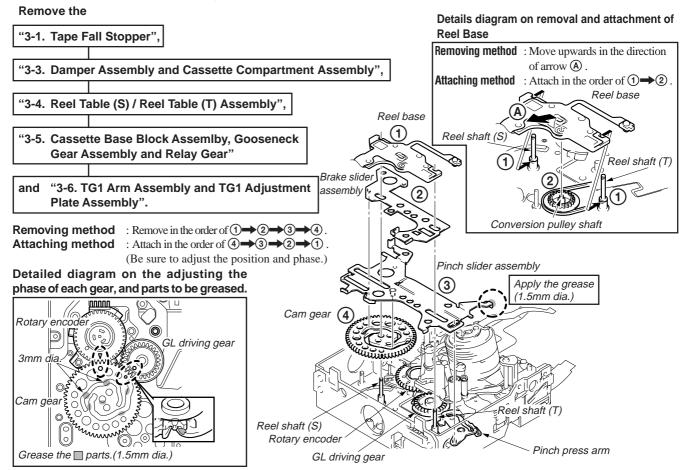


### 3-8. PINCH ARM ASSEMBLY, TORSION SPRING (TG7LD), PINCH PRESS ARM AND EJECT ARM

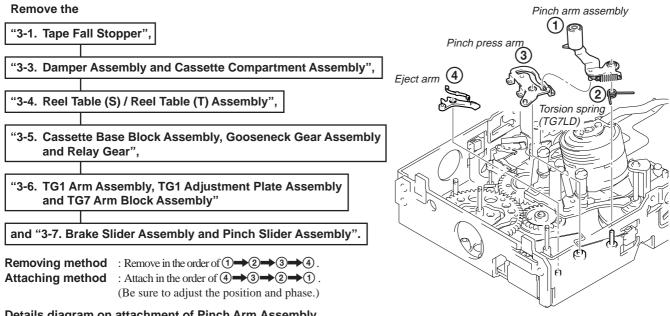

### Details diagram on attachment of Pinch Arm Assembly and Torsion Spring (TG7LD)

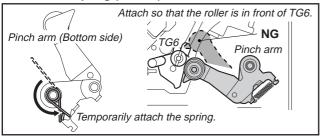


### Details diagram on adjustment or Position and Phase

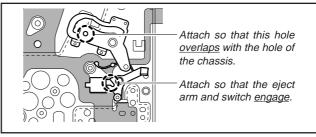


0.0686 Nem (0.7 kgecm)

### 3-9. GL BLOCK ASSEMBLY, GL DRIVING GEAR AND HC DRIVING ARM

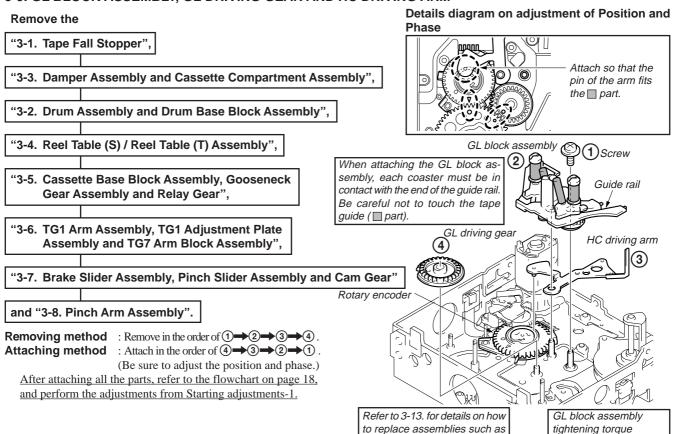

the guide rail.


### 3-10. CAPSTAN MOTOR, CONVERSION PULLEY, TIMING BELT AND HOLDER

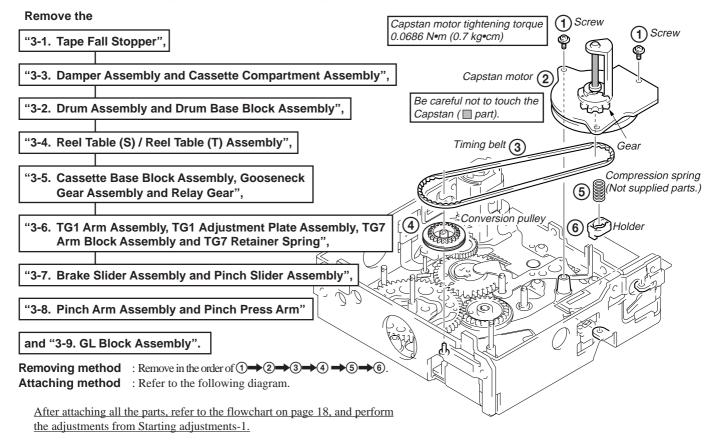

### **Attachment of Timing Belt**


1. Refer to "Removing method", and attach the compression spring (TG7) and holder to the chassis.

2. Attach the timing belt to the capstan motor and the conversion nulley

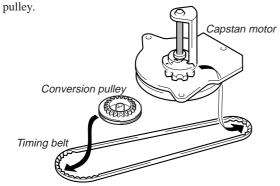


3. Attach the conversion pulley to the conversion pulley shaft. Attach the capstan motor to the chassis.

4. Secure the capstan motor with the screw.

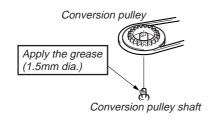

After attaching, pull the timing belt lightly, and check that the movements of the conversion pulley and gear at the back of the capstan motor are linked.

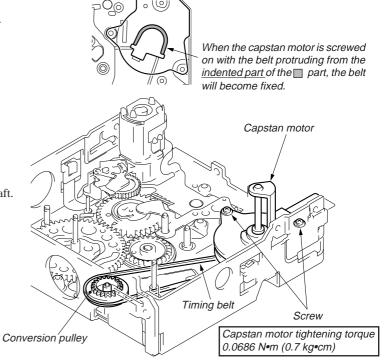


### 3-11. L MOTOR BLOCK ASSEMBLY AND FP-594 FLEXIBLE BOARD

#### First, remove

### all parts from 3-1 to 3-10.

Removing method : Remove in the order of  $(1 \rightarrow 2 \rightarrow 3 \rightarrow 4)$  $(3 \rightarrow 6) \rightarrow (7 \rightarrow 8)$ .


(For details on how to remove each part, refer to the detailed diagram.)

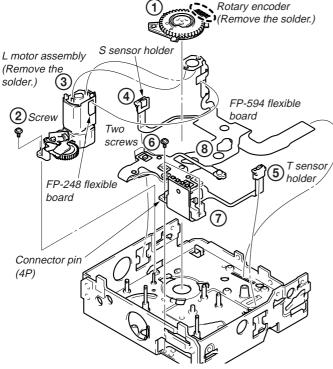

### Attaching method:

Refer to the following diagram, for attaching the FP-594 flexible board, and attaching the parts in the order of ①→②→③→④→⑤→⑥→⑦→⑧.

(For attaching each part, refer to each detailed diagram.)

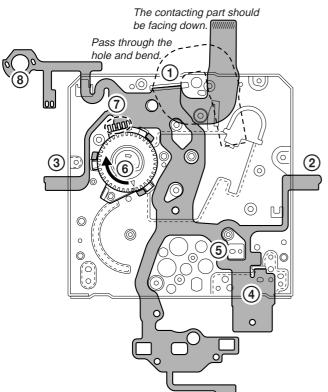


### Detailed diagram on removal and attachment of Rotary Encoder

### Removing method :


Remove the solder, and rotate the rotary encoder in the  $\leftarrow$  direction. (The three parts of part (A) should be visible.)

### Attaching method:


Rotate the rotary encoder in the direction. (The three parts of part (A) should be hidden.) And then solder.

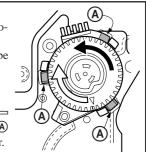


### Detailed diagram on removal and attachment of L Motor Block Assembly

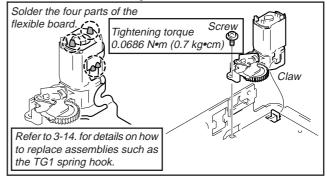

### Detailed diagram on removal and attachment of Sensor Holder (S) / (T)

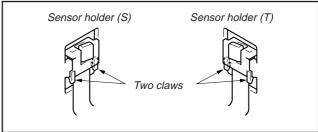


### Detailed diagram on removal and attachment of Connector Pin (4P)

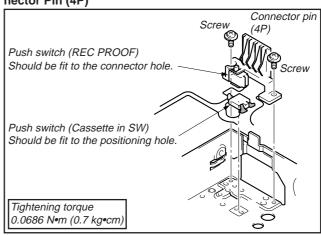


### 3-12. RESET ARM (S), BRAKE (S), BRAKE RACK (S), BRAKE (T), BRAKE GEAR (T), BRAKE SPRING (T) AND EXTENSION SPRING


### Removal or attaching method

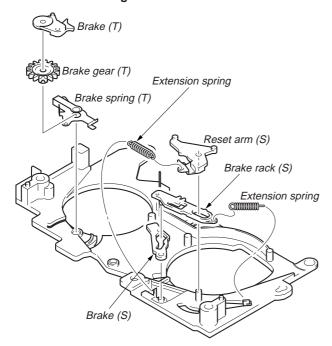

Detailed diagram on removal and attachment of Brake (T), Brake Gear (T) and Brake Spring (T)

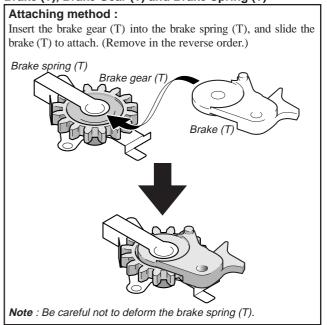


Removal and attachment of Brake (S), Brake Rack (S) and Extension Spring

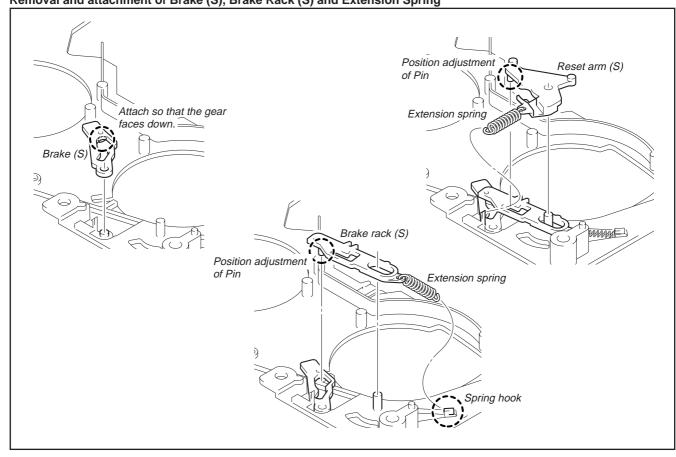

### 3-13. COASTER (S) / (T) ASSEMBLY, GL ARM (S) / (T) ASSEMBLY, GUIDE RAIL, GL GEAR (S) / (T) AND TORSION SPRING (GLS) / (GLT)

### Removing method


• Refer to the detailed diagram on the right, and remove each part.

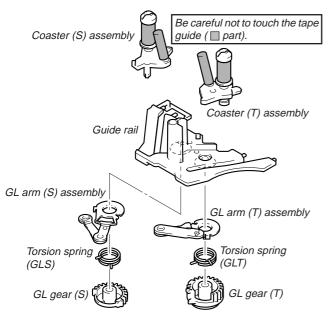


### Assembling the GL Block Assembly

1. Attach the tension coil spring to each gear.


To differentiate the S side and T side, the side with  $\underline{\text{more coils}}$  is the T side. The  $\underline{S}$  side has less coils. Face the ends of the  $\underline{\text{spring towards}}$  you, the  $\underline{\text{tip of the coil}}$  (lower side) is positioned at the right for the S side and at the left for the T side.

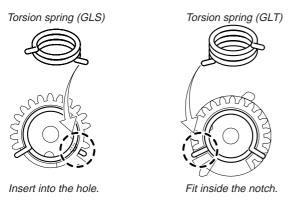


2. Hook the spring to the GL arm, and rotate in the →② direction until the claw of the GL arm passes over the ☐ part, and the ☐ becomes visible. When the GL arm is completely inserted, the GL arm claw will pass below the ☐ part by the tension of the spring (→③).

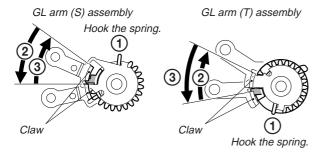


Detailed diagram on removal of GL Arm (S)  $\!\!\!/$  (T) Assembly

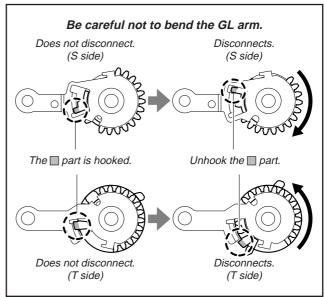

3. Attach the respective coaster assemblies.

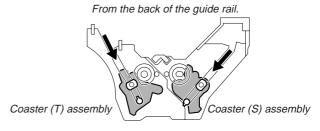


Attach the GL gear block assembly in the order of the S and T sides.

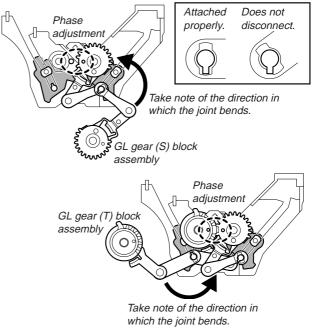


## 3-14. L MOTOR ASSEMBLY, MOTOR SHIELD, FP-248 FLEXIBLE BOARD, TG1 SPRING HOOK, SPRING HOOK FULCRUM BASE, SPRING HOOK DRIVING ARM, WORM SHAFT, DECELERATION GEAR AND MOTOR HOLDER

### Removing method


• Refer to the detailed diagram on the right, and remove each part.

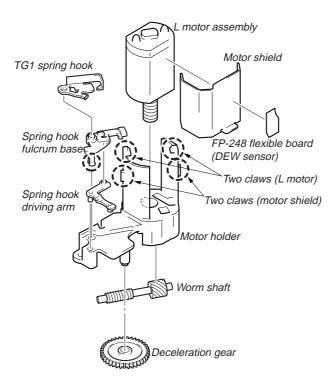

### Removal of TG1 Spring Hook

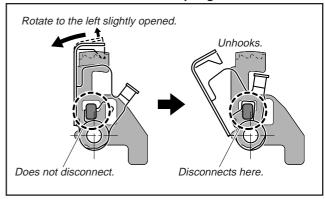


### Removal of Motor Shield and Worm Shaft

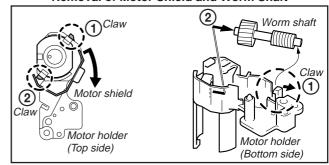


### Attaching method


1. Attach the worm shaft.

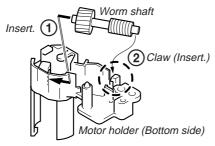


2. Attach the L motor assembly, motor shield and deceleration

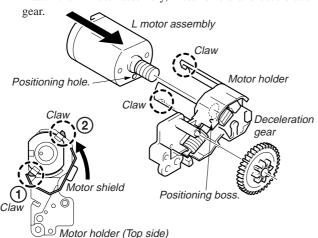


3. Attach the TG1 spring hook to the spring hook fulcrum base.

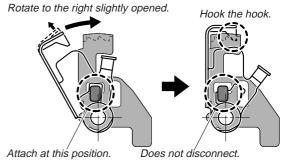

4. Attach the spring hook driving arm and spring hook fulcrum

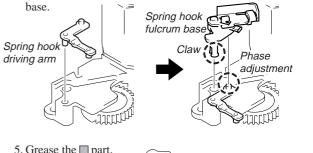


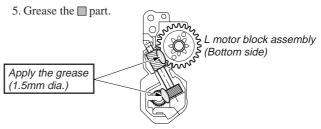


### 4. CHECK AND ADJUSTMENT

• When the parts of the tape path (tape guide and reel table, etc.) have been removed or parts have been replaced, adjust the following parts and according to the flowchart below.

### ADJUSTMENT POSITION

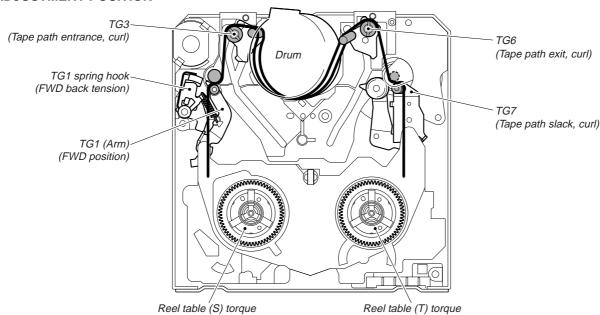


### ADJUSTMENT ORDER (Flowchart)

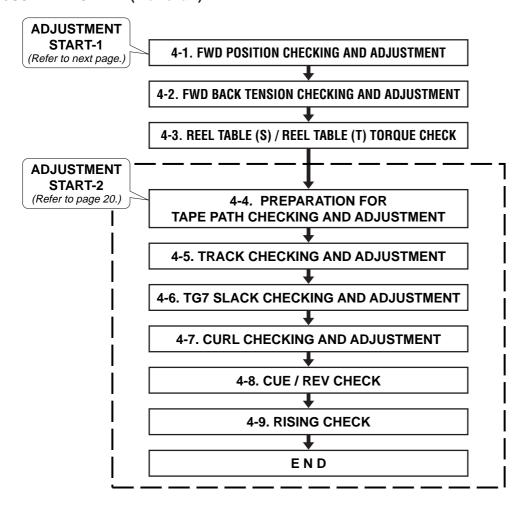

#### 4-1. FWD POSITION CHECKING AND ADJUSTMENT

### · Checking / adjusting method

Bend the TG1 adjustment plate with the bending stick (J-14) so that the TG1 flange external circumference, <u>including fluctuation</u>, is within the gauge range while the TG1 adjustment jig (J-7) runs in the <u>FWD mode</u>.

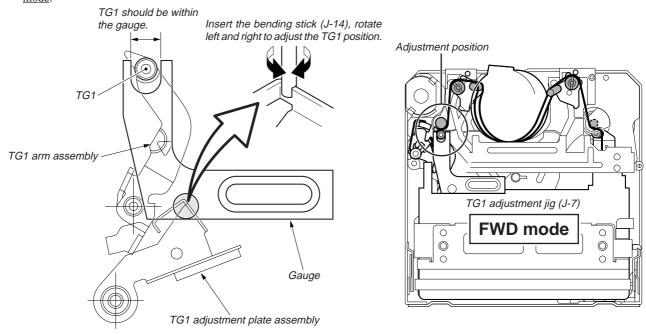

### 4-2. FWD BACK TENSION CHECKING AND ADJUSTMENT


#### Checking / adjusting method

Check the gauge value (reel table (S) side) of the mini DV torque cassette (J-10) in the <u>FWD mode</u>. Adjust the position of the TG1 spring hook so that the gauge value satisfies the specified value. If the specified value is not satisfied, hook the TG1 spring hook claw to the middle position, and check that the FWD position is correct. If not correct, adjust the FWD position again, and check the FWD back tension again.

If the FWD position is correct but the specified value for the FWD back tension is not satisfied, replace the tension coil spring (TG1), and perform this adjustment again.

(For details on how to replace, refer to "3-6. Tension coil spring (TG1)".)

If the fluctuations of the FWD back tension are great and the specified value is not satisfied, replace the reel table S assembly. (For details on how to replace, refer to "3-4. Reel Table (S) Assembly".)

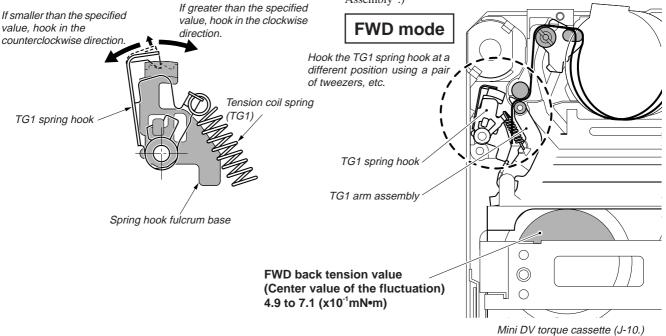


### 4-3. REEL TABLE (S) / REEL TABLE (T) TORQUE CHECK

### · Checking the Reel table (S) side

Check the gauge value (reel table (S) side) of the mini DV torque cassette (J-10) in the RVS mode.

### · Checking the Reel table (T) side

Check the gauge value (reel table (T) side) of the mini DV torque cassette (J-10) in the FWD mode.

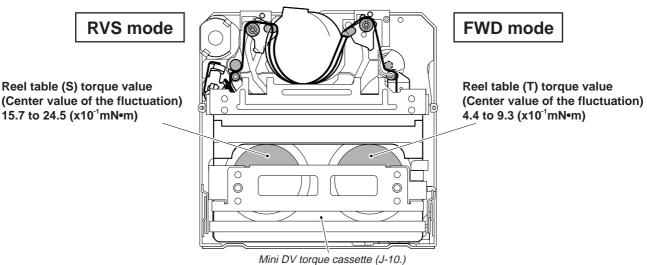

If the specification is not satisfied, check the 4-1 FWD position, and if no problems, replace the respective reel tables, and check again.

(For details on how to replace, refer to "3-4. Reel Table (S) / Reel Table (T) Assemblies".)

### 4-4. PREPARATION FOR TAPE PATH CHECKING AND ADJUSTMENT


### Preparations before adjustment 1 (Connection and Setting)

- 1. Clean the tape running side. (Refer to "5-2. Cleaning of Tape Path System".)
- 2. Connect the adjusting remote commander (J-11), and input the setting value of the model.

The setting value differs according to the model. Refer to the respective service manual.




- 3. Connect an oscilloscope.
  - The connecting state differs according to the model. Refer to the respective service manual.
- 4. Play the tracking tape (J-9) (Exclusive), and check the states at the entrance and exit of the RF waveform. If not flat at either side, perform the adjustments from "Flowchart Adjustment start-2" on page 18.

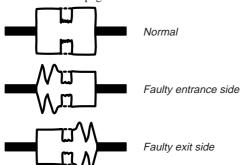

· Preparations before adjustment 2 (Preparing an exclusive tracking tape (J-9))

Remove the lid of the cassette due to the C mechanism structure.

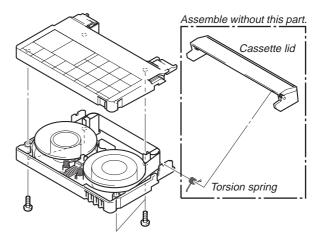

This is to prevent the lid from rising when the damper is removed so that it does not come in the way of the mirror (J-4) inserted, when checking the slack and curl between the capstan and TG7. Exclusive tracking tape


#### 4-5. TRACK CHECKING AND ADJUSTMENT


### · Checking / adjusting method

Run the tracking tape (J-9) in the <u>PLAYBACK mode</u>, and check that the RF waveform is flat at both the entrance and exit.



Normal waveform

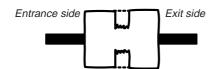

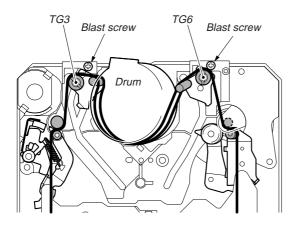


### 4-6. TG7 SLACK CHECKING AND ADJUSTMENT

### · Checking / adjusting method

Run the tracking tape (J-9) in the  $\underline{REV \ mode}$ , and visually check from right above the slack between the capstan and TG6. If the slack is great, rotate TG7 to satisfy the specified value.


#### · If not flat

If the waveform at the entrance is bad, rotate TG3. If that at the exit is bad, rotate TG6 to flatten the waveform.

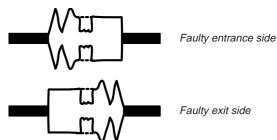

### Tips for adjustment

The tape path waveform at the entrance and exit should both be flat, or that at the <u>entrance should be slightly raised</u> and that at the <u>exit should be lowered</u>. If that at the entrance is slightly lowered especially, problems such as sound drop may occur.

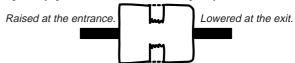

If the waveform does not become flat even if the guides are rotated at the entrance and exit, the characteristics may be faulty of the tracking tape with time. Check again using a new tracking tape. If the waveform still does not become flat, the coaster assembly and drum base block assembly may be faulty.


(For details on how to replace, refer to "3-2. Drum Base Block Assembly or 3-9. GL Block Assembly" .)

### If the slack occurs

If the <u>slack</u> can not be corrected, the TG7 arm block assembly may be faulty.

(For details on how to replace, refer to "3-6. TG7 Arm Block Assembly".)

### **REV** mode

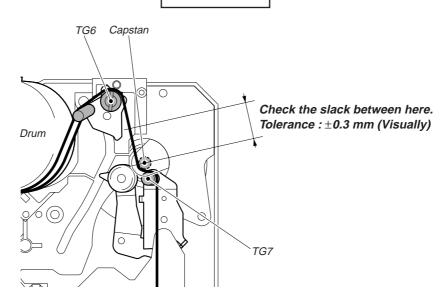

#### 4-7. CURL CHECKING AND ADJUSTMENT

### · Checking / adjusting method

Run the tracking tape (J-9) (exclusive) in the  $\underline{CUE \ mode}$  or  $\underline{REV} \ \underline{mode}$ , and check that the tape runs along each flange. Also check that there are no  $\underline{large\ curls}$  on each tape guide.


There should be no large curls on the upper flange of TG3 and TG6.

### • If the curl is large or there are clearances

If the TG3 curl is large or <u>clearances</u> exist, replace the coaster (S) assembly. If the TG6 curl is large, or <u>clearances</u> exist, replace the coaster (T) assembly. If curls or <u>clearances</u> exist on the TG7, rotate TG7 and adjust its height.

**Note**: Be careful not to rotate TG7 excessively.


For details on how to replace the coaster (S) / (T) assembly, refer to 3-13 on page 16.

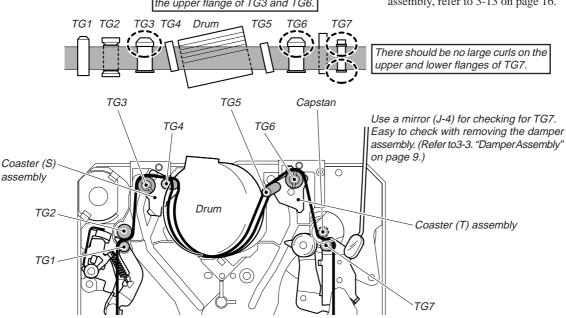

### 4-8. CUE / REV CHECK

### Checking method

Run the tracking tape (J-9) in the <u>CUE mode</u> or <u>REV mode</u>, and check that the intervals of the waveform peaks are consistent.

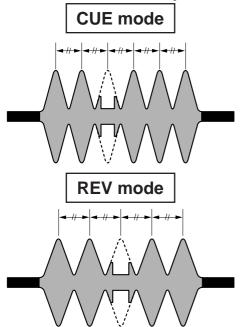

### If not even

If the waveform peaks are not even, perform "Tracking adjustment" again.


### 4-9. RISING CHECK

### Checking method

Check that when the tracking tape (J-9) is switched from the STOP, CUE, REV, FF, REW modes to the PLAYBACK mode, the waveform rises horizontally within 2 seconds.

Perform this 2 or 3 times.

### Mode changes

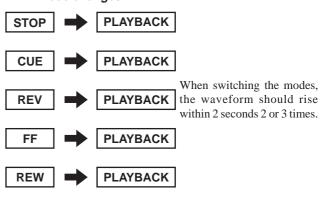

#### · Check after checking rising

- Check that the tape loads and unloads smoothly.
- Play a self-recorded or already recorded tape, and check that the sound and images are normal.


### 5. PERIODIC CHECK

• Carry out the following maintenance and periodic checks not only to fully display the functions and performance of the set, but also for the equipment and tape. After repairing, service the set as follows, regardless of the length of use.

### 5-1. CLEANING OF ROTARY DRUM ASSEMBLY

1. Press a wiping cloth (J-2.) moistened with cleaning fluid (J-1.) against the rotary drum assembly gently, and clean it while rotating the rotary drum assembly slowly with your finger in the <u>counterclockwise direction</u>.

**Note**: Do not rotate the motor on power or rotate the rotary drum assembly in the clockwise direction with your finger. The head tip will also be damaged if the wiping cloth is moved perpendicularly against it. Therefore, be sure to follow the above instructions when cleaning the rotary drum assembly.

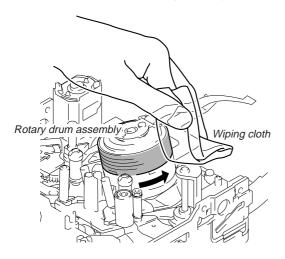


### 5-2. CLEANING OF TAPE PATH SYSTEM

1. Clean the tape path systems (TG1 to TG7 and capstan) and the lower drum using a super fine applicator (J-3.) moistened with cleaning fluid.

**Note**: Make sure that no oil or grease of the link mechanisms sticks to the super fine applicator (J-3.).

**Note**: Do not use a applicator moistened with alcohol to the other guide cleaning. But clean the pinch roller using alcohol.

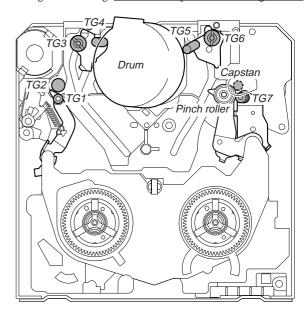

### 5-3. PERIODIC CHECKS

Location of Maintenance			Hours of Use (H)									Domonico	
	and Check	500	1000	1500	200	2500	3000	3500	4000	4500	5000	Remarks	
	Cleaning of tape path surface.	0	0	0	0	0	0	0	0	0	0	Be careful of the	
	Cleaning and degaussing of rotary drum assembly.	0	0	0	0	0	0	0	0	0	0	oil.	
	Timing belt	_		_		_		_		_		Malsa auma that ma	
Driving system	Capstan (Bearing)	_		_		_		_		_		Make sure that no oil gets on the tape path surface.	
	Loading motor	_		_		_		_		_		X-3948-346-1	
ion	Abnormal noise												
Performance Confirmation	Back tension measurement			_		_		_		_			
If if	Brake system	_				_		_		_			
Pe Co	FWD / RVS torque measurement			_		_		_		_			

**Note**: When overhauling, refer to the checks above and replace parts.

 $\bigcirc$ : Cleaning  $\square$ : Confirmation

Note: Greasing

Always use the specified grease. If the viscosity differs, various problems may occur.

(Use SG-941 for all parts of the C mechanism.)

Check the quantity of grease when installing the parts which is needed to apply the grease.

FLOIL (SG-941): Part No. 7-662-001-39

### DV MECHANICAL ADJUSTMENT MANUAL ${ m IV}$